PDP

REMATCH™

NINTENDO SWITCH™

Wired Controller

Manette avec fil REMATCH™

Quick Start Guide

Guide de démarrage rapide

2-Year Manufacturer's Warranty:
For product issues, contact us instead of returning to the store.

Garantie de 2 ans du fabricant : en cas de panne, veuillez nous contacter plutôt que d'aller en magasin.

Further Warranty Information Inside

Plus d'informations à propos de la garantie à l'intérieu




SMALL PARTS Not for children under 3 years.

PETITES PIÈCES Garder hors de la portée des enfantes âgés de moins de 3 ans.

1

Initial Setup
Configuration initiale
Configuración inicial
Ersteinrichtung
Configurazione iniziale
Konfiguracja początkowa
Configuração inicial
Oprindelig opsætning

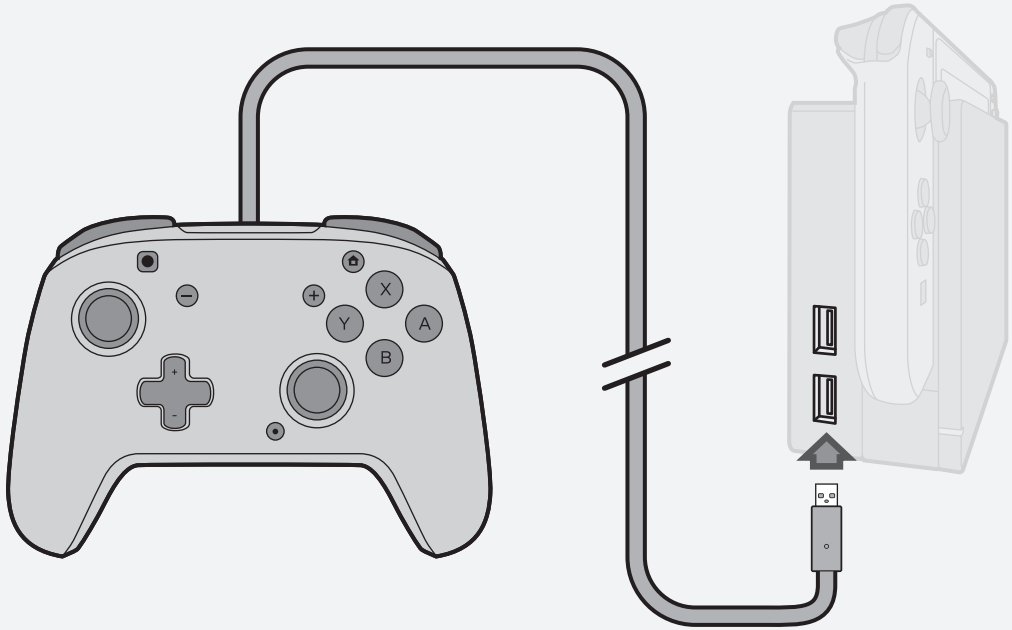

EN

A. To use the controller, plug the USB cable into the Nintendo Switch dock. The controller should automatically pair with the device.

B. If the controller does not pair automatically, go into System Settings > Controller and Sensors > Change Grip/Order.


C. When prompted, press L and R on your controller to connect.

Note: You can also pair the controller directly from the Controllers Menu found on the Nintendo Switch Home Screen and select Change Grip/Order.

2

Audio Setup
Configuration audio
Configuración de sonido
Audio-Einrichtung
Configurazione audio
Konfiguracja audio
Configuração de áudio
Lydopsætning



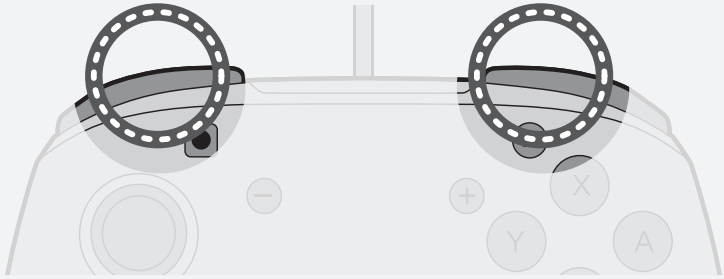

EN

A. Plug the 3.5mm jack of your headset or headphones directly into the 3.5mm port on the controller.

Note: The Nintendo Switch only supports one audio output at a time. When connecting your headset/headphones into the controller, audio via HDMI connected devices (i.e. TV, amp, etc.) will be disabled. When connecting more than one USB audio device, only the first device will have audio output.


B. You will be prompted by the Nintendo Switch to reconnect the controller. Press L and R to connect and then audio will start playing through the headset/headphones.

C. If you do not hear sound after reconnecting your controller, please go to the Nintendo Switch OS settings to make sure the volume is above 0%.

Note: Under the System Settings, there's an audio setting called "Mute when Headphones are Disconnected" that can be enabled. When activated, this option will shut off the system speakers when unplugging or disconnecting a headset until the volume buttons are pressed, or until this setting is manually turned off. To disable this setting manually, select System Settings > System > Mute when Headphones are Disconnected (turn to off).

3

Volume Controls
Contrôle du volume
Controles de volumen
Lautstärkeregelung
Regolazione del volume
Kontrola głośności
Controlos de volume
Lydstyrkekontroller

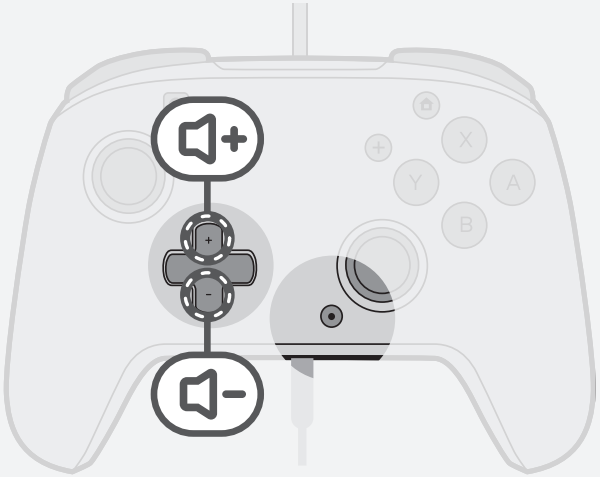

EN

A. To adjust the controller's volume, hold down the "function" button and press the Up/Down on the D-pad.

B. You can easily mute your connected headset/headphone's mic by pressing the "function" button twice. To unmute, press the "function" button twice again.

Note: The volume controls only adjust the volume output by the controller, and not the volume level of the Nintendo Switch OS. Adjust the Nintendo Switch OS volume in the device settings.

4

Programming the Back Buttons
Programmer les boutons arrières
Programación de los botones traseros
Programmieren der rückseitigen Tasten
Programmazione dei pulsanti inferiori
Programowanie przycisków tylnych
Programação dos botões traseiros
Programmering af bagknapperne



EN

A. To program the back buttons, hold the "function" button and press the button you'd like to map a control to. Once the LED is flashing, press any button on the controller to map that button's function to the back. The LED will blink quickly 3 times, indicating successful programming.

B. To clear a mapped function or disable the back buttons completely, hold down the "function" button and double press any back button.

5

Removing/Adding Interchangeable Pieces
Retirer/Ajouter des pièces interchangeables
Poner o quitar piezas intercambiables
Austauschbare Teile entfernen/hinzufügen
Rimozione/aggiunta dei pezzi intercambiabili
Usuwanie/dodawanie elementów zamiennych
Remover/adicionar de peças intercambiáveis
Fjernelse/tilføjelse af udskiftelige dele



EN

The REMATCH Wired Controller is compatible with all REMATCH and Faceoff Deluxe+ Audio Wired Controller faceplates and interchangeable pieces (D-pad, analog sticks, and stick gates) to easily swap out and snap in different looks.


Note: Before removing or installing any of the interchangeable pieces, the faceplate must be removed.

6

FACEPLATES:
COQUES :
CARCASAS:

OBERSCHALEN:
PANNELLI FRONTALI:
PANELE PRZEDNIE:

PLACAS FRONTAIS:
FRONTPLADER:

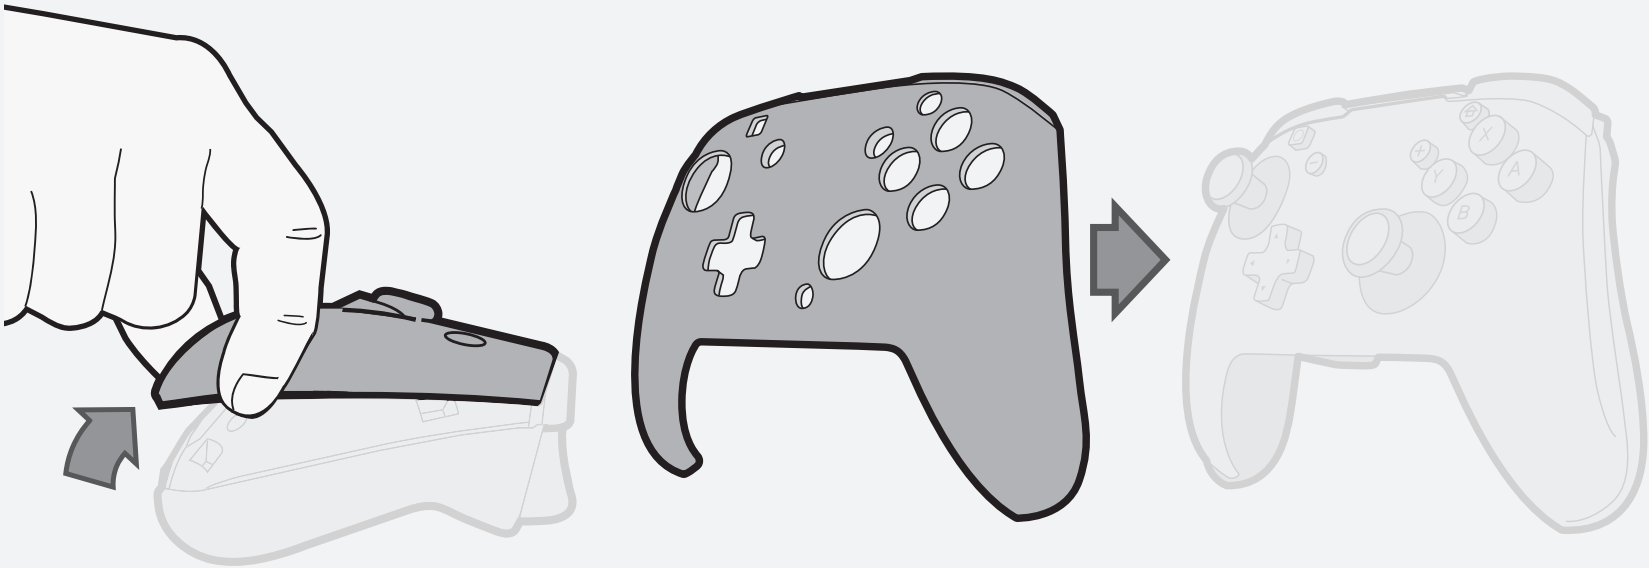


EN **A.** To remove the faceplate, locate the small finger indentation on the inside of the right controller grip and pull up.

B. To install a different faceplate, simply line up the faceplate to the controller and press on.

7

D-PAD:
BOUTON MULTIDIRECTIONNEL :
CRUCETAS:
D-PAD:
Croce direzionale:
KRZYŻAK D-PAD:
BOTÃO DIRECIONAL:
D-PAD:

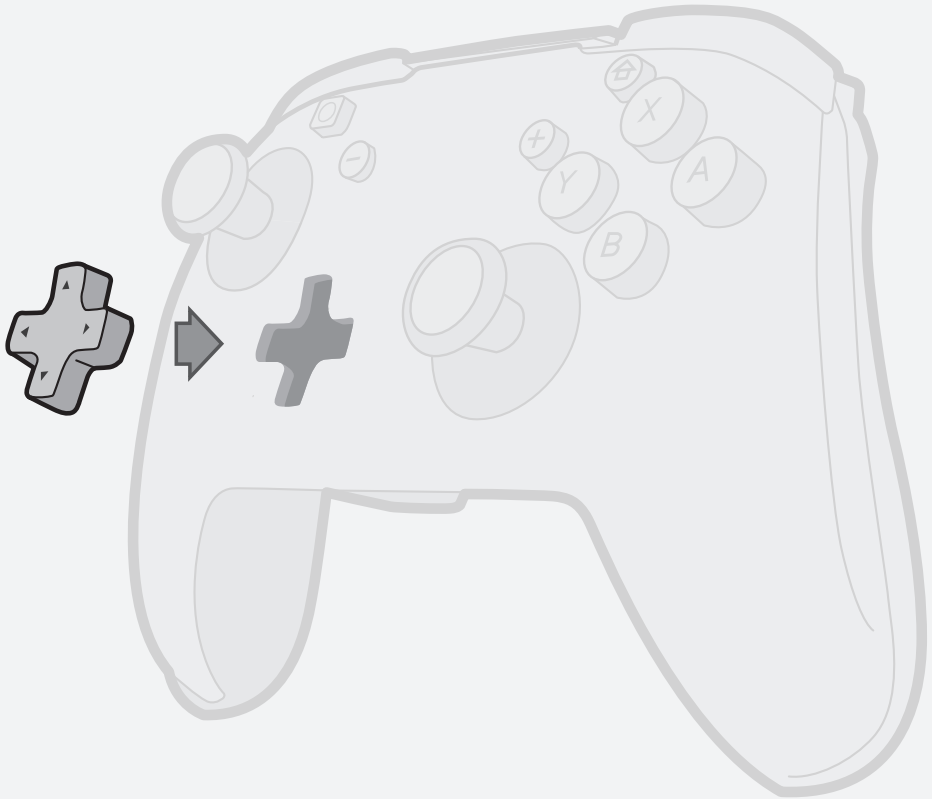


EN

A. To remove a D-pad, hold between two fingers and gently pull off.

B. To add a different D-pad, line it up with the controller and gently push down until you hear a click.

8

ANALOG STICKS:
JOYSTICKS ANALOGIQUES :
STICKS ANALÓGICOS:
ANALOG-STICKS:
LEVETTE ANALOGICHE:
DRĄŻKI ANALOGOWE:
MANÍPULOS ANALÓGICOS:
ANALOGE PINDE:

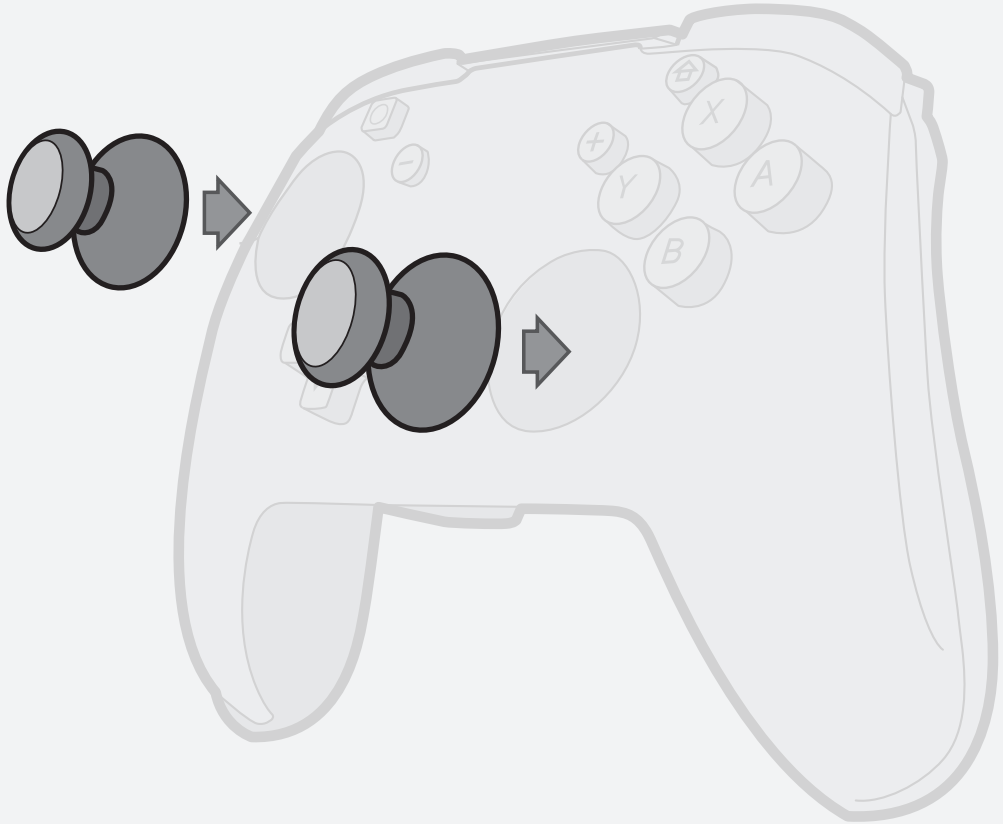


EN

A. To remove the analog stick, use a little force to pull it off the controller.

B. To add a different analog stick, line it up with the node on the controller and gently push the stick down.

9

STICK GATES:
RESTRICTEURS DE JOYSTICK :
LIMITADORES DE STICKS:
STICK-GATES:
BASI DELLE LEVETTE:
OGRANICZNIKI:
PORTAS DE MANÍPULO:
STIKINDGANGE:

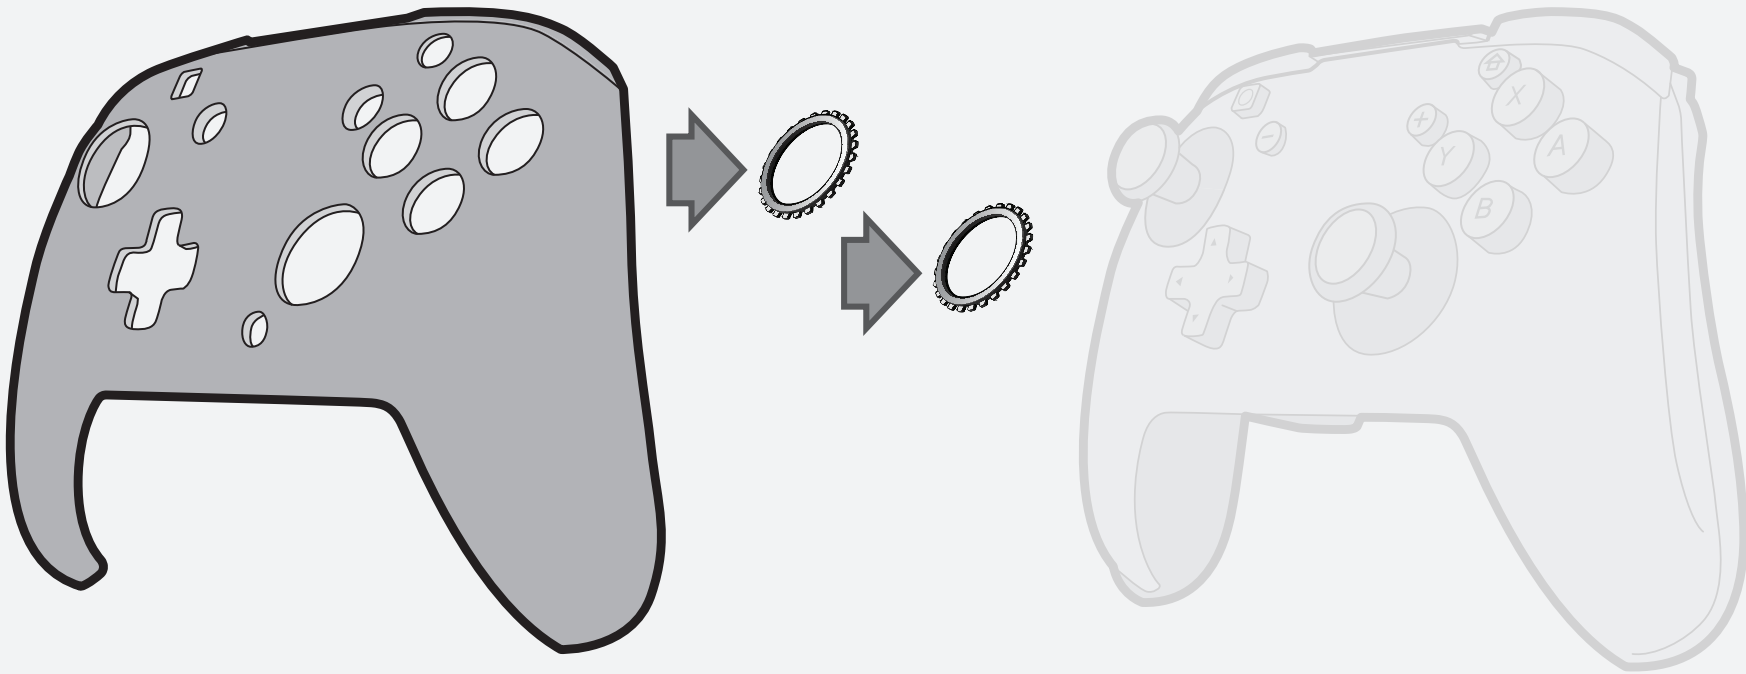

EN

A. To remove the gates, flip the faceplate over (so the back is facing you) and press firmly on the back side of the gate with your thumb; the gate should pop out.

B. When adding different gates, first make sure the back of the faceplate is facing you. Then, line up the teeth with the gaps and use your index fingers to push the gate on until it clicks.

ENGLISH

LIMITED WARRANTY

- **Coverage and Term** • PDP warrants that this product will be free from manufacturing defects for two years from the original date of purchase. Manufacturing defects are those defects in materials and/or workmanship, subject to final determination by PDP's customer service department. This warranty applies only to original purchasers with a valid proof of purchase from an authorized PDP retailer that clearly shows the date of purchase.
- **Exclusive Remedy and Exclusions** • The exclusive remedy for valid claims will be the replacement, or refund of the product. This warranty does not cover defects caused by accidents, improper or abusive use of the product, unauthorized or improper modifications, repairs, or handling.
- **How to Get Service** • Purchasers with product issues should not return the product to the store, but instead contact PDP's customer service department first. You can contact PDP customer service by phone at 1-800-331-3844 (US and Canada only), Monday to Friday from 8 AM to 6 PM PST. International customers can contact us by phone at +442036957905. You can always reach us, 24/7, by visiting support.pdp.com and clicking the "Submit a Request" button top right of the page to open a support ticket. Inquiries are typically answered within 24 business hours.
- **Your Rights Under Applicable Law** • This warranty does not affect the legal rights of customers under applicable state, provincial, or national laws governing the sale of consumer goods.
- **Additional Information for Australian Consumers** • PDP products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits given to you under our express warranty are in addition to other rights and remedies you have under the Australian Consumer Law and other laws.