warmlite
heating the heart of the home

550W
INFRARED DESK HEATER

YOUR SAFETY &
INSTRUCTION MANUAL
PLEASE READ CAREFULLY

MODEL **WL42016**



This product is only suitable for well insulated spaces or occasional use.

WARRANTY
2
YEAR

www.warmlite-products.co.uk

TECHNICAL DATA

Description:	550W Infrared Desk Heater
Model:	WL42016
Rated Voltage:	220-240V~
Product Input / Output:	550W
Frequency:	50/60Hz

WARRANTY

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:


- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RK Wholesale LTD has limited liability for incidental or consequential loss or damage.
- This guarantee is only Valid in the UK and Eire Only.

An extended warranty is available for this appliance.
See back page for details.

WIRING SAFETY FOR UK USE ONLY

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

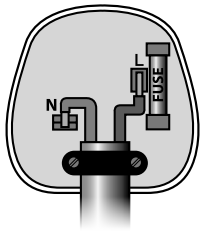

The wires in the mains lead are coloured in accordance with the following code:

Blue neutral [N] Brown live [L]

Plug Fitting Details (Where Applicable).

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black.

The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red.

On no account must either the brown or the blue wire be connected to the [EARTH] terminal ⏚.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug – disconnect it from the mains – and then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:

This appliance is double insulated. Do not connect any wire to the earth terminal.

PRODUCT SAFETY

When using **any** electrical appliance, basic safety precautions should always be followed including the following:

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children above 8 years old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not maintain or clean the appliance unless supervised.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer apart from those supplied with this product. DO NOT use extension cords with the appliance.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- DO NOT use this product for anything other than its intended use.

- This appliance is for household use only.
- DO NOT carry the appliance by the power cord.
- Always ensure that the heater is placed on a firm level surface. Ensure that the heater is not positioned close to curtains, furniture or any combustible materials as this could create a fire hazard.
- The heater must not be located immediately below a mains socket outlet.
- This product is only suitable for well-insulated spaces and occasional use.
- DO NOT cover the heater as this may lead to a fire risk.
- DO NOT obstruct any of the openings of the heater especially the heat outlet at the bottom of the heater.
- DO NOT insert any object through any openings on the heater.
- DO NOT use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- DO NOT operate the heater on a timer or leave on overnight.
- When not being used, please unplug the heater from the mains socket.
- Keep the mains lead away from the hot body of the heater and ensure that it is not pulled tight between the socket and the heater.
- DO NOT use the heater in the immediate surroundings of a bath, a shower, a swimming pool or similar indoor locations.
- DO NOT use or place the appliance on carpet. Always place the heater on a flat, stable heat-resistant surface.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

- WARNING: This heater is not equipped with a device to control the room temperature. DO NOT use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided
- CAUTION – Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people when around the appliance.
- DO NOT use this appliance if it is dropped or damaged in any way.
- WARNING! This appliance should only be repaired by the manufacturer or a qualified service repair person.
- WARNING! DO NOT use the appliance if water damage has occurred, if the appliance body has been damaged, the power cord has been damaged or broken, if the power cord is hot to the touch, if the unit smokes or smells like smoke. Note: When the heat function is used for the first time, a slight odour may be present. This is normal and may occur again if the appliance is not used for a long period of time.
- Always unplug the heater and allow it to cool before moving it from one location to another.
- DO NOT attempt to dismantle or repair any part of the heater. This should only be done by a qualified service agent.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.




WHAT'S IN THE BOX

Instruction Manual

Infrared desk heater

1. Handle
2. Air Inlet (back of unit)
3. On/Off Switch
4. Feet
5. Air Outlet

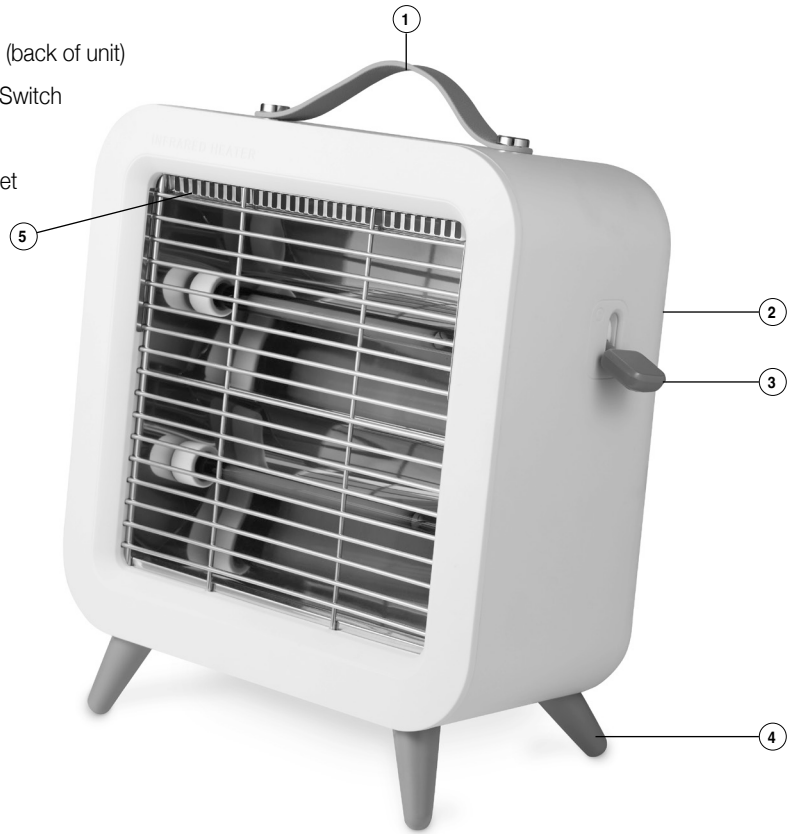

BEFORE YOUR FIRST USE:

1. Remove your appliance from the packaging.
2. Keep the front of the appliance through which the heat is radiated at least one meter away from furniture, curtains and other flammable objects at all times.
3. Ensure there is a grounded socket nearby (back of the appliance).
4. Never use an extension lead. The main cable must remain at the back of the appliance and must not be in contact with any hot elements.
5. Your appliance is now ready for normal use.

Dispose of the packaging in a responsible manner.

USING YOUR APPLIANCE

- Plug the heater into the mains socket and switch the socket on.
- The heater switch is located at the side of the unit.
- Switch the heater on by flicking the ON/OFF switch to the 'On' position, represented by the symbol 'I'. The unit will automatically begin to heat up and radiate heat.
- Flick this switch to the 'Off' position, represented by the symbol 'O', to turn the unit off. The unit will stop radiating heat and gradually cool down.

CLEANING AND CARE

- Before cleaning always switch off the heater and remove the plug from the electrical socket.
- Ensure that the unit is cool enough to work on.
- To remove the dust, wipe the appliance with a dry cloth.
- To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. After cleaning, dry the unit with a soft cloth.
- CAUTION! DO NOT let liquid enter the heater. This may cause damage or deterioration to the heater's surface.
- WARNING! DO NOT immerse the heater in water or any other liquid.
- Never use abrasives or detergents.
- If the heater shows any signs of wear or damage disconnect immediately from the mains supply, do NOT use it, and have it checked by a suitably qualified person.

TROUBLESHOOTING

Q: The heater will not turn on.

A: Make sure the appliance is plugged into the mains and that it is switched on. If plugged in, make sure the Power button is in the On position. Check that the safety cut-off feature has not been activated.

WARNING:

DO NOT IMMERSE ANY ELECTRICAL PART OF THE APPLIANCE IN WATER SUCH AS MOTOR UNITS OR PLUGS.

PLEASE SEE CLEANING SECTION FOR FURTHER INSTRUCTIONS.



DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

We hope you enjoy your appliance for many years.

As a thank you for purchasing one of our fantastic products,
we are giving you an extra year peace of mind.

To receive your extra year guarantee, register your appliance online by visiting

www.warmlite-products.co.uk



**Should you have a problem
with your appliance or need any spare parts please call our
Service Department on:**

+44 (0) 333 220 6056

Distributed throughout the UK by RKW LTD

warmlite
heating the heart of the home

0723.V1