
BUSH

Instruction manual

MODEL:CAB-91667

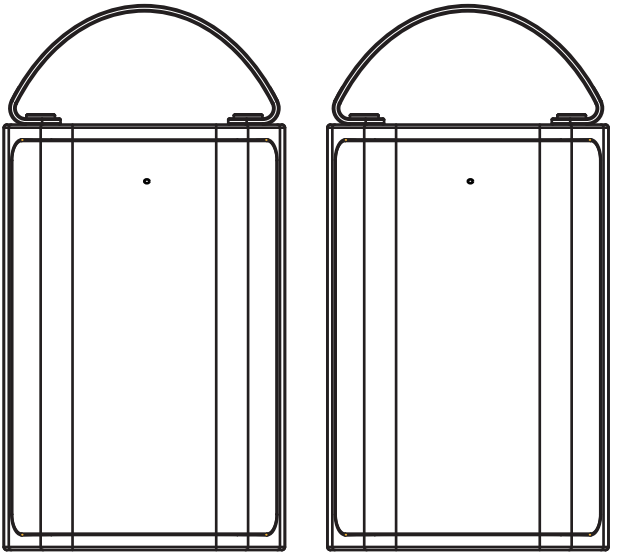



CAUTION: TO REDUCE THE ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**DANGEROUS VOLTAGE:** The lighting flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

**ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

Before using the unit, be sure to read all operating instruction carefully, please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.


1. Read these instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Keep these instructions – The safety and operating instructions should be kept for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operation and use instructions should be followed.
5. Clean only with dry cloth – The appliance should be cleaned only as recommended by the manufacturer.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades and a third grounding prong. The wide or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments / accessories specified by the manufacturer.
11. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.




12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
15. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
16. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
17. Do not attempt to dismantle, open or repair this product yourself. If a fault occurs, seek advice from your local qualified service technician or contact the distributor via the telephone number at the back of this instruction manual.
18. Caution marking and nameplate are located on back or bottom of product.

PRODUCT OVERVIEW


TOP VIEW

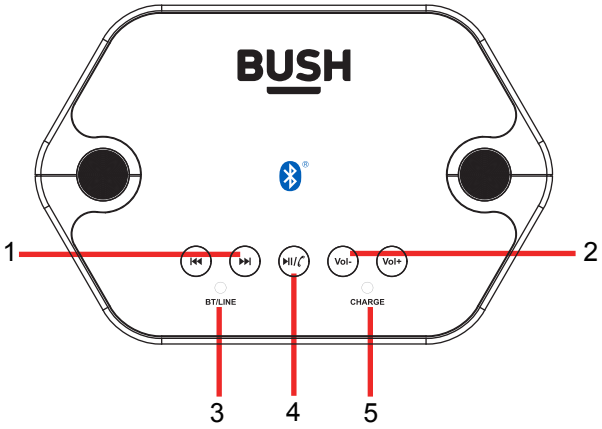

REAR VIEW

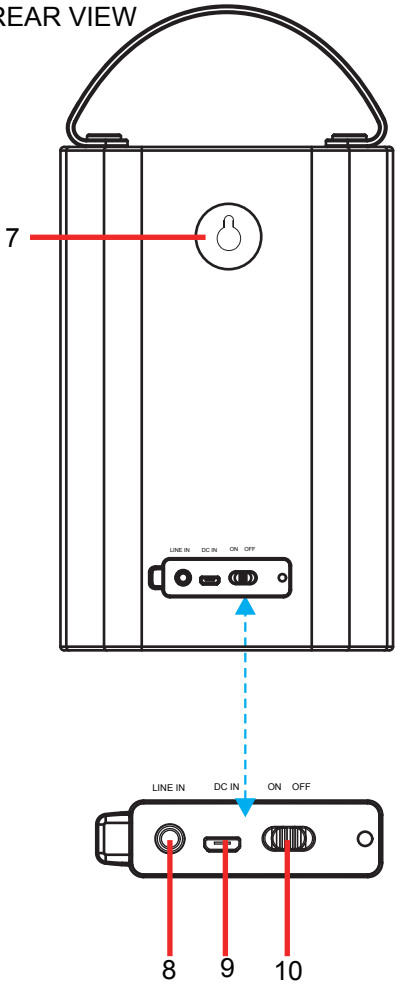


FRONT VIEW

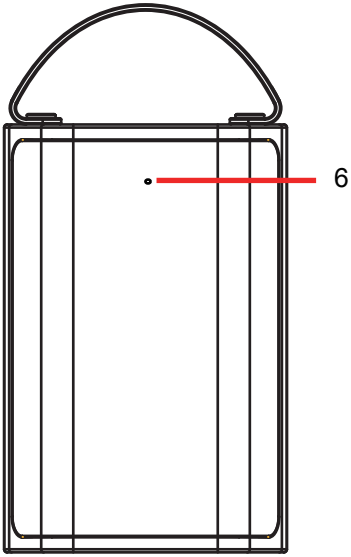


1. ⏮ / ⏭ (Previous/Next) Button
2. Vol - / Vol + (Volume Down / Volume Up) Button
3. BT/LINE Indicator
4. ⏯/✆ (Play/Pause/Hands-free) Button
5. Charge Indicator
6. Built-in Microphone
7. Mounting Hole
8. LINE IN Jack
9. DC IN Port
10. Power ON/OFF Switch

MOUNTING

A. Mounting On The Wooden Wall

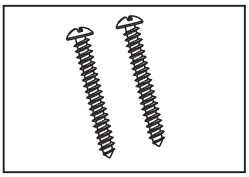


2 pieces screws

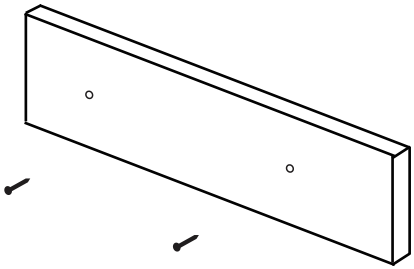


1. Mark the position of the mounting screws on the wall using a pencil.
2. Drill the screws(not supplied) directly into the marks that you have made on the wall and leave approx. 0.3 inch length to hook.
3. Put the two units on the mounting screws. Make sure they are firm and stable.

B: Mounting On The Brick Wall

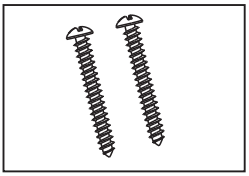


2 pieces screws

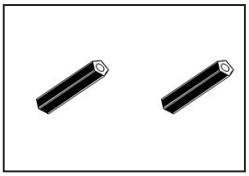


2 pieces plastic inserts

1. Mark the position of the mounting screws on the wall using a pencil.
2. Drill 2 x 7/32 inch diameter holes by a powerful electric drill (Not Supplied).
3. Insert the plastic inserts(not supplied) into the holes by hammer(Not Spplied)
4. Secure the screws into the plastic insert (not supplied) and leave approx. 0.3 inch length to hook.
5. Put the two units on the mounting screws. Make sure they are firm and stable.

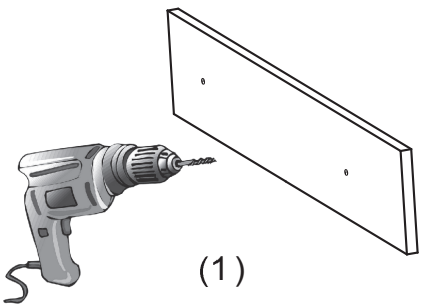

(1)

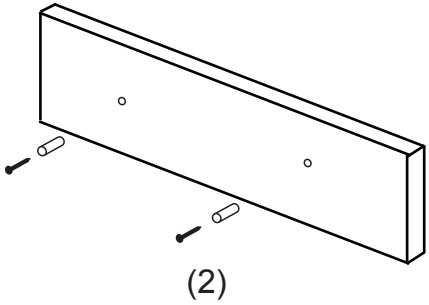

(2)

BATTERY CHARGING

1.Connect Micro-USB cable to DC-in Jack on rear panel.

2.Connect the USB plug to a free USB port on a computer or a 5V USB AC adapter (not supplied).

During charging, the charging indicator will turn red, and it will turn off after fully charged.

LINE IN OPERATION

1.Connect media player via 3.5mm Audio cable to the LINE IN jack on the rear panel of the unit by the supplied Audio Connection Cable as the figure below:



2. Push the power switch to "ON" position to power on the unit.

3. Power on the connected external player and start playback as usual.

BLUETOOTH PAIRING AND CONNECTION

NOTE:
- Before pairing, make sure the LINE IN cable is not plugged into the LINE IN jack.
- If the two units were connected and paired before, the two units will connect and pair with each other automatically.

FIRST TIME PAIRING

1. Push the power switch to "ON" position to power on both units, the two units will send a sound, and the BT/LINE indicator will flash.
2. Touch and hold " ⏮ " button on one of the two units, then touch and hold " ⏭ " button on another unit at the same time, the two units will search and pair with each other. The unit from which the " ⏭ " button being touched will be the main unit.
3. After successful pairing and connection, a chime will be heard and the BT/LINE indicator on main unit will flash. (the BT/LINE indicator on deputy unit will stay lit).
4. Open the bluetooth on bluetooth enabled audio player or mobile phone and try to search and pair with the main unit, the pairing name "CAB-91667" will appear, select and make connection.
5. After successful connection, the BT/LINE indicator on main unit will stay lit.
6. Play track on bluetooth enabled audio player or mobile phone as usual.

NOTE:
- Repeat the operation of STEP 2 to switch the main unit before pairing with bluetooth enabled audio player or mobile phone.
- If the main unit had been switched before connected with the bluetooth enabled audio player or mobile phone, the bluetooth enabled audio player or mobile phone must search the main unit again although there is "CAB-91667" listed on pairing name list.

During playing:

A:Touch ⏮ or ⏭ button to skip to previous or next track.
B:Touch ⏯/✆ button to pause, touch again to resume playing.
C:Touch VOL + or VOL - button to increase or decrease the volume.

The A, B, C operation above are simutaneous during playing.
For example, touch VOL + button on one of the two units, the volume on both units will increase.

DISCONNECTION:

- Holding the ⏯/✆ button on main unit to cut off connection between main unit and bluetooth enabled audio player or mobile phone.
- Holding the ⏯/✆ button on deputy unit to cut off connection between main unit and the deputy unit. (To reconnect the deputy unit, please pause playing on main unit, and restart deputy unit. After reconnection with main unit again, touch VOL - to set to minimum volume, then touch VOL + to set to the desired volume.)

NOTE:
- The two units will enter standby mode without any audio output or operation after about 30 minutes.
- Please restart two units and make connection again when unsuccessful connnection happen in some special circumstance.

INCOMING CALLING DURING PLAYING IN BT MODE

An incoming call received during playing in bluetooth mode, operate as the followings:

- Touch " ⏯/📞 " button on the main unit to answer the incoming call.
- Touch " ⏯/📞 " button on the main unit again to end the call after conversation.
- Holding the " ⏯/📞 " button on the main unit to refuse the call.
- Double press " ⏯/📞 " button on the main unit to redial the last called number.

NOTE:
Deputy unit is out of function in calling mode.

BT/LINE Indicator	Mode
Red	Line In Mode
Flash Blue	Bluetooth Pairing
Blue	Bluetooth Connected
Blue	Calling Mode

Charge Indicator	Mode
Red	Charging
Off	Fully Charged

TROUBLESHOOTING GUIDE

Check the followings before requesting service		
SYMPTOM	**POSSIBLE CAUSE**	**POSSIBLE SOULTION**
No power	The power is consumed	Recharge the unit.
No sound	Volume in minimum position	Raise volume level by pressing the VOL (Volume) + button.
	The paired/connected device is not in payback mode	Play music/movie in the paired/connected device as usual and make sure the volume level of it is in high level.
Sound distortion /rattle	Volume level too high	Reduce the volume level by pressing the VOL (Volume) - button.
		Reduce the volume level of the paired/ connected device.
Bluetooth reception failure	The external device is far from the unit	Put the external BT device close to the unit.
	Have not paired	Pair the unit with the BT Device as the procedures stated in this manual.

SPECIFICATION

Speaker output power.....2X5W

Built-in battery.....3.7V,2500mAh

Charging power.....DC 5V ⎓ 1000mA

Bluetooth working range.....approximately 33 feet (10m)

Playing time.....around 5 hours (with 50% volume)

Bluetooth® is a trademark on a registered trademark of Bluetooth SIG Inc. All other trademarks and trade names are those of their respective owners.

ACCESSORY

1 X Instruction manual
1 X Micro USB charging cable
1 X 3.5 mm LINE IN cable

Product support

Help is always at hand

Disposal

The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and humanhealth,which chould otherwise be caused by inappropriate waste handling of this product.. For more detailed information about recycling this products ,please contact your local council office your household waste disposal service or the shop where the product was purchased.



This product is intended for use within the UK. This equipment complies with the essential requirements for the Radio Equipment Directive 2014/53/EU

Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU
The complete declaration of conformity can be obtained by contacting http://www.argos-support.co.uk.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Bluetooth CD Boombox is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.argos-support.co.uk**

If you still require further assistance, call one of our experts on . To help **0345 604 0105** give us give you a fast and efficient service please have the following information ready:

Model Ref.		You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.
Serial number		
Date of purchase		This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and
10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at If you still require further assistance, call one of our experts on .**www.argos-support.co.uk 0345 604 0105**

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection **Officer, Domestic & General, Leicester House** 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at **www.argos-support.co.uk** If you still require further assistance, call one of our experts on **0345 604 0105**.