BUSH

Turntable with Speakers

RP-103B



Contents

Page Contents

Warnings 2
Box contents and features ..... 3 - 4
Set up and operating the turntable 4
Specifications 4
Replacing the stylus 5
Precautions 5
Troubleshooting 5
Product support 6
Guarantee 7

Warnings

Warning

1. No naked flame sources, such as lighted candles, should be placed on or near this equipment.
2. Do not place the product in enclosed bookcases or racks without proper ventilation.
3. The mains adaptor is used as the disconnect device and must be easily reached to unplug.
4. Always use the power adaptor supplied if it needs to be replaced make sure the replacement has the same rating.
5. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
6. Do not expose to dripping or splashed fluids. Objects filled with liquids, such as vases, must not be placed on or near this equipment.
8. The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations or placed in dusty environment.
9. Do not use abrasives, benzene, thinner or other solvents to clean the surface of the unit. To clean, wipe with clean soft cloth it and a mild detergent solution.
10. Never attempt to insert wires, pins or other such objects into the vents or opening of the unit.
11. Do not disassemble or modify the turntable - apart from the stylus which can be replaced, there are no other user serviceable parts.
12. If the turntable is damaged in anyway or malfunctions do not use. Consult a qualified service engineer.
13. Switch off the mains socket the power adaptor is connected to when the turntable is not in use.
14. Do not dispose of this product with household waste at the end of its life cycle; hand it over to a collection centre for the recycling of electrical and electronic appliances. By recycling, some of the materials can be reused. You are making an important contribution to protect our environment. Please check with your Local Authority or recycling advice.



Disposal of your old appliance:


1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive.
2. All electrical and electronic products should be disposed of separately from household waste at an appropriate recycling point/centre.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your local authority or the shop where you purchased the product.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

Box contents and features

Box Contents

1 x RP-103B Turntable with hinged dust cover
1 x 3 Pin mains to 12V ⎓ 0.5A plug-in power adaptor
1 x Replacement stylus
1 x User guide

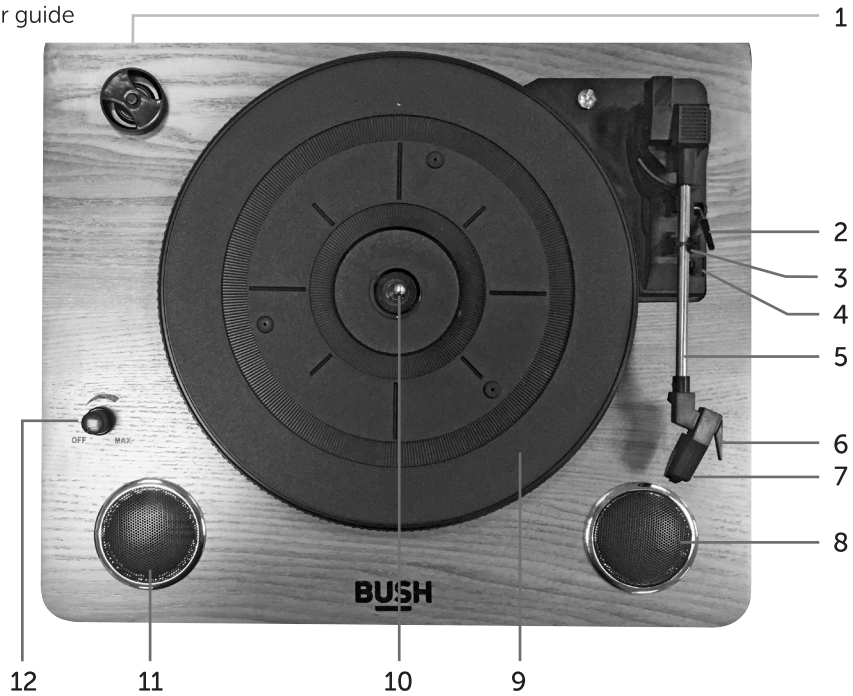


Features

1. 45 Single spindle adaptor
2. Tone arm Lever
3. Tone arm rest and security clip
4. Speed selector switch
5. Tone arm
6. Tone arm lift
7. Cartridge/Stylus
8. Right channel speaker
9. Platter
10. Spindle
11. Left channel speaker
12. Power On/Off and volume control

13. Power switch ON/OFF
14. Power socket DC12V
15. AUX OUT Left channel phono socket
16. AUX OUT Right channel phono socket

Sockets located on the back of the turntable

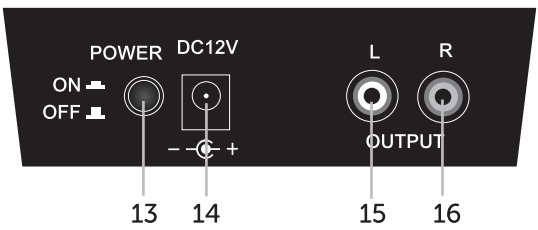

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105

Features

- 33, 45 and 78 RPM selectable speed turntable
- AUX OUT for connecting to Hi-Fi or speaker systems
- Built-in stereo speakers
- Clear plastic lid / dust cover
- 45 Single spindle adaptor for playing discs with knocked out centres
- Precision diamond stylus and replacement
- Tone arm auto return when record /vinyl has finished playing

Set up and operating the turntable

1. Remove all packaging from the unit.
2. Ensure that the security latch (3) is closed so that the tone arm is not free to move.
3. Ensure unit is on a solid level surface, away from sources of heat,sunlight, etc.
4. Plug the jack plug from the power adaptor into the DC IN socket (13) on the back of the turntable then plug the power adaptor into a three pin mains socket and switch the socket on.
5. Remove the protective stylus guard from the tone arm cartridge by gently pulling it forwards.
6. Carefully place a record/disc on the platter/turntable (9).
7. Turn the Power On/Off and volume control to on - turn clockwise.
8. Select the correct speed for the disc you want to play by adjusting the speed selector switch (4).
9. Release the security clip (3).
10. Lift the tone arm using the tone arm lever (2) and place the stylus at the start of the record, gently lower the tone arm lever.
11. Turn the volume control knob clockwise to increase the volume or anti clockwise to reduce the volume.
12. When the record has finished playing the tone arm will return automatically to the rest position and the turntable will stop spinning, close the security clip if you have finished listening.

Using AUX OUT

You can use the AUX OUT stereo phono sockets to connect the turntable to an external sound system or speakers. Connect via the AUX OUT sockets (15 & 16) on the back of the unit and play your disc as normal. Adjust the volume on the sound system and turntable to get the desired volume and optimum quality playback. Please note AUX OUT cables are not supplied you will need a 2 phono plug to 2 phono plug or 2 phono plug to 3.5mm jack depending on the type of sound system or speaker you are connecting to.


Specifications

Mains adaptor
Input: 100-240V~50/60Hz, 0.2A
Output: 12V⎓0.5A

Turntable
Speeds: 33, 45, 78 RPM

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

Replacing the Stylus

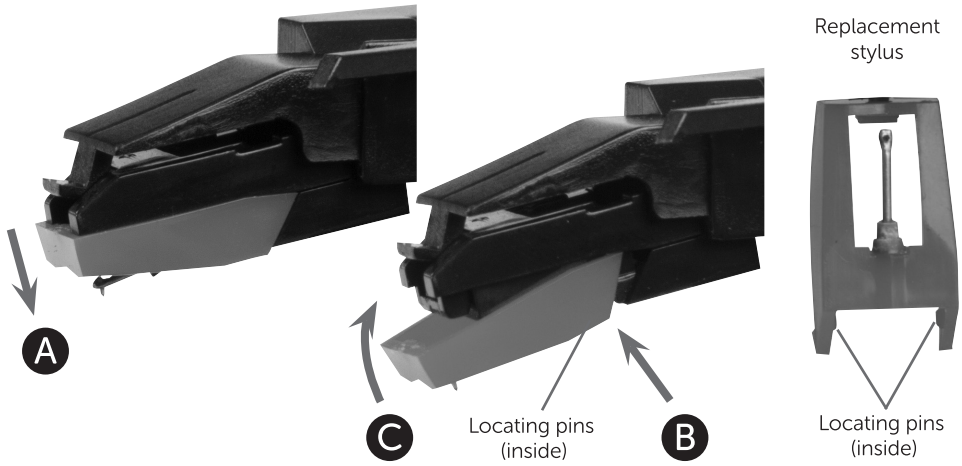

Removing the stylus from the cartridge

1. Place a screwdriver between the top of the red stylus shell and the black holder and push downwards in the direction “A” as shown above left
2. Remove the stylus shell by pulling it forwards and pushing downwards.

Replacing the stylus with the replacement supplied

1. Hold the tip of the red stylus shell and insert it by pushing in direction “B” as above
2. Push the stylus shell upwards in the direction “C” until it locks into position.

Precautions

- Do not place unit on top of or near loudspeakers as acoustic feedback can occur.
- Do not play badly worn or chipped records.
- Ensure stylus is clean and free of fluff and dust.
- Clean the unit with a soft, damp lint free cloth, never use chemicals or harsh abrasives.
- Use a good quality record cleaner regularly for optimum results.
- Always secure the tone arm with the security clip before moving the unit.

Troubleshooting

Q1 Sound quality is poor.
A1 Clean disc and stylus.
A2 If there is no improvement and the stylus has not been recently changed replace the sylus.

Q2 The turntable is spinning too fast or too slow.
A1 Check that the turntable speed is corect for the disc you are playing.

Q3 The record plays but there is no sound.
A1 Make sure the white stylus cover has been removed and the stylus is undamaged.
A2 Check volume is turned up sufficiently.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Turntable is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on 0345 604 0105*. To help give us give you a fast and efficient service pleasehave the following information ready.

Model Ref.		You can find these on the rating plate a small information panel (usually a sticker or metal plate) on the rear of your product.
Serial number		
Date of purchase		

*Local call rates apply

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your plan/tariff. Mobile and other provide's costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from the Republic of Ireland will attract international call charges.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

Product support

Help is always at hand

Call us now to activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't for get to register it with us today so we can provide you with our best possible after sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am-8pm, 365 days a year *Calls may be recorded and monitored

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship
will be either replaced, refunded or repaired free for charge where possible
during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.,
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used for domestic purpose. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifcations are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory orlegal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes {as set out in the Important Data Privacy notice displayed overleaf) for which their personal data willbe processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor and record your communications with us.

If your personal details change, iff you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Date Protection Officer, Domestic & General, Leicester House, 17 Leicester Street,Bedworth,Warwickshire, CV12 8JP

Guarantor Argos Limited: 489-499 Avebury Bvd - Milton Keynes - MK9 2NW

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.

CE

2017 v1