BIG WHEELED SCOOTER

REVERB


8+



Included:
- Allen Key

ADJUSTING & FOLDING THE SCOOTER

TO UNFOLD / FOLD THE SCOOTER

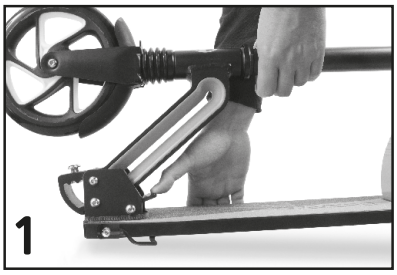

To unfold the scooter.


1. Push the lever, whilst pulling the handlebar up to the upright position, until it locks in place. Fold out the kickstand to stand the scooter up.




To fold down the scooter.

2. Fold away the kickstand. Push the folding lever with your foot, and pull the handlebar down until it locks in place in the folded position.

HANDLEBAR HEIGHT

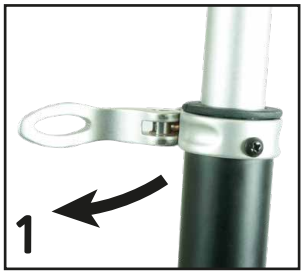

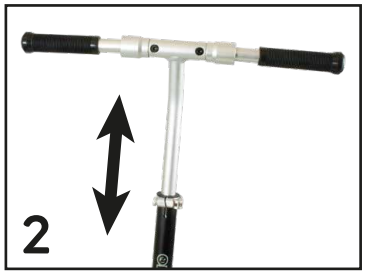







To adjust the handlebar.

1. Pull open the lever on the handlebar.
2. Pull the handlebar up or down to the correct height.
3. Push the lever closed to lock the handlebar in place.
4. Hand tighten the nut on the back of the lever.

TO FOLD / UNFOLD THE HANDLEBAR

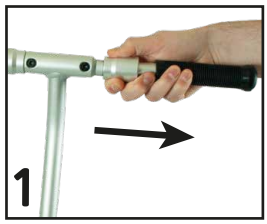

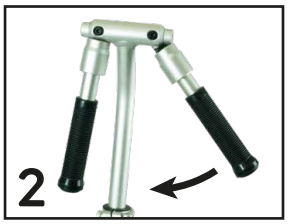




To fold the handles.


1. Pull out the spring loaded collars.
2. Push the handles down.

To unfold the handles.

3. Reverse the steps. Pull up the handles, until the collars click back into place.

TO UNFOLD / FOLD THE KICKSTAND

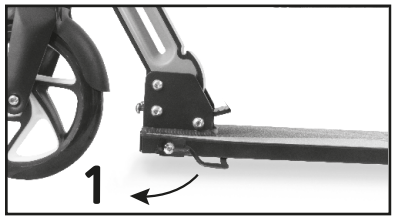

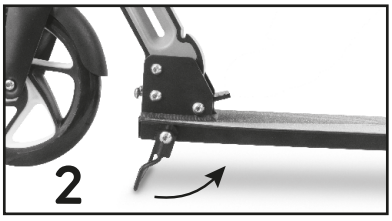

To unfold the kickstand.

1. Stop and dismount the scooter.
   Kick out the stand from under the scooter.

To fold away the kickstand.

2. Fold the kickstand back up under the footplate before you climb on and ride away.

TO RIDE

Ensure the rider understands how to ride the scooter.

1. Grip the handle bars with your hands, place one foot on the board and the other foot on the ground.
2. Pay attention to your surroundings and make sure that your riding area is clear.
3. Kick backwards with your foot beside the scooter to give you motion.
4. Repeat this kicking action in order to stay in motion.
5. To stop or slow down, place your kicking foot on the brake pedal above the rear wheel or put your kicking foot on the ground.
6. Do not over-steer as this could cause you to fall off from the scooter.

IMPORTANT SAFETY INFORMATION

Ensure the rider understands the safety information.

- Adult supervision is recommended.
- An adult must assist children with initial procedures and help with unfolding, adjusting the handlebar height and folding the scooter.
- The scooter must only be used by one rider at a time.
- This product is not a road vehicle and should be used for leisure purposes only.
- Do not use this product at night, in poor weather (rain, snow or visibility) or around heavily populated areas (pavements, streets, muddy areas, rocky surfaces and slippery surface). We recommend that you use this product in a park or other open space.
- Remember to wear a helmet, knee pads, wrist pads, elbow pads and protective clothing.
- Always wear shoes when riding the scooter.
- Do not use this product for jumping, stunts or tricks. The scooter is not designed for such use.
- Brake will get hot from continuous use. Do not touch after braking.
- Avoid excessive speed associated with downhill rides.
- Watch out for pedestrians.
- Replace worn or broken parts immediately.
- When using the scooter, please obey all traffic and pedestrian regulations and gives right of way to pedestrians and refer to the Highway Code regarding rules for cyclists.
- Please check the steering system is correctly adjusted and that all connection components are firmly secured and not broken before every play.
- Check the limitation of use according to regulations of road safety.
- This product is not recommended for indoor use. Outdoor use only.

MAINTENANCE

1. Please rotate the bearings and wheels to check if they are rolling smoothly.
2. It is suggested to disassemble, clean, and add lubricant every 6 months paying extra attention to the moving parts, clearing them of grit and dirt so they move freely. Please make sure the parts specifications are correct with the dealers if some parts need to be replaced.
3. Make sure the front fork and wheels are fixed tightly, you can use a wrench to tighten the locking nut properly. Use firm pressure but don't over tighten.
4. The wheels may become worn out after some time of use, please contact the seller to replacement new wheels for a safe ride.
5. The wheels and wheel bearings can become worn after regular use and can be replaced easily. Remove the axle bolts with two Allen keys and slide the wheel off its fork. Replace with the new item, screw in the bolt through the aligned fork and wheel then tighten with an Allen key on either side and tighten securely.
6. Wipe with a damp cloth to remove dirt and dust. Do not use industrial cleaners as they may damage the surfaces. Do not use alcohol, alcohol-based or ammonia-based cleaners as they may damage or dissolve some components or soften the decals or the grip surface adhesive.
7. Make sure all components are assembled and secured tight before each use.
8. Self-locking nuts and other self-locking fixings may lose their effectiveness over time. If any of these components are no longer functioning how they should, it is strongly recommended that you discontinue use of the product and seek replacement parts from the dealer or importer of this product.
9. Do not leave the scooter outdoors, in high temperatures, intense sunlight or dusty areas. Store in a dry place.
10. No modifications other than to the manufacturer's instructions shall be made.

WARNING

The scooter is not designed to be dropped when not in use. If the scooter is dropped after use, over a period of time you will damage the plastic end piece and the steel tubing. If you damage this part of the scooter, it is strongly advised that you replace the damaged parts as soon as possible to avoid any accident caused by making contact with the these parts. The scooter should not be used on any other surface other than on flat even ground. It is not designed for gravelled roads, on grass surfaces or any other uneven surfaces as this could cause not only damage to scooter but also the rider. Protective equipment should be worn. Not to be used in traffic. 100kg max. The scooter shall be used with caution, since it requires great skill, so as to avoid falls or collisions causing injury to the user and the third parties.

CUSTOMER HELPLINE

Hy-Pro advise you to contact us directly and not to return this item to the place of purchase. Hy-Pro has taken great care to ensure this item has reached you in good condition, should you have a query please ring our helpline +44 (0) 800 731 0006 where your call will be dealt with promptly. Alternatively please contact us on email: customerservices@zinchq.com





*PLEASE RETAIN FOR FUTURE REFERENCE
*COLOUR & CONTENTS MAY VARY FROM THOSE SHOWN ON PACKAGING
COMPLIES WITH BS EN14619:2019 / EN14619:2019.
MAXIMUM WEIGHT: 100 KG FOR CLASS A.

HY-PRO®
LU5 5BN, UK

Hy-Pro House, Centrus Park
Arenson Way, Dunstable,
Bedfordshire LU5 5BN.
United Kingdom

Hy-Pro Asia
Room 1011, 10/F, Peninsula Centre,
67 Mody Road, Kowloon, Hong Kong.

Hy-Pro Europe
Cube Building, Monahan Road,
Cork, T12H1XY, Republic Of Ireland.

Customer Care Line
Tel: +44 (0) 800 731 0006
www.hy-pro.co.uk
www.zincsports.com