此页不印刷

物料名称： DH-CS03 说明书			版　本： A0		
物料编码： 30400303838			变更内容： A1 更改xxx A2 更改xxx		
材　质： 100克双胶纸					
尺　寸： 120x170mm					
工　艺： 折页/8P			平面设计： 骆美华		
印刷颜色： 四色印刷			日　期： 2025-02-7		
单　位： mm	比　例： 1:1	公　差： ±3	刀　线： ———	压　线： - - -	

制作要求：1.请严格按照图纸尺寸/图案位置进行印刷；
2. 送样板或送大货时，请务必确保成品不得出现色差、漏印、叠影等不良情况；
3.所有材料必须过RoHS环保认证。


DOUHE 斗禾

BUSH

Instruction manual.

0.7L MINI DEHUMIDIFIER

Model number DH-CS03

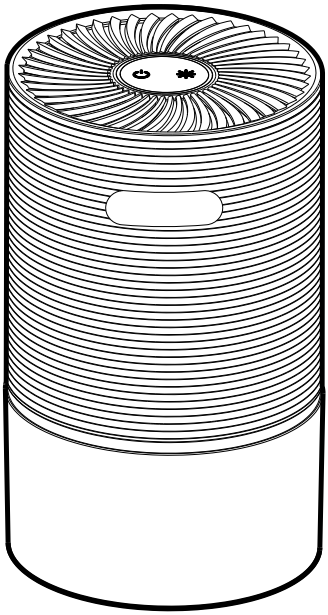

Please read the instructions fully before use.

BUSH



Safety information important- please read the instructions fully before operating.


For household and indoor use only.

- This appliance must be used for its intended purpose only and operated as instructed in this user manual.
- Use only the voltage specified on the rating plate of the appliance.
- Do not connect the appliance to the mains voltage until completely assembled and adjusted.
- **This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**
- **Children should be supervised to ensure they do not play with the appliance.**
- To protect against electrical shock do not immerse cord, plugs, or the main body in water or other liquids.
- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- The product is not to be used if it has been dropped or there are visible signs of damage.
- It the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.
- Never attempt repairs yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee, take the appliance to a qualified repair agent.
- This appliance is designed for indoor; household use only.
- Do not cover the appliance as this can block the air flow and cause overheating.
- This appliance should only be used with the supplied adaptor.

BUSH

- Unplug the appliance when not in use, when moving the appliance and before cleaning.

Getting to know your mini dehumidifier

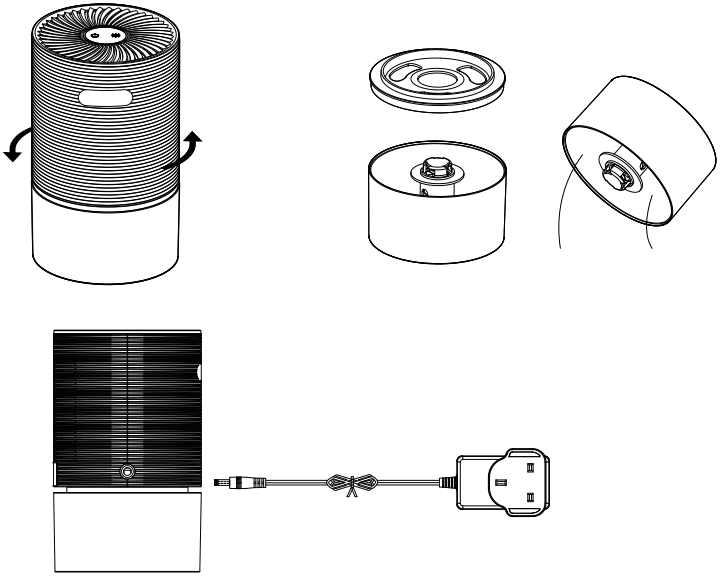

Using your dehumidifier

- Place the dehumidifier on a steady surface making sure the inlet and outlet grilles are free from obstruction.
- Connect the DC power jack of the supplied DC/AC power adaptor to the DC power socket on the back of the dehumidifier, then connect the AC plug to the appropriate mains cable.

NOTE: care should be taken with the positioning of the appliance due to the mains cable creating a trip hazard.

Select the power button at the top of the machine to turn the dehumidifier on, press again to switch off.

The LED light feature turns on automatically when the dehumidifier is switched on. Select the light button to cycle through the 7 colour options or to switch the light off.

BUSH

NOTE: When the water tank is full, the red warning light at the base will flicker and sound 3 beeps. The appliance will then switch off automatically.

- After use, unplug the dehumidifier and empty the water tank.

NOTE: Do not use in temperatures less than 8°C or higher than 40°C

Emptying the water tank

- Before emptying the water tank, switch off and unplug from the mains.
- Unlock the base by turning the base anti clockwise.
- Discard the collected water down a drain.
- Refit the water tank, connect the power cord to the mains and switch on to continue dehumidifying.

Care and Maintenance.

- Before cleaning the appliance, switch off and unplug from the mains.
- Clean the exterior surface of the appliance with a soft, lightly damp cloth, then dry the appliance with a soft, clean cloth.
- Always empty the water tank, clean and dry the tank when not in use to prevent mould.

Storage.

- When not in use, clean the dehumidifier before storing away in the original or similar sized box.
- Store the fan in a safe, clean, and dry place, away from direct sunlight and out of reach of children.

Technical Specifications.

BUSH 0.7L Dehumidifier	
Model number	DH-CS03
Input rated voltage	DC 9V
Output rated wattage	23W
Cable type	AC/DC Adaptor
Water tank capacity	0.7 Liters
Dimensions	130 x 130 x 213mm
Weight	0.9kg
Operating temperature	Between 8°C to 40°C

Recycling electrical products.



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.

Product support

Help and assistance

If you require any technical guidance or find that your Stereo DAB/FM Radio with Bluetooth is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on 0345 604 0105*. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.	DH-CS03	You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.
Serial number	N/A	
Date of purchase		This will be shown on your receipt

Local call rates apply*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on 0345 604 0105

Product support

Help is always at hand

BUSH

Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk.

Guarantor: Argos Limited, London, EC1N 2HT, UK. Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

BUSH