RIFFMASTER Wireless Guitar Controller for Nintendo Switch QSG

RIFFMASTER Wireless Guitar Controller

For

Nintendo Switch

Quick Start Guide

500-300-BK

IN THIS QUICK START GUIDE

- Items included with the RIFFMASTER Wireless Guitar Controller
- Getting Started
    - Assembling the Guitar
    - Pairing the Guitar
- Battery Charging

ITEMS INCLUDED


- A: RIFFMASTER Wireless Guitar Controller
- B: Shoulder Strap
- C: 1.2m USB-C Charging Cable
- D: QR Code insert


GETTING STARTED

1. Assembling the Guitar

To assemble the RIFFMASTER Wireless Guitar controller follow the below steps:

a) Unfold the neck of the guitar away from the body of the guitar until it is fully extended.
b) Push the locking tab down on the back of the guitar neck to lock it in place.
c) Align the headstock with the top of the guitar neck and push down to snap it in place.

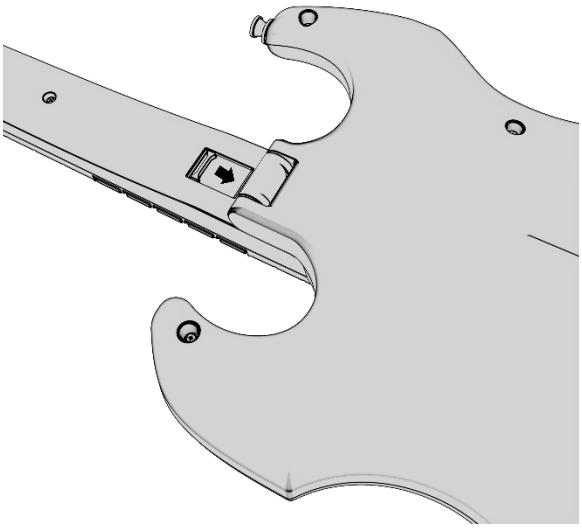

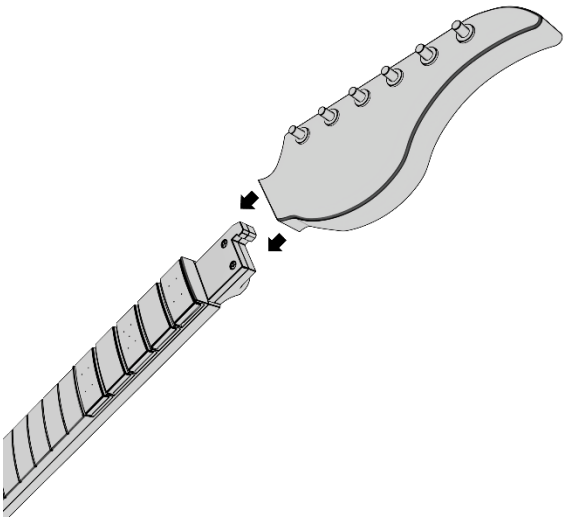

d) The guitar comes ready to play for right-handed guitarists. To convert to left-handed, unscrew the top peg and screw it in on the opposite side.
    a. *Note: You will also need to change to left-handed mode in the game software.*
e) Attach the included adjustable shoulder strap to the top and bottom pegs of the guitar.

2. Pairing the RIFFMASTER Wireless Guitar Controller

To pair your wireless guitar controller to your Nintendo Switch follow the below steps:

a) Turn on your Nintendo Switch™ device and press any button on the Guitar.
b) If your Guitar does not automatically connect, it will need to be paired with the device.
c) Using the Joy-Con™ controllers, navigate to **Controllers > Change Grip/Order**.

d) Now, using your Guitar, press and hold the sync button (at the bottom edge of the Guitar) for 3 seconds until it pairs and the player indicator light (by the USB Port) is solid.



3. Battery Charging

The RIFFMASTER Wireless Guitar Controller includes a built-in, rechargeable Lithium-Ion battery with up to 36-hours of play time per charge.

a) To recharge your guitar, connect the included USB-C cable to the USB-C port on the guitar, and the other end into one of the USB ports on the Nintendo Switch dock.
b) The Status LED (above the PDP button) on the guitar will light up Amber to indicate that it is charging.
c) Once fully charged, the Status LED on the guitar will turn Green to indicate the battery is full.

