
DH-CSK03说明书
130x190 折页 10P

challenge®

Model No. DH-CSK03
3L DEHUMIDIFIER
INSTRUCTION MANUAL

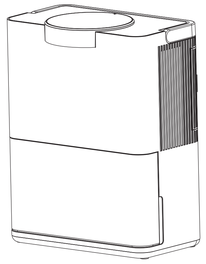

Important: Please read these instructions carefully before first using this product and retain for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Read through all the instructions carefully before starting to use the appliance. Keep this manual in a safe place for future reference.

- This appliance must be used for its intended purpose only and operated as instructed in this user manual.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure they do not play with the appliance.
- To protect against electrical shock do not immerse cord, plugs, or the main body in water or other liquids.
- Check the appliance before each use for signs of wear or damage. If damaged, discontinue from use immediately and do not use until the appliance has been inspected and approved for use by a qualified service person.
- The product is not to be used if it has been dropped or there are visible signs of damage.
- It the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified persons in order to avoid hazard.

- Never attempt repairs yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee, take the appliance to a qualified repair agent.
- This appliance is designed for indoor, household use only.
- Unplug the appliance when not in use, when moving the appliance and before cleaning.
- Do not place the appliance on an unsteady surface.
- Do not cover the appliance as this can block the air flow and cause overheating.
- This appliance should only be used with the supplied

STRUCTURAL COMPOSITION




Figure 1




Figure 2



Figure 3





Figure 4



CONTROL PANEL

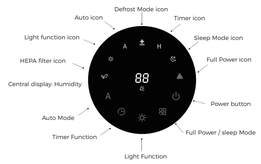

Using your Dehumidifier.

- Place the dehumidifier on a steady surface making sure the inlet and outlet grilles are free from obstruction.
- Connect the DC power jack of the supplied DC/AC power adaptor to the DC power socket on the back of the dehumidifier, then connect the AC plug to the appropriate mains cable.

NOTE: care should be taken with the positioning of the appliance due to the mains cable creating a trip hazard.

- Once connected to the mains power supply the dehumidifier will enter into sleep mode.
- Press the power button to turn on the dehumidifier, the dehumidifier will start to operate in full power mode. The light will activate and the humidity detector will display on the screen the current humidity.
- On first switching on the appliance, the control panel will display 4 function icons. 1. Full power mode icon. 2. Light function icon. 3. HEPA filter icon. 4. Humidity icon and display the current detected humidity reading.

Use the function buttons below to set up the dehumidifier to your personal preferences.

⏻ **Power control Button.** Press to switch the dehumidifier ON or OFF.

Mode Button. Press to change between full power and sleep mode.

In **Sleep mode** the brightness of the LED display will reduce and only the sleep mode icon and the HEPA filter icon will be displayed with the humidity display. The light function will also switch off, this can be reactivated by pressing the light button if required.

☼ **Light Button.** There are 3 light settings to choose from. Continue to press the light button to cycle through the ambient light options listed below or to switch the light off.
1. Top light only.
2. Water tank light only
3. Top light & water tank light together.
4. Light off.

◷ **Timer Button.** Press this button to activate the timer function. Once activated the display board will show 00 and the timer icon will light up. Continue to press the timer button to select the length of time. The timer intervals are 0h-02h-04h-06h-08h-12h-18h-24h-36h-48h- back to timer off.

Once the timer has been selected the display screen will automatically switch back to the current humidity after 3 seconds.

A **Automatic Mode Button / Humidity selector.** Select this function to control the humidity level. Press this button to select a preset dehumidification value between 40-70% the value increases in intervals of 5 until it returns to 40. Once the correct setting has been selected the display panel will return to display the current humidity and will continue to run until it reaches the selected value. Once the selected value has been reached the machine will switch off into standby mode.

60% humidity or above Is optimal for opening. Automatic mode is preset to 50% which can be changed between 40-70%. The recommended humidity level target is between 50-55%.

Water tank full alert. When the water tank is full the dehumidifier will beep 3 times and display a red light, the appliance will then automatically shut down.

Auto restart function. The dehumidifier has a memory function that will keep your previous settings when switched off and switched on again from standby mode.

H

Automatic defrost. The dehumidifier is equipped with an automatic defrost function. When operating in low temperatures, frost can build up on the internal coils and can affect the efficiency of the appliance. When frost is detected, the dehumidifier will automatically switch to defrost mode and the defrost icon will illuminate, the fan will continue to work. The time the unit is in defrost mode will vary. Once defrost is completed the dehumidifier will resume.

CLEANING AND MAINTENANCE

Before performing any cleaning or maintenance, make sure the dehumidifier is switched off and unplugged from the mains power supply.

- Clean the exterior surface of the appliance with a soft, lightly damp cloth, then dry the appliance with a soft, clean cloth.
- Always empty the water tank, clean, and dry the tank when not in use to prevent mould.

Emptying the water tank.

- When the water tank is full, the dehumidifier will beep 3 times and display a red light, the appliance will then automatically shut down. The dehumidifier will not restart until the water tank has been emptied.

!**IMPORTANT:** Do not move the dehumidifier when the water tank is full as it may be heavy and can cause water spillages.




1. Locate the water tank at the front of the dehumidifier. Gently pull the tank out.
2. Remove the cover from the top of the water tank and discard of the water in a sink or drain.
3. Replace the lid on top of the water tank and carefully push the tank back in place.

WARNING: Always drain and discard the water collected from the dehumidifier. The water is not clean and cannot be used for drinking.

Changing the filter.

The dust filter, located at the rear of the dehumidifier helps to remove dust particles from the air. A dirty filter clogged by dust particles can reduce the efficiency of the dehumidifier. For optimum performance from your dehumidifier, it is recommended you replace the filter after 2000h (3 months) use. How often you use the dehumidifier, and the levels of dust may shorten/ lengthen this time.

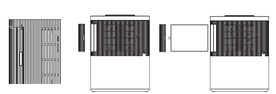

1.Locate the filter compartment at the rear of the dehumidifier and remove the cover.
2.Using the filter tab, slide out the filter and discard.
3.Following the instructions on your new replacement filter, slide the new filter back in place, ensuring you have removed any protective packaging and facing the correct direction.
4.Replace the filter cover.
NOTE: Replacement filters can be purchased via www.argos.co.uk with catalogue number xxx/xxxx

Changing the filter.

- When not in use, clean and dry the dehumidifier before storing away in the original or similar sized box.
- Store the appliance in a safe, clean, and dry place, away from direct sunlight and out of reach of children.

TECHNICAL SPECIFICATION.

Challenge 3L Dehumidifier	
Model number	DH-CSK03
Input rated voltage	DC 18V
Output rated wattage	47W
Cable type	AC/DC Adaptor
Water tank capacity	3L
Dimensions	25.8 x 15.8 x 33.5cm
Dehumidifying capacity	450ml±50ml/day (30˚C, 80% RH) With filter: 330ml ±50ml/day (30˚C, 80% RH)
Room size (suggested)	20m²
Weight	2.93kg
Operating temperature	Between 8˚C to 40˚C

UK CA CE

Produced in China for Argos Limited, London, EC1N 2HT, UK.
Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.
If you counter any problems with this product, please call the customer care team on 0345 640 30 30

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk, click on 'bank locator' and enter your postcode to find your nearest recycling site.

Argos

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
London
EC1N 2HT
www.argos-support.co.uk