BUSH Classic

Instruction Manual

SG-1532



Contents

Page Contents

Warnings 2
Box Contents 3
Introduction 3
Features 3
Controls and Operation 3
Charging the Battery 4
Bluetooth Pairing 4
Controls / AUX IN / Power Off 5
Troubleshooting 6
Specifications 6
Warranty 7

Warnings

Warning

1. No naked flame sources, such as lighted candles, should be placed on the speaker.
2. Do not place the product in enclosed bookcases or racks without proper ventilation.
3. The mains adaptor is used as the disconnect device and must be easily reached to unplug.
4. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
5. Do not expose to dripping or splashed fluids. Objects filled with liquids, such as vases, must not be placed on the speaker.
6. The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations or placed in dusty environment.
7. Do not use abrasives, benzene, thinner or other solvents to clean the surface of the unit. To clean, wipe with clean soft cloth it and a mild detergent solution.
8. Never attempt to insert wires, pins or other such objects into the vents or opening of the unit.
9. Do not disassemble or modify the speake - apart from the stylus which can be replaced, there are no other user serviceable parts.
10. If the speaker is damaged in anyway or malfunctions do not use. Consult a qualified service engineer.
11. Batteries shall not be exposed to excessive heat or direct sunlight, fire or the like.
12. Attention should be drawn to the environmental aspects of battery disposal.
13. Do not dispose this product with household waste at the end of its life cycle; hand it over to a collection center for the recycling of electrical and electronic appliances. By recycling, some of the materials can be reused. You are making an important contribution to protect our environment. Please check with your Local Authority or recycling advice.

Disposal of your old appliance or battery:



1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive.
2. All electrical and electronic products including batteries should be disposed of separately from household waste at an appropriate recycling point/centre.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your local authority or the shop where you purchased the product.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

Box contents and features

Box Contents


1 x SG-1532 Bluetooth Stereo Speaker
1 x 9V Mains adaptor
1 x AUX IN 3.5mm jack to 3.5mm jack cable (Approx. 60cm)
1 x USB cable
1 x User guide

Introduction

The SG-1532 Bluetooth speaker allows you to listen to the music stored on your iPod™, iPhone™, or other Bluetooth enabled device without the need to connect via wires or a dock.

Features

- Compatible for use with all Bluetooth enabled devices including iPhone, iPad, Blackberry, HTC, Samsung, Nokia and many other smartphones and tablets
- Built-in Lithium battery rechargeable via the power adaptor supplied for 4-6 hours playing time
- Connects wirelessly or by cable via the built-in 3.5mm jack socket.
- 10 metre range
- 2 x10 Watts output power
- Independent bass, treble and volume control

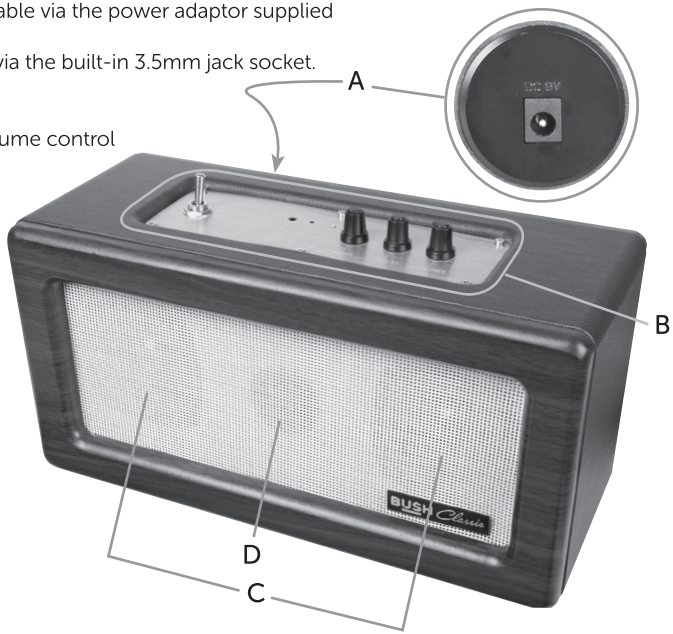


Main parts

A. DC IN power socket
B. Control panel
C. Stereo speakers
D. Passive subwoofer

Controls and Indicators

1. On-off switch
2. AUX IN socket
3. Mains power / charging LED
4. Bluetooth™ LED
5. Bass control knob
6. Treble control knob
7. Volume control knob

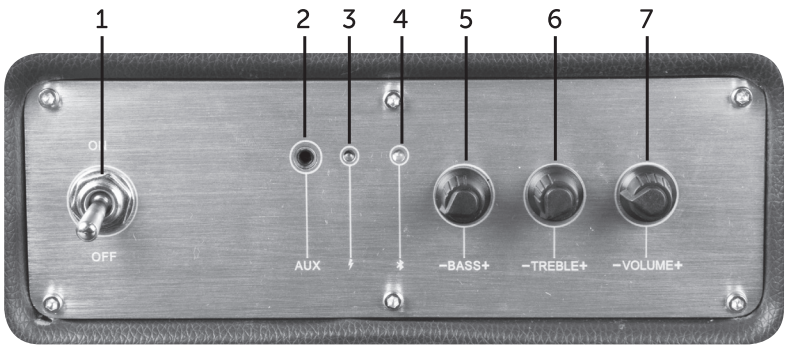

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105

Re-chargeable Battery and Charging

This Bluetooth Speaker has an internal, non user-replaceable battery. For best results, the first time you use this Bluetooth Speaker, let it charge for 4-6 hours until fully charged.

1. Plug the mains adaptor into a mains socket connect the adaptor to the DC IN socket (A) .
2. The Charge LED (3) will turn red when the battery is charging.
3. The Charge LED (3) light will turn off when the battery is fully charged.
4. Disconnect the adaptor cable from the speaker when the battery is fully charged.

Bluetooth Pairing

Pairing your speaker with Bluetooth enabled Android mobiles and tablets

1. Place the speaker and mobile/tablet within 1 metre of each other. Turn on the speaker using the power switch (1) on the top of the speaker, the LED will flash blue rapidly and you will hear a 4 beat tone, the speaker is ready to pair.
2. Select the Bluetooth function on your mobile and search for Bluetooth devices, the speaker will appear as “SG-1532” in the Bluetooth device list, select and pair.
3. Connection will normally be automatic if a password is required enter (0000).
   After successful pairing, select “SG-1532” in the Bluetooth device list, and press “connect”.
   After successful connection, you will hear a single tone and LED will flash blue slowly.

Please Note:

1. If the pairing is not successful, turn off the speaker and try pairing again.
2. After successful pairing, paired devices will remember each other.
   Unless pairing information is deleted, pairing should be automatic when both devices are switched on in range of each other.
3. To pair with a new device follow steps 1-3 above after disconnecting the existing pair.

Pairing your speaker with iPhone/iPad

Place the speaker and your iPhone/iPad within 1 metre of each other.
Turn on the speaker, the LED will flash blue, the speaker is ready to pair. In the iPhone/iPad General menu go to Bluetooth, tap on Bluetooth function, search the Bluetooth devices, tap “SG-1532” to connect.

Pairing your speaker with a PC /laptop Mac running OSX 10 or above

To pair to a PC or Mac follow the same procedure as for a phone or tablet.
After pairing to a Mac you will need to open System Preferences, click on Sound, click Output and select the Bluetooth speaker. Then click Input and select your speaker. Adjust the Input and Output volume to suit. You can also click on the “Show volume in menu bar” if you would like to control the volume from the menu bar. To show the Bluetooth status in the menu bar go to the Bluetooth preferences and click on the appropriate checkbox.
During the pairing process, if you are asked for a password enter (0000).

Re-connecting to a paired device

Each time the speaker is turned on, there are two possible outcomes.
The speaker will connect automatically to the last connected device, just press play on your device for playback. The speaker will be listed on your devices screen as an available output channel, select the speaker as the output channel and play your music.

Controls / AUX IN / Power Off

Select Play/Pause/Stop Audio

Use the connected audio device to select play, pause, next and previous audio media.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

Bass, treble and volume controls (5, 6, 7)
Use these three controls in combination to produce the ideal sound for your mood and environment.

AUX IN connections
You can connect any audio output device to the AUX IN port using the 3.5mm stereo audio cable supplied. You can then play music through the speaker from the connected device.

Power-Off
To save battery power always set the ON/OFF switch to the off position when the speaker is not in use.

Low Power Reminder
As the battery power gets low, the Speaker will emit a double beep every few minutes to notify you that the battery needs charging. If the battery power gets too low, the Speaker will power down automatically and switch off. If this happens, simply connect the Speaker to the power adaptor and keep connected until the speaker is sufficiently/fully charged

Troubleshooting
Q1 There is no power.
A1 Make sure your audio device is charged.
A2 Ensure the device is switched on correctly.

Q2 There is no sound being emitted.
A1 Adjust volume on your Bluetooth device as well as on the speaker for optimum volume and sound quality.
A2 Make sure that your Bluetooth device is in effective range.
A3 Ensure that the Bluetooth device is paired.
A4 Make sure you have selected the correct audio source.

Q3 No response from the speaker.
A1 Try switching the speaker off and on if it doesn't automatically reconnect. Use the Bluetooth™ menu on your device to reconnect to the speaker.

Specifications

Unit Dimensions	H 190 x W 323 x D 137mm	
Unit Weight	1.96kg (Approx.)	
Bluetooth	Specification	V2.1 + EDR
	Supported Profile	A2DP, AVRCP, HSP
	Connection Distance	10m (open area)
Built-in Battery	7.4V, 1500mAh	
	Playing time: 4-6 hours (at 75-80% of volume setting)	
Power Source Input	DC IN socket on the back of the speaker	
	DC 9V⎓1A	
Audio	Output Power	10W (RMS) x 2 units
	Frequency Responses	20Hz to 20,000Hz
I/O	Audio in link	800mV RMS, 10K Ohm
Operating Temperature	0 to 40°C	

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105

Disclaimer

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instructions, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide are for illustration purposes only and may not apply to your particular situation. No legal right or entitlements may be obtained from the description made in this manual.

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Classic Bluetooth™ Speaker is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on 0345 604 0105*. To help give us give you a fast and efficient service pleasehave the following information ready.

Model Ref.		You can find these on the rating plate a small information panel (usually a sticker or metal plate) on the rear of your product.
Serial number		
Date of purchase		

*Local call rates apply

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your plan/tariff. Mobile and other provide's costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from the Republic of Ireland will attract international call charges.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

Product support

Help is always at hand

Call us now to activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't for get to register it with us today so we can provide you with our best possible after sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am-8pm, 365 days a year *Calls may be recorded and monitored

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship
will be either replaced, refunded or repaired free for charge where possible
during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.,
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used for domestic purpose. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifcations are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory orlegal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes {as set out in the Important Data Privacy notice displayed overleaf) for which their personal data willbe processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor and record your communications with us.

If your personal details change, iff you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Date Protection Officer, Domestic & General, Leicester House, 17 Leicester Street,Bedworth,Warwickshire, CV12 8JP

Guarantor Argos Limited: 489-499 Avebury Bvd - Milton Keynes - MK9 2NW

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.

CE

2017 v1