
SmashGrill™
by Grillstream®

SmashGrill Go Portable Barbecue

GGO10K

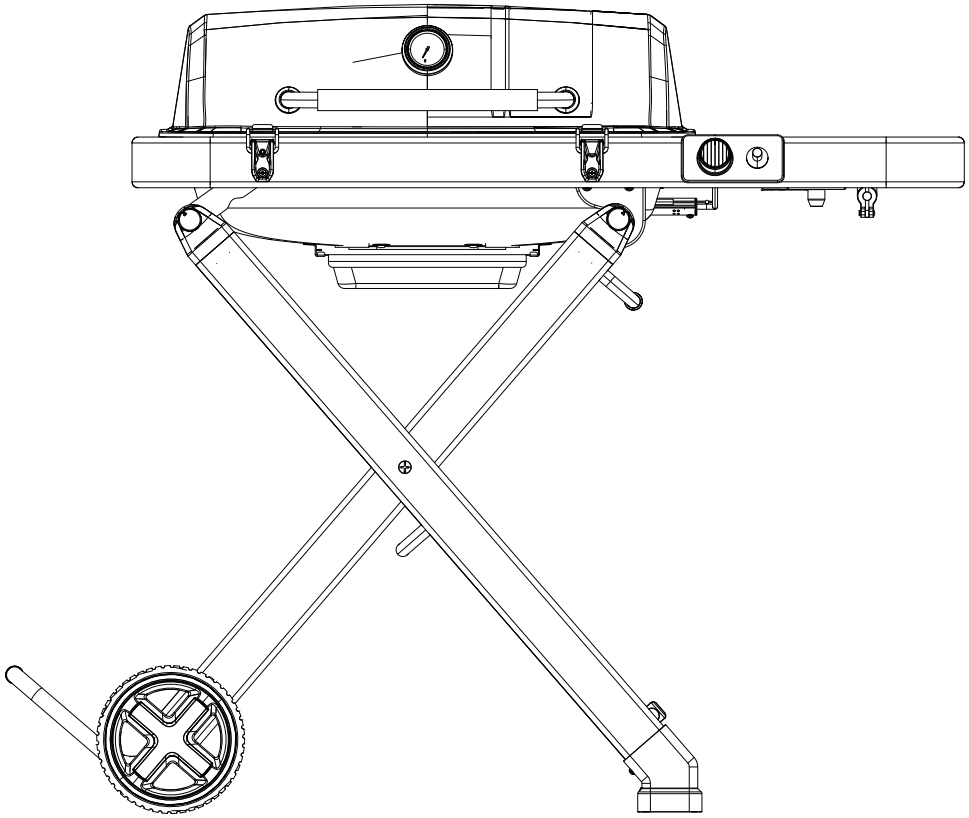

WARNING! FOR YOUR SAFETY, FOR OUTDOOR USE ONLY

Please read these instructions carefully and ensure that your barbecue is properly installed, assembled, maintained and serviced in accordance with these instructions.
Failure to follow these instructions may result in serious injury and/or damage to property.

Necessary Tools



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

This product takes approximately **20 MINUTES** to assemble with **1 PERSON.** The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**. Read this leaflet in full before commencing assembly.

Carbon Monoxide Hazard
Using a barbecue inside can kill you, it gives off Carbon Monoxide, which has no odour. Never use a barbecue in enclosed spaces such as a tent, home/building, vehicle or garage.

Contents

Warning Information	Page	3
Location of your BBQ	Page	3
Connecting to the gas cylinder	Page	3
The hose and regulator assembly	Page	3
Testing for leaks	Page	4
Gas cylinder safety	Page	4
What is Propane	Page	4
Are all gas bottle gases the same	Page	4
How is it different from natural gas	Page	4
Lighting your BBQ	Page	5
Using your BBQ	Page	5
Raising and Lowering the Grill	Page	6-7
Maintenance of your BBQ	Page	8
Troubleshooting	Page	9
Warranty	Page	9
Exploded diagram	Page	10
Parts list for GGO10K	Page	11
Fittings list	Page	12
Assembly instructions	Page	13-19
Leak Test	Page	20


WARNING INFORMATION

- Read this Operating Manual before use.
- Ensure there is adequate clearance away from flammable materials.
- Please do not use in windy conditions as flame efficiency may be affected and could cause excessive heat on the front panel.
- This BBQ is only to be used outdoors.
- Do not allow children to operate the BBQ.
- Accessible parts may be very hot, keep children away. Even after turning off, BBQ will remain hot.
- Any modification of this BBQ may be dangerous.
- Do not move this BBQ during use.
- When you have finished cooking, turn off the gas cylinder before you turn off the BBQ controls to ensure any gas in the pipeline is used up.
- Parts sealed by the manufacturer or their agent must not be manipulated by the user.
- BBQ specifications can be found on the data label attached on the rear of the BBQ frame.
- Do not store or use petrol or other flammable vapours and liquids near the BBQ.
- Do not store empty or full spare gas cylinders under or near the BBQ.
- Keep the gas hose and any electrical cord away from hot surfaces.
- Ensure that all packaging is removed from within the BBQ before use, including protective films.
- Avoid unnecessary twisting of the gas hose.
- Visually inspect hose prior to each use for cuts, cracks, excessive wear or other damage.
- The hose must be replaced if damaged and when National Conditions require it.
- Never light the BBQ with the hood or lid closed.
- Never lean over the cooking surface whilst lighting the BBQ.
- Use BBQ tools with heat proof handles or good quality insulated oven mitts when operating BBQ.
- Never alter or modify the regulator or gas supply assembly.

LOCATION OF YOUR BBQ

IMPORTANT - BBQS MUST BE INSTALLED IN ACCORDANCE WITH THE MANUFACTURER'S INSTALLATION INSTRUCTIONS, LOCAL GAS FITTING REGULATIONS AND MUNICIPAL BUILDING CODES.


Think carefully when deciding on a location where you are to use your BBQ. The BBQ must not be installed under or on any combustible material and must be a level surface.
Minimum clearance from any combustible materials on ALL sides is 430mm (18"). Minimum clearance from any combustible material from the TOP of the BBQ is 1000mm (39"). (Fig. 1)

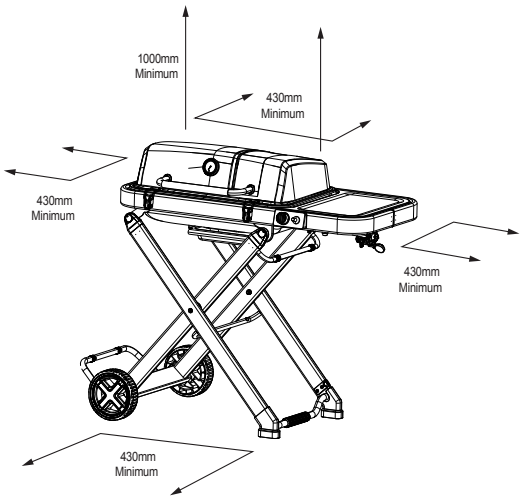

- Not to be used in garages, porches, breezeways, sheds, or other enclosed areas
- Not to be used on recreational vehicles
- Do not obstruct flow of combustion and vetilation air around the BBQ

CONNECTING THE GAS CYLINDER

There are two different types of gas that can be used on your gas BBQ depending on where you live, that being either butane or propane gas. Both are supplied in gas cylinders. The connection between the gas cylinder and the BBQ is made with a regulator. (Fig. 2)

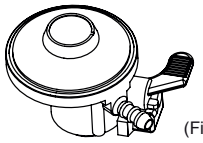
(Fig. 2)

It is important that you use the correct regulator for the particular type of gas you purchase. See your local gas dealer for information on purchasing the correct regulator. Never operate this BBQ without a gas regulator.

The following gas supply pressures are a guide only:

For (DK) (FI) (NO) (NL) (SE) (HR) (SI) (IS) (EE) (LV)

Butane - 30 millibars
Propane - 30 millibars
→ 1 3 B/P (30)

For (GB) (IE) (BE) (FR) (GR) (IT) (ES) (LU) (PT) (CH) (CZ)

Butane - 28 millibars
Propane - 37 millibars
→ 1 3 + (28 - 30/37)

For (DE) (AT)

Butane - 50 millibars
Propane - 50 millibars
→ 1 3 B/P (50)

FOR AUSTRALIA
Propane - 2.75 kPa
Universal LPG - 2.75 kPa


Winners Products Engineering Ltd 27/F Cofco Tower, 262 Gloucester Road,Causeway Bay, Hong Kong.			UK CA 8504DP-0022 8504-24	CE 2531DP-0211 2531-24	
Product name	Outdoor Gas Grill				
Model Number	G39940				
Gas Category	$I_{3+(28-30/37)}$ ■		$I_{3B/P(30)}$ □		$I_{3B/P(50)}$ □
Gas and Supply Pressure	Butane(G30)	Propane(G31)	Butane, propane or their mixture		Butane, propane or their mixture
	28-30 mbar	37 mbar	29 mbar		50 mbar
Country of Destination	$I_{3+(28-30/37)}$: BE, FR, IT, LU, IE, GB, GR, PT, ES, CY, CZ, LT, CH, SI, LV, TR. $I_{3B/P(30)}$: LU, NL, DK , FI, SE, CY, CZ, EE, LT, MT, SK, SI, BG, IS, NO, HR, RO, IT, HU, LV, GR. $I_{3B/P(50)}$: DE, AT, CH, SK.				
Main Burner Injector Size	Ø 0.96 mm				
Side Burner Injector Size					
Total Nominal Heat Inputs (Hs)	3.81kW(277g/h)				
Electric energy(V/DC)					
Serial Number					
Use Outdoors Only .					
Read the instructions before using the appliance.					
Warning : Accessible parts may be very hot. Keep young children away.					
Warning! Do not use spirit or petrol for lighting or re-lighting!					Made in China

THE HOSE AND REGULATOR ASSEMBLY

- Must be suitable for liquefied petroleum gas (LPG)
- Must withstand the above pressures
- Must not exceed 1000mm (39") in length
- The BBQ is supplied with a quick release hose that is suitable for direct connection of a suitable regulator
- Before connecting inspect the hose, its fittings and rubber seals. If there is any sign of cracking, splitting or wear, have the hose replaced
- While in use, keep the hose unobstructed and free of kinks and twisting

SECURING THE HOSE AND REGULATOR ASSEMBLY

Quick release connection (Fig. 4)
- The BBQ's manifold connection is a quick release connector
- Gently pull back the movable section on the hose, slide over the connection on the manifold, and release. Reverse the process to remove.
- Check connection is secure and test for a gas leak before using.

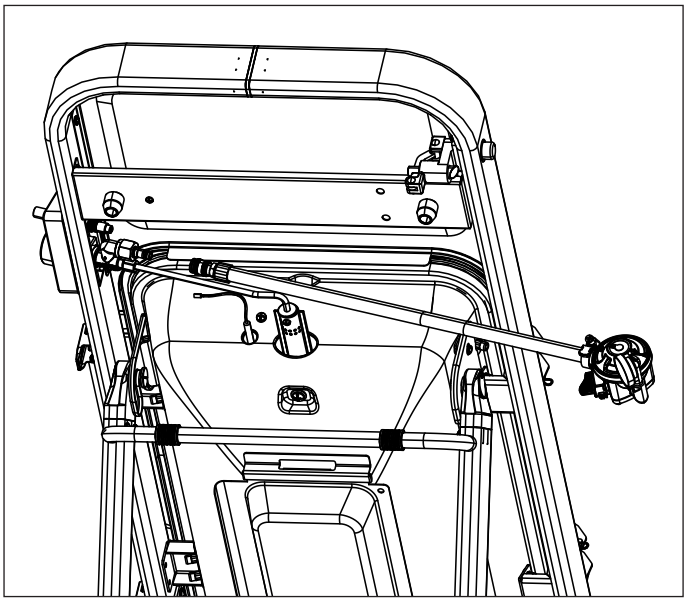

TESTING FOR LEAKS - DO THIS BEFORE USING YOUR BBQ

NOTE - DO NOT test for gas leaks with an open flame. If you smell gas, turn off at the source.

- Before first use and periodically during the season, or whenever a gas cylinder is changed, you must check for gas leaks.

How to test for leaks:
- Ensure all gas valves on the BBQ are in the • *OFF* position
- Turn on the gas cylinder
- Brush a soap solution of one part liquid detergent and one part water to all gas connections
- The presence of bubbles indicates a leak. Tighten or repair as necessary
- Under no circumstances should a naked flame be used to check for leaks
- If a gas odour is present and no leaks can be found, do not use the BBQ. Turn the gas off at the source, disconnect the hose and immediately contact your BBQ dealer or place of purchase for assistance.

Further illustration of this is available in the "testing your BBQ" section of this manual. For our video tutorial please scan this QR code to access.

GAS CYLINDER SAFETY

- Always change over a gas cylinder away from any possible source of ignition in a well ventilated area
- Do not smoke whilst handling gas cylinders
- Never store gas cylinder indoors
- Store away from direct heat in a well ventilated area
- Always keep the gas cylinder in an upright position on a flat surface
- Close cylinder valve when BBQ is not in use and, if available, use a sealing plug to prevent possible leaks
- Do not subject gas cylinder to excessive heat
- Do not tamper with any fitting attached to any gas cylinder. Have it taken to the manufacturer or an authorized testing station
- When the cylinder runs out of gas, have it refilled or swapped at an authorized testing station. They will fill the cylinder to no more than 80% of its capacity. This allows the gas to expand with temperatures
- Have the cylinder inspected EVERY 10 YEARS at an authorized testing station.

WHAT IS PROPANE

It is a fuel gas compressed until it turns to liquid, then stored in a bottle or cylinder under pressure for easy transport.

ARE ALL GAS BOTTLE GASES THE SAME?

No. The LPG that cars use is known as auto LPG. It is different to propane/butane, which is used in household gas appliances. This guide only deals with propane/butane.

HOW IS IT DIFFERENT FROM NATURAL GAS?

Propane and butane are similar to natural gas. They are colorless, non-poisonous and do not pollute when burnt. There is one important difference, propane and butane are heavier than air, if they escape they don't float away. The gas collects and forms gas pools at ground level or at the bottom of your appliance.

GAS CYLINDER INFORMATION

	Propane 6kg	**Propane 9kg**
Gas	Propane	Propane
Diameter	256mm	315mm
Height	495mm	460mm
N.W	6kg	9kg
Connection	27mm Clip-On	27mm Clip-On

FIRST TIME USE OF BBQ

- Before using the BBQ for the first time, it should be first wiped with a mild soap and water solution to remove any dust
- Make sure your BBQ is on a solid level surface
- Dry cooking surface and apply a light coating of cooking oil
- Light the barbecue and leave burning for 30 minutes on the ***lo*** position, with hood up. This is to burn off any residual oils or foreign matter on the grills and hotplates.
- Check burner alignment, for further information, refer to page 8 in troubleshooting.


LIGHTING YOUR BBQ

- Before starting - Ensure control knob is in the | ***OFF*** position
- The BBQ's roasting hood must be OPEN before lighting
- Turn on the gas cylinder
- Push in and turn ***control knob*** in an anti-clockwise direction to the ***HI*** position.
- Now push in the Ignition Button until you hear a click or bang sound. This is the Piezo ignition system releasing a spark to light the burner.
- If burner does not light immediately, turn the gas control knob to the | ***OFF*** position and wait five minutes for any accumulated gas to clearout of the BBQ before repeating procedure.

CONTROLLING YOUR BBQ

- The — ***LO*** position is obtained by turning the knob fully anti-clockwise
- Adjusting the control knob to your heat requirements allows you to control the flame
- If ignition cannot be achieved see section: If BBQ fails to operate properly

IMPORTANT - It is important that all control valves, and the gas cylinder are turned off after use.

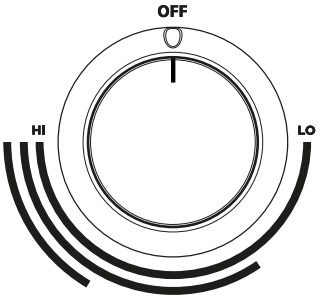

PREHEATING

Light the burners as previously directed, turn to ***hi*** and allow the BBQ to preheat for 2-5 minutes ensuring the temperature does not exceed 250ºC. Adjust control to desired optimum cooking temperature, the hood must be closed while doing this. **EXCEEDING 250 Degrees CAN DAMAGE THE BBQ AND VOID YOUR WARRANTY**

PREPARE THE COOKING SURFACE

We suggest setting your barbecue to a low temperature for 30 minutes with the hood down to allow any residue to burn off. and then carefully brushing the griddles with oil. this will create a non stick affect and also help prevent any build up of corrosion.

COOKING WITH THE ROASTING HOOD DOWN


When using the BBQ with the hood closed, irrespective of the heat source (gas or charcoal), **exceeding 250ºC can damage the BBQ and void your warranty.**


RAISING THE GRILL


1. From a closed position, place one foot on the foot stand, grasp the side table with both hands and press the cart lock release button with your right hand (Figure A and B).


2. Lift towards you and lock the grill top into the leg brackets as shown (Figure C).


ATTENTION: ENSURE THE LID IS CLOSED AND LOCKED BEFORE PROCEEDING.

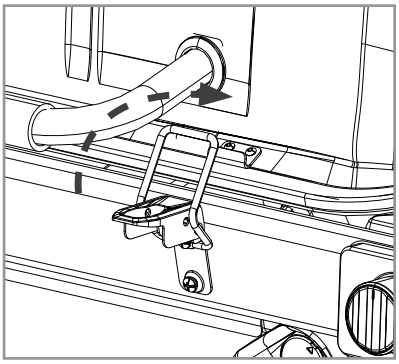

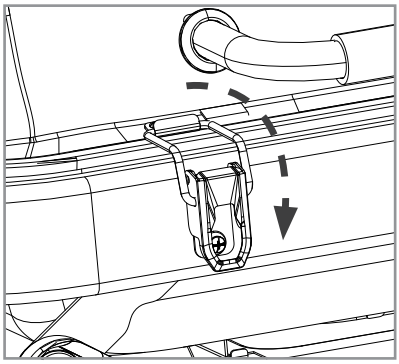

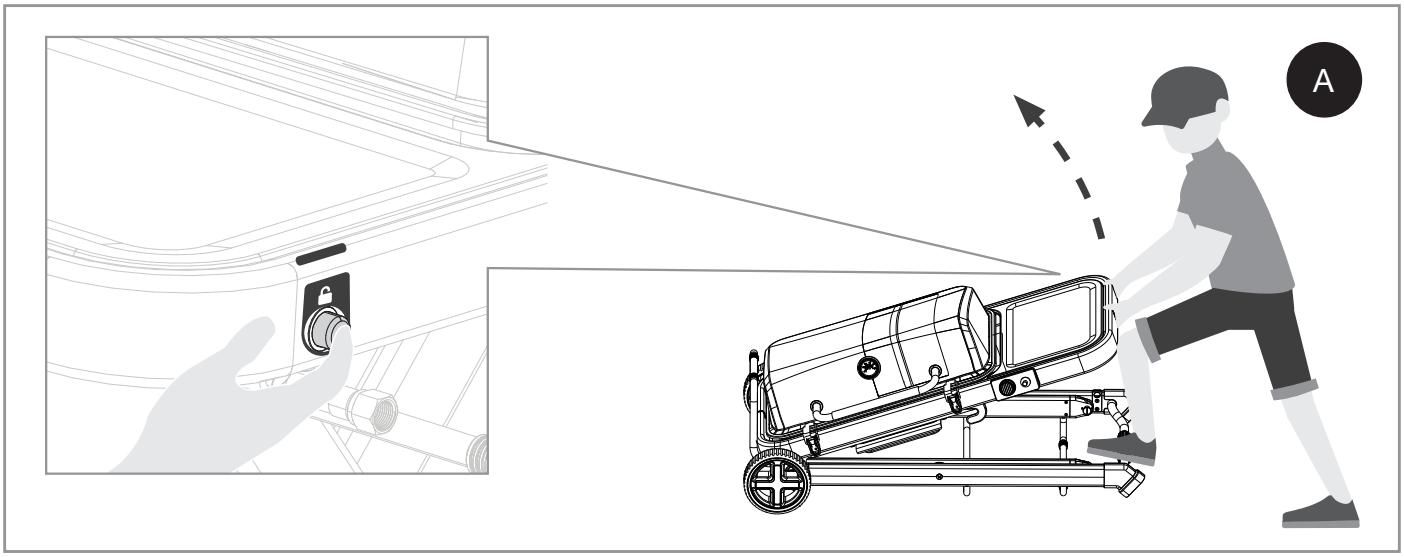

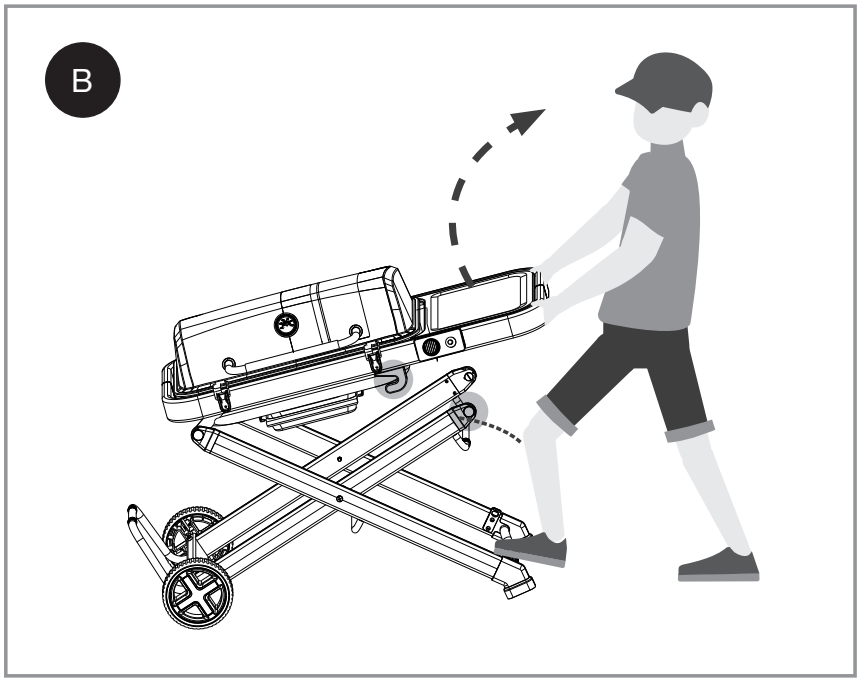

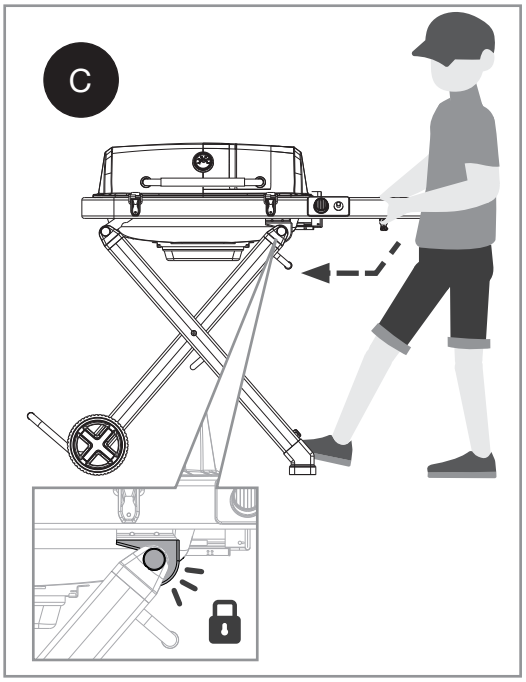



LOWERING THE GRILL

1. Place one foot on the foot stand, grasp the side table with both hands and pull towards you, lifting slightly once the hook has passed the leg brackets (Figure A).


2. Gently lower the BBQ down until far side is resting on the trolley. Remove your foot from the foot stand and lower the nearside into place until you hear the lock release engage with a click (Figure B and C). The BBQ can now be raised vertical using the foot stand as a handle.

ATTENTION: ENSURE THE LID IS CLOSED AND LOCKED BEFORE PROCEEDING.

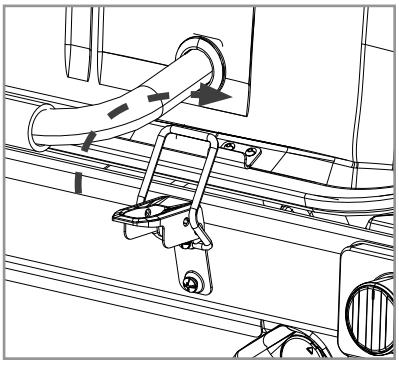


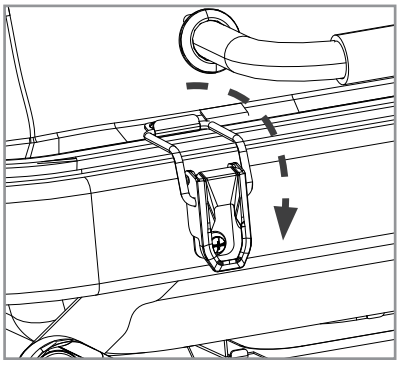


A

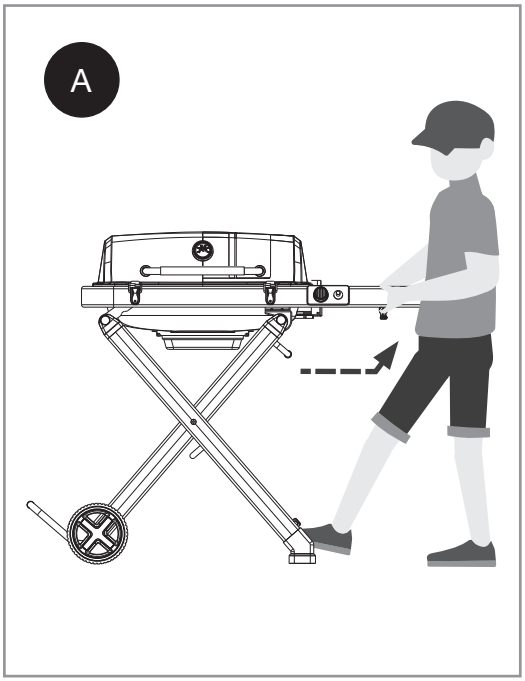

B

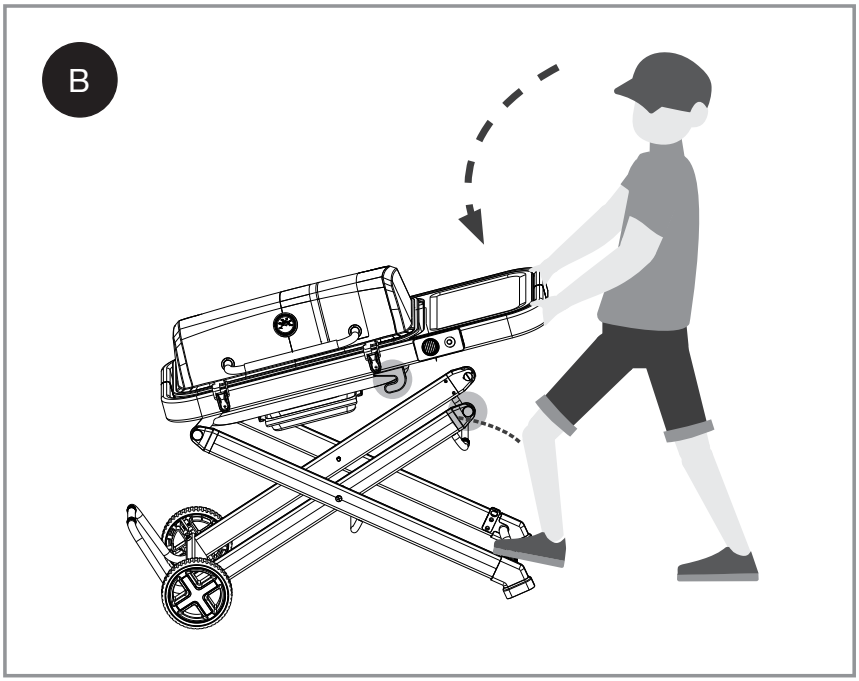

C

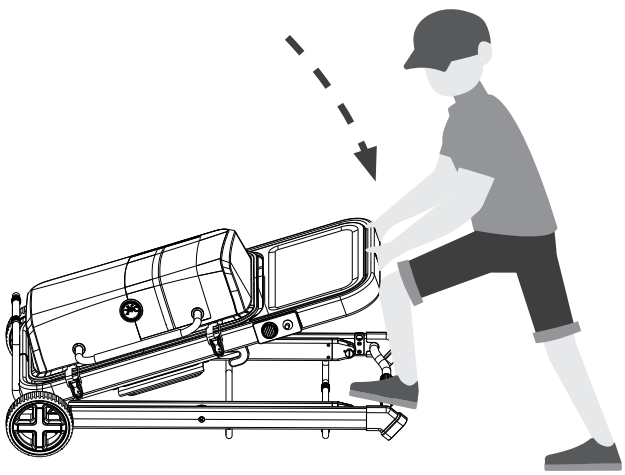

MAINTENANCE OF YOUR BBQ

PROTECTION
Keep your BBQ beneath a weather cover and out of the rain. Proper care and maintenance will keep your BBQ in top operating condition and prolong its life.

CLEANING THE COOKING SURFACES
Allow your BBQ to continue burning for 5 minutes after cooking has ceased, which will burn off excess fats and juices etc. that may block the flame ports of the burners. To keep your BBQ ready for the next time, turn the burners to • *OFF* then take a long handled brush and brush the cooking surface to remove excess oils and food scraps. Be careful as surfaces are hot. Protect your hands by using an oven mitt to hold the brush.

Allow to cool before washing in a warm soapy solution. Ensure that any dried fat/food deposits are cleaned off after EVERY cooking session to prolong the life of your BBQ. Rinse off with clean water and dry before returning to BBQ.

CLEANING THE BBQ BODY
The body of the BBQ should be cleaned regularly dependant on the use and type of food cooked. Use warm soapy solution.

CLEANING THE FAT COLLECTION CUP
- IMPORTANT - the fat collection cup should be cleaned on a regular basis. If this is ignored, a build up of fats and greases may cause a fire in the BBQ
- Please check the level of waste fat in the fat collection cup regularly while cooking to ensure it does not overflow and dispose of the waste fat responsibly.
- More frequent cleaning may be necessary as usage demands


- FAT FIRES ARE NOT COVERED BY WARRANTY

CLEANING THE BURNERS
Occasionally after long cooking sessions, excess fats, juices and marinades can clog the burners. If so, remove the burners (see removing burners section) for cleaning.
- Clean by washing in hot water and detergent
- Ensure that all burner ports are free from obstruction
- Rinse in water
- Light immediately to prevent rust and corrosion
- Brush lightly with cooking oil if BBQ is not used for an extended period


FIRST USE AFTER LONG PERIODS
At the start of each BBQ season or before using after a long period of time:

- Read this operation manual again thoroughly
- Check all gas valve orifices, burner tubes and connections for obstructions
- Check that all burners are in their correct positions
- Check to see if the gas cylinder is full
- Check for gas leaks using a soapy water solution
- Set burner controls to • *OFF* and connect gas supply
- Ensure all grills and hotplates are clean before use


REMOVING BURNERS - Necessary care to be undertaken
- Make sure the BBQ has been switched off and has completely cooled down
- Ensure all gas control knobs are set to the OFF position and the gas cylinder has been turned off
- Remove griddles and heat shield from the BBQ for easier access.

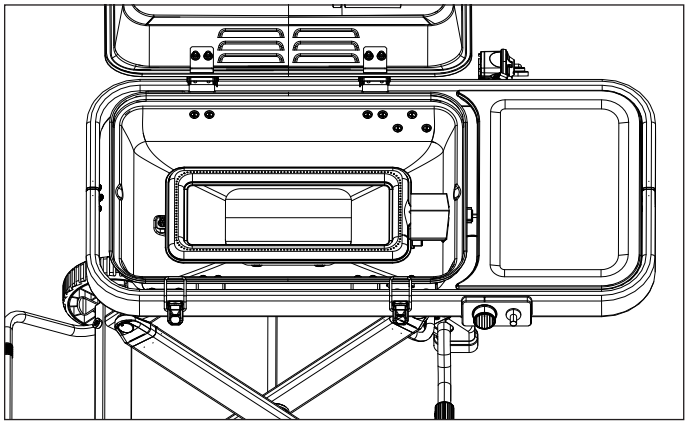

- Unscrew the two bolts, at either end of the burner, located below the cooking frame.

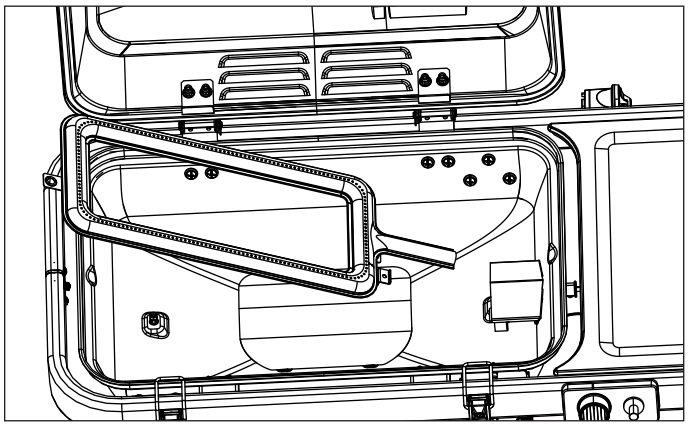

- Lift burner up and carefully pull away from right-hand side of BBQ.

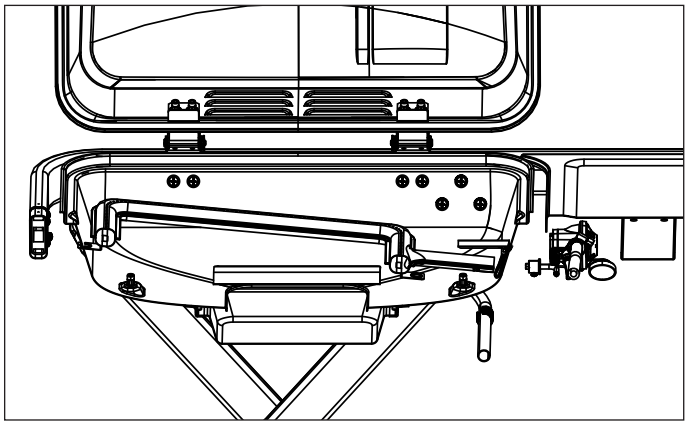

- Clean burners as described
- Reverse the previous procedure to re-install the burners, ensuring burner is seated correctly.

TROUBLESHOOTING


IF BBQ FAILS TO OPERATE PROPERLY
- Stop, turn off gas at its source and turn all burner controls to • *OFF*
- Do not smoke
- Check gas supply connections
- Repeat lighting procedure after waiting for five minutes for accumulated gases to disperse


If BBQ still fails to operate properly *TURN OFF GAS AT SOURCE, TURN BURNER CONTROLS TO OFF*, wait for BBQ to cool and check the following:

a) Misalignment of burner tubes over orifices
CORRECTION: Fig A below shows how it may look if your burner is mis-aligned. Reposition burner tube to properly sit over orifice as shown below in line drawing (fig B).

b) Obstruction in gas line
CORRECTION: Remove hose from BBQ. Open gas supply for one second to clear any obstruction from hose. Close off gas supply at source and re-connect hose to BBQ

c) Blocked orifice
CORRECTION: Remove burners as described above. Inspect gas valve orifice, clear any obstruction with a fine wire. Re-install burners over orifices and test again

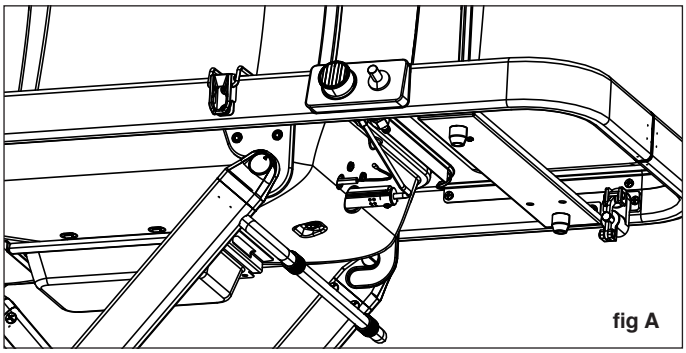
fig A

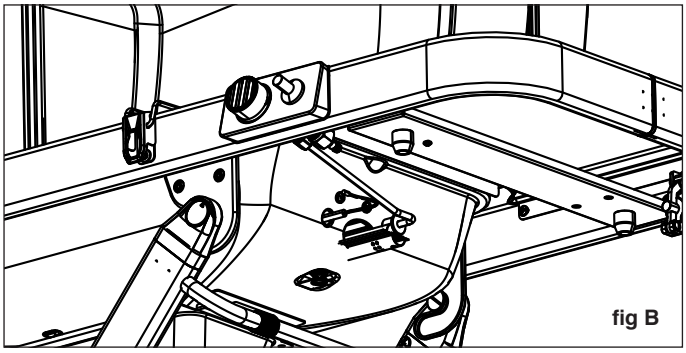
fig B

IF THERE IS A LEAK
- Turn the gas cylinder off
- Ventilate the area to disperse any accumulated gas
- Check all connections
- If the leak persists, keep cylinder upright and take to an open area
- Keep skin away from any gas or liquid escaping from the cylinder
- Keep the cylinder at least 20 metres away from any sparks or ignition sources including electrical equipment, camera flash, engines or motors
- Disperse gas by providing maximum ventilation and spraying with a fine water spray

IF THERE IS A FIRE
- If there is a fire at the appliance, turn the gas off at the cylinder.
- Smother the flames with a wet cloth

If there is a fire at the cylinder or you cannot get to the valve to turn it off
- call the fire brigade
- direct a garden hose to the middle of the cylinder to keep it cool, however do not extinguish the flame. If the gas is burning it wont build up and explode
- Evacuate the area

A note on fire prevention:
Most fires in outdoor BBQs are caused by a build up of greases and fat, or gas connections which have not been secured properly. Remember to follow the manufacturer's instructions on proper cleaning and connection procedures.

INSECTS
Spiders and insects can occasionally spin webs or make nests in the burner tubes. Obstructions in the burners can affect gas flow which could result in a fire. This is known as "Flashback" and can cause serious damage to the BBQ and create an unsafe operating environment. Frequent inspection and cleaning of the burner tubes is recommended.

CARE AND SAFETY ADVICE

- **TAKE CARE** Griddles are heavy
- Clean Griddles after each use for continued optimum performance.
- Roasting dishes can be placed on top of the Griddles.
- For safety and optimum performance ensure that your barbecue is on a level, solid surface.
- Empty the fat cup responsibly after each use.

WARRANTY


All of our Grillstream BBQs and accessories are built to last. Our materials are carefully considered with longevity and safety in mind, the technology used in our products is second to none, and all of this is backed up with our friendly customer care team who are on hand for advice and assistance. Our Grillstream limited warranties are 10 years, giving you extra peace-of-mind. The warranty applies to the original purchaser from the date of purchase and covers manufacturing faults and defects only. If an item should fail as a result of a manufacturing fault or defect under normal domestic use, the manufacturer at their discretion will repair, refinish or replace the failed item.

The manufacturer reserves the right to substitute failed items with similar parts / products, should the model or colour no longer be available. Any replacement will be for the failed item only not a complete unit. The original warranty period is not extended in the event of a repair, refinish or replacements. In the event of a failure, it is the customer's responsibility to return the item to the store of purchase along with a copy of the receipt. Warranty specifically excludes general wear and tear, rusting of steel components and parts, corrosion, commercial use and damage caused as a result of failure to observe reasonable care, maintenance and assembly instructions.

In all instances where a product is not covered by one of our limited warranties a standard 12 month warranty will apply. Below is a list of the limited warranties we currently have in place for Grillstream Barbecues:

Hood: 10 year limited warranty, which excludes mechanical damage
Ignition, Manifold and Valve System (Excluding Side Burners): 3 year limited warranty
Burners against corroded through: 3 year limited warranty
Griddles against corroded through: 3 year limited warranty


*All other parts are covered by a 1 year warranty against manufacturing defects

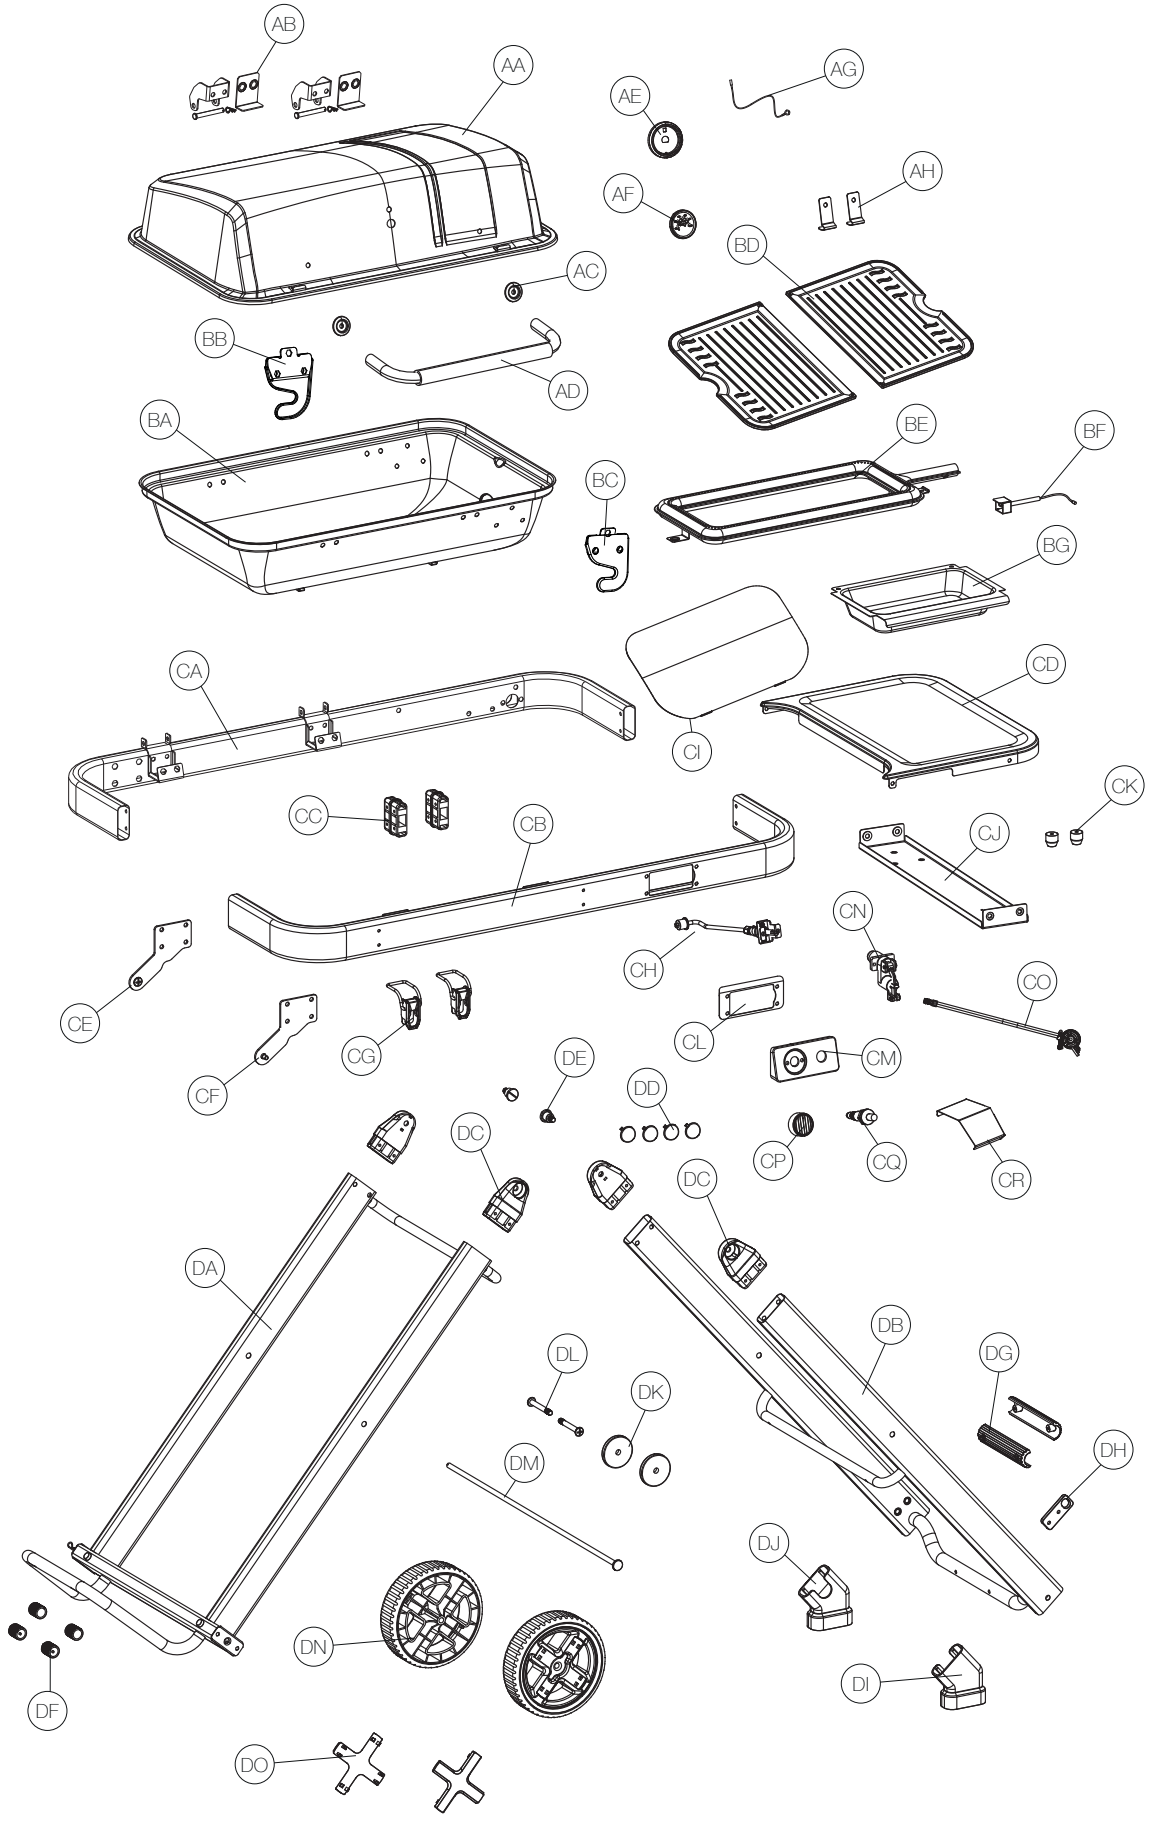

AB
AA
AE
AG
AH
AF
BD
AC
BB
AD
BA
BE
BF
BC
BG
CA
CD
CI
CC
CB
CK
CJ
CN
CH
CO
CE
CL
CM
CF
CG
DE
DD
DC
CP
CQ
CR
DC
DA
DB
DG
DL
DK
DH
DM
DJ
DN
DI
DF
DO

No.	Description	QTY	No	Code	QTY
AA	Hood	1	CJ	Regulator Support	1
AB	Hood Hinge	2	CK	Plug	2
AC	Hood Handle Bezel	2	CL	Control Panel_ Rubber Gasket	1
AD	Hood Handle	1	CM	Control Panel	1
AE	Temperature Gauge Bezel	1	CN	Trolley Lock	1
AF	Temperature Gauge	1	CO	Regulator	1
AG	Ground Wire	1	CP	Control Knob	1
AH	Front Brace	2	CQ	Ignition	1
BA	Cooking Frame	1	CR	Burner Cover	1
BB	Cooking Frame Brace, Back	1	DA	Left Leg	1
BC	Cooking Frame Brace, Front	1	DB	Right Leg	1
BD	Griddle	2	DC	Leg End Cap	4
BE	Burner	1	DD	End Cap Cover	4
BF	Electrode Set	1	DE	Leg Screw	2
BG	Fat Cup	1	DF	Support grips	4
CA	Support Tube, Back	1	DG	Handle Grip	1
CB	Support Tube, Front	1	DH	Latch	1
CC	Support Tube Connector	2	DI	End Cap, Front	1
CD	Side Shelf Table	1	DJ	End Cap, Back	1
CE	Support Brace, Back	1	DK	Leg Washer	2
CF	Support Brace, Front	1	DL	Hinge bolt	2
CG	Hood Latch	2	DM	Wheel Axle	1
CH	Gas Valve	1	DN	Wheel	2
CI	Heat Shield	1	DO	Wheel Cover	2

FITTINGS

Part	1	
QTY	1	Split Pin


Part	2	
QTY	2	Self-Tapping Screw

Part	3	
QTY	2	Washer

Make sure your grill is assembled properly. Detailed assembly instructions are packed with each grill giving specific assembly procedures for each model. Follow these instructions carefully to ensure the correct and safe assembly of the grill.

Caution: Although we take every effort to ensure that the assembly process is as easy as possible, it is inherent with fabricated steel parts that corners and edges can cause cuts if improperly handled during assembly procedures. Be careful while handling any parts during assembly. It is strongly recommended that you protect hands with a pair of work gloves.

TOOLS REQUIRED (NOT SUPPLIED)

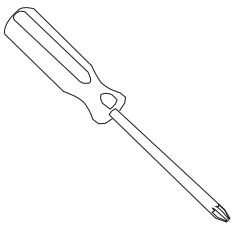

Cross Head Screwdriver (Philips)


PREPARE FRAME FOR ASSEMBLY


Lift hood, remove & unpackage all items except burners & burner assembly.


Proceed to step 1

STEP 1

Insert End Cap, Front (DI) into front tube of Right Leg (DB). Insert End Cap, Back (DJ) into back tube of Right Leg (DB). Secure from underneath using 2 x Self-Tapping Screw (2).


Part	2	
QTY	2	Tapping Screw

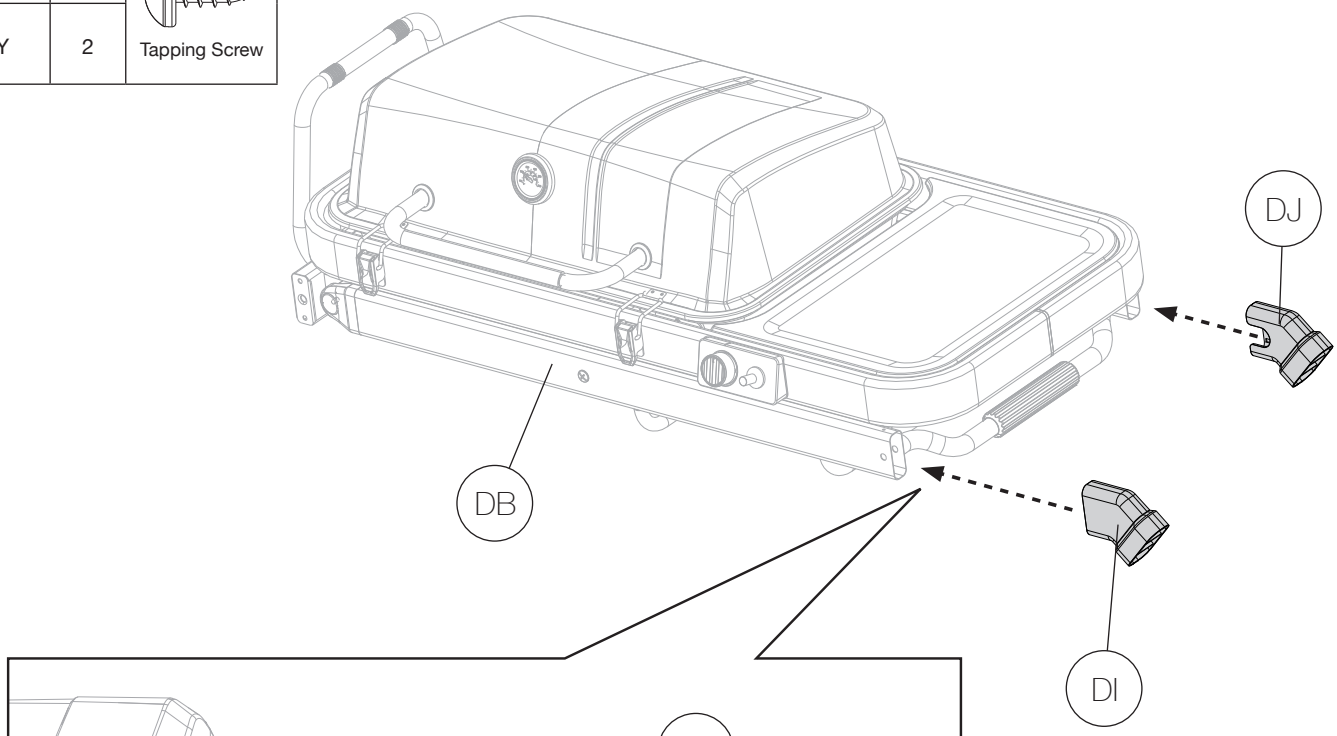


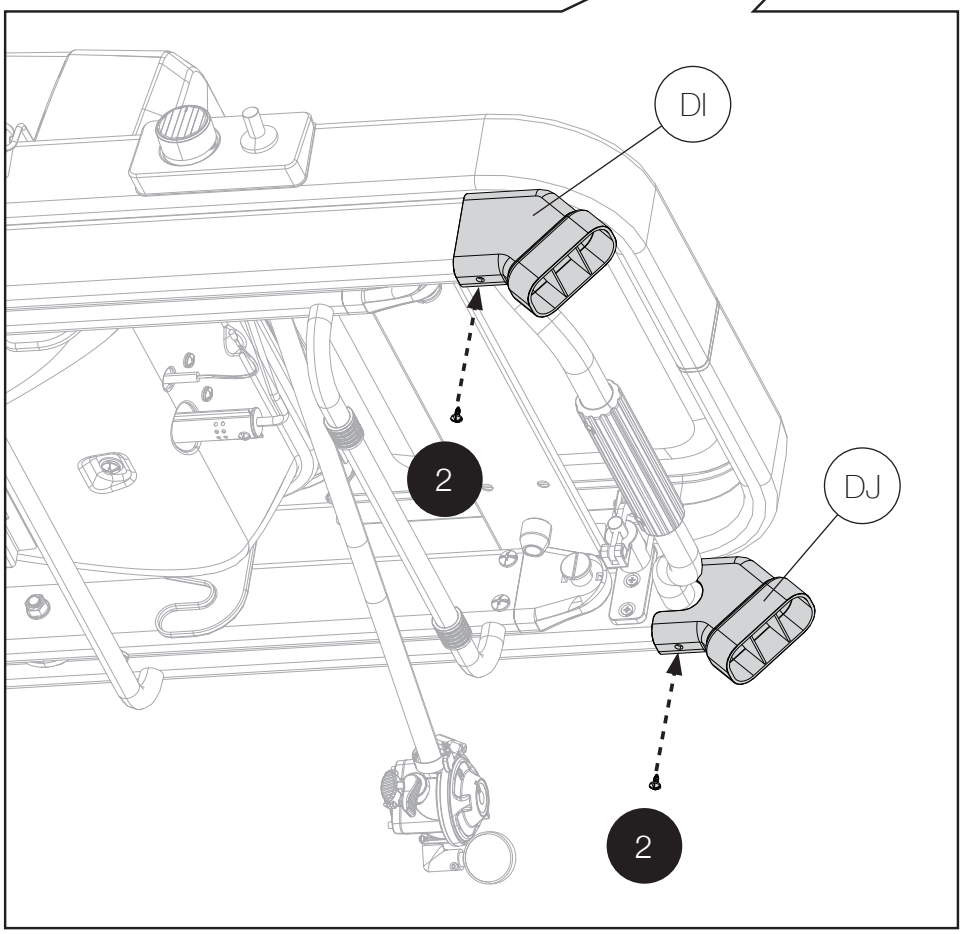

STEP 2


Slide 1 x Wheel (DN) and Washer (3) onto Wheel Axle (DM). Now slide Wheel Axle through tube indicated on Left Leg (DA). Now slide second Washer (3) and Wheel (DN) Wheel Axle.


Part	3	
QTY	2	Washer

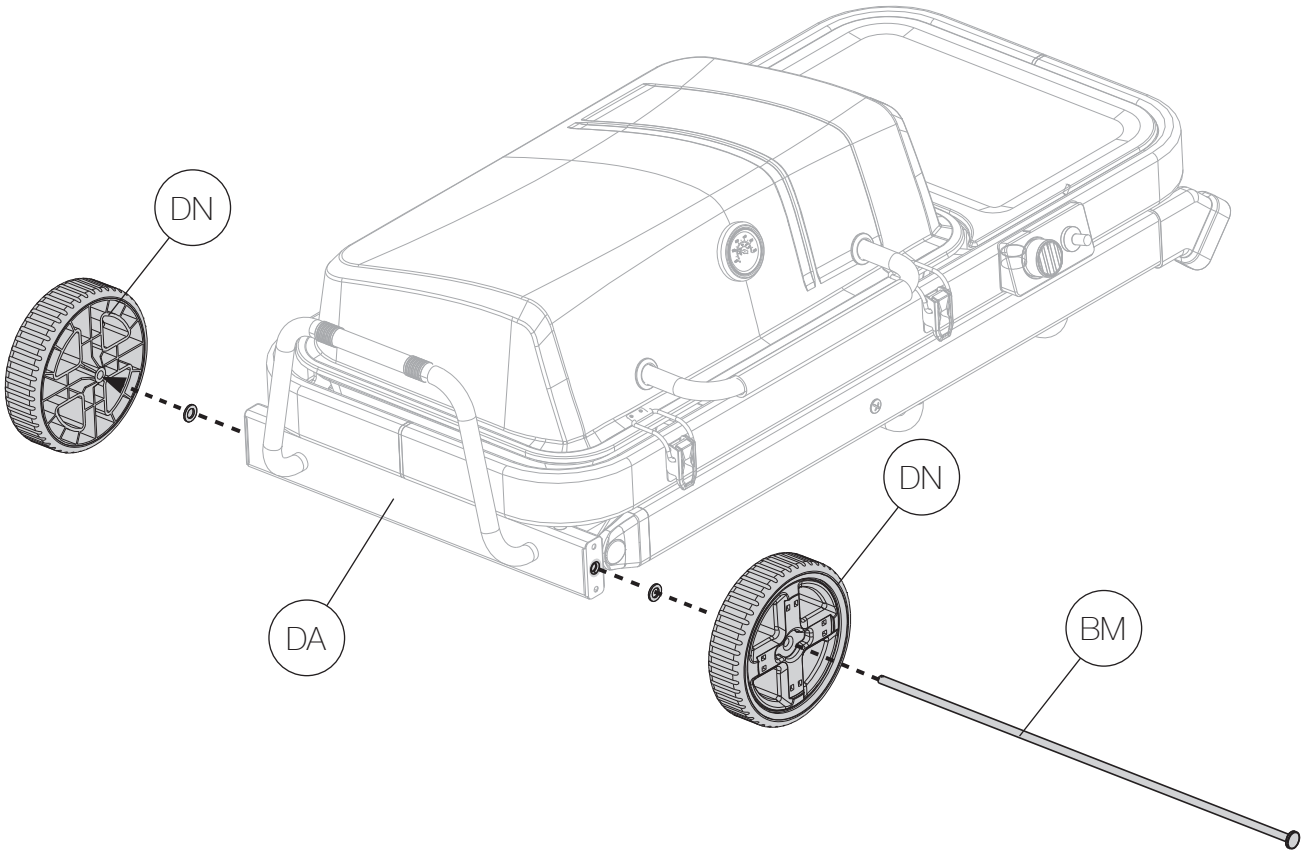

STEP 3


Secure Wheel Axle (DM) in place using 1 x Split Pin (1).

Part	1	
QTY	1	Split Pin

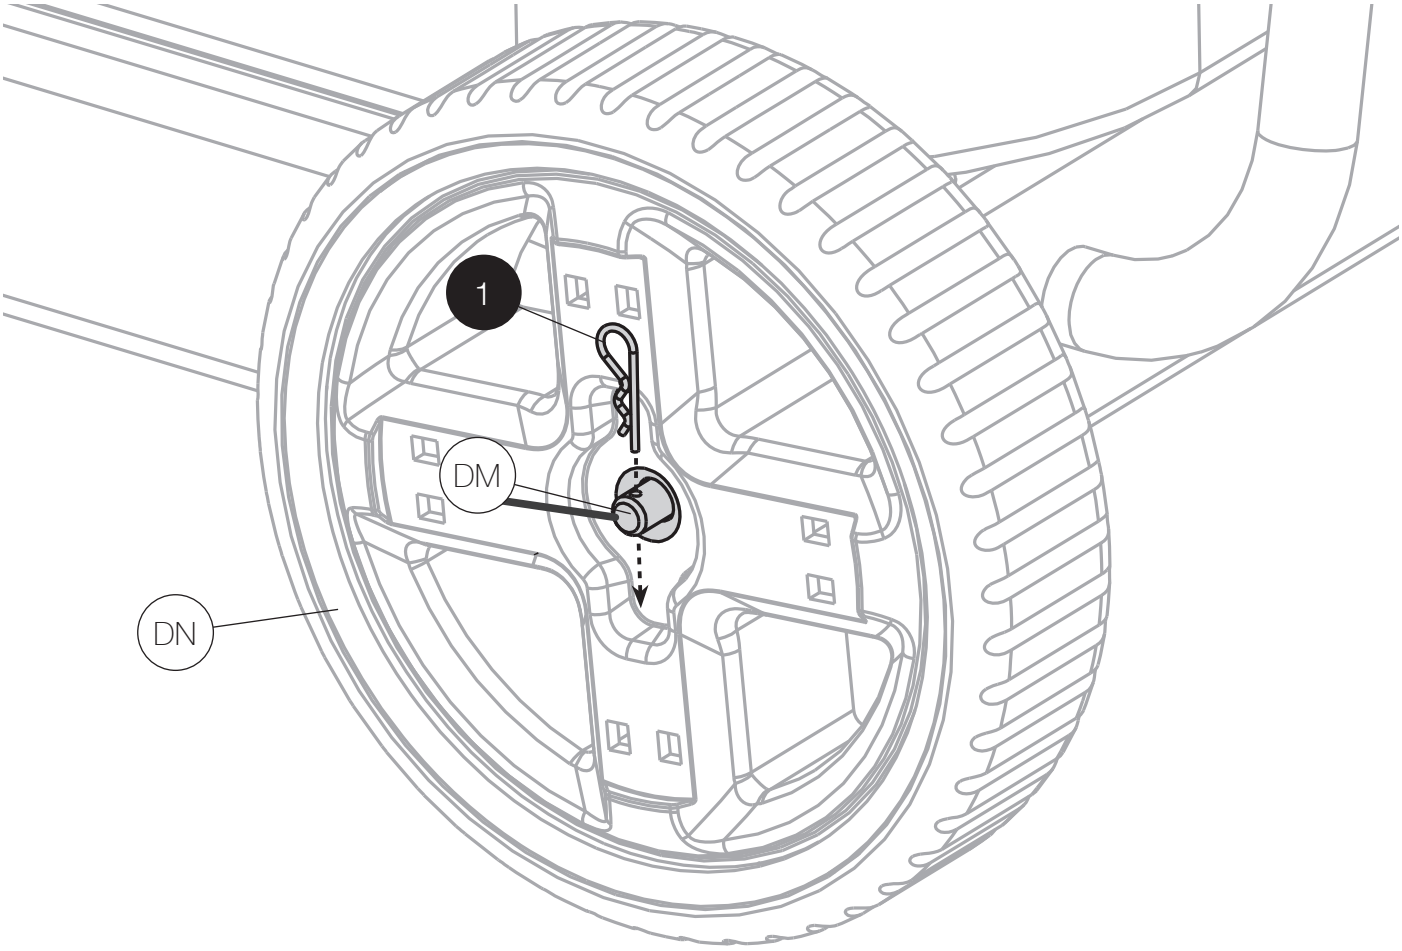


STEP 4

Push Wheel Cover (DO) onto Wheel (DN) as shown, ensuring clips line up. Repeat for the second wheel.

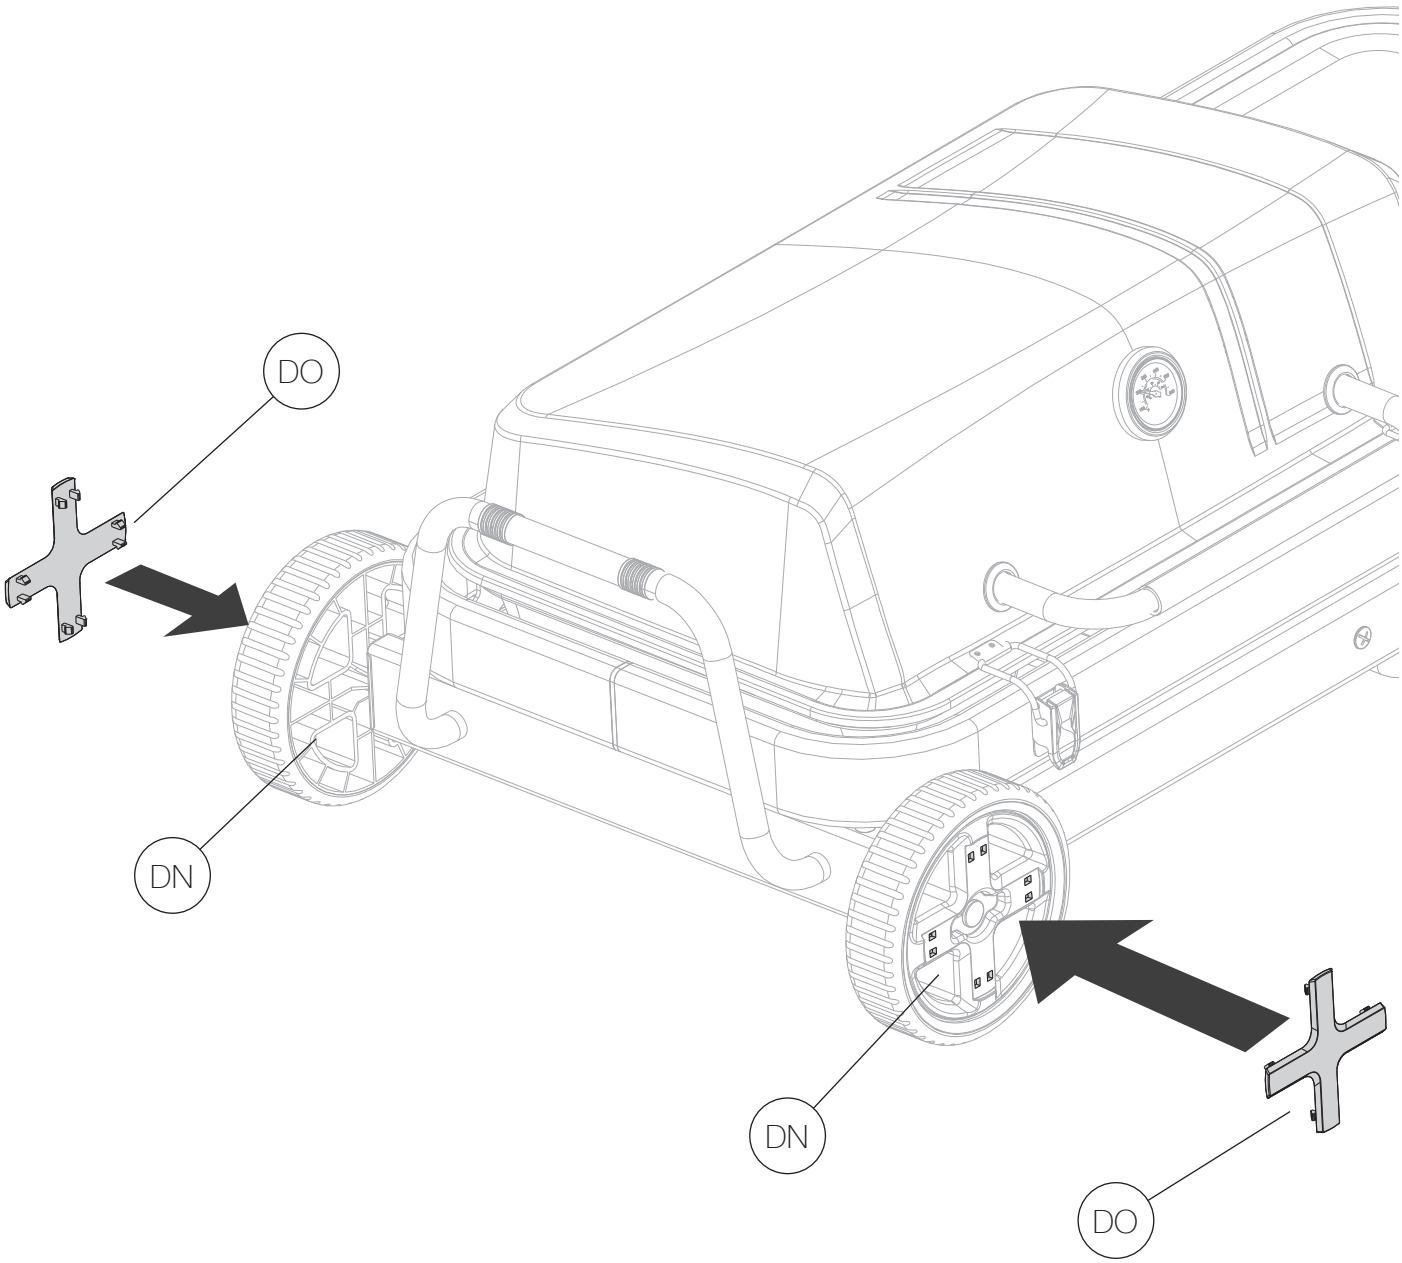


STEP 5

With the BBQ in the raised position (see instructions for how to raise and lower your SmashGrill Go), slide Fat Cup (BH) onto tabs located below Cooking Frame (BA) from the front of the BBQ.

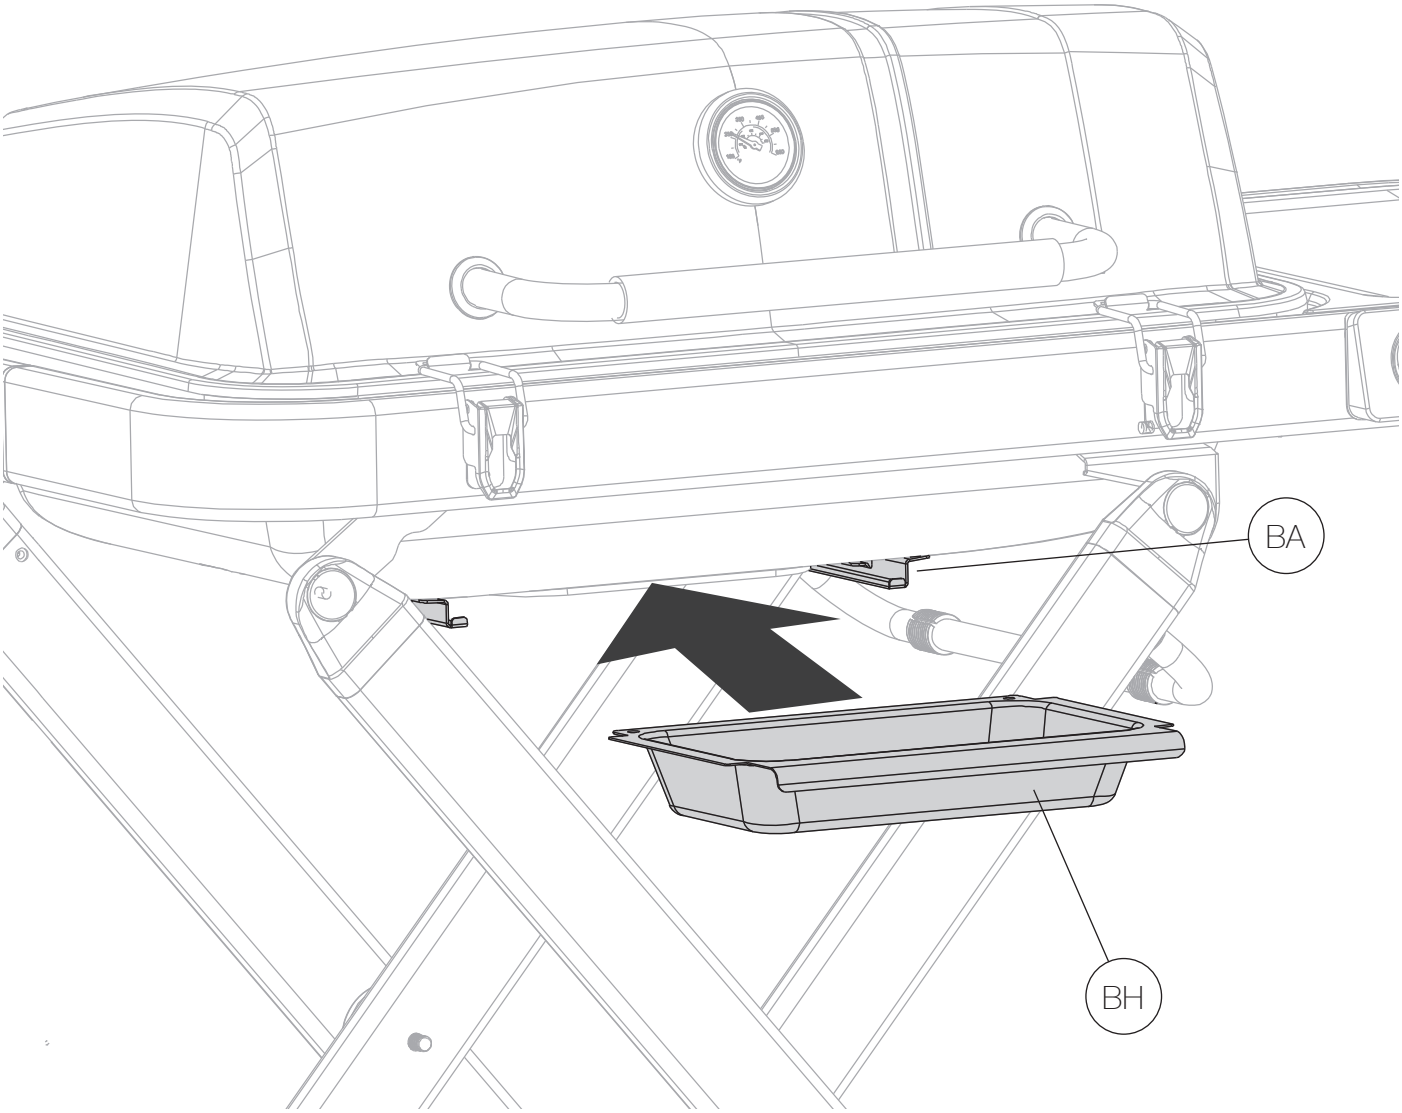


STEP 6

Carefully push the Heatshield (CI) in place with lugs sitting inside cutouts in bottom of the Cooking Frame. You may need to angle the Heatshield slightly to pass it through the void within the burner.

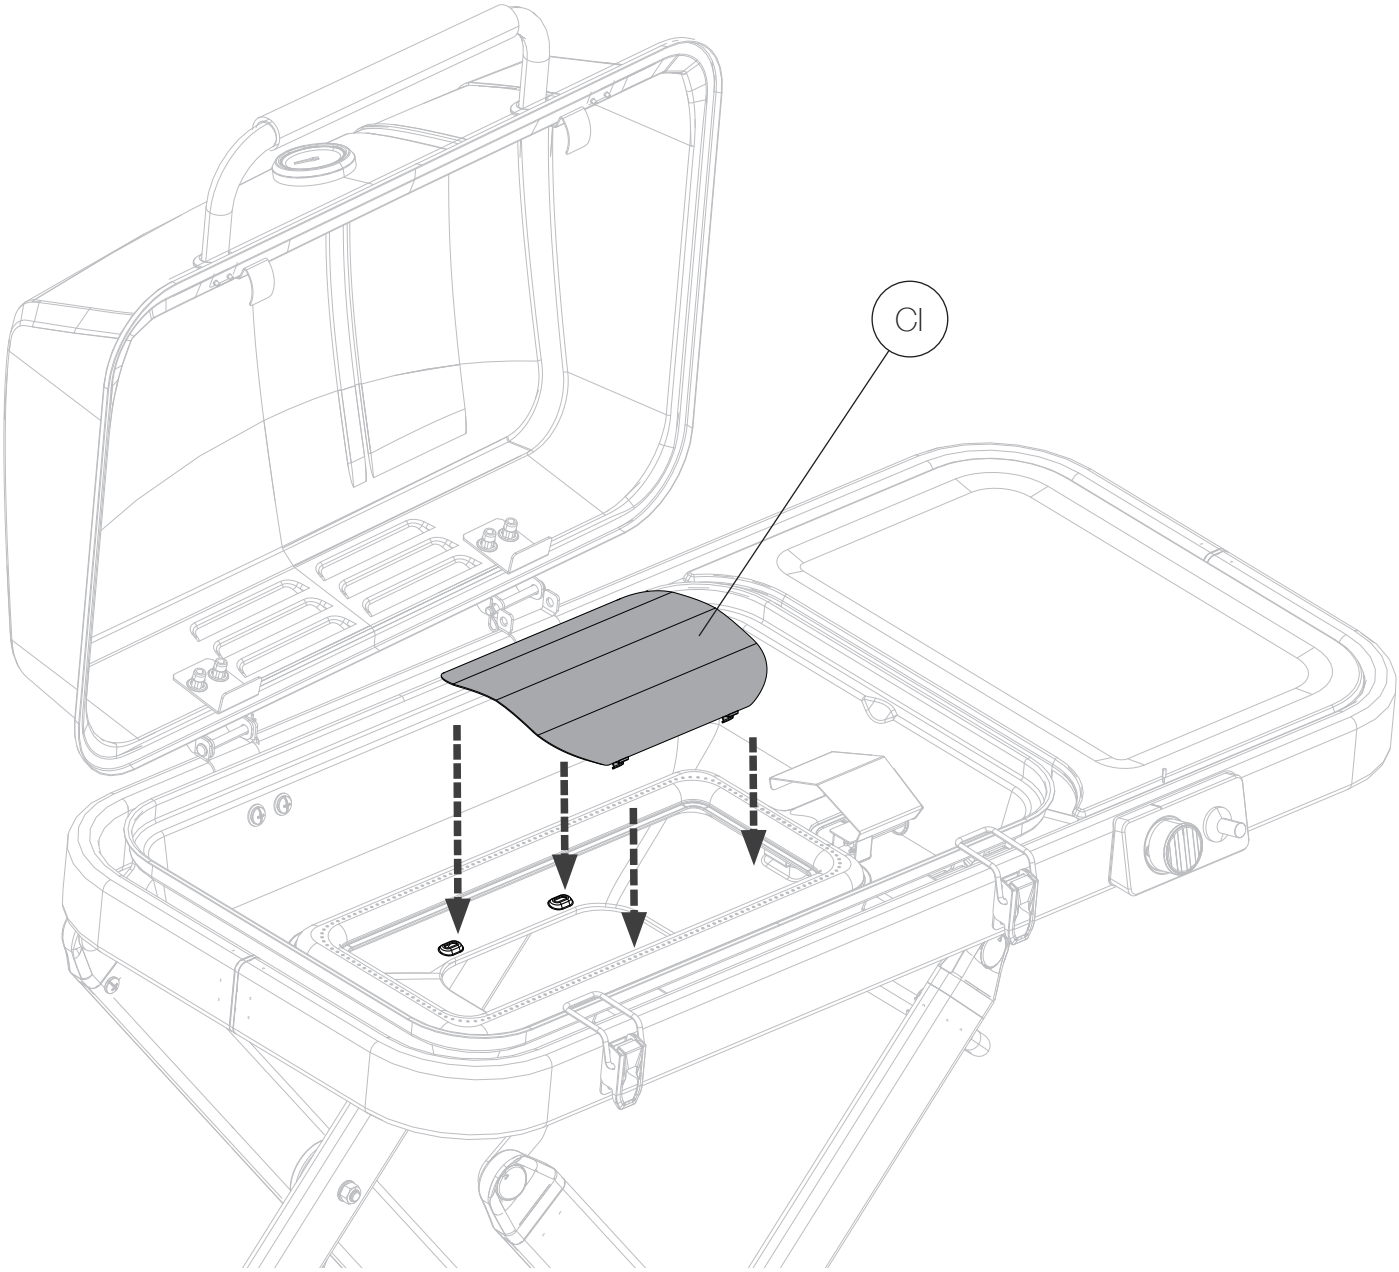

STEP 7

Place the Griddles (BD) inside Cooking Frame as shown. They should rest neatly on top of the lip around the edge. Your Griddles are double-sided, with both a ridged side and a flat side, giving you more flexibility in cooking.

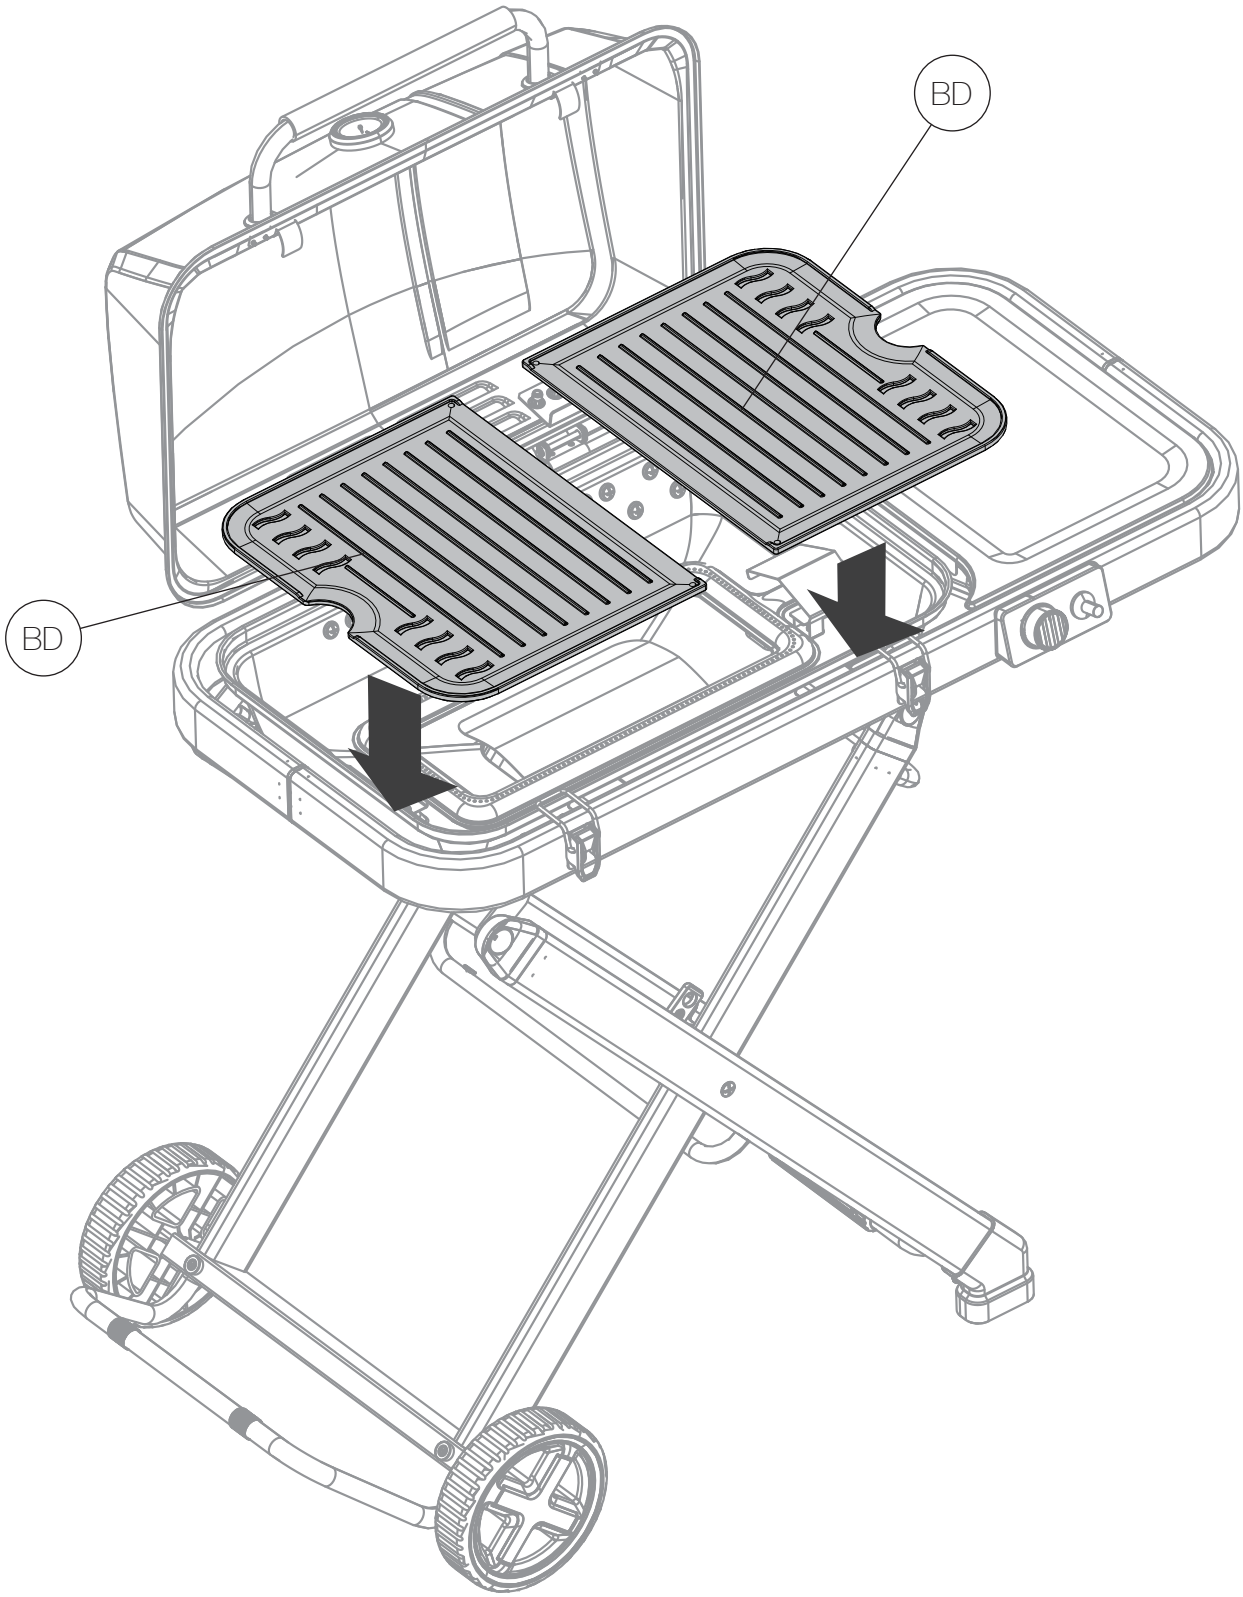


TESTING YOUR BBQ

TESTING FOR LEAKS - DO THIS BEFORE USING YOUR BBQ. Note - Do not test for gas leaks with an open flame. If you smell gas, turn off at the source.


Before first use, at the beginning of each new season, or whenever a gas cylinder is changed, you must check for gas leaks.

Do so by:


1 Turn all gas valves on the BBQ to the off position

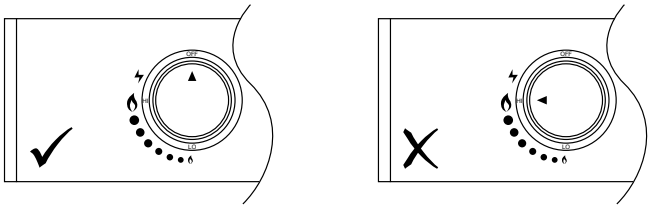


2 Turn on the gas cylinder

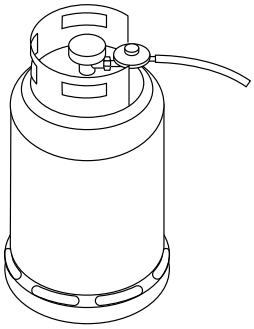


3 Make a soap solution of one part liquid detergent and one part water

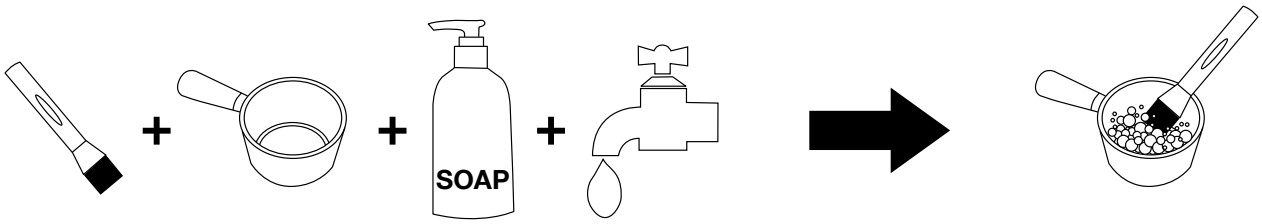

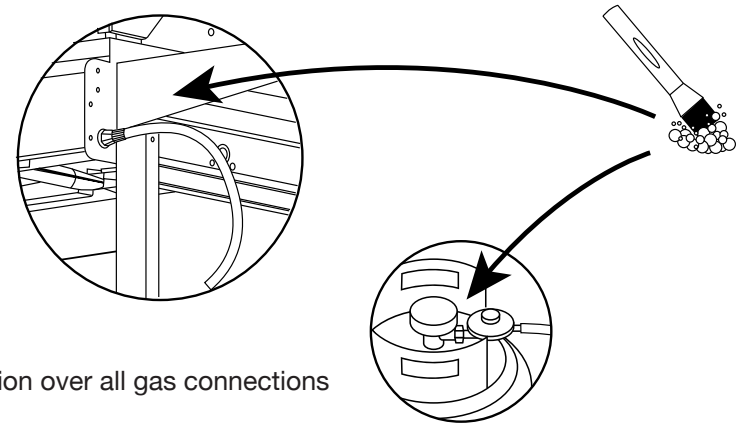

4 Brush the soap solution over all gas connections

5
- The presence of bubbles indicates a leak. Tighten or repair as necessary
- Under no circumstances should a naked flame be used to check for leaks
- If a gas odour is present and no leaks can be found, do not use the BBQ. Turn the gas off at the source, disconnect the hose and immediately contact your BBQ dealer or place of purchase for assistance

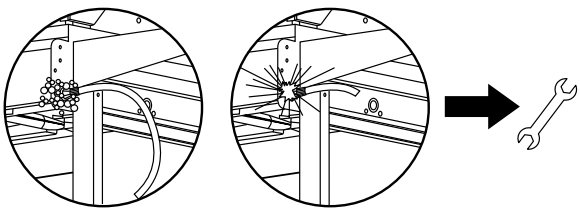

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Grillstream Barbecues
Part of the LeisureGrow Group
Dewmead Farm,
New Inn Road,
Hinxworth,
Hertfordshire SG7 5HG,
United Kingdom.
Tel: +44 (0)1462 744500
E-mail: consumer@leisuregrow.com