
BUSH

Wi-Fi and Bluetooth Speaker with Amazon Alexa

B100ALF

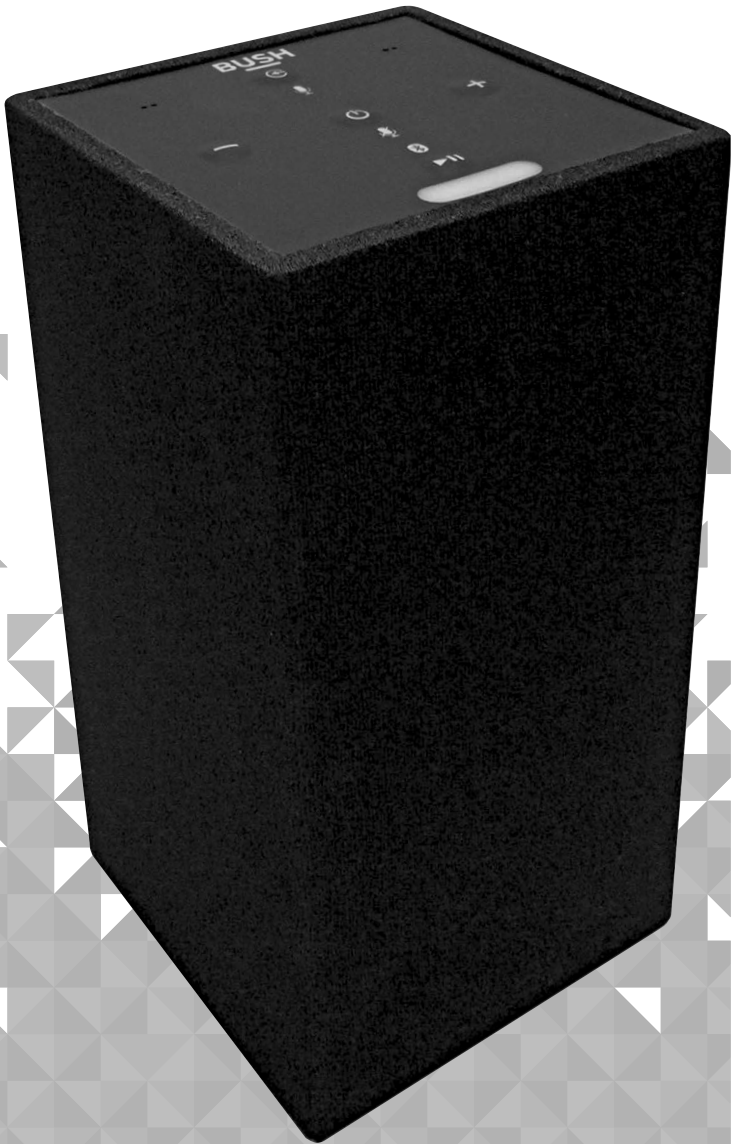

You'll soon be enjoying your new Wi-Fi and Bluetooth speaker.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Warning

Your Wi-Fi and Bluetooth speaker is designed for use mainly with home Wi-Fi systems and may not function properly within an office environment where Wi-Fi protective firewalls are in operation.

You can only use Alexa if you have an Amazon account and when you are connected via Wi-Fi.

Help and Guidance

We're here to help you get the most from your B100ALF Wi-Fi and Bluetooth speaker. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on 0345 604 0105.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

1 Safety information

Safety information 6

2 Getting to know your Wi-Fi and Bluetooth Speaker

Controls and features 8-9
LED indicators 9

3 Using your Wi-Fi and Bluetooth Speaker

Downloading the Muzo Player app 12
Connecting to Wi-Fi 12
Signing in to Amazon Alexa 14
Using Alexa voice control 15
Using the Amazon Alexa app 16
Bluetooth pairing 17
Aux in / Line in connections 17
Grouping speakers 18
Music playback 19
Radio presets 20
Auto standby 20
Additional control key functions 20

4 Other information

Technical specification 22

5 Product support

Troubleshooting 24
Help and assistance 25
Disposal 26
Guarantee 27

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105

1 Safety information

Safety information

Important - Please read these instructions fully before installing or operating

Power

- The mains power adaptor is used as the disconnect device and must be easily reached to unplug in case of emergency.
- Only use the power adaptor supplied if it needs to be replaced make sure the replacement's rating and polarity are the same as that supplied.

Heat sources and flames

- No naked flame sources, such as lighted candles, should be placed close to the speaker.

Moisture and water

- Do not expose to dripping or splashed fluids. Objects filled with liquids, such as vases, must not be placed close to the speaker.

Other hazards

- The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations, strong magnetic fields, high frequencies and dusty environments.

Ventilation

- Do not place the product in enclosed bookcases or racks without proper ventilation.
- Ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- Never attempt to insert wires, pins or other such objects into the vents or openings of the unit.

Repair

- Do not disassemble or modify the Speaker, there are no user serviceable parts. If the Speaker is damaged in anyway or malfunctions do not use. Consult a qualified service engineer.

Cleaning


- Do not use abrasives, benzene, thinner or other solvents to clean the surface of the unit. To clean, wipe with clean soft cloth and a mild detergent solution.

Disposal

- Do not dispose of this product with household waste at the end of its life cycle; hand it over to a collection centre for the recycling of electrical and electronic appliances. By recycling, some of the materials can be reused. You are making an important contribution to protect our environment. Please check with your Local Authority for recycling advice.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

2 Getting to know your Wi-Fi and Bluetooth Speaker

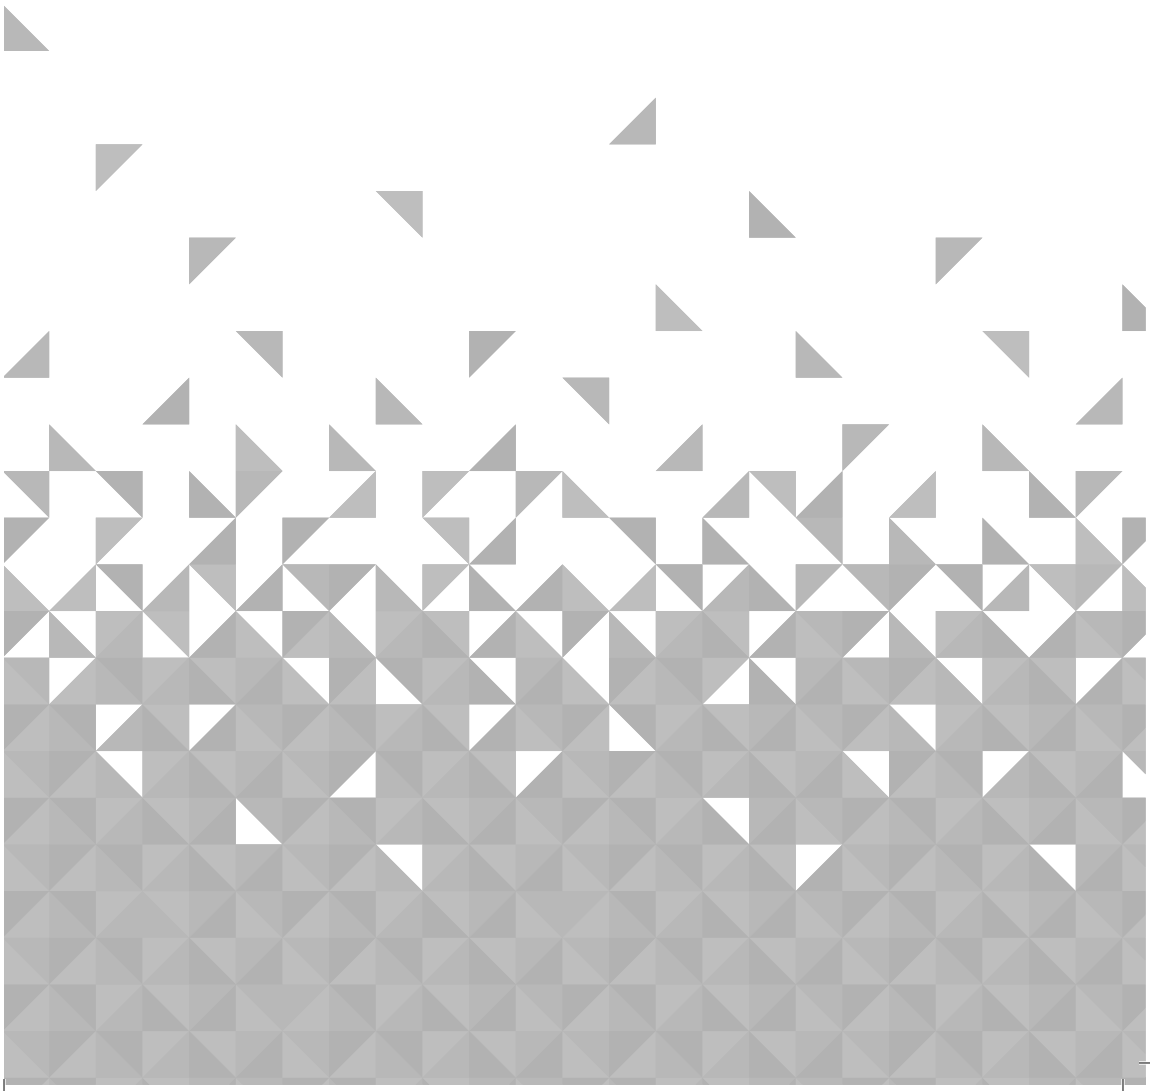

Getting to know your Wi-Fi and Bluetooth speaker

You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help.
For full details, refer to the product support section at the end of these instructions.

Accessories

12VDC 2A plug-in power adaptor

Speaker controls and features

Fig. 1
Speaker
Top View


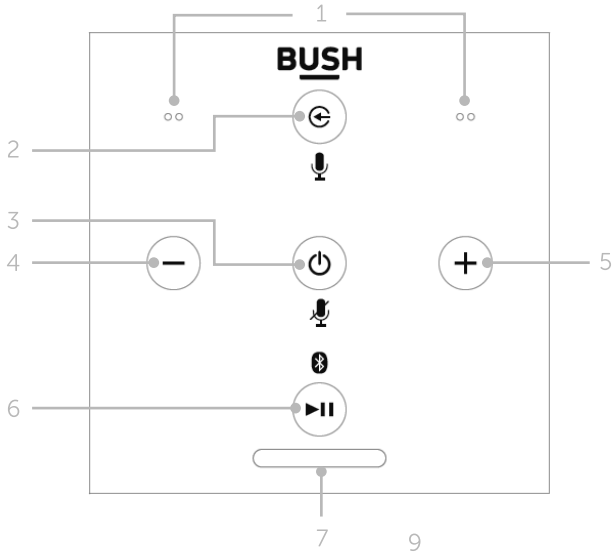


Fig. 2
Speaker
Back

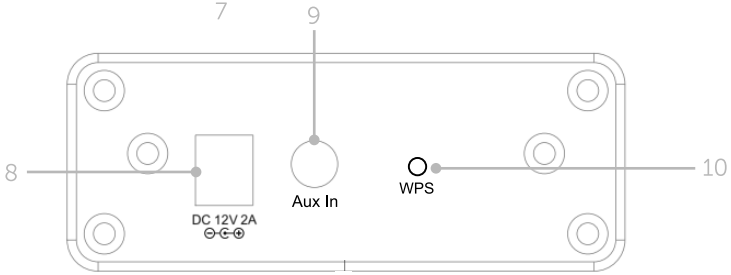

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

Getting to know your Wi-Fi and Bluetooth speaker

You'll be up and running in no time

Speaker controls and features

1. Microphone

2-6. Control Keys:

Control Key	Long Press	Short Press
2. Input/Mic-Tap to talk	Switch input mode (Bluetooth/Aux in/Wi-Fi)	Activate Mic to talk to Alexa without saying Alexa first
3. Standby/Mic On/Off	Turn unit ON/Off	Switch Mic/Alexa On/Off
4. Vol -	Reduce Volume	Reduce Volume - step by step
5. Vol +	Increase Volume	Increase Volume - step by step
6. Play/Pause/Pair	-	Play/Pause Wi-Fi playback
	In Bluetooth mode, enter Pairing mode	Play/Pause Bluetooth playback

7a. Connection LEDs:

Speaker Mode	LED Colour	Flashing	Solid ON
Bluetooth	Turquoise	Disconnected	Connected
Wi-Fi	Blue Blue & White White	Alexa thinking Alexa talking Searching for Wi-Fi	Alexa listening - Wi-Fi connected
Aux in/Line in	Green	-	Aux in mode
All Modes	Red	-	Mic Off
All Modes (when you say Alexa or tap to talk)	Yellow	-	No network connection/Not signed in to Amazon account

7b. Speaker status LEDs when grouped:

Speaker	LED
Master Speaker (Bluetooth)	On / Turquoise
Master Speaker (Aux in)	On / Green
Master Speaker (Wi-Fi)	On / White
Slave Speaker	On / Solid Red

8. DC Power in socket
9. Audio Aux in socket
10. Reset/WPS button, for Wi-Fi connection (short press) and for factory reset (long 5 second press and release).

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105

Using your Wi-Fi and Bluetooth Speaker 3

Using your Wi-Fi and Bluetooth speaker

Lets get started


Downloading the Muzo Player app to your phone

Use one of the following links to download or one of the QR codes (you will need to install a QR code Reader to use a QR code) and install the Muzo Player app to your iPhone or Android phone:

Android App:
https://play.google.com/store/apps/details?id=com.wifiaudio

iOs App:
https://itunes.apple.com/app/id820046906

If you have any problem with these links go to the Apple Store or the Play Store and search for Muzo Player.

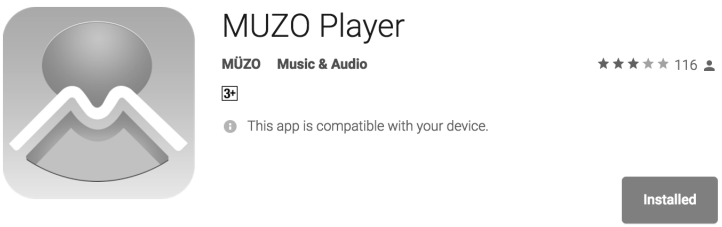

Power connection

Plug the mains adaptor into the mains and into the DC power socket (8), switch on at mains and press and hold down the ON/Standby switch on the top of the speaker.

Connecting to Wi-Fi

Before starting, make sure your phone is connected to the same Wi-Fi network as you wish to connect your speaker to.
Plug in your speaker, the White LED will flash and after a few seconds you will hear a tone to indicate the speaker is ready to connect to Wi-Fi. Open the Muzo Player, the screen will show searching for wireless Hi-Fi system, screen (A), tap the Wi-Fi Setup Wizard prompt on your phone to open screen (B). Tap "Add other MUZO compatible speakers" select Bush from the menu options in screen (C). Select a 2.4G network in screen (D), enter your Wi-Fi password in screen (E) and press next. Screen (F) prompts you to press the WPS button (10) on the back panel of the speaker (see Fig. 3).
When you press the WPS button you will hear voice confirmation "waiting for Wi-Fi connection" and screen (G) will appear you will then hear "Wi-Fi connected" and the White LED will stop flashing and stay on, screen (H) will appear on your phone, tap "Next".

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

Using your Wi-Fi and Bluetooth speaker

Lets get started

Connecting to Wi-Fi


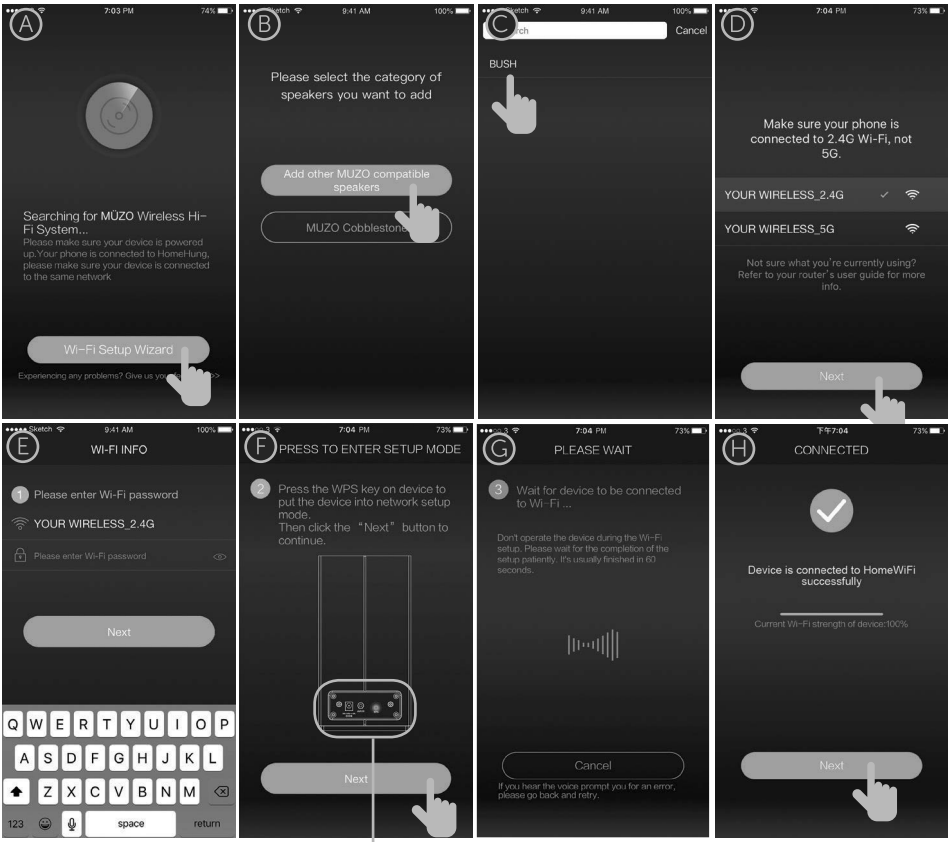


Fig. 3 Speaker Back Panel

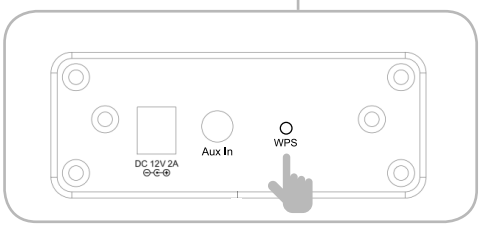


section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105


Using your Wi-Fi and Bluetooth speaker

Lets get started

Naming your speaker

After Wi-Fi connection the NAME DEVICE screen (I) allows you to name your speaker, enter a name or choose from the room list. Speaker default name is B100ALF.

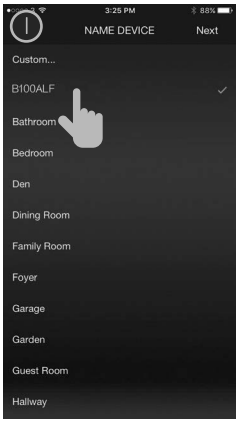


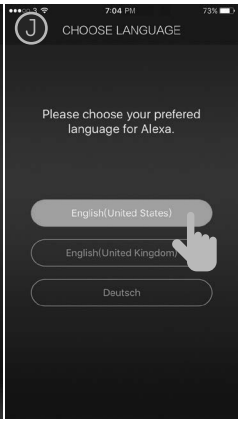

Signing into Amazon to use Alexa


To use Amazon Alexa you must first have an Amazon account. If you don't yet have an account go to "www.Amazon.co.uk" to register.


The first step is to choose your preferred language for Alexa. Using screen (J) select "English (United Kingdom)" and follow the instructions that appear on screen (K).

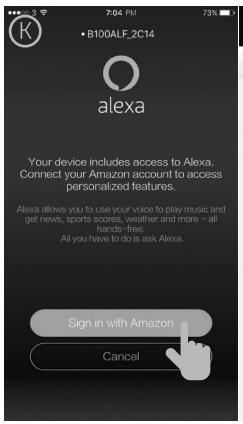



Sign in to your Amazon account using screen (L) opposite

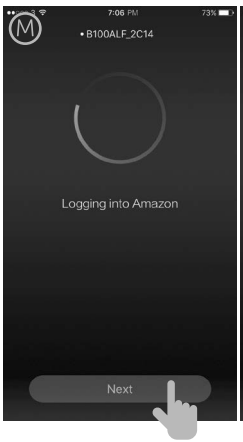

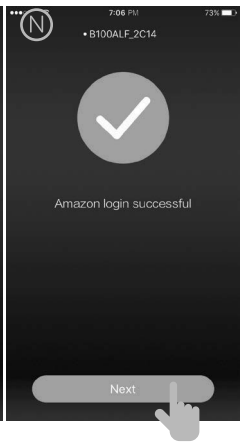

Screen (M) will appear followed by screen (N) when sign in is complete.

Press next to start using Alexa.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting


Using your Wi-Fi and Bluetooth speaker

Lets get started

Before Using Alexa

Many of Alexa's services are location dependant and the default location is Seattle in the USA. To change the default location you will need to download the Amazon Alexa app and set your UK location.

You can download the Amazon Alexa app from Play Store or Apple Store.

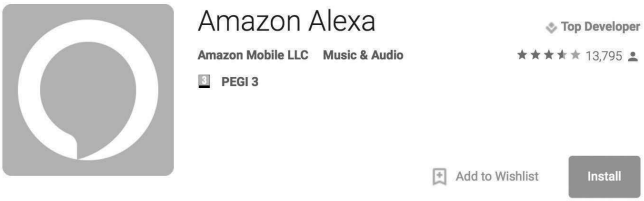

Once installed to set your location in the Amazon Alexa home screen press the menu symbol top left, tap on your speaker name, go to "Device location" and enter your full address on the top line and your postcode on the second line.

Whilst in settings you can use the menus to connect to apps like Amazon Music, Live Radio, TuneIn and others as well as reviewing your Alexa history and many other options.

Using Alexa



If you return to the Muzo app you should be in screen (O) which gives an introduction to using Alexa.

When asking Alexa questions always say "Alexa" first and the Blue LED will indicate Alexa is listening.

Follow the on screen instructions in Muzo, start asking Alexa questions and learn what features are available including:

Play music from Amazon Music, TuneIn and many more apps/services just by using voice commands.*

Answers questions, such as time and date, find out sports scores and schedules, read Audible audio books, listen to news, traffic and weather reports, find info on local businesses, consult Wikipedia.

Take notes, prepare shopping lists, shop at Amazon.

Controls lights, switches, thermostats and more with compatible connected devices.

Set timers and alarms.

*Please note you will need an account to play music from Amazon Music and some other services.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105

Using your Wi-Fi and Bluetooth speaker

Lets get started

Things to try

Music:
Alexa, play some Prime Music. Alexa, shuffle my mellow playlist. Alexa, play my Classic Jazz station.

Alexa, what song is this?

Alexa, buy this song.

Shows, Podcasts, & Radio
Alexa, play the program In Our Time.

Alexa, play BBC 1 radio.

Alarms & Timers
Alexa, set a timer for 30 minutes.

Alexa, set an alarm for 8.15 a.m.

Shop Amazon
Alexa, order bin bags.

Alexa, buy more kitchen towels.

Questions & Answers
Alexa, what Italian restaurants are near me.

Alexa, tell me a joke.

Alexa, Wikipedia Winston Churchill.

News, Weather, & Traffic
Alexa, what is the latest news?

Alexa, what's the weather forecast?

Smart Home

Control supported smart home devices like Philips Hue lights. To get started, go to the Alexa App.

Alexa, dim Hue lights to 50%.

Alexa, turn on the fan.

Use These Anytime

Alexa, pair my Bluetooth.

Alexa, stop.

Alexa, volume five. (1-10)

For more examples, go to "Things to Try" in the Alexa App.

Using the Amazon Alexa app

Apart from using the Amazon Alexa app menus on your phone to connect and explore apps like Amazon Music, Live Radio, TuneIn and others. You can review your Alexa history. View shopping lists. Check your purchase history. Check your timer and alarm settings.

Using your Wi-Fi and Bluetooth speaker

Lets get started

Bluetooth pairing

Short range connection (up to 10m) when Wi-Fi connection is not available.

Pairing your speaker with Bluetooth enabled Android phones and tablets

1. Place the speaker and phone/tablet within 1 metre of each other. Turn on the speaker with a long press on the Standby/Mic On/Off key ⏻ (3) on the top of the speaker, then long press the Input/Mic key ⟲ (2) the speaker will enter Bluetooth mode the LED will flash turquoise and the speaker is ready to pair.
2. Select the Bluetooth function on your mobile and search for Bluetooth devices, the speaker will appear as “B100ALF” in the Bluetooth device list, select and pair.
3. Connection will normally be automatic if a password is required enter (0000). After successful pairing, select “B100ALF” in the Bluetooth device list, and press “connect”. After successful connection, you will hear a single tone and the LED will stay a constant turquoise.

Please Note:

1. If the pairing is not successful, turn off the speaker and try pairing again.
2. After successful pairing, paired devices will remember each other. Unless pairing information is deleted, pairing should be automatic when both devices are switched on in range of each other.
3. To pair with a new device follow steps 1-3 above after disconnecting the existing pair.

Pairing your speaker with iPhone/iPad

Place the speaker and your iPhone/iPad within 1 metre of each other. Turn on the speaker, long press the Input/Mic key ⟲ (2) the LED will flash turquoise, the speaker is ready to pair. In the iPhone/iPad settings tap on Bluetooth function, search the Bluetooth devices, tap “?” to connect, when connection is made the LED will stay a constant turquoise.

Re-connecting to a paired device

Each time the speaker is turned on in Bluetooth mode, there are two possible outcomes. The speaker will connect automatically to the last connected device, just press play on your device for playback. The speaker will be listed on your devices screen as an available output channel, select the speaker as the output channel and play your music.

Connecting to the speaker via the Aux in socket (9)

Connection for audio devices without Wi-Fi or Bluetooth functions.

1. Connect the audio device to the Aux in socket using 3.5mm plug to plug cable.
2. Long press the Input/Mic key ⟲ (2) twice to select the Aux in mode, the LED will turn green when this mode is selected and the speaker will say “Line in mode”.
3. You can now playback your audio device though the speaker.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105

Using your Wi-Fi and Bluetooth speaker

Lets get started

Grouping speakers using the Muzo app

Switch on the speakers you want to group in Wi-Fi mode both will show a solid white LED. In the list of the available speakers, grab and drag one speaker and drop it over another speaker. In this way, this speaker (slave) becomes part of a group and plays the same music as the Master speaker. If you want to ungroup, just grab and drag the slave speaker below the middle line. The slave speaker becomes a solo speaker and can play different music.

While grouping the LED will flash white on the Slave speakers when grouped the Slave speakers will change to solid Red.

Group





Ungroup

You can also group speakers in Bluetooth and Aux in mode. The process is the same as described above. Only the Master speaker needs to be in Bluetooth / Aux in mode.

Note:

- While grouped Alexa facility will only function on the Master speaker.
- You can make one or more groups.
- You can have more than one Slave speaker grouped with the same Master.
- In a Group, even if the source is Aux in/Bluetooth, you can listen to Slave speakers playing the same song as the Master speaker (Redirect feature).
- You can simultaneously control the volume of all the speakers in a group by Volume buttons of your device.
- For a group configuration, you can choose which speaker plays Left (L), Right (R) stereo channel or Lft/Right (L/R) for mono, by touching the relevant icon.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

Using your Wi-Fi and Bluetooth speaker

Lets get started

Music playback using the Muzo app

Music Selection | Now Playing | Available Speakers



Select your local songs through MY MUSIC.
Access internet Radio stations through TuneIn.
Change Input through Aux In.
Search for online songs through Search.
Access your favourite songs through Favourites.
Access internet services by touching the corresponding icons.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105


Using your Wi-Fi and Bluetooth speaker

Lets get started

Radio presets using the Muzo app


To save internet radio stations to presets follow steps 1-3, to recall a preset, steps 4-5.

1. Go to the TUNEIN screen tap on search and the TUNEIN SEARCH screen will open.
2. Find the station you want to make a preset for and tap on the small speaker symbol beside the the station and the PRESET screen will open.
3. Up to 5 presets can be saved, tap on a number to save the preset to it, the station will appear beside it and you will hear a message saying “preset saved”.

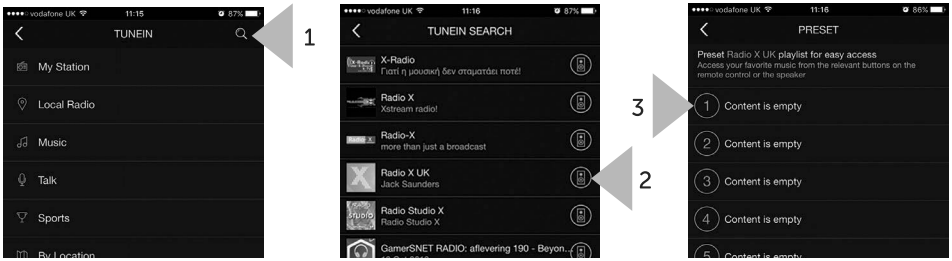

4 & 5. To recall a preset go to the DEVICE LIST tap on settings ⚙ select Preset Content.

6. In the PRESET CONTENT screen tap on the preset for the station you want to listen to.

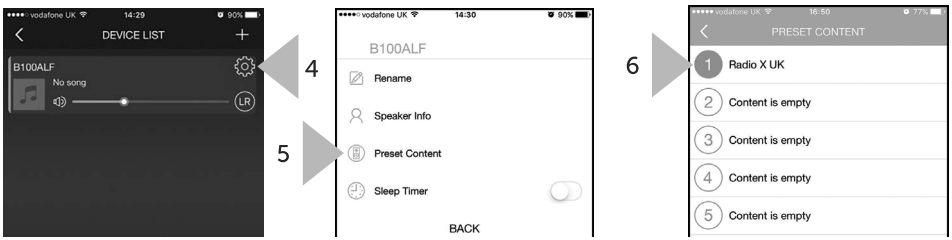

Auto standby

To save power, the speaker will automatically turn off if no sound has played though it for 15 minutes.

Additional control key functions

Input/Mic Key ⊖ (2):
Short press – Activates Alexa ready for voice command without the need to say Alexa first.
Long press – toggles between Wi-Fi, Bluetooth and Aux In inputs

Standby/Mic On/Off ⏻ (3):
Short press – disables Alexa function (turns off mic) / enables Alexa function (turns on mic)
When Alexa function is Off LED is RED.
Long press – Powers off speaker

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

4 Other information

Other information

Helpful technical information

Technical specification

Power Adaptor:
Input: 100-240V 50/60hz, 1.5A Max
Output: 12V ⎓ 2A

Speaker:
Output: 20W RMS
Type: Omnidirectional - 360°

Microphone:
Type: Far field array

Power Consumption
Max.: 24W
Standby: <3W

Default names and passwords


Bluetooth
Name: B100ALF
Password: “0000”

Wi-Fi
Name: B100ALF
Password: “00000000”

The above password can be used if you use a PC, tablet or mobile device to log in and set up the speaker though the IP address (the IP address can be found on the speaker info page accessed via the settings in the device list in the Muzo app).

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

Product support 5

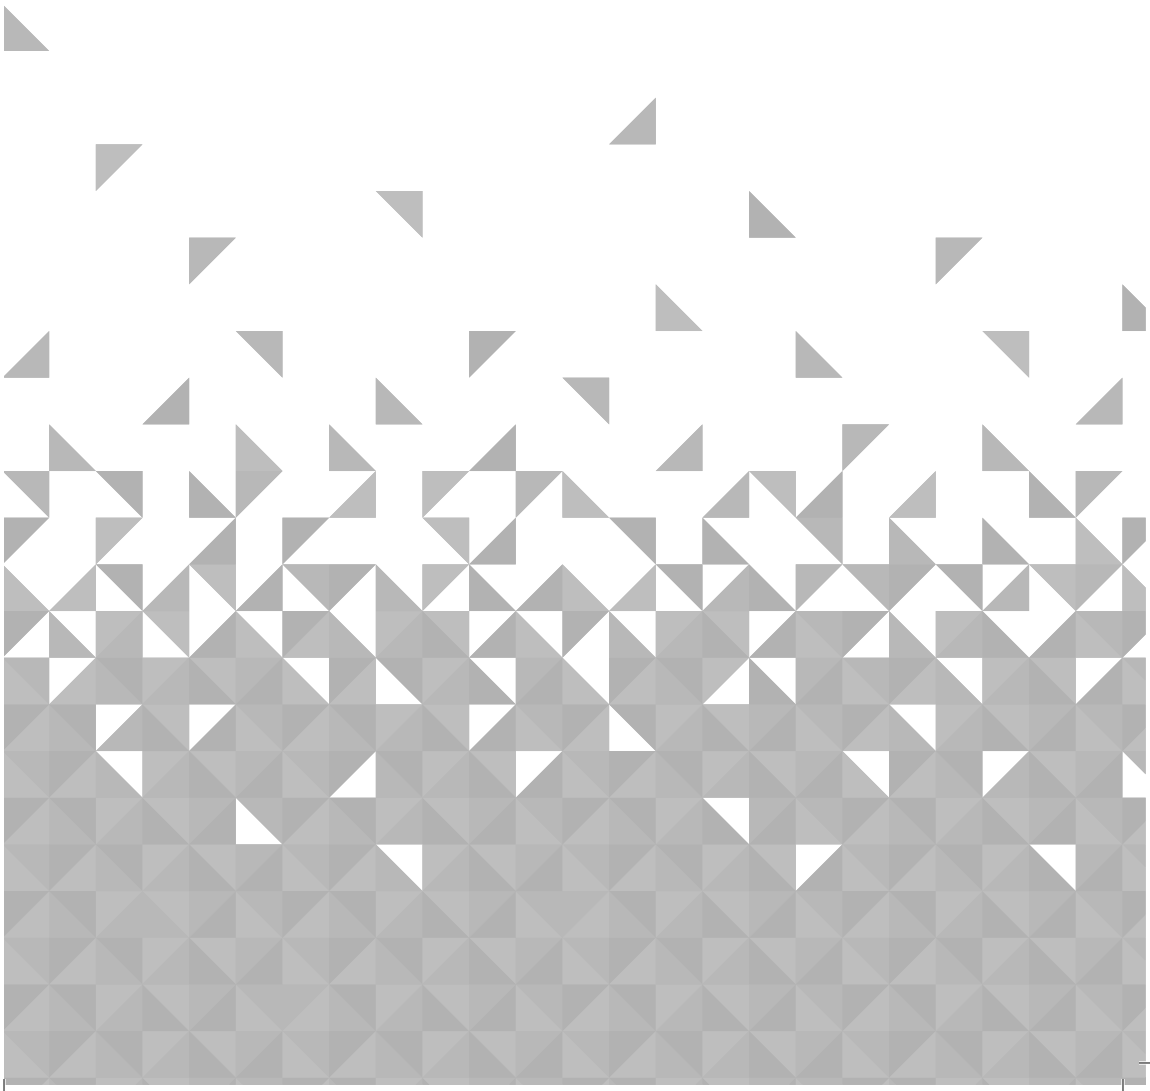

Product support

Help is always at hand

Troubleshooting

General	
There is no power	Ensure the speaker is switched on correctly
	Ensure the mains socket is switched on
	Ensure mains adaptor is connected properly
Wi-Fi mode	
Cannot connect to Wi-Fi network	Make sure the speaker is turned on and is charged.
	Make sure your connected to the correct network.
	Make sure your device is connected to the Wi-Fi network.
	Test your internet connection.
	If you are trying to use the speaker in an office environment Wi-Fi protective firewalls may be in operation try connecting with Bluetooth
	Uninstall then reinstall the Muzo app, power the speaker Off, then On, and restart setup
	Use factory Reset/WPS button to reset the speaker
Cannot signin to Amazon	Press back arrow and try again
	Make sure you have an Amazon accont
Audio doesn't play	Make sure the volume isn't too low on the speaker
	Other electronic household items can interfere with the signal, move the speaker to another location
	Use factory reset/WPS button to reset the speaker.
Bluetooth mode	
There is no sound being emitted	Adjust volume on your Bluetooth device as well as on the speaker for optimum volume and sound quality
	Make sure that your Bluetooth device is in effective range.
	Ensure that the Bluetooth device is paired
	Make sure you have selected the correct audio source
No response from the speaker	Try switching the speaker off and on if it doesn't automatically reconnect
	Use the Bluetooth menu on your device to reconnect to the speaker.

Amazon guide to using Alexa

www.amazon.co.uk/gp/help/customer/display.html/ref=hp_bc_nav?ie=UTF8&nodeId=201952240

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your speaker is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at:
www.argos-support.co.uk

If you still require further assistance, call one of our experts on 0345 604 0105*. To help us give you a fast and efficient service please have the following information ready.

Model Ref.		You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.
Serial number		
Date of purchase		This will be shown on your receipt

*Local call rates apply

Lines open 8am-7pm Monday to Saturday and
10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your plan/tariff. Mobile and other provide's costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from the Republic of Ireland will attract international call charges.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105

Product support

Help is always at hand

Disposal





- When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive.
- All electrical and electronic products should be disposed of separately from household waste at an appropriate recycling point/centre.
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- For more detailed information about disposal of your old appliance, please contact your local authority or the shop where you purchased the product.

Trademarks

iPhone is a trademark of Apple Inc. CA registered in the US and other countries. The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. Amazon, Alexa and all related logos are trademarks of Amazon.com,Inc. or its affiliates and any use of such marks by Argos is under license. iHeartRadio is a trademark of iHeartMedia, Inc. TuneIn is a trade mark of TuneIn, Inc. Spotify is a trademark of Spotify AB. All other trademarks or registered trademarks are the property of their respective owners. Their usage here does not imply an endorsement.

Amazon Terms & Policies

The Bush B100ALF Wi-Fi and Bluetooth speaker is an Alexa-enabled device. Before using this speaker, please read all rules and policies for Alexa, including the Amazon.com Privacy Notice at www.amazon.com/privacy and the terms found in the Alexa App in Help > Legal & Compliance. These terms, notices, and policies are, collectively, the "Agreements." By using Alexa, you agree to be bound by the Agreements.

Radio Equipment Directive

This product is intended for use within the UK. This equipment complies with the essential requirements for the Radio Equipment Directive 2014/53/EU.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting http://www.argos-support.co.uk/

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the troubleshooting

BUSH

Call us now to activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't for get to register it with us today so we can provide you with our best possible after sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am-8pm, 365 days a year *Calls may be recorded and monitored

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor Argos Limited: 489-499 Avebury Bvd - Milton Keynes - MK9 2NW

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 604 0105

BUSH

Contact:

www.argos-support.co.uk

Helpline: 0345 604 0105

Bluetooth®