BUSH

Instruction manual
CSPKJ1



Safety Information

Important - Please read these instructions fully before installing or operating

Power source

- Opening or removing covers may expose you to dangerous voltages or other hazards.
- Use suitable power sources - Plug the product into a suitable power source, as described in the operating instructions or as marked on the product.
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- Do not bend, stretch or pull the supply cable in order to avoid electric shock.
- Do not allow the product to be submerged in water. Do not expose headphone socket or battery compartment to water, as water entering the set may cause major damage.

Moisture and water

- Do not use this apparatus near water or moisture.
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.

Heat sources and flames

- Batteries shall not be exposed to excessive heat such as sun, fire or the like.

Servicing and repairs

- Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Guarantee

BUSH

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Getting started

You'll soon be enjoying your new Portable Bluetooth Speaker.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Portable Bluetooth Speaker. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021.**


Getting to know your Portable Bluetooth Speaker

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.


If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Accessories

1. CSPKJ1 speaker
2. USB charging cable
3. Lanyard strap

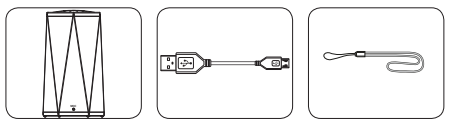

Functions and controls

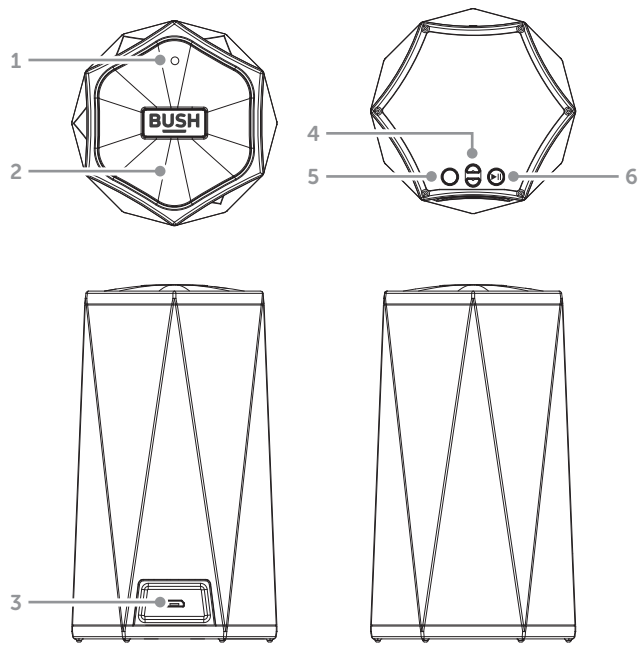

1. CHARGING/BLUETOOTH status LED
2. TOUCH control surface
3. USB CHARGE port
4. LANYARD STRAP fixing
5. BLUETOOTH UNPAIR/ LIGHT effect button
6. POWER/ ▶II button

Using the portable Bluetooth Speaker

Getting started

Follow the below steps to charge the player.

The speaker requires charging fully before use to ensure battery longevity.

1. Using the USB charging cable connect the mini usb plug into the usb charge socket (3) near the bottom of the unit. Connect the other end of the cable to a laptop/pc usb input & power on the pc/laptop or connect to a USB adaptor (DC 5V/1A only).
2. During charging you will see the CHARGING LED (1) on top of the unit illuminate red.
3. Once charged the CHARGING LED (1) will turn off.

When the battery level begins running low the CHARGING LED (1) will flash red.

Switching the speaker on/off

1. Press and hold the POWER/ ▶II button (6) found on the bottom of the speaker for 2 seconds to turn the speaker on.
2. To turn the speaker off press and hold the POWER/ ▶II button (6) for 2 seconds.

Auto standby

When the speaker is unused for 20 minutes the power will shut off to conserve battery power.

1. Press and hold the POWER/ ▶II button (6) for 2 seconds to power the speaker on again.

Pairing a device

Pairing is the process of connecting your blueooth enabled audio device (e.g. smartphone) to the CSPKJ1 bluetooth speaker.

1. Power on the CSPKJ1 bluetooth speaker if not already. While the BLUETOOTH status LED (1) is flashing (blue) the speaker is in pairing mode & ready for connections. if not press and hold the UNPAIR/LIGHT button 6) on the bottom of the speaker.
2. Enable Bluetooth on your audio device (For example a smartphone) and search for available bluetooth connections. Select the CSPKJ1 from the list. If you are asked for a pass code enter '1234'. The BT LED will stop flashing once connected.

If you turn off either device before pairing is complete the process will need to be repeated when powered ON again.

---

3. Once paired an audible sound is heard through the bluetooth speaker.

Each time you power the CSPKJ1 bluetooth speaker on the device will automatically connect, unless you have un-paired the device on your bluetooth audio device.

---

4. You can now begin playback from the audio device and the output will playback through the CSPKJ1 bluetooth speaker.
5. When using a mobile phone as an audio source and you receive a phone call the audio playback stops while you receive the call. When you hang up the audio is restored.

The volume output level is controlled by the volume level on the audio source
(e.g. smartphone).

---

6. To un-pair (disconnect) a bluetooth device, press the UNPAIR/LIGHT button (5) on the bottom of the speaker. The CSPKJ1 bluetooth speaker will now revert to search mode, and be available for new connections.

Controlling a connected device

Once connected you can either use the controls on the audio device to play or pause.
Or you can use the control buttons on the CSPKJ1 bluetooth speaker.

1. During music playback from your bluetooth audio device (e.g. smartphone), short press the POWER/ ▶II button (6) found on the bottom of the speaker to pause the playback. Press again to resume playback.
2. Alternatively you can touch the top speaker grill to pause or play audio. **(Fig 1)**
3. Selection of next or previous tracks must be operated from the bluetooth audio device (e.g. smartphone).

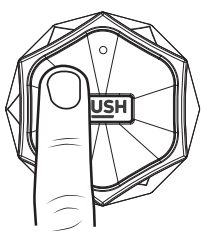


Fig 1.

Light effect

There are five different colour modes which can be cycled through by pressing the UNPAIR/LIGHT button (5). See the below descriptions of each effect.

SLOW FADE: Colours slowly fade from one into the next at an interval of 5 seconds.

1) Slow fade (FADE) default mode
2) Fast fade (FAST)
3) One colour (COLOUR)
4) Pulse to music (PULSE)
5) Off (no light effect)

FAST FADE: Colours quickly fade from one into the next at an interval of 2 seconds.

1) Slow fade (FADE) default mode
2) Fast fade (FAST)
3) One colour (COLOUR)
4) Pulse to music (PULSE)
5) Off (no light effect)

ONE COLOUR: Press to retain the colour when it appears.

1) Slow fade (FADE) default mode
2) Fast fade (FAST)
3) One colour (COLOUR)
4) Pulse to music (PULSE)
5) Off (no light effect)

PULSE TO MUSIC: Lights flash to the beat of the music being output.

1) Slow fade (FADE) default mode
2) Fast fade (FAST)
3) One colour (COLOUR)
4) Pulse to music (PULSE)
5) Off (no light effect)

OFF: no light effect

1) Slow fade (FADE) default mode
2) Fast fade (FAST)
3) One colour (COLOUR)
4) Pulse to music (PULSE)
5) Off (no light effect)

Care and maintenance

After use

- Power off the player.

Care and cleaning

- All care and cleaning operations should be carried out with the unit unplugged from a PC/ laptop/charger.
- Occasionally wipe the cabinet with a lint free duster. Never clean the unit with liquids or solvents.

Technical specification

Specification	Rating
Dimensions	80 x 80 x 138mm
Speaker power	5 MAX watts, 3.5w RMS @ 10% THD
Weight	360g
Interface	Micro USB
Bluetooth version	4.2
Battery	3.7V 2600mAh

Troubleshooting

Problem	Solution
No power	The player requires charging.
No sound	The volume level is too low. Playback has not been initiated. The speaker has not been paired correctly with a bluetooth audio device (for example a smartphone).
Sound is distorted	Lower the volume.
Cannot charge the player	The pc/ laptop/ charger USB port may be damaged. Try another port/ charger.

Disposal

- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Rechargeable battery disposal

Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC + amendment 2008/103/EC.
To safeguard the functionality and safety of your product, always take your product to an official collection point or service centre where a professional can remove the battery.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health. Please do not dispose of your batteries with your normal household waste. Always bring your product to a professional to remove the battery.

This product complies with Electromagnetic compatibility (2014/30/EU) directives.

This product is intended for use within the UK.

Declaration of Conformance

Hereby Argos LTD declares that the radio equipment type Bush CSPKJ1 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: http://www.argos-support.co.uk

Bluetooth Frequency Band 2.4Ghz.

Maximum radio-frequency power transmitted within above frequency band: 20dBm EIRP