HARRY

4855 - 4855A



Spare Parts

www.argos-support.co.uk

Help@ClickSpares.co.uk

0370 112 1928

Customer Support

0345 640 2020

argos.co.uk/help/contact-us

Issue 3 - June 2025

⚠ Safety and Care Advice

Product Details

HARRY 3 SEAT SOFA JUMBO CORD CHARCOAL	7446375
HARRY 2 SEATER SOFA JUMBO CORD CHARCOAL	7418925
HARRY CUDDLE CHAIR JUMBOCORD CHARCOAL	7189137
HARRY SOFABED JUMBO CORD CHARCOAL	7464292
HARRY STORAGE CUBE CHARCOAL	7464292
HARRY 3 SEATER ALL CORD CHARCOAL	7610053
HARRY 2 SEATER ALL CORD CHARCOAL	7440041
HARRY CUDDLE CHAIR ALL CORD CHARCOAL	7557075

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- This product has been constructed to be used in the domestic environment only and not for commercial purposes.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.



- We do not recommend the use of power drill/drivers for inserting screws as this could damage the unit. Only use hand screwdrivers.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.
- From time to time check that there are no loose screws, nuts or bolts. If there are please retighten.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Additional Guidance

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.
- Maximum user weight 110kg
- This product is compliant I BS EN 16139

Sainsbury's Supermarkets Ltd and Argos Limited, London EC1M 6HA, UK. Sainsbury's (NI) Ltd and Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.


Fittings


Bag 1

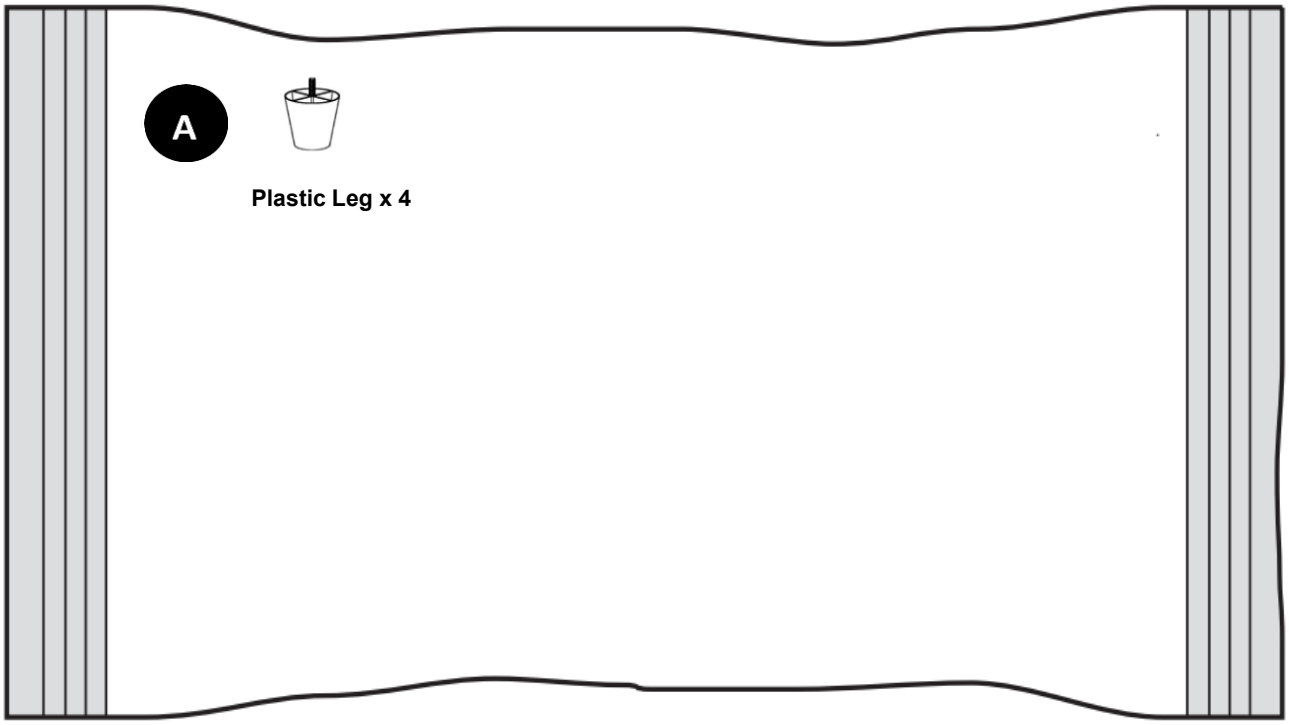


Plastic Leg x 4


1

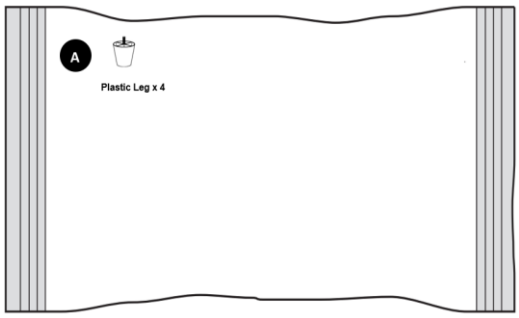

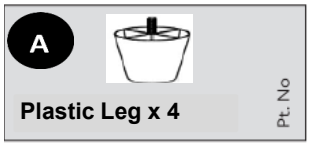

4x

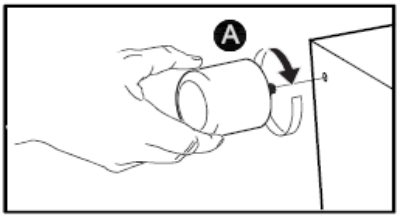

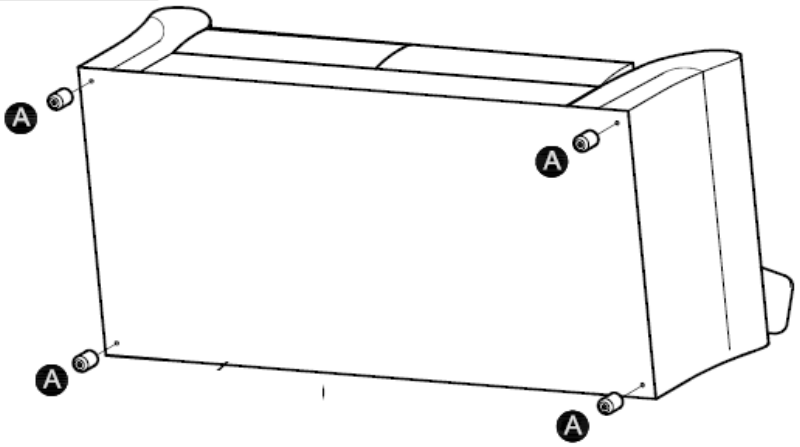

Sofabed User Instructions


Important - Please read these user instructions fully before using the sofabed, a few minutes spent doing this will allow you to fully understand all the functions of this product.

Opening of the Sofabed

1. Remove the seat cushions and place in a safe area.


2. Raise the bedspring by gripping the centre handle and pulling outwards. (Fig. A)

Fig. A

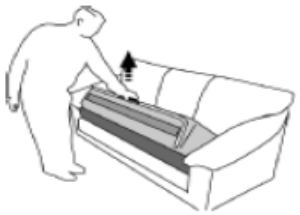

3. Grip the first supporting bar at the centre of the bar, raise and accompany the bar until it touches the floor. (Fig. B)

Fig. B

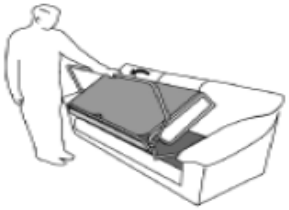

4. Repeat the operation for the second supporting bar. (Fig. C)

Closing of the Sofabed

In order to close the sofabed repeat the operations above in reverse order, always holding the support bar in the middle.

Fig. C



Warning :

- Before using the sofabed, it is necessary to cut the safety tab that restrains the bed mechanism.
- Beware of entrapment. Keep hands and fingers clear of mechanism when operating the controls.
- Ensure that children or pets are not playing or lying in the way when the mechanism is operated.
- Prevent children from playing on the furniture or with the controls.
- Do not use solvents to clean the metal parts of the sofabed : a dry cloth is sufficient.
- Do not sit or stand on the head of the bedspring.
- Do not jump on the bedspring.
- Avoid sitting on the edge at the front of the bedspring.



- Remove bed sheets and blankets before closing the bedspring.
- Operating the device improperly can cause permanent damages to the mechanism and cause the torsion bars and lever to bend.

