
MEET YOUR FIRE HD 8 KIDS



ALSO INCLUDED

USB-C cable, power adapter

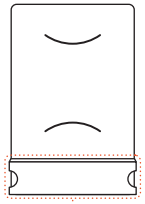

Make sure to check the accessories box before recycling.

ACTIVATE YOUR FIRE HD 8 KIDS



1 **POWER**
Power on your tablet.


2 **PARENT SETUP**
Follow the on-screen instructions to complete setup. Set your password or PIN to access adult profile and other settings.

3 **CREATE CHILD PROFILE**
Follow prompts to activate the included 1-year subscription to Amazon Kids+ by completing your child profile.

Access **Parent Dashboard** to customize content and parental controls at https://parents.amazon.com.

◀ Go back
● Return home

ENJOY YOUR FIRE HD 8 KIDS

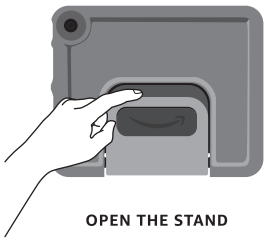

OPEN THE STAND



STAND ORIENTATIONS

ACCESS SETTINGS



SWIPE UP
to unlock.



SWIPE DOWN
for settings.



REMOVE THE CASE IF NEEDED



PUSH OFF UPPER CORNERS TO REMOVE THE CASE

CLEAN YOUR TABLET



Remove the case and clean with a dry, nonabrasive cloth.

EXPAND YOUR STORAGE



Remove the case to install a microSD card.
microSD card sold separately.