Rohnson

R-9587
Humidifier & Aroma Diffuser



Thank you for choosing our product.
For proper operation, please read and keep this manual carefully.

Warning!

According to instruction: EN 60335-2-98:2003/A11:2019:

- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Do not permit the area around the Humidifier to become damp or wet. If dampness occurs, turn the output of the Humidifier down. If the Humidifier output volume cannot be turned down, use the Humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
- Unplug the appliance during filling and cleaning.
- Never leave water in the reservoir when the appliance is not in use.
- Empty and clean the Humidifier before storage. Clean the Humidifier before next use.

FIRST USE STEPS

- Open the water tank.



- Poor 680ml water.



- Install the lid.



- Connect power by Type-C cable.



OPERATION



- Press button once: turn on the humidifier and mode of upwards droplet.
- Press button second time: to switch the mode into quiescence (constant position of the water).
- Press button third time: to switch mode into downwards droplet.

Aroma Diffuser


- You can add 2 drops of essential oil to the tank. The fragrance will come out with the mist.
- Since the air in the water pipe is not completely drained, it is normal for the water drops to linger a little on startup. Wait patiently for about 1 minute.
- As the product works, you may feel a little heat on the top, which is normal.

PRECAUTIONS

1.Do not add water beyond the scale line, otherwise, the water will leak out.


2. Please add enough water near to the scale line, but do not add water beyond the maximum level.

3. Do not add water when the product is working if you need to add water, please disconnect the power supply first.

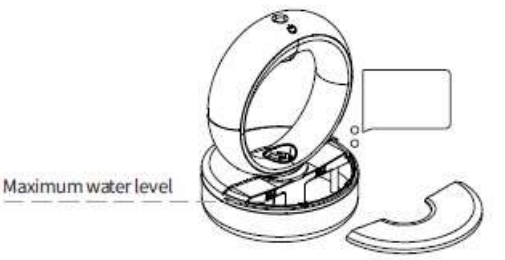

4. Please open the water tank to add water and place the upper shell on the desktop vertically. Do not place it horizontally or upside down, to avoid the backflow of residual water in the machine and damage the main board.

5. Please place the machine at a balanced level.

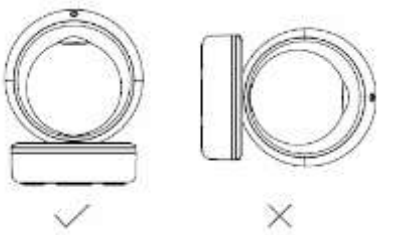

SAFETY INTRUCTION

- Individuals who lack relevant experience and knowledge (including children), must use the product under the supervision and guidance of a guardian.
- DO NOT connect or disconnect the power adapter with wet hands, failure to follow this instruction could result in electric shock.
- Please make sure that the charging port and the charging wire are dry. Before connecting the wire, otherwise, a short circuit could have occurred.
- Please use a safe and compliant 5V 2A power adapter for charging.
- If left unused for a long period, please unplug the power adapter, and pour out the water in the water tank to avoid bacterial growth.

TROUBLESHOOTING

Please refer to the table below in the event of the product operating abnormally:

If product doesn't work well, please refer to the following points before requesting repairs:	
Will not switch on or switch off	•Is there enough water in the tank? -Please add water to the tank •Is the power cord connected properly? -Please disconnect, check cables, and re-connect carefully.
No mist or abnormal mist	•Not enough water? or too much water? -Please add suitable amount of water in the tank, water must never be filled over 680ML (MAX)line. •Dirt on the ultrasonic plate? -Please refer to maintenance instructions remove and re-install correctly, so vapors can be released freely. •Cover and inner cover are not installed properly? Dirt on the air suction port on the underside of the base? -If too much dust in the air suction port, the mist will be restricted to come out. Just clean it.
Water leakage from product	•Cover and inner are not installed properly? -Remove and reinstall correctly, so vapors can be released freely. •Low temperature or high humidity? -Under these conditions, the mist may condense quickly into water droplets. **Note: It is normal for some drops to be thrown around the device during operation.**

CLEAN AND MAINTENANCE

Clean:

1. Please turn off the machine and unplug the plug before cleaning, so that cleaning is safer and will not cause electric shock.

2, When cleaning scale, use a soft brush to clean around the water tank first, but be careful not to hit the product with gravity, otherwise it will be damaged.

3.Clean the water level sensor with a soft brush, be sure to clean the scale, otherwise it will cause blockage and affect the normal operation of the machine.

Maintenance：

1. For the first use, it should be placed at room temperature for half an hour before turning it on.

2. Use ambient temperature 10-40 degrees.

3. Use clean water with a temperature lower than 40 degrees, especially for ultrasonic humidifiers. It is best to use pure water for humidification. In many areas, the water quality is hard, which means that the content of calcium and magnesium ions is high. In addition, the water plant uses bleaching powder and other cleaning agents when treating water. Water agents, these ingredients are very unfavorable for humidifier humidification.

4. Keep away from other home appliances when the machine is working.

5. Do not add non-professional production lines or additives (such as perfume) in the water, which will easily cause cracks in the water tank and base, which will affect the normal operation of the machine.

6. Do not place the humidifier on a hollow object to avoid resonant noise.

7. Do not turn on the machine without water.

SPECIFICATIONS

Dimensions	192 x 174 x 244 MM
Weight (excluding adaptor)	0.62 gr
Power: Input/Output	5V 2A
Tank Capacity	680ML
Accessories	Adaptor (5V 2A), Type-C power cord, instruction manual

MPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.
It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service.
Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving form inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.