
YASSICA

habitat

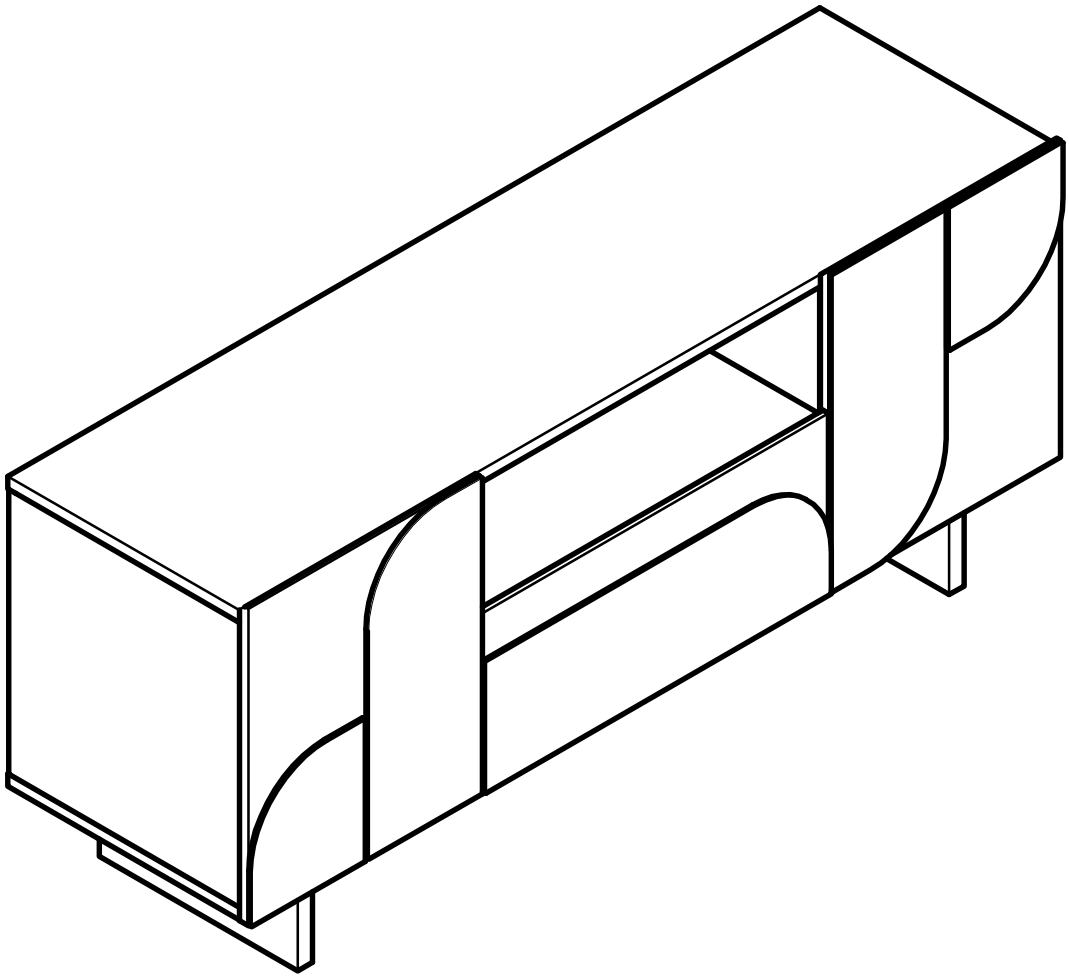

Spare Parts

www.argos-support.co.uk

Help@ClickSpares.co.uk

0370 112 1928

Customer Support

0345 640 2020

Issue 1 - Dec 25


⚠ Safety and Care Advice

Product Details

150 TV unit 7857122

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- This product has been constructed to be used in the domestic environment only and not for commercial purposes.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.

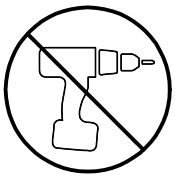

- We do not recommend the use of power drill/drivers for inserting screws as this could damage the unit. Only use hand screwdrivers.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.
- Use a dry cloth to clean the product, furniture polish is not recommended.
- From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

WARNING

In order to prevent overturning this product must be used with the wall attachment device provided.

Additiona l Guidance

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.
- This TV unit suitable for screen sizes up to 65in, maximum weight of TV 40kgs.
- This product is compliant BS4875-7 & EN14749 .

Habitat,Argos Limited Sainsbury's Supermarkets Ltd, London EC1M 6HA, UK. Argos (N.1.) Ltd and Sainsbury's (NI) Ltd.
Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK
Habitat.co.uk/help/contact-us

Fittings (Shown to scale)

Bag 1

A 


5 x 50mm Screw x 8

SCR05050

B 


Leg Pad x 4

FOT0170151

C 

8 x 30mm Dowel x 12

PGW0830

D 

7x39mm Locking Pin x 30

SCR07039

E 


8 x 2.5mm Door Pad x 4

PAD0802504

F 

15x12mm Locking Nut x 30

FIT1512000

G 


4 x 18mm Shelf Support x 8

PGM0418

H 


4 x 12mm Support Cover x 8

PGP0412T

I 


Bracket x 10

PARBLK112011

J 


4x33mm Screw x 2

SCR04033

K 


4 x 14.5mm Screw x 2

SCR04014

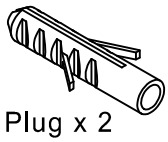L 

Wall Plug x 2

CAP070350

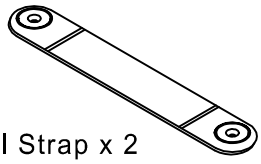M 

Wall Strap x 2

ELSRING10015

N 

4 x 40mm Screw x 4

SCR04040

O 

4.5 x 9mm Screw x 8

SCR04509

Hardware

P




4 x 15mm Screw x 16

SCR04015M

(This Screw Is Included In The Door Hinges Bag)


Q

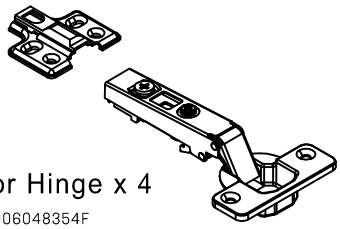

Door Hinge x 4

HIG0906048354F


R



350mm Left Outside Runner x 1

SLD2303507


S



350mm Right Outside Runner x 1

SLD2303507


T



350mm Left Inside Runner x 1

SLD2303507


U




350mm Right Inside Runner x 1

SLD2303507

Tools required




Phillips screwdriver
(small & medium)




Flat-head screwdriver
(small & medium)



Small
hammer

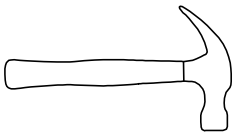


Large hammer




Pencil




Mallet

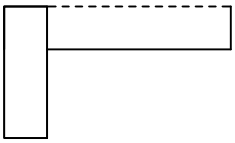


Set Square



Spirit Level

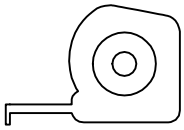


Ruler/tape
measure

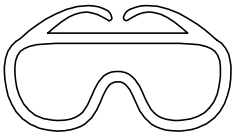


Eye protection
(when using a
hammer or glue)


Panels

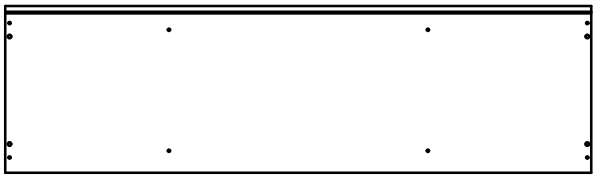


1 Top (1394 x 396mm)

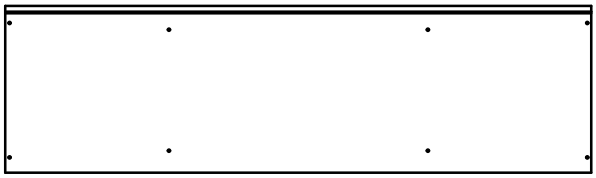


2 Bottom (1394 x 396mm)

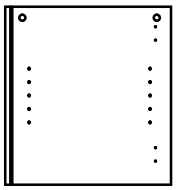


3 Right Side
(394 x 424mm)

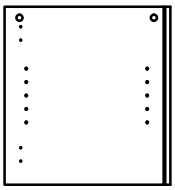


4 Left Side
(394 x 424mm)

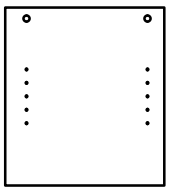


5 Middle Right
(378 x 424mm)



6 Bottom Side
(340 x 150mm) x 2




7 Bottom Support (1094 x 70mm) x 2

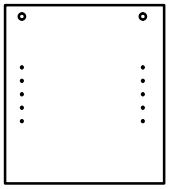


8 Middle Left
(378 x 424mm)




9 Middle Shelf (598 x 377mm)

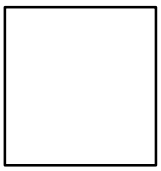


10 Adjustable Shelf (360 x 376mm) x 2

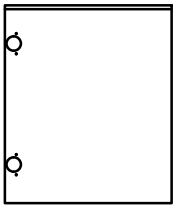

11 Right Door
(471 x 397mm)

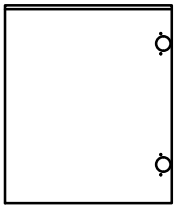

12 Left Door
(471 x 397mm)

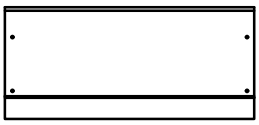

13 Drawer Front
(593 x 266mm)



14 Drawer Back
(542 x 192mm)




15 Drawer Right Side
(350 x 192mm)



16 Drawer Left Side
(350 x 192mm)





17 Drawer Bottom (551 x 343mm)

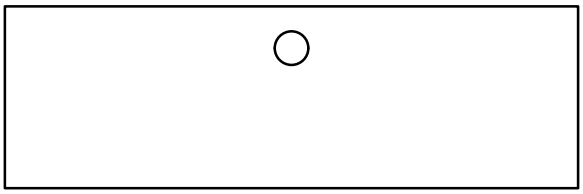



18 Back (1365 x 433mm)


1

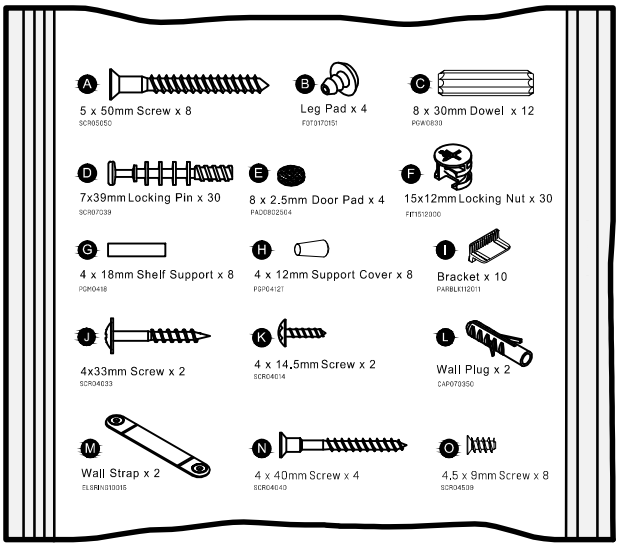
A
5 x 50mm Screw x 8
SCR05050
B
Leg Pad x 4
F0101701S1
C
8 x 30mm Dowel x 12
PDW0830
D
7x39mm Locking Pin x 30
SCR07039
E
8 x 2.5mm Door Pad x 4
PAD0802504
F
15x12mm Locking Nut x 30
FIT1512000
G
4 x 18mm Shelf Support x 8
PSP0418
H
4 x 12mm Support Cover x 8
PSP04121
I
Bracket x 10
PARBLE112011
J
4x33mm Screw x 2
SCR04033
K
4 x 14.5mm Screw x 2
SCR04014
L
Wall Plug x 2
CAP070350
M
Wall Strap x 2
ELSRIN010015
N
4 x 40mm Screw x 4
SCR04040
O
4.5 x 9mm Screw x 8
SCR04509

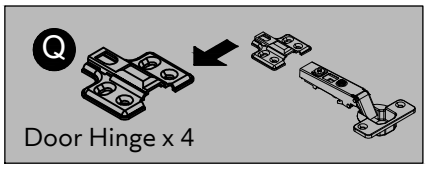
Q
Door Hinge x 4

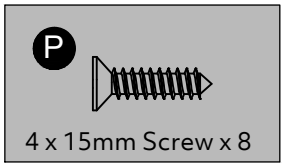
P
4 x 15mm Screw x 8

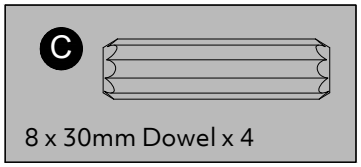
C
8 x 30mm Dowel x 4

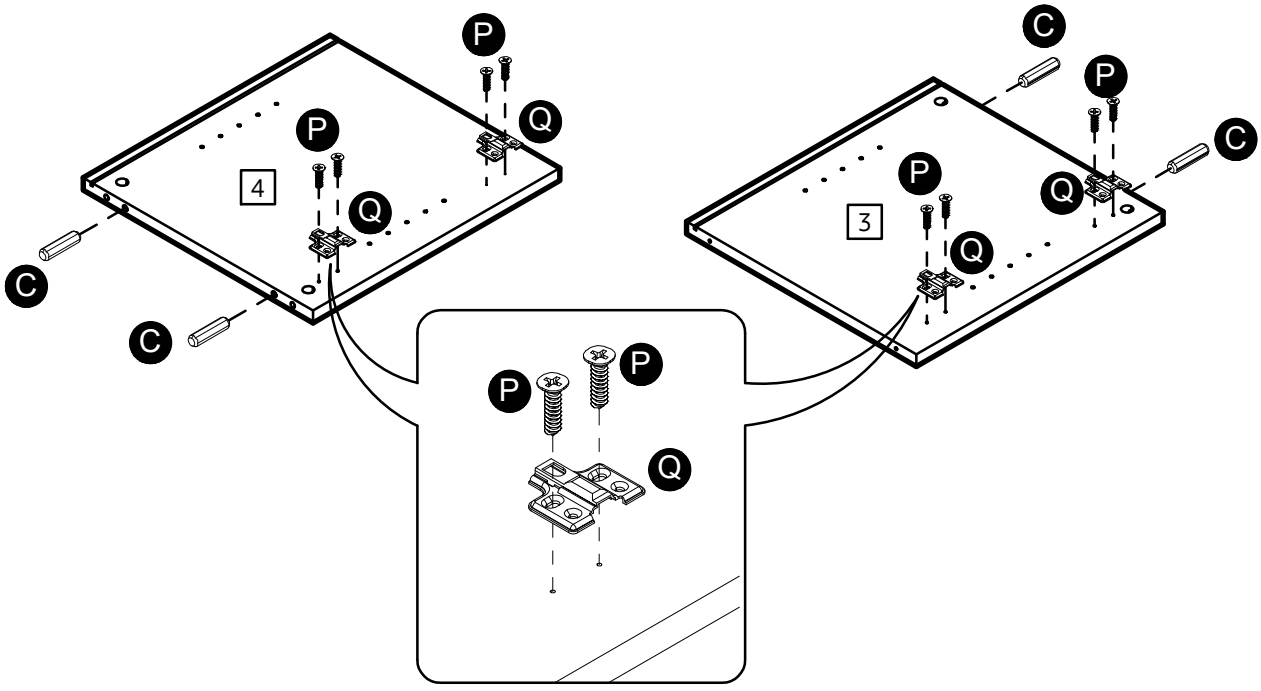
P
Q
4
C
C
C
P
P
3
C
P
Q
P
P
Q

2

D

7 x 39mm Locking Pin x 4

O


4.5 x 9 mm Screw x 4

R

350 Left Outside Runner x 1

S

350 Right Outside Runner x 1

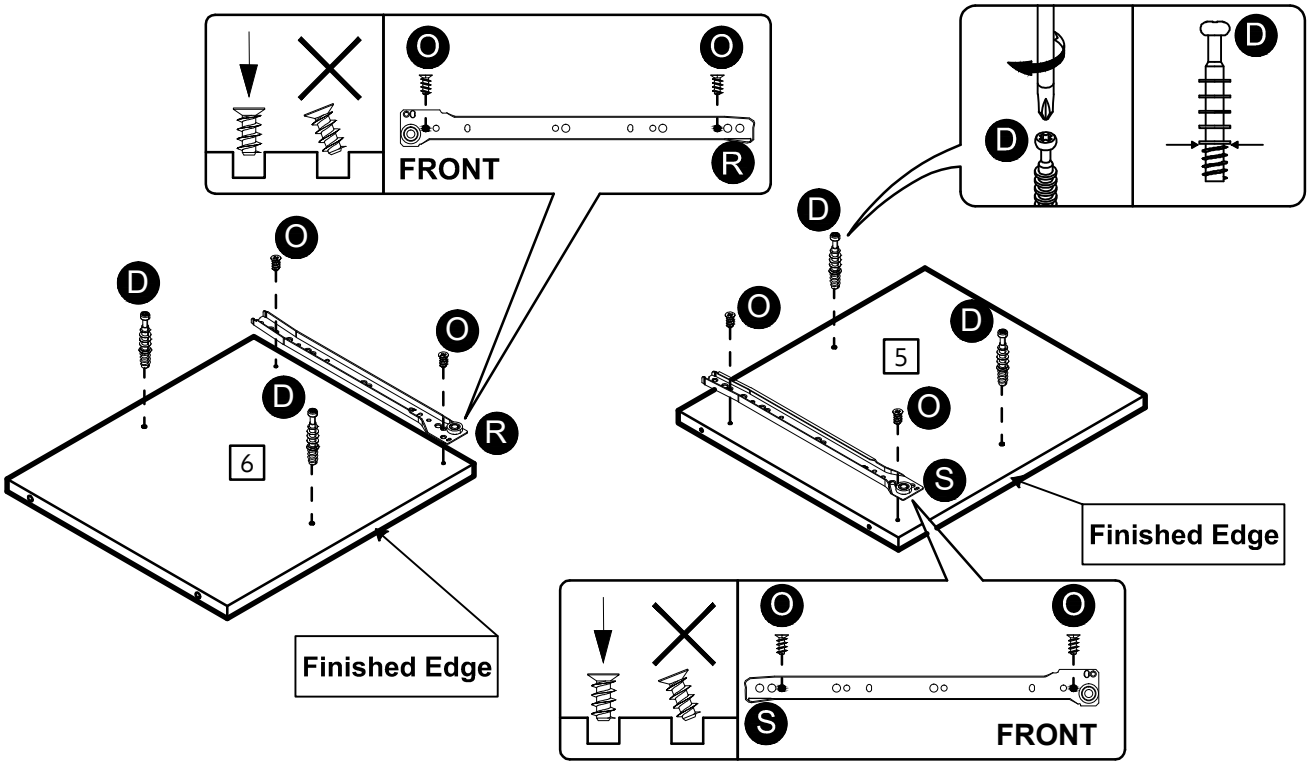

3

D


7 x 39mm Locking Pin x 4

C

8 x 30mm Dowel x 8

B

Leg Pad x 4

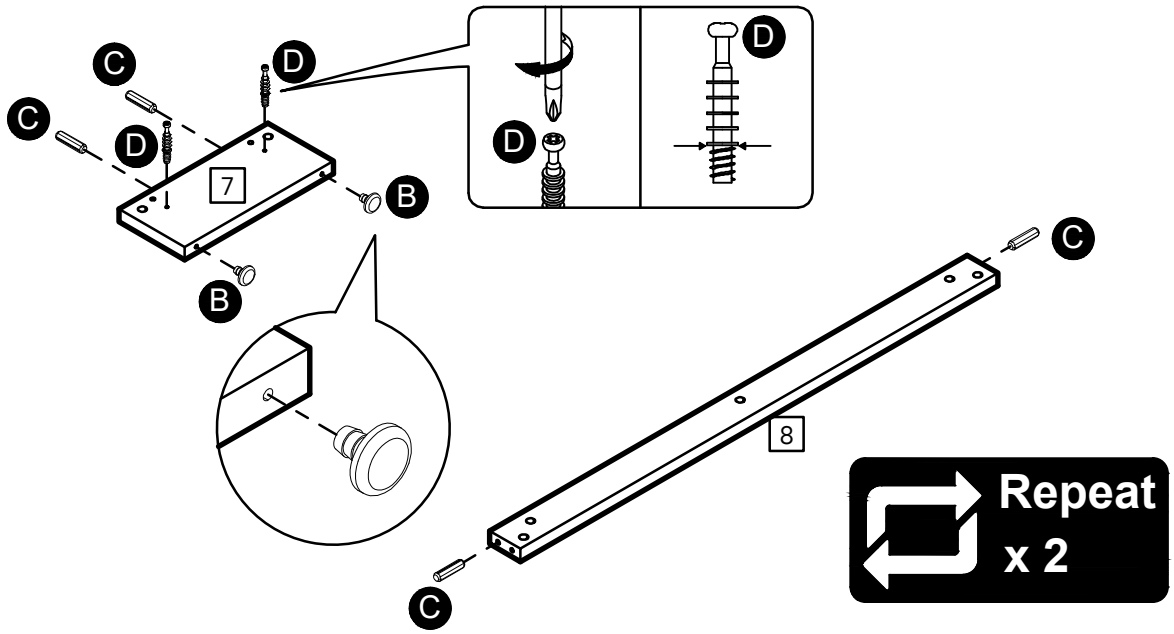


4

F




15 x 12mmLocking Nut x 4

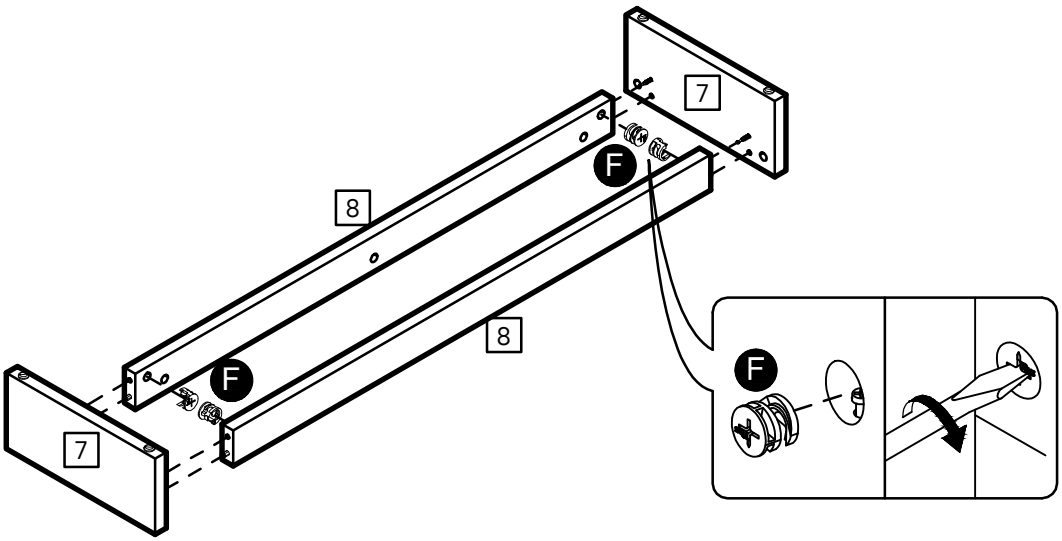


5

D




7 x 39mm Locking Pin x 18

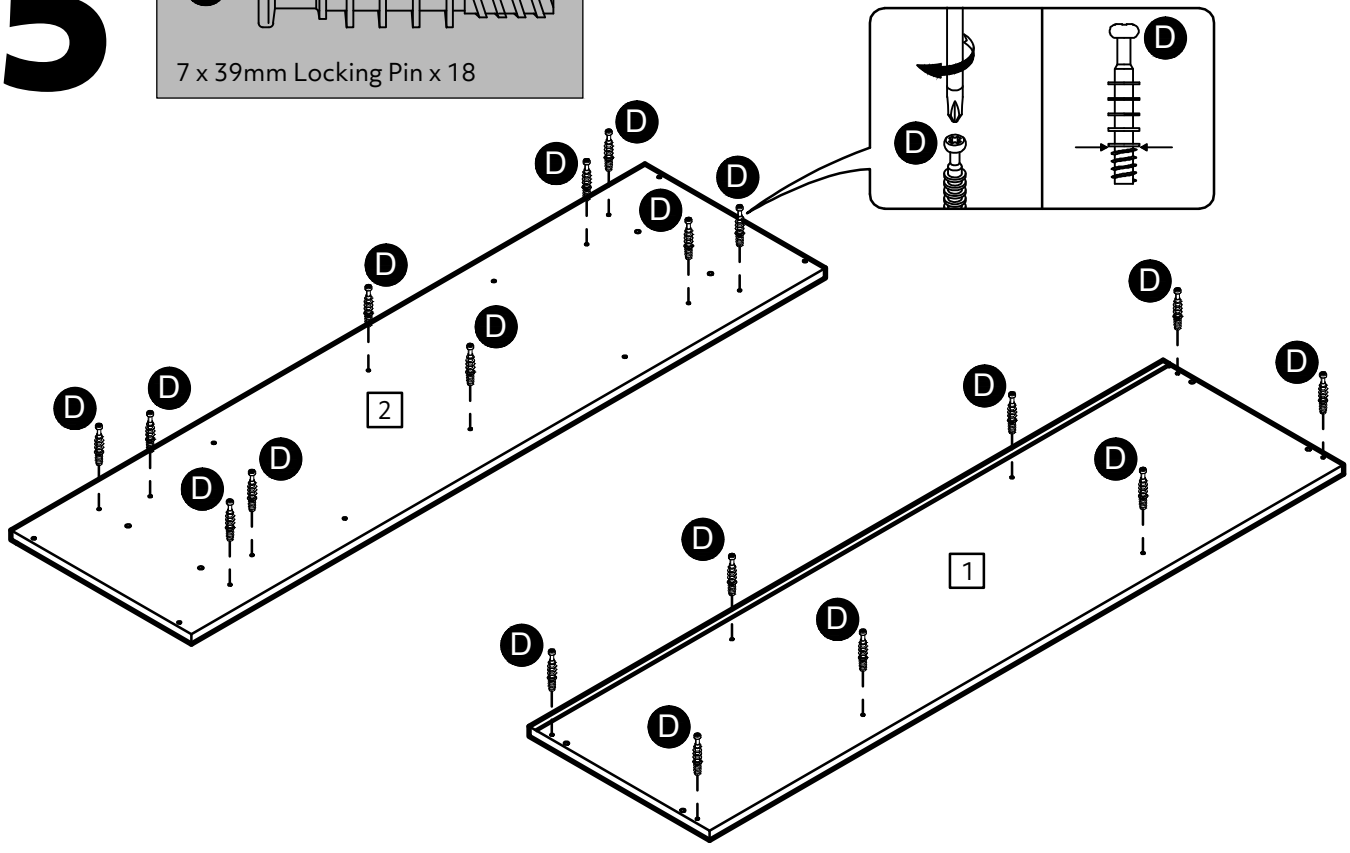


6

F




15 x 12mmLocking Nut x 10

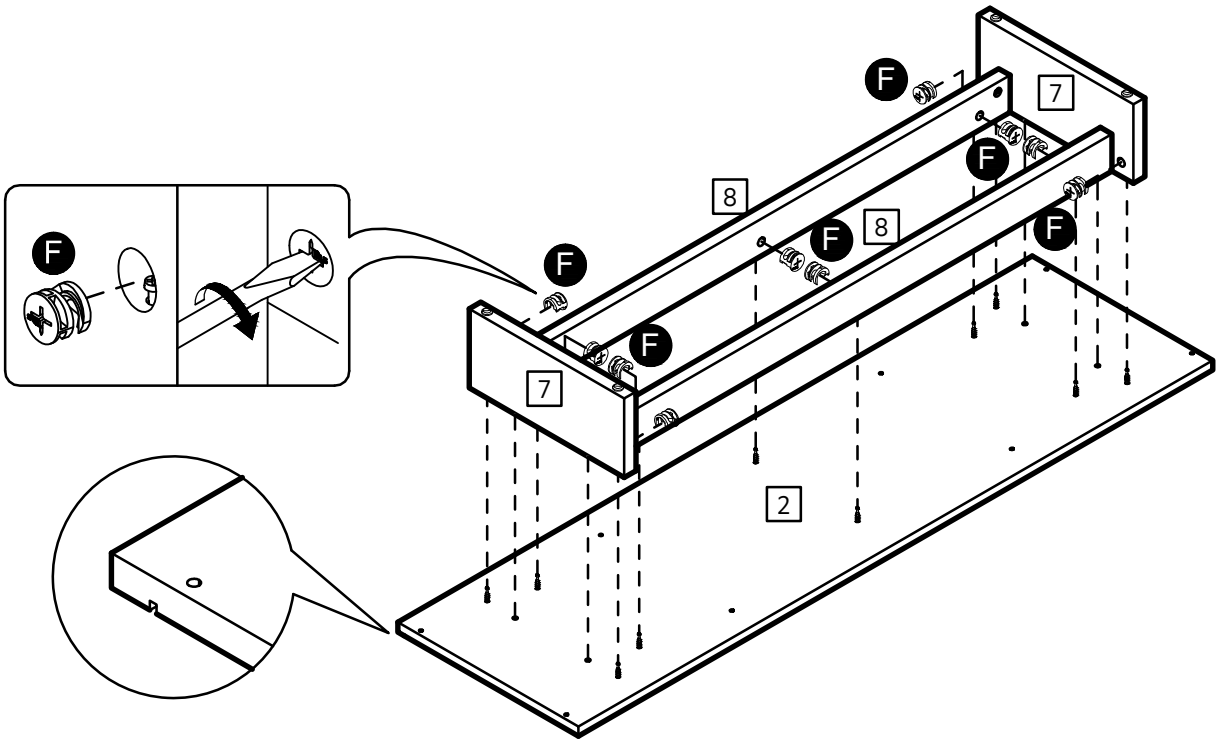


7

F




15 x 12mmLocking Nut x 4

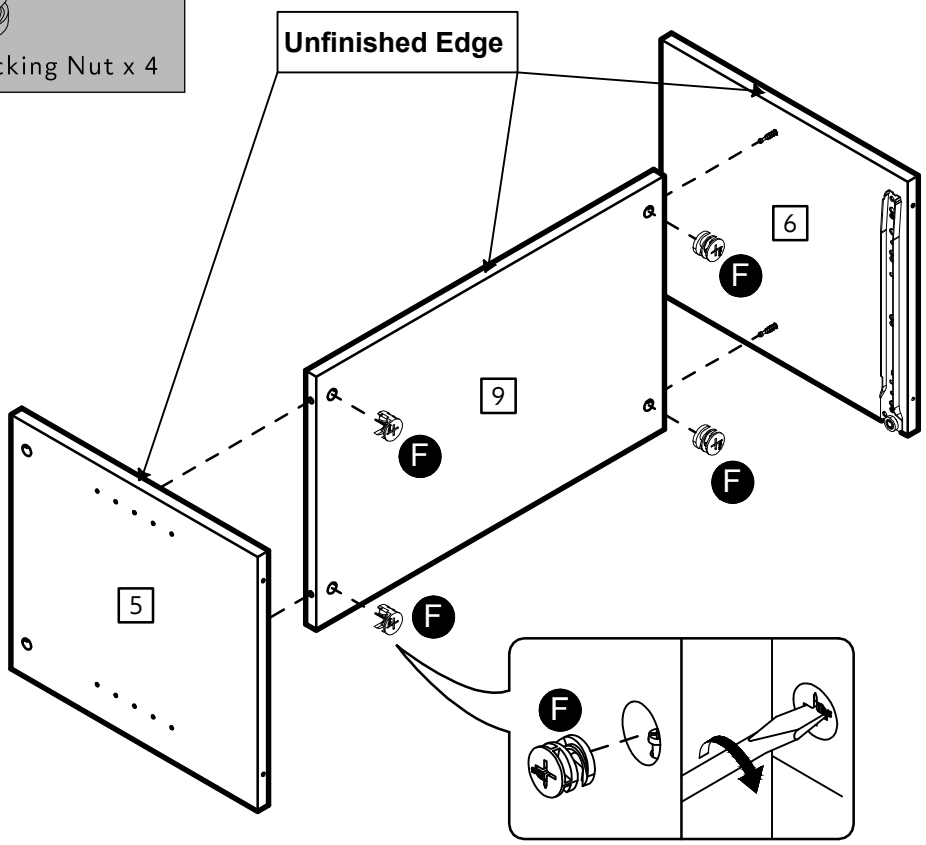


8


A




5 x 50mm Screw x 8

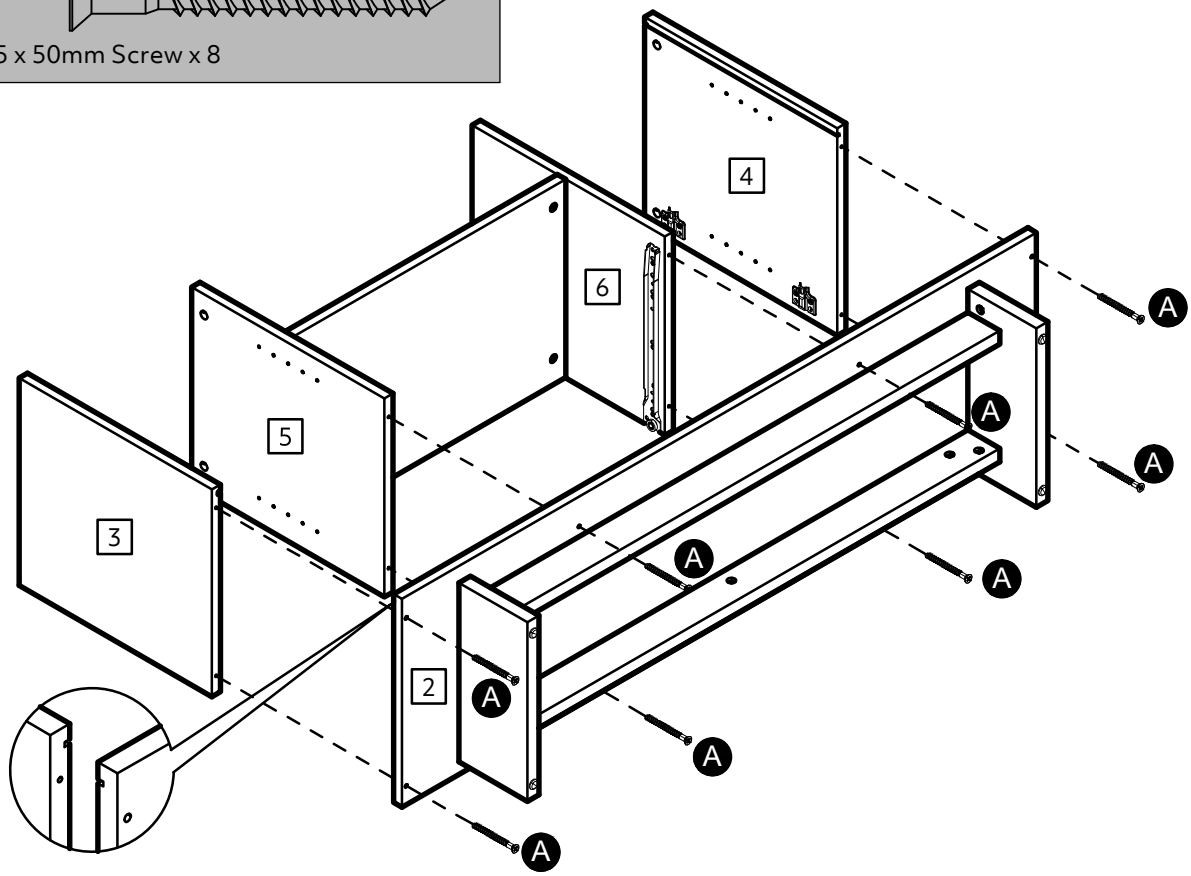


9

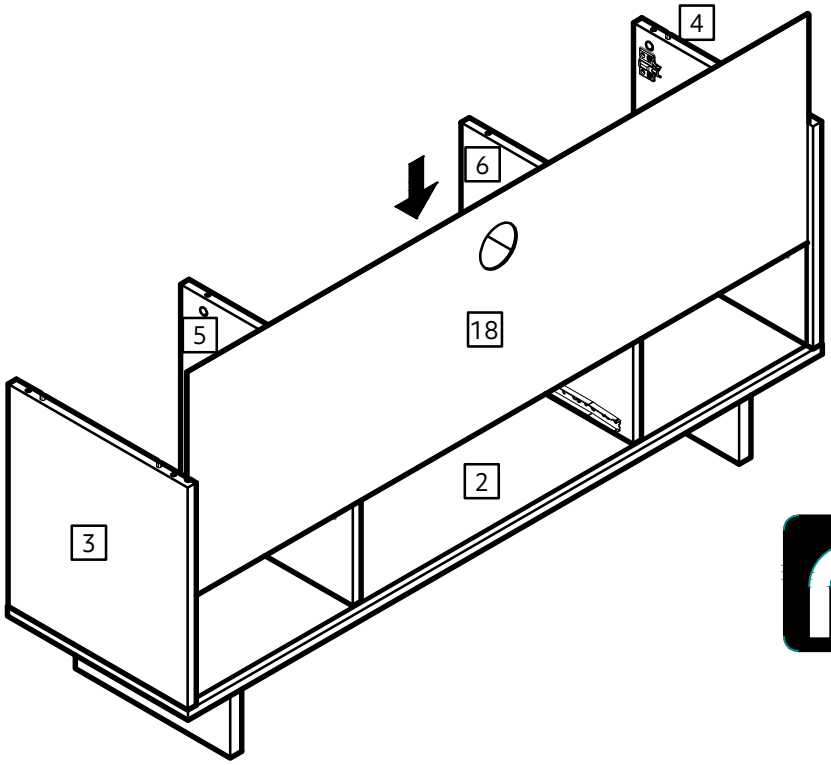

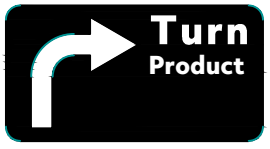


10

F




15 x 12mmLocking Nut x 8

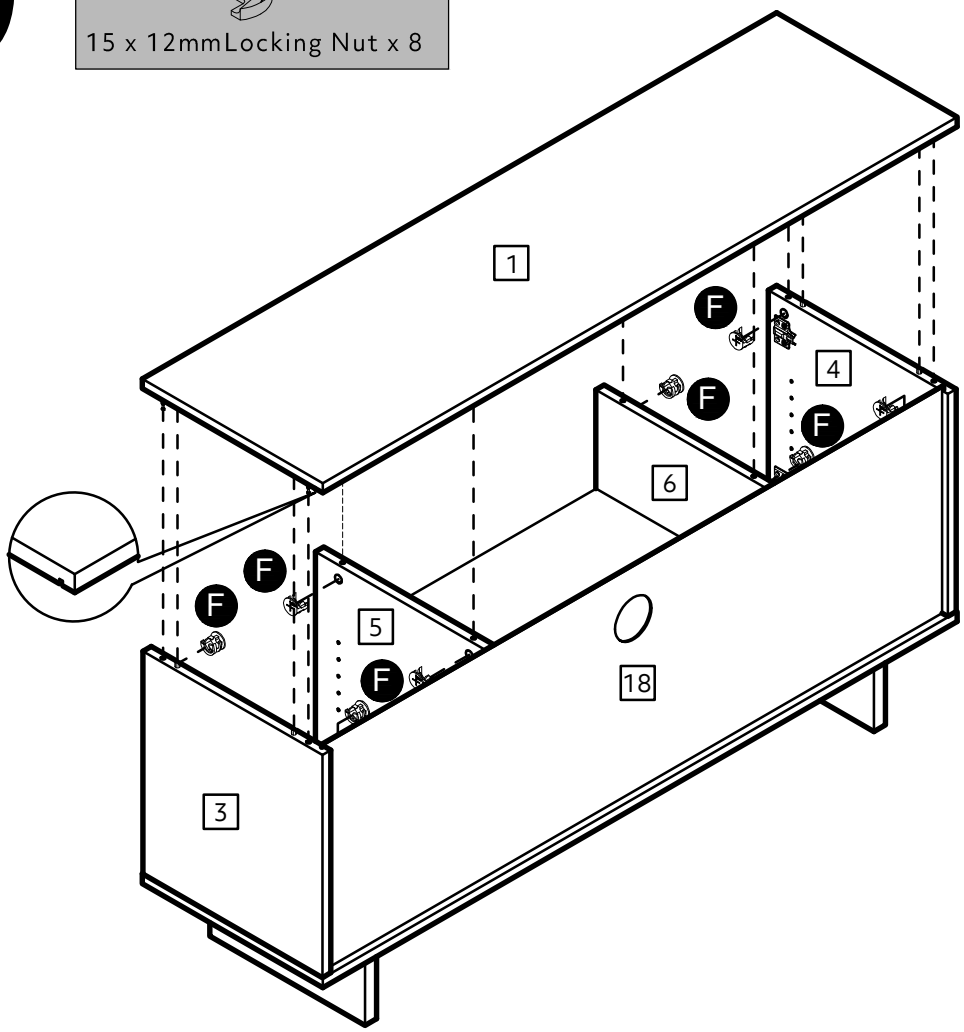


11

I



Bracket x 8

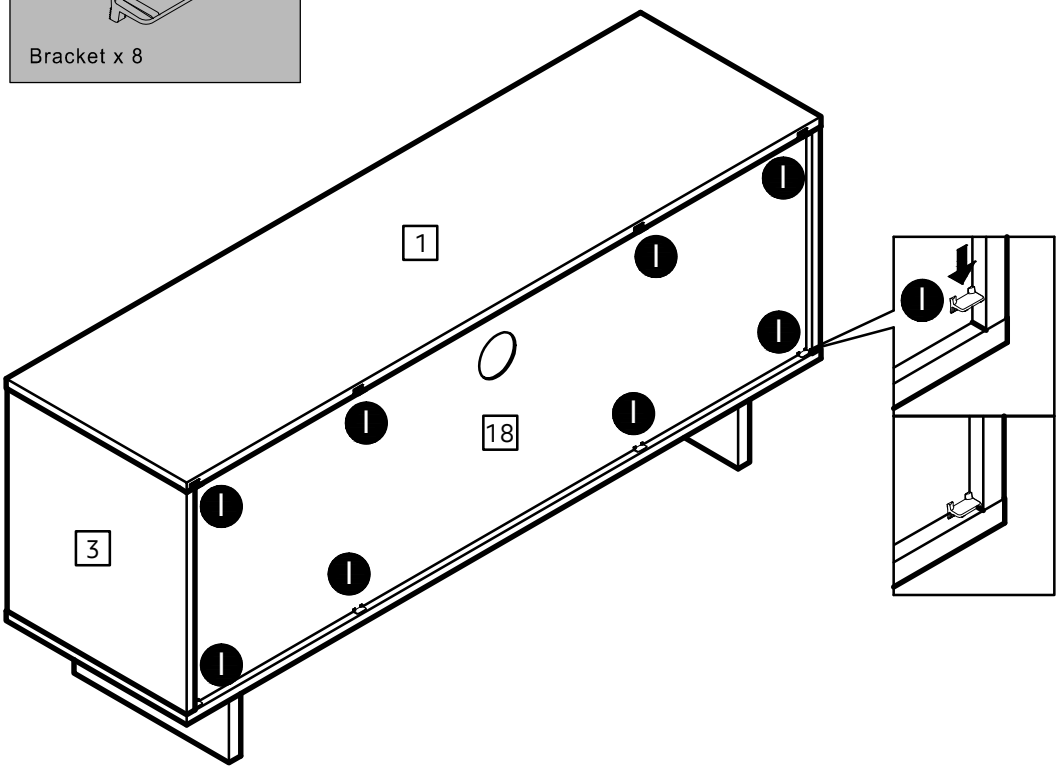


12

G

4 x 18 mm Shelf Support x 8

H


4 x 12mm Support Cover x 8

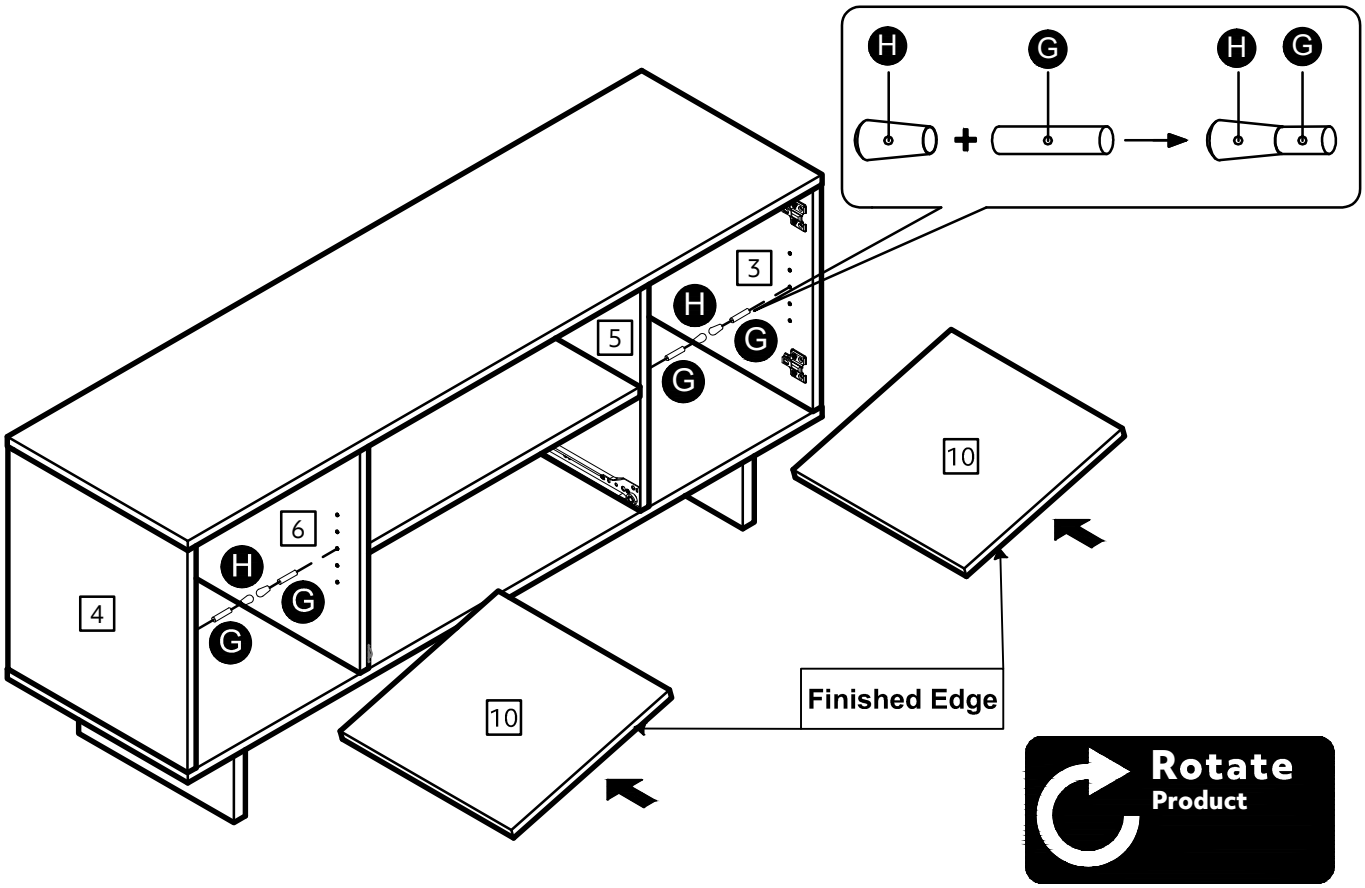


13

N


4 x 40mm Screw x 4

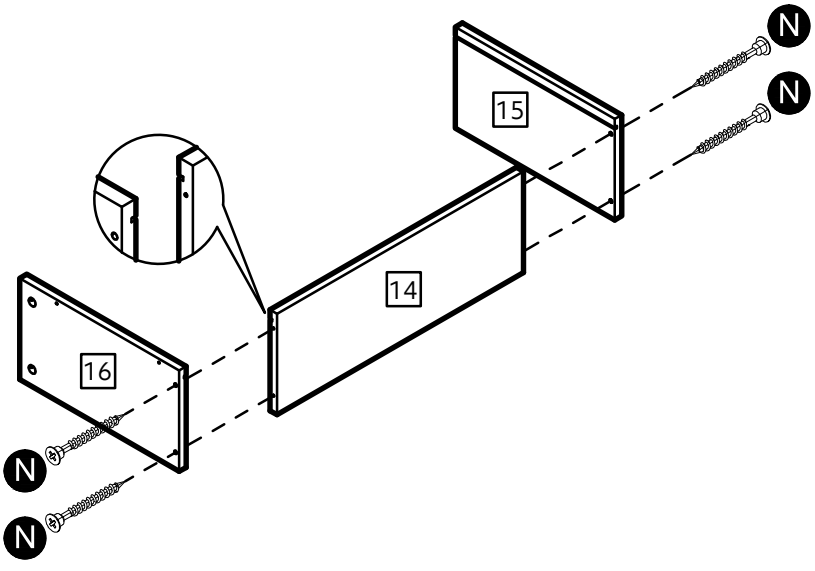


14

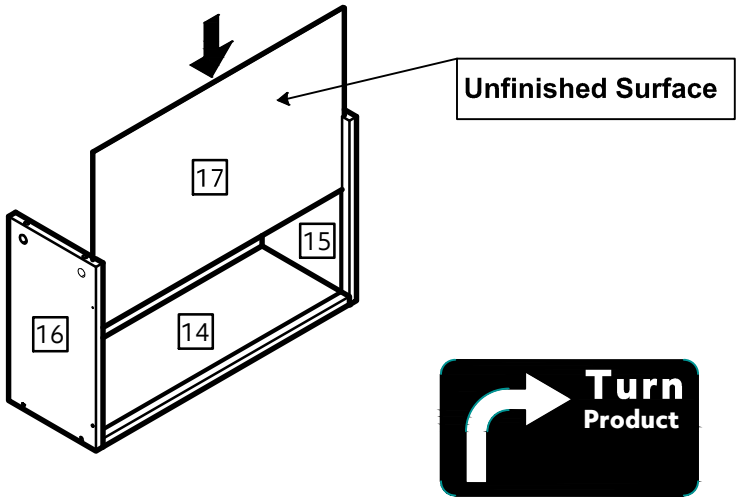
Unfinished Surface
17
15
16
14
Turn
Product


15

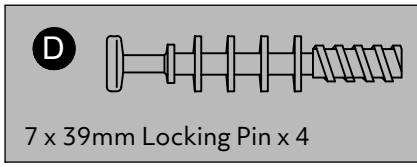
D
7 x 39mm Locking Pin x 4

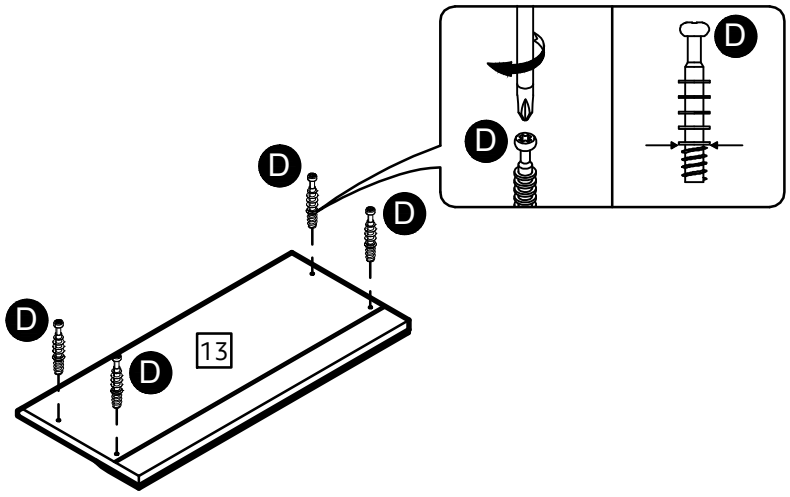

D
D
D
D
D
D
13

16

F



15 x 12mmLocking Nut x 4

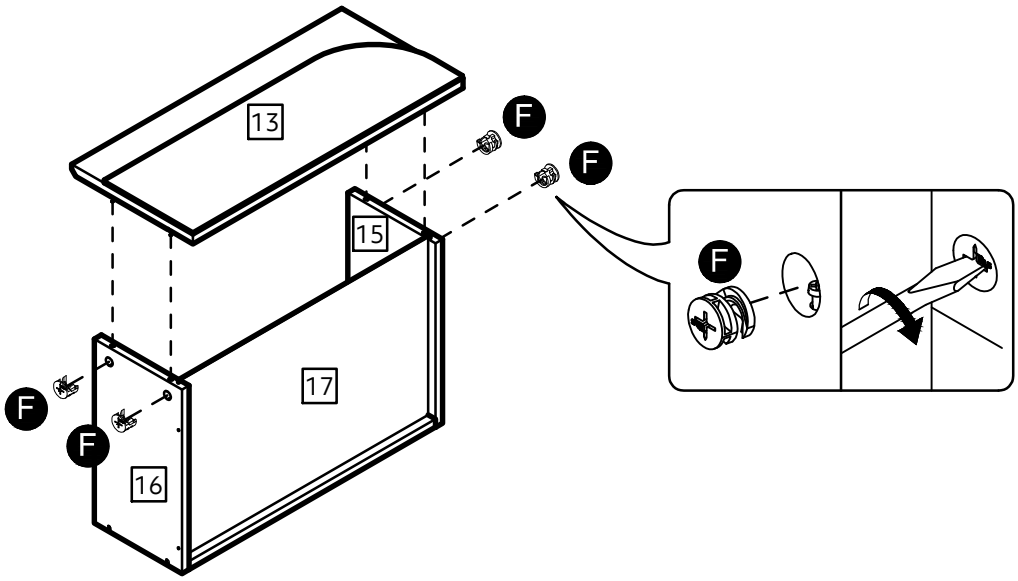

17

O




4.5 x 9 mm Screw x 4

T


350 Left Inside Runner x 1

U





350 Right Inside Runner x 1

I




Bracket x 2

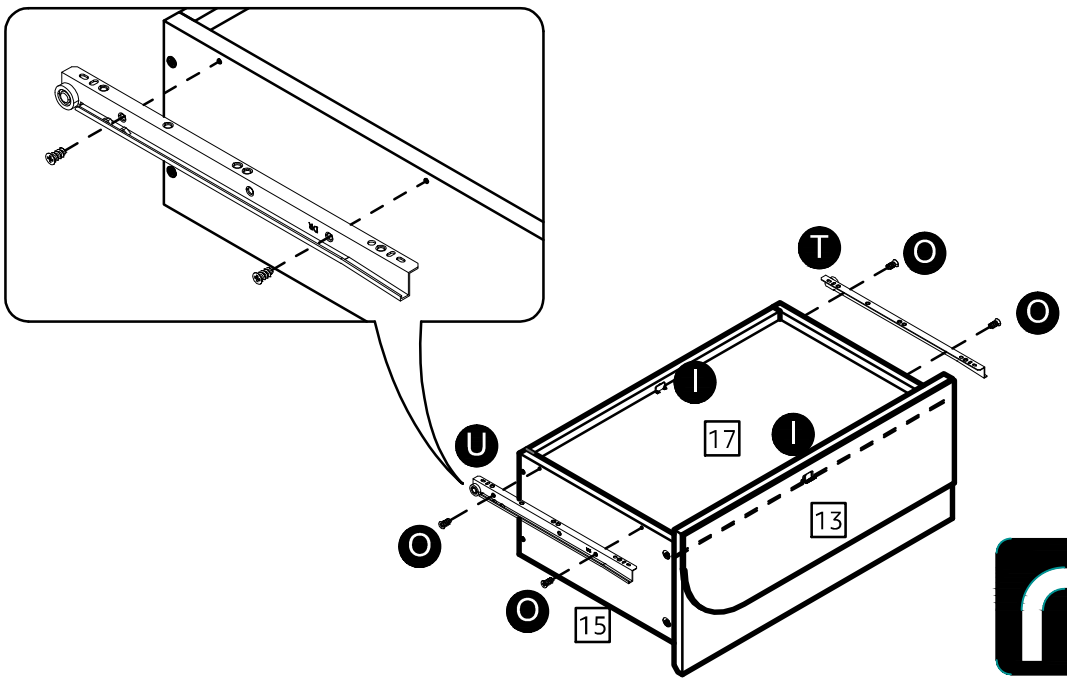


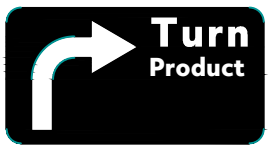


18

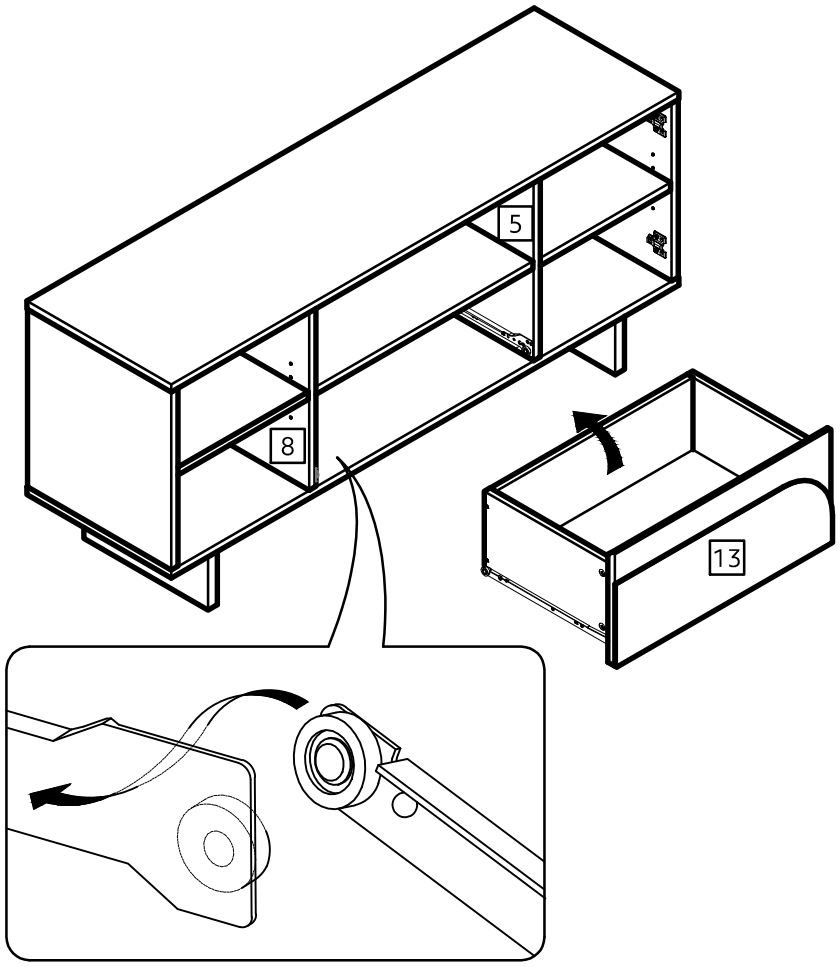

5
8
13

19

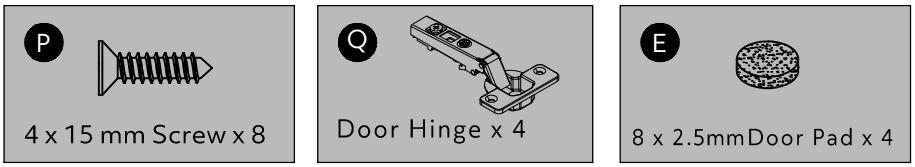
P
4 x 15 mm Screw x 8
Q
Door Hinge x 4
E
8 x 2.5mmDoor Pad x 4

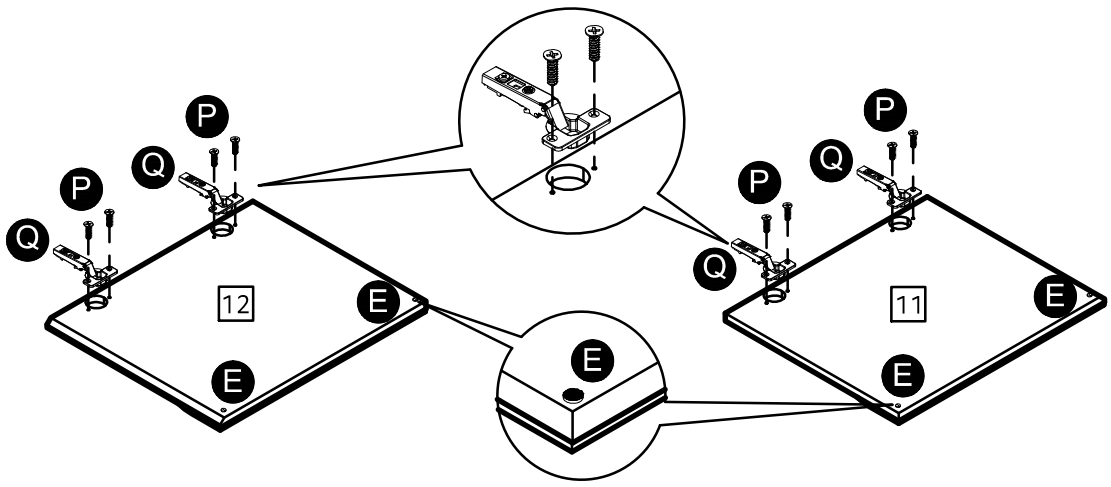

P
Q
P
Q
12
E
E
E
P
Q
P
Q
11
E
E

20

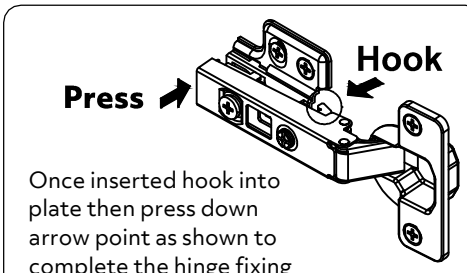


Once inserted hook into plate then press down arrow point as shown to complete the hinge fixing

A

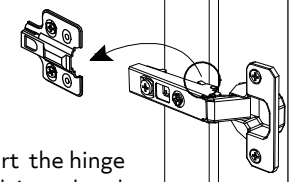

Insert the hinge hook into the plate


B

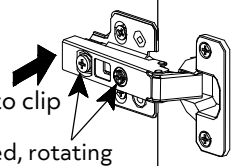


Press to clip

If needed, rotating screw clockwise if it is hard to insert

This step is only needed when you would disassemble the doors.

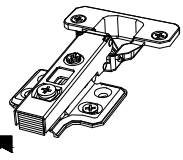


Press to Unclip

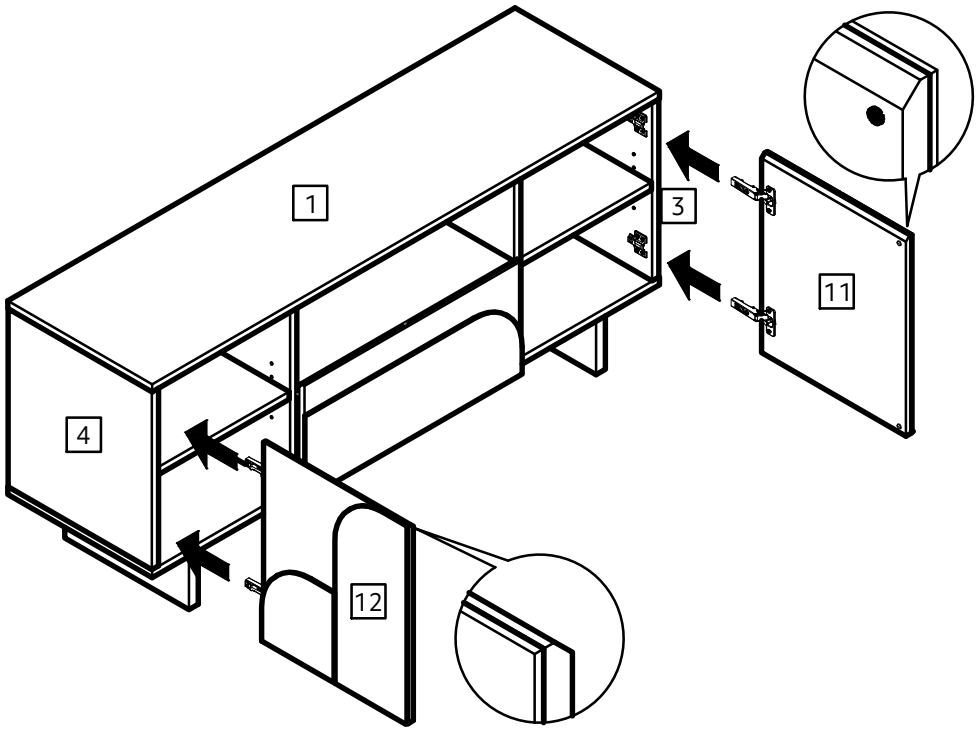

21

Hinges Adjustment

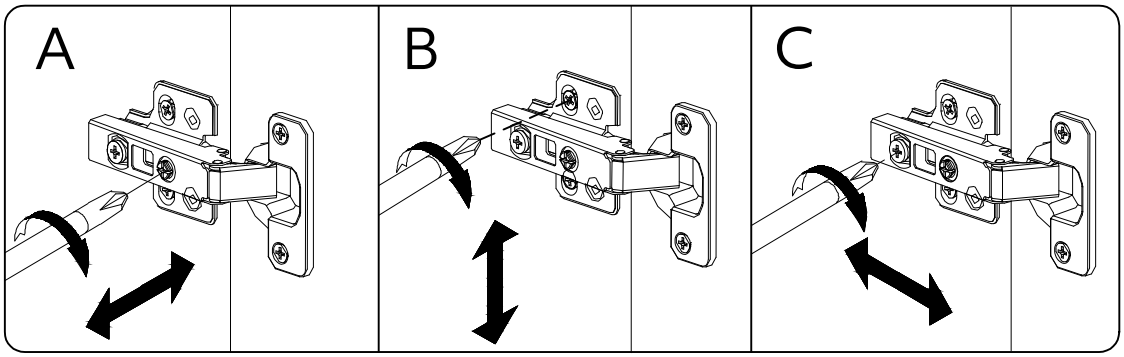


A. Side to side adjustment by clockwise or anticlockwise adjustment.

B. Up and down adjustment by adjusting mounting plate slot.


C. Front to back adjustment by rotating screw clockwise or anticlockwise.

NOTE

LOCK THE HINGE AFTER ADJUSTMENT!
IF NEEDED, ADD 2 SCREWS ON EACH MOUNTING PLATE TO STRENGTHEN IT (WITH SPARE SCREWS INCLUDED).

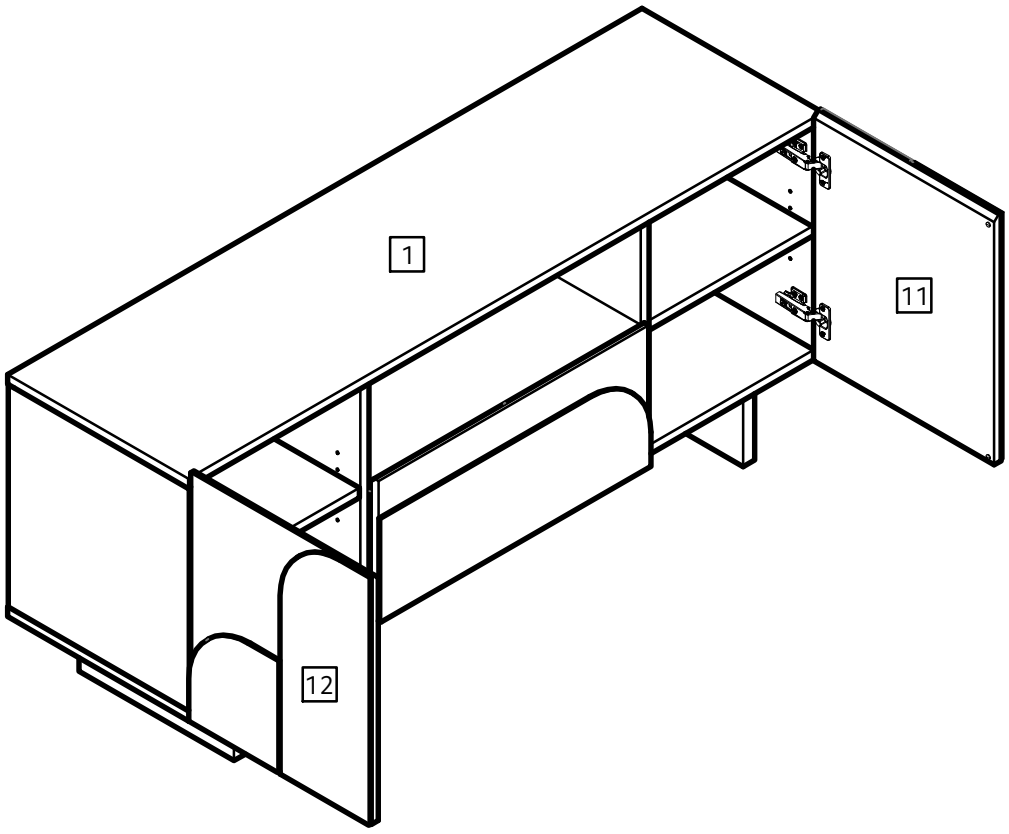

22

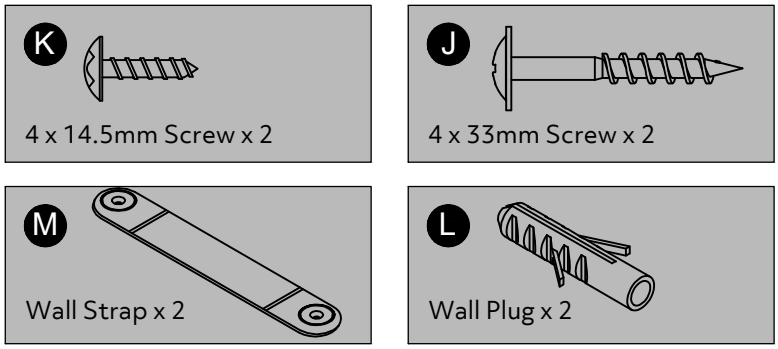


WARNING!

IN ORDER TO PREVENT OVERTURNING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED

NOTE

PLEASE REFER TO THE WALL MOUNTING & FIXINGS GUIDE FOR WALL FIXING.

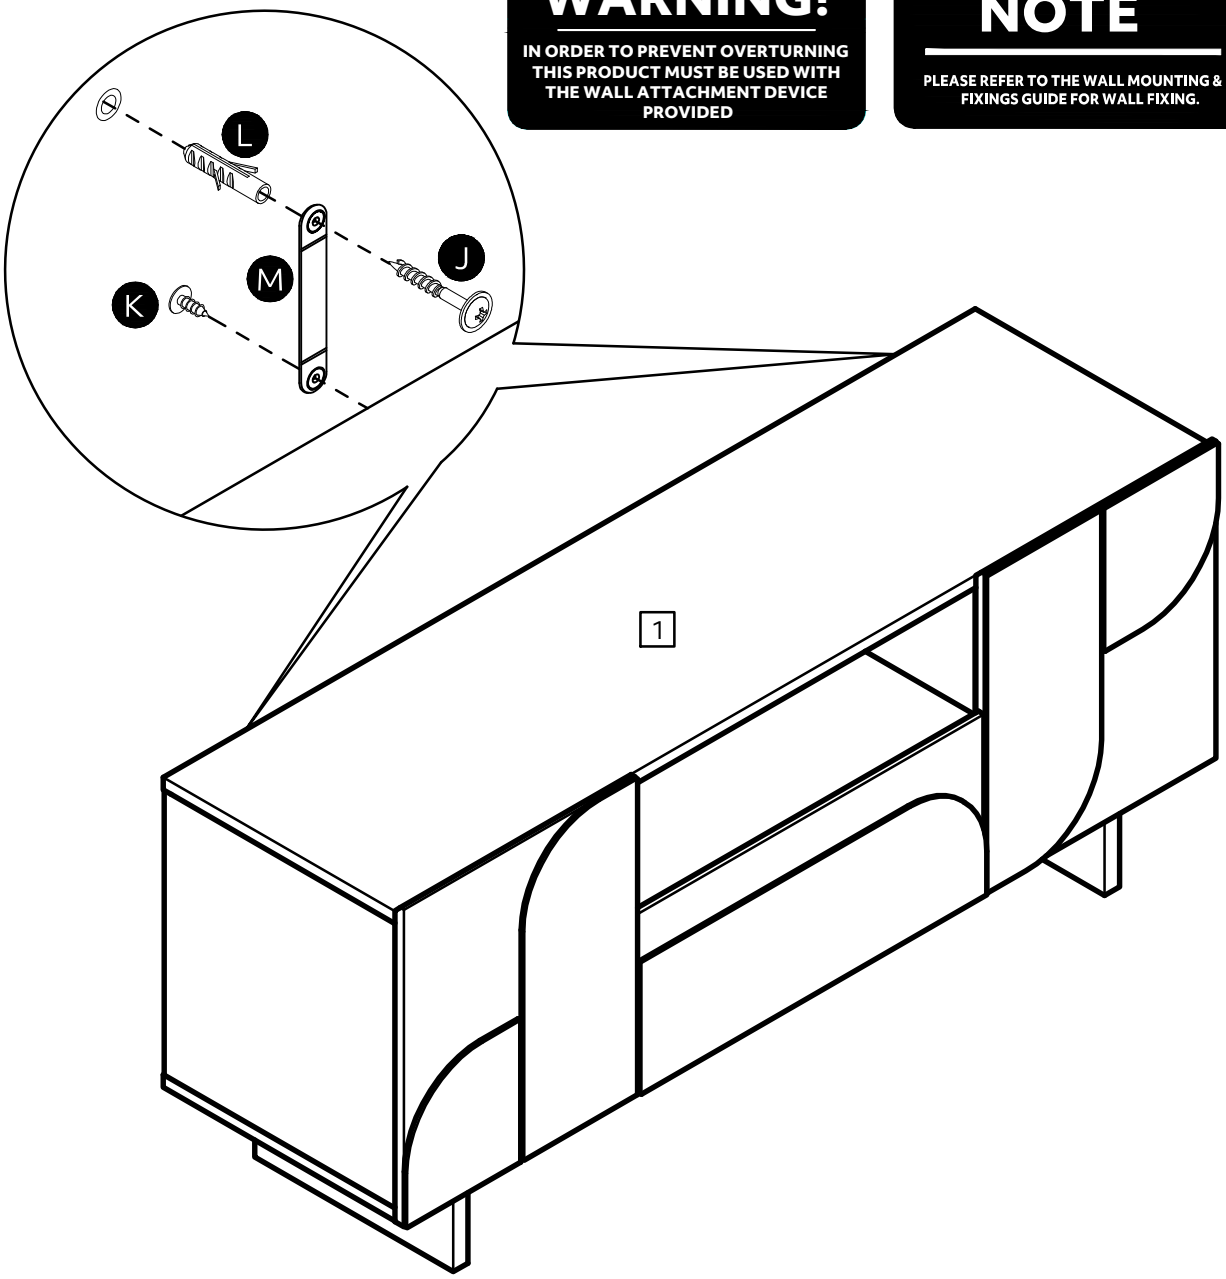

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: ⚠ Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

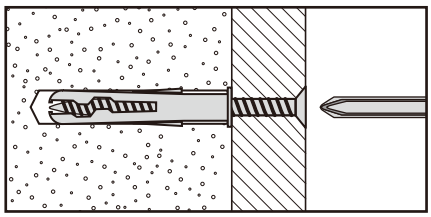


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

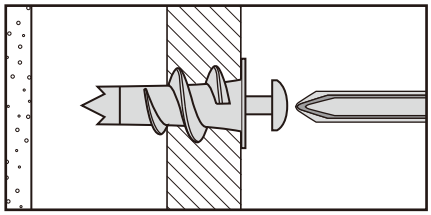


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

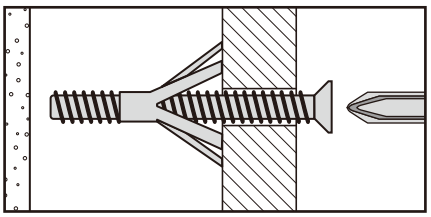


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

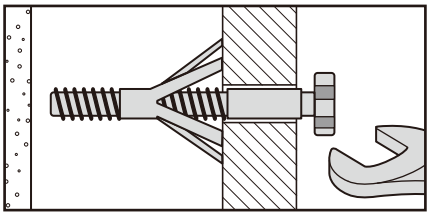


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

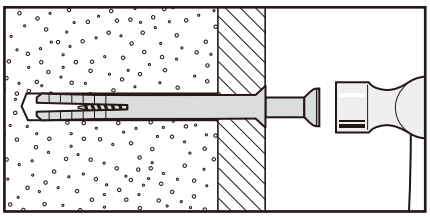

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

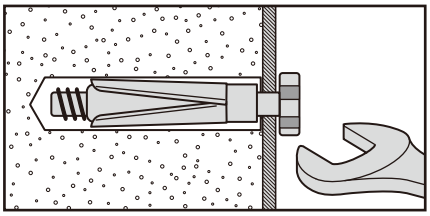

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.