BUSH

Instruction manual

Wireless Home Speaker

KBS-031



You'll soon be enjoying your new Wireless Home Speaker.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Wireless Home Speaker. Should you require any guidance, a simple solution can often be found online at:

www.bush-support.com

If you still require further assistance, call one of our experts on **0345 604 0105**

Contents

1 Safety information

Power source 4
Moisture and water 4
Heat sources and flames 4
Ventilation 5
Positioning the Wireless Home Speaker 5
General safety information 6

2 Using your Wireless Home Speaker


What's included 8
Features 8
Component Identifications 8
Charging/Pairing/Hands-free speakerphone 9
Understanding the LED Status Lights 10

3 Other Information

Technical Specification 12

4 Product Support 14-17

1 Safety information

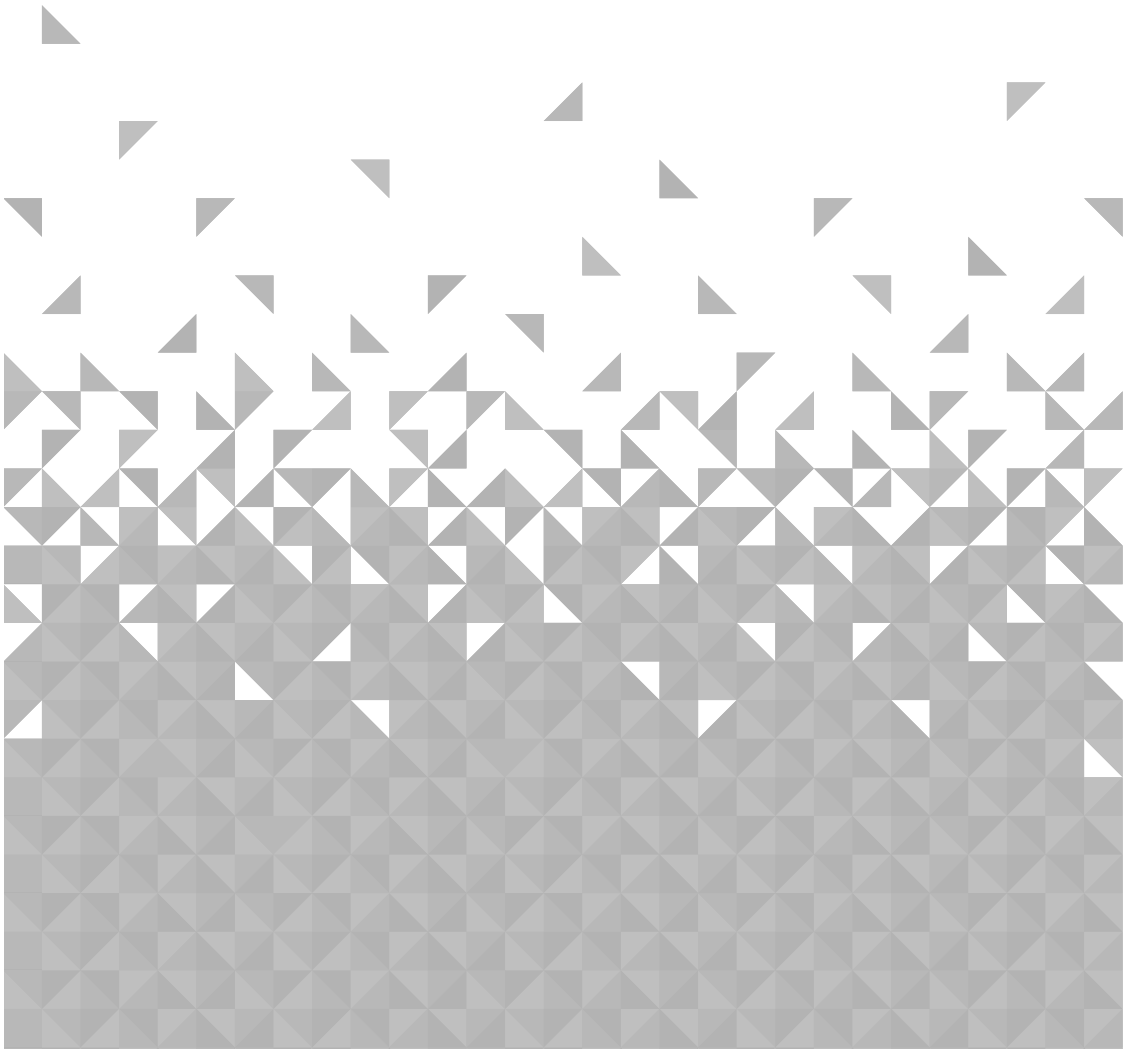

Safety information

Important - Please read these instructions fully before installing or operating

Please take the time to follow the instructions in this owner's guide carefully.
It will help you set up and operate your system properly and enjoy all of its advanced features.
Please save this owner's guide for future reference.
The product label is located at the bottom of the product.

Do not use this apparatus near water or moisture.
Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.
Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.
Do not store in dusty or dirty areas.
Servicing is required when the apparatus has been damaged in any way:
such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorized handling of the device may damage it and will void your warranty.



Warning: To prevent possible hearing damage, do not listen at high volume for long periods.

Safety information

Important - Please read these instructions fully before installing or operating

General safety information

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Using your Wireless Home Speaker 2


Using your Wireless Home Speaker

WHAT'S INCLUDED:

1.Wireless Home speaker
2.USB to Micro USB cable
3.Instruction Manual


FEATURES:


- Hands-free calling
- Operating distance up to 9.1m(30ft)
- Playing time: 4-5 hours

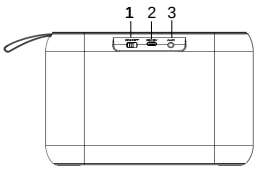

COMPONENT IDENTIFICATION:

1. ON/OFF switch
2. Micro USB port
3. 3.5mm AUX in jack
4. Volume down
5. Volume up
6. Play/Pause/Hands-free control
7. Previous song
8. Next song
9. Microphone
10. LED indicator



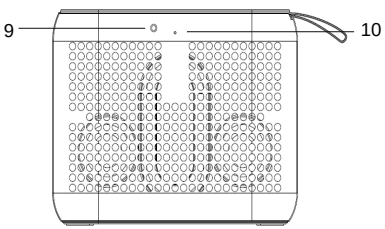

Using your Wireless Home Speaker

PRODUCT OVERVIEW

You can use this item with any compatible, Bluetooth®-enabled device to stream music and enjoy hands-free calling. In order to get the best results when using this device, please read this manual first before using.

CHARGING

Use the included charging cable to fully charge the speaker before first use. It will take approximately 4-4.5 hours to fully charge. The red LED will flash when the battery is low and the speaker will automatically turn OFF when the battery has to be recharged.

- The red LED will be ON while the speaker is charging
- The red LED will turn OFF once charging is complete
- When the battery is low, the red LED will flash every two seconds
- Unplug the speaker once it is fully charged

NOTE: The speaker may become warm while charging.

PAIRING

1. Place the speaker within 9.1m (30ft.) of your Bluetooth® device.
2. Slide the ON/OFF switch to turn the speaker ON. The blue LED will flash quickly to indicate it is in Bluetooth®-pairing mode.
3. Turn the Bluetooth® ON in your device settings and select “HR CURVE”, enter password “0000”.
4. Once paired successfully, the LED indicator will turn solid blue.
5. If you fail to pair your device, or you want to pair it with a new device, please repeat the steps outlined above.

NOTE: If no device is paired within 10 minutes the speaker will turn OFF.

HANDS-FREE SPEAKERPHONE

When a smartphone is connected to your speaker follow the steps below to take calls handsfree.

1. If there is an incoming call while music is streaming, it will stop and your phone will ring through the speaker.
2. Press the ⏯ button to answer the call.
3. Press the ⏯ button again to hang up the call.

Using your Wireless Home Speaker

UNDERSTANDING THE LED STATUS LIGHTS

- **When charging your speaker**
  - o Solid red LED=charging
  - o Red LED OFF=charging complete
- **When pairing your speaker to a Bluetooth® device**
  - o Quick blinking blue LED=Bluetooth® not connected, ready to pair
  - o Solid blue LED=Bluetooth® connected and not playing
  - o Blue LED blinking slowly=Bluetooth® connected and playing
- When Playing throught AUX in
  - o Solid blue LED=connected and playing

3 Other information

Other information

Helpful technical information

TECHNICAL SPECIFICATIONS

Pairing name:	BUSH KBS-031
Bluetooht® Version:	Bluetooth® V3.0
Audio Output:	3W RMS
Micro USB port Input:	5V DC 500mA
Battery Type:	Li-ion Battery 18650 3.7V
Battery Capacity:	2000mAh
Battery Playing time:	4-5hours
Battery Charge Time:	4-4.5hours
Distortion:	<1%
S/N:	>70dB
Frequency Response:	50Hz-18KHz
Operation Distance:	Up to 9.1m(30ft.)
Size:	72x63.4x127.7mm
Weight:	535g

NOTE: This speaker is in compliance with the specified Bluetooth® version. It does NOT guarantee compatibility with all the functions on every Bluetooth® enabled device. Please check your smartphone's user manual for compatibility and functionality.

4 Product support

Product support

Help is always at hand

TROUBLESHOOTING

No Sound:

- Power ON the speaker and charge the battery
- Increase the volume on your speaker and Bluetooth® device
- Make sure you are using the correct paired device
- Move your Bluetooth® device closer to the speaker and away from any interference or obstructions
- Use a different music source

Distorted sound:

- Decrease the volume on your speaker and Bluetooth® device

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

WARNINGS

- DO NOT immerse in water
- DO NOT expose to extreme temperatures or direct sunlight
- DO NOT use in an aircraft or in a hospital
- DO NOT re-engineer or operate with any other antenna or transmitter
- Protect from excessive static electricity
- Handle with care

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your FM Alarm Clock Radio is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.bush-support.com**

If you still require further assistance, call one of our experts on **0345 604 0105***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.		You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear or base of your product.
Serial number		
Date of purchase		This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and
10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Product support

Help is always at hand

Disposal



- This product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing

CE Declaration of Conformance

Hereby, Argos Ltd, declares that this Wireless Home Speaker is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting www.bush-support.com

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG,Inc. and any use of such marks by Sainsburys Argos is under license.Other trademarks and trade names are those of their respective owners.

Product support

Help is always at hand

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General insurance Plc use your data

Please refer to the guarantee registration material or visit www.bushregistrations.co.uk

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

BUSH

Contact:

www.bush-support.com

Helpline: 0345 604 0105
Made in China

Imported for Argos Ltd, Milton Keynes, MK9 2NW

Guarantor: Argos Limited, 489-499 Avebury Blvd. Milton Keynes, MK9 2NW

All other brand names are registered trademarks of their respective owners.