
Bookcase White

Assembly Instructions - Please keep for future reference

8146643

THE COLLECTION BY ARGOS

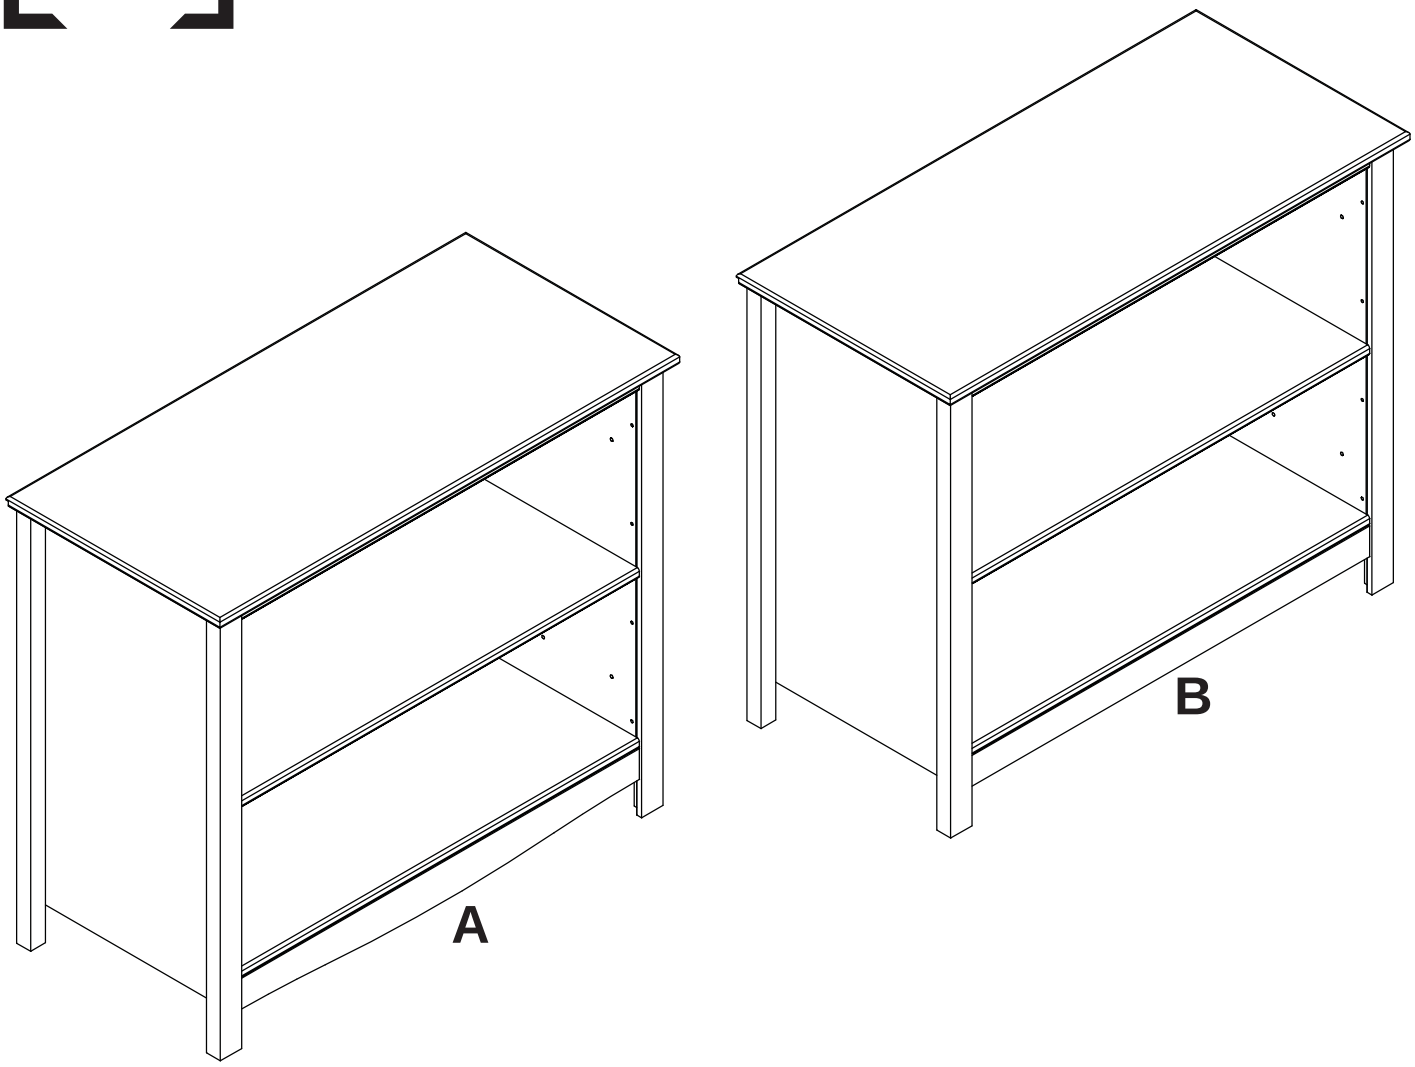

Dimensions

Length - 86cm
Depth - 40cm
Height - 73cm
Weight - 20,3kg

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
0045 7668 8055 or e-mail: order@flexa.dk

Issue 2 - 21/12/17

⚠ Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• During assembly children should be kept away from the product due to possible risk of injury.

• Make sure you have enough space to layout the parts before starting.

•This product is suitable for children in the age range 3 to adult

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• Do not use this item if any components are missing or damaged



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

• Assembly to be carried out by a competent adult only.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• Regularly check all fastenings to ensure that they properly tightened.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

• This product is suitable for children in the age 4-12 years. Maximum load on bookcase 30 kg. Maximum load on shelf 7 kg.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 0045 7668 8055**


Please check you have all the parts listed below

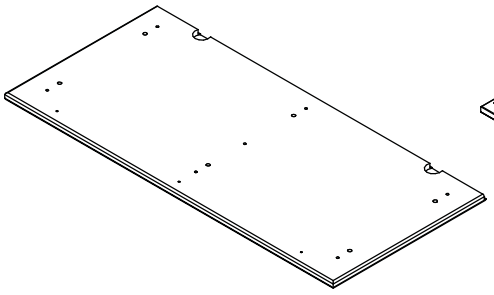


1 Top x1
(86.0x40.0x1.6cm)
No. 4301-1608603-40

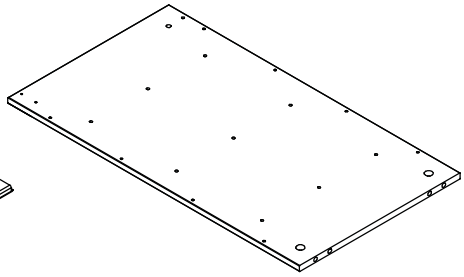


2 Side panel Right x1
(65.4x36.1x1.2cm)
No. 4301-1206543-40

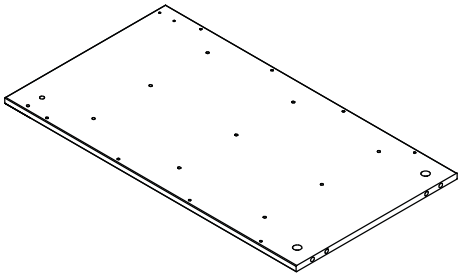


3 Side panel Left x1
(65.4x36.1x1.2cm)
No. 4301-1206544-40

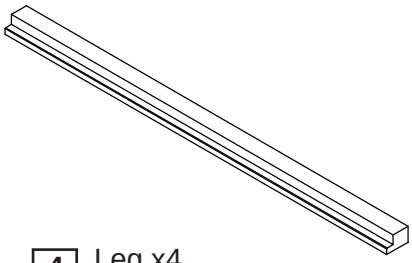


4 Leg x4
(71.4x4.0x2.6cm)
No. 12-02607141-20

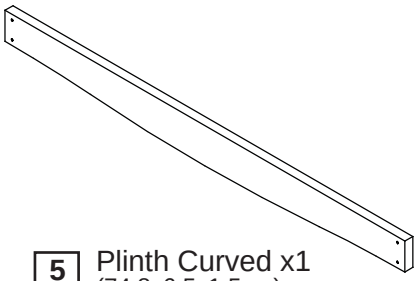


5 Plinth Curved x1
(74.8x6.5x1.5cm)
No. 12-01507481-20

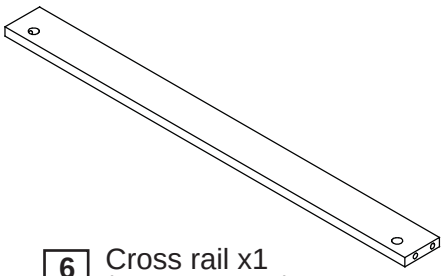


6 Cross rail x1
(74.8x6.5x1.5cm)
No. 12-01507482

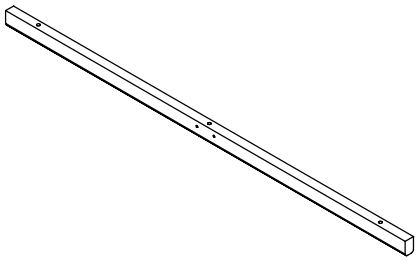


7 List x1
(74.8x2.5x1.5cm)
No. 12-01507483-20

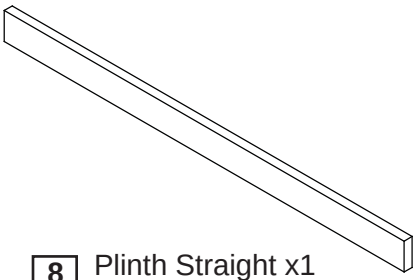

8 Plinth Straight x1
(74.8x5.0x1.5cm)
No. 12-01507484-40

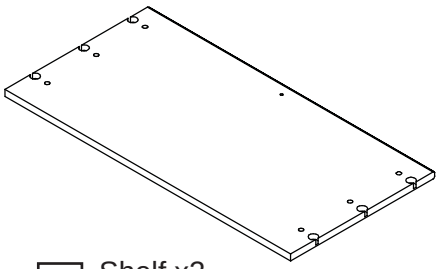

9 Shelf x2
(74.8x37.7x1.6cm)
No. 4301-1607483-40








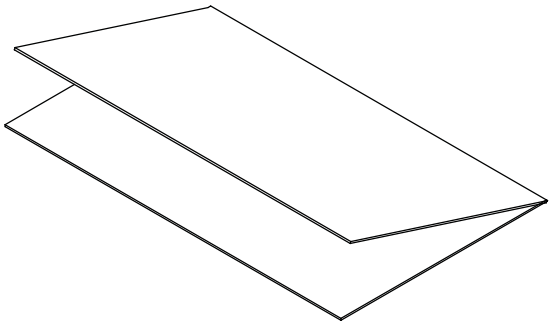


10 Back panel x1
(62.8x77.2x0.3cm)
No. 4309-030628

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

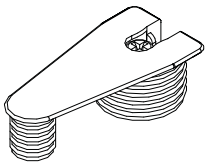
A No. 4020-007  7x34mm for ø5 Minifix bolt x6	**B** No. 3933-15010  ø15x9.5mm Minifix cam x6	**C** No. 3903-40030  4.0x30mm Chipboard screw x16
D No. 3933-20013-2  ø20x12mm Rafix house x6	**E** No. 4020-015  ø6x11mm Rafix bolt x6	**F** No. 4022-004 1.6x16mm Nail square x24
	G No. 4008-112  44x23x23 Angle x2	**H** No. 3930-08030  8x30mm Dowel x6
i No. 3901-35035  3.5x35mm Chipboard screw x3	**J** No. 3901-40013  4.0x13mm Chipboard screw x1	**K** No. 3907-63011  ø6.3x11mm Euro screw x1
L No. 41-00179  Overbalance protector x2	**M** No. 3907-42010  ø4.2x9.5mm Euro screw x8	**N** No. 4008-021  20x20x16mm Angle x1


Tools required

Phillips screwdriver (medium)


Flatblade screwdriver (medium)

Allen key 4mm incl.
No. 4033-004

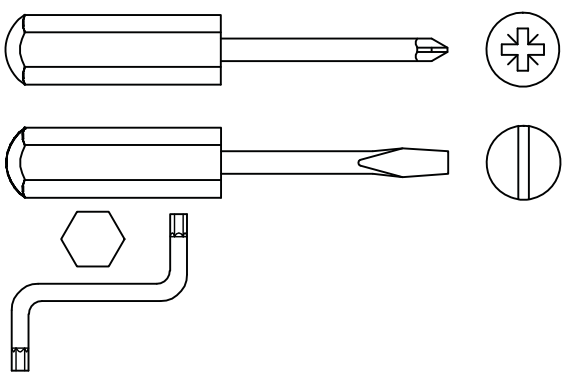


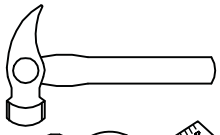

Small hammer

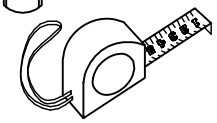

Ruler/tape measure

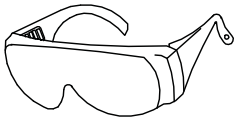

Eye protection (when using a hammer or glue)


Assembly Instructions

Step 1

Insert the dowels H into the holes in cross rail 6.

It may be necessary to tap the dowels in very gently with a small hammer.


Attach minifix bolts A to top panel 1.

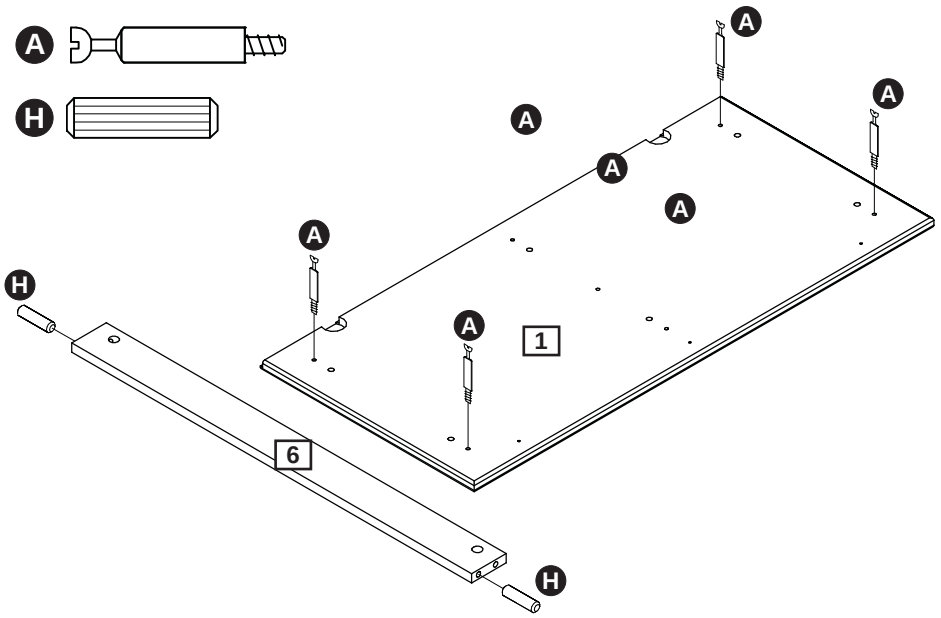

Step 2

Attach the side panels 2 and 3 to the legs 4 using screws C.

Make sure the top of the side panel is flush with the legs and there are no gaps between the side panel and the edge of the groove in the legs.

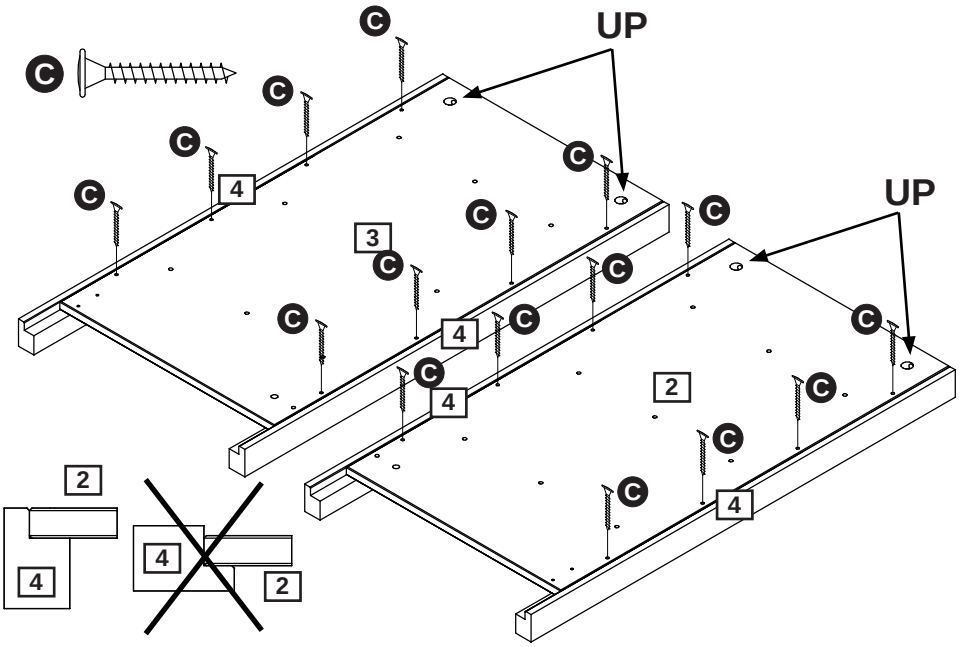


Assembly Instructions

Step 3

Insert the dowels H to the holes in the side panels 2 and 3.


Attach minifix bolts A to the side panels 2 and 3.

Attach rafix bolts E to the side panels 2 and 3.

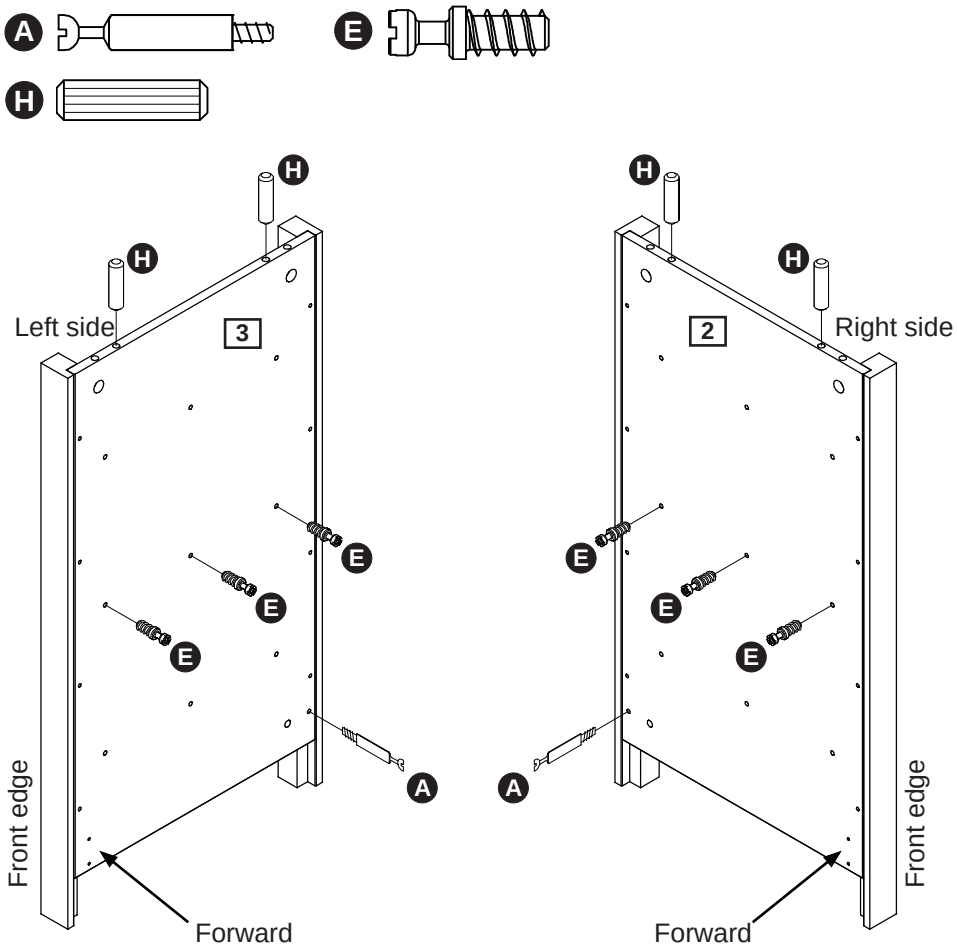

Step 4

Attach the cross rail 6 to the side panels 2 and 3 with the minifix cams B.

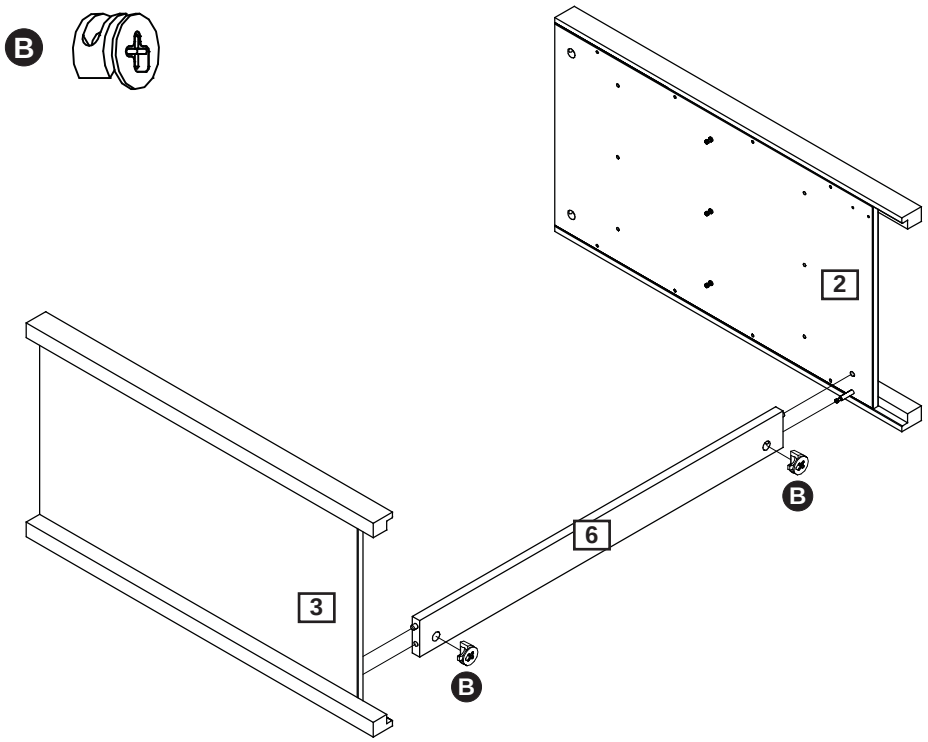


Assembly Instructions

Step 5


Attach angles G to the plinth 5 or 8 using screws M.

Attach plinth 5 or 8 to side panels 2 and 3 using screws M.

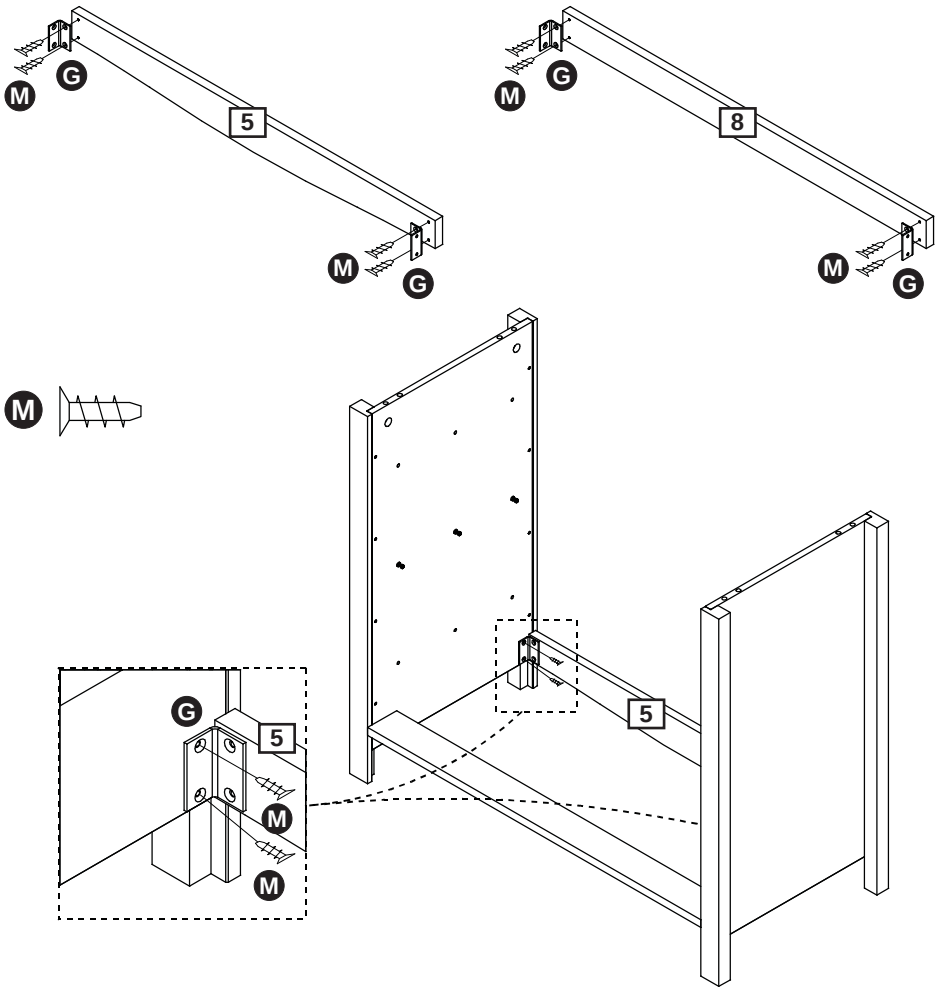

Step 6

Attach the top 1 to the side panels 2 and 3 with the minifix cams B.

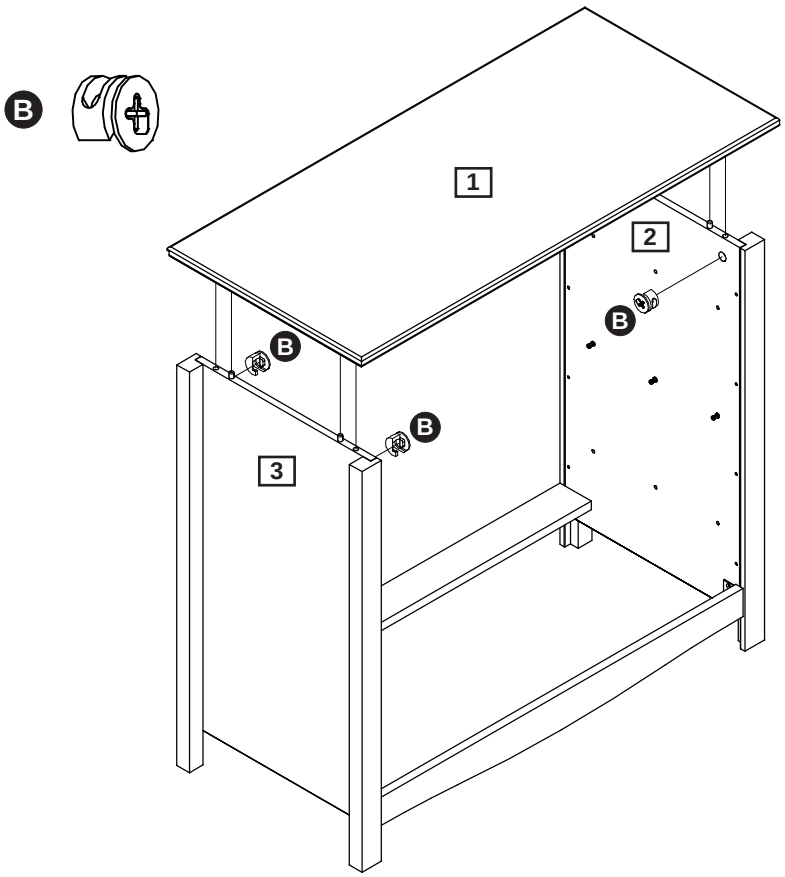


Assembly Instructions

Step 7

Fasten the list 7 to the top panel using screws i, placing the screws into the marking holes in top 1.


Don't overtighten.

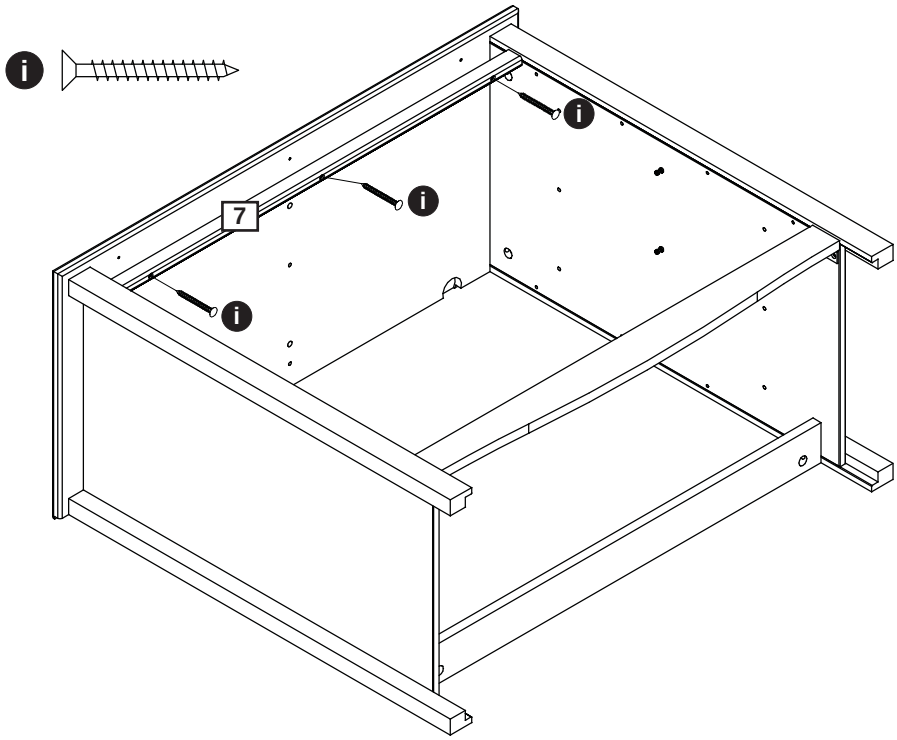

Step 8

Attach the back panel 10 with nails F to the back side of the chest.


Nail the back panel 10 to the carcass, ensuring that there are NO GAPS between the top 1 and the back panel 10. Follow the measurements.

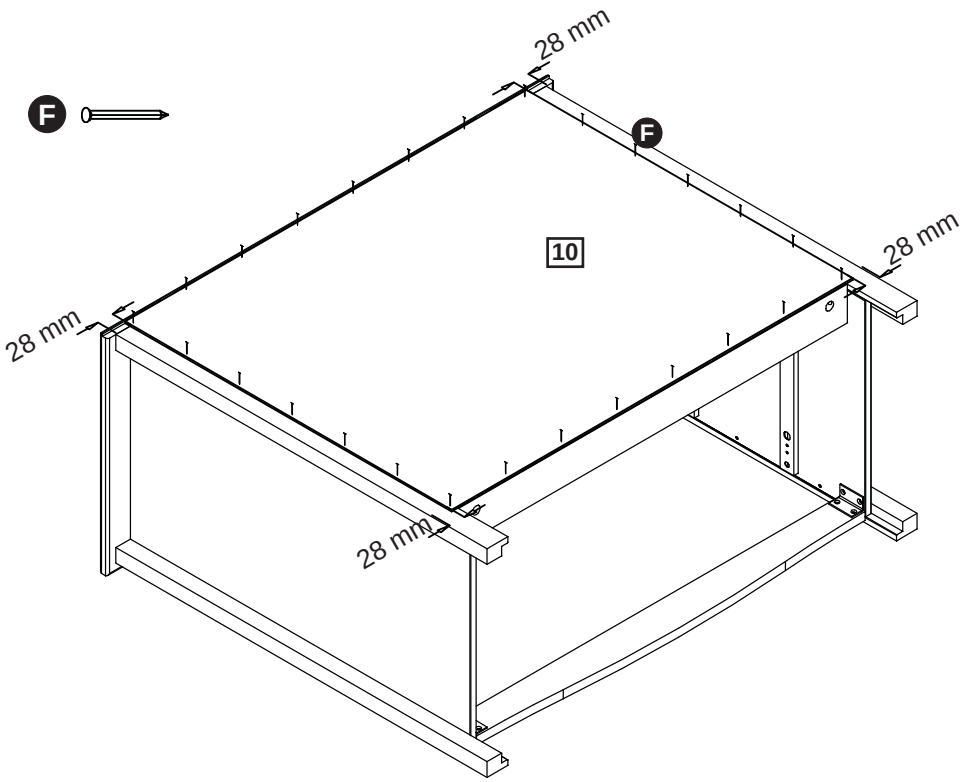

Assembly Instructions


Step 9

Place the shelf [9] between the sides so that the back of the shelf [9] is against the back panel [10]. Make sure the base [9] is resting on the cross rail [6] and plinth [5] . Attach the base to the plinth using the angle (N) and screws (J) and (K).

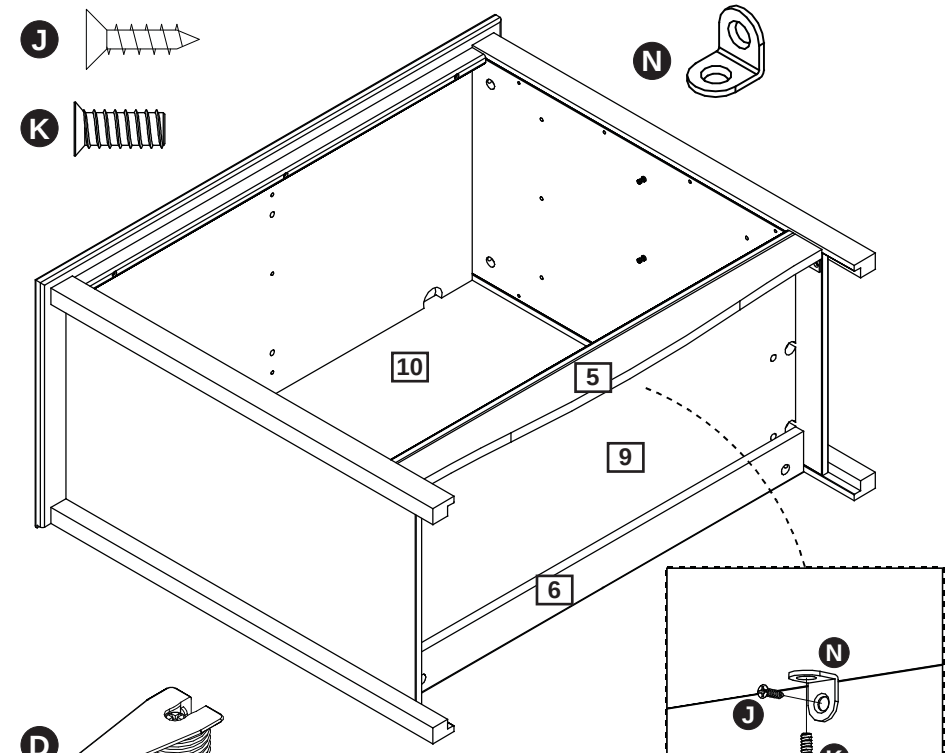


Step 10

Insert rafix houses (D) into the holes in the shelf [9].

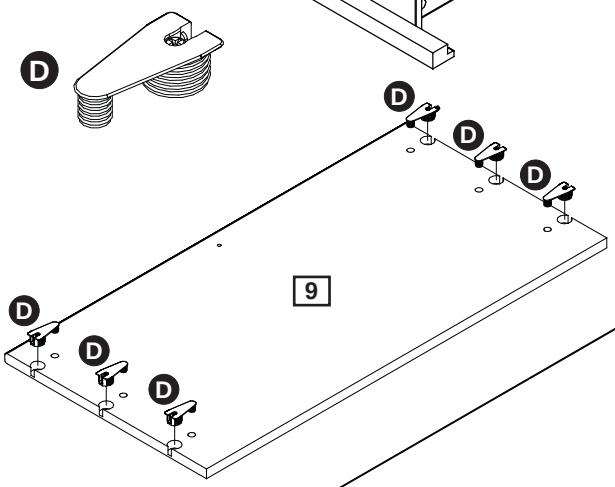

Step 11

Place the shelf [9] into the bookcase and secure it by fastening the rafix house using a screwdriver.

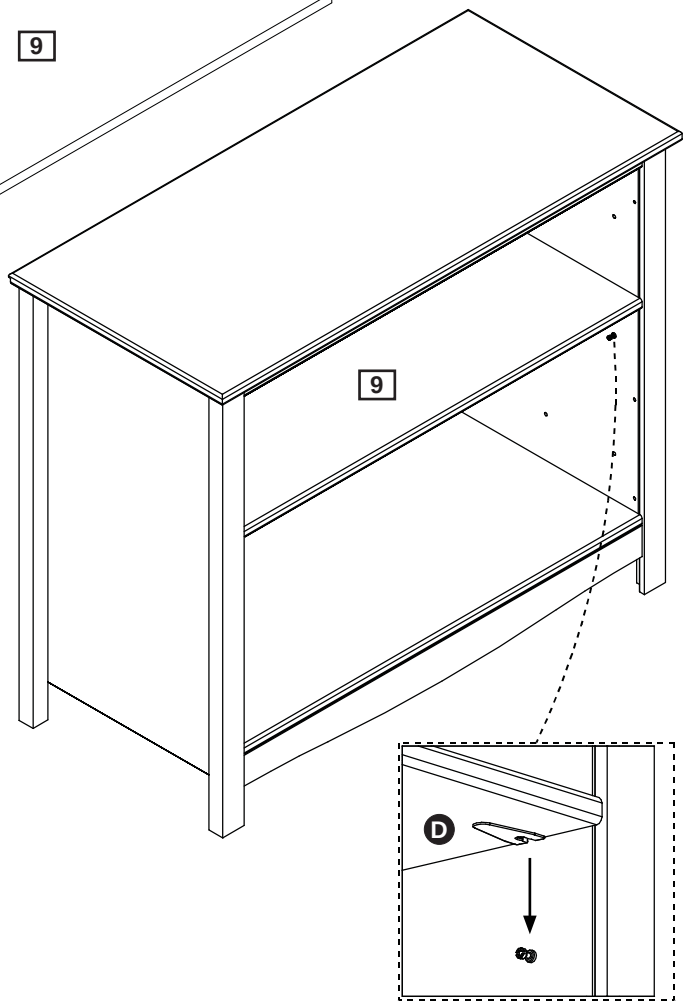


Assembly Instructions

Step 12

Measure out the positions for the wall attachment straps. Drill two holes spaced as illustrated with the appropriate size for the wall attachment fitting (see next step).

Pull the two straps through the gaps in top plate 1 .Push the furniture against the wall and secure the strap under the top plate with washer and screw.

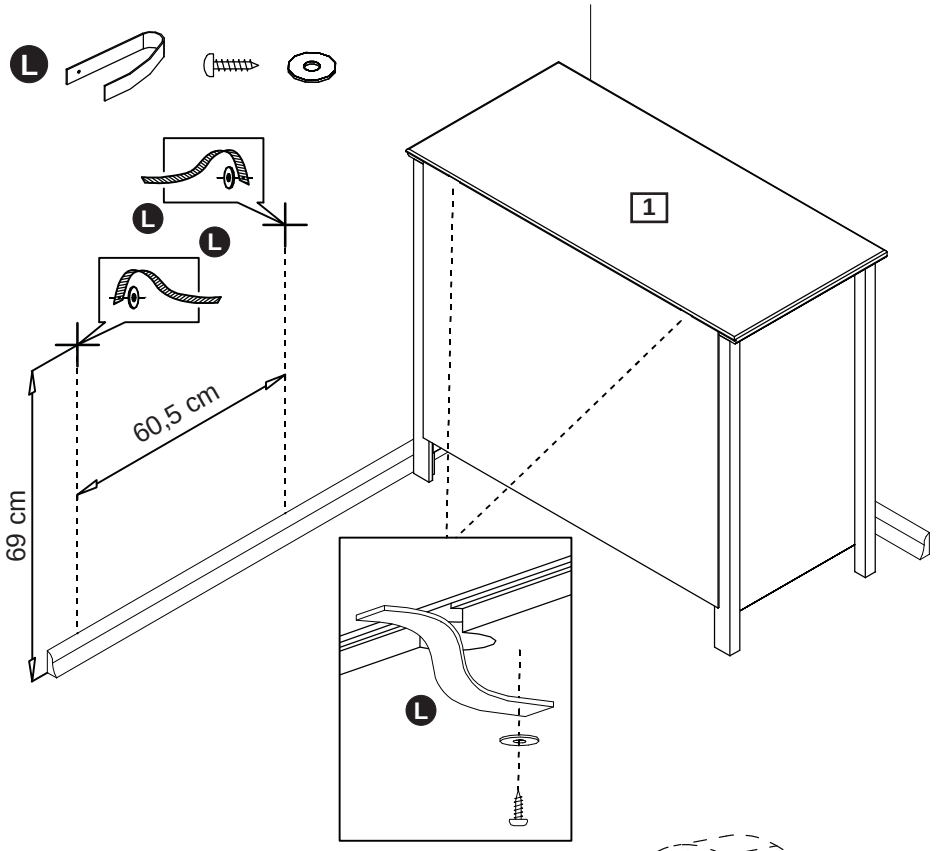


Step 12b


Different types of wall fittings. Contact your local DIY or hardware store for the wall plugs and screws.

Assembly is complete.


Concrete/Brick wall

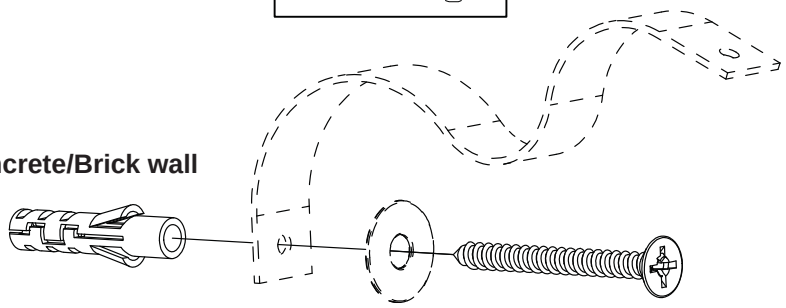

Plaster wall

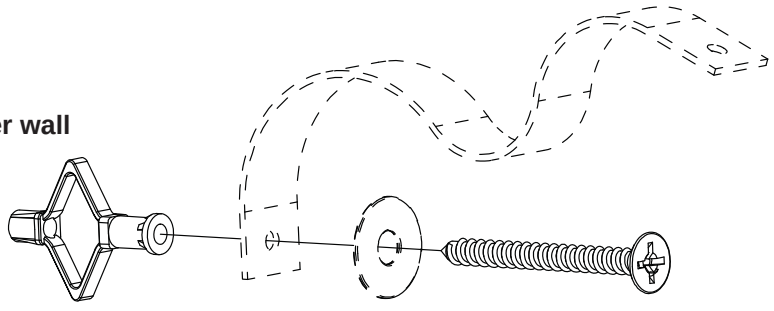

Wooden wall

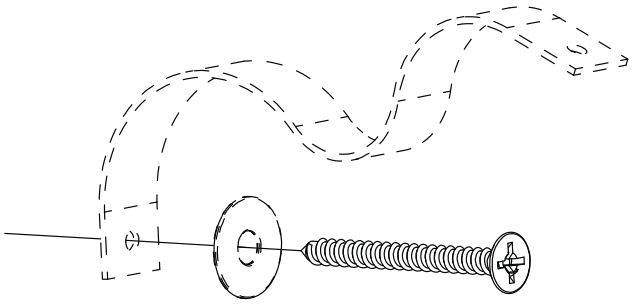

If you need help or have damaged or missing parts, call the **Customer Helpline: 0045 7668 8055**
E-mail: order@flexa.dk