
MEET YOUR KINDLE SCRIBE

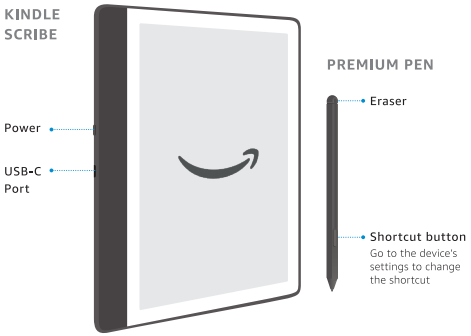

Also included: USB-C cable, replacement tips, and replacement tool


ACTIVATE YOUR KINDLE SCRIBE

1 **Power**
Long press the Power button to power on your Kindle Scribe.

2 **Setup**
Follow the onscreen instructions to get started.

Tip: For more information, go to the Kindle User Guide in your device's settings.

HOW TO REPLACE PEN TIPS

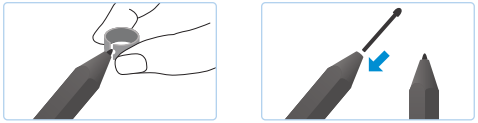

1 Remove the old tip using the included replacement tool.

2 Insert the replacement tip into the opening until it's seated.

Replace the tips if they're worn down or the pen writes without touching the screen.

Help and accessible information
Scan the QR code or visit:
amazon.com/setup/KindleScribe

