





BATTERIES & FUNCTION

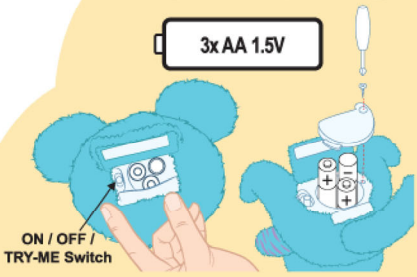

TEMPORARY BATTERIES INCLUDED for try-me feature. **REPLACEMENT BATTERIES NOT INCLUDED.** Replace with 3x AA batteries.

Refer to Battery Information sheet.

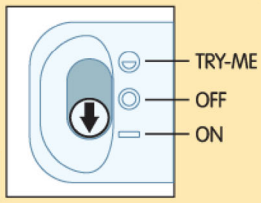

ENSURE THE SWITCH IS IN THE **'ON'** POSITION.

TOY COMES WITH SWITCH IN 'TRY-ME' POSITION.

TROUBLESHOOTING



NOTE: IF YOU TURN THE SWITCH OFF AND BACK ON, THE GEM COUNT WILL RESET.

TOY DOES NOT FUNCTION AND/ OR FUNCTION DOES NOT MATCH INSTRUCTIONS.

- DOUBLE CHECK THE SWITCH TO MAKE SURE IT IS IN 'ON' POSITION.
- ENSURE FRESH, ALKALINE BATTERIES ARE INSTALLED. SKYE COMES WITH BATTERIES, BUT FOR BEST RESULTS REPLACE WITH NEW BATTERIES.

NOTHING HAPPENS WHEN I TOUCH THE HEAD OR BACK SENSORS.

- ENSURE YOU ARE CONTACTING THE TOP OF THE HEAD (ABOVE THE FACE PLATE) OR BETWEEN THE WINGS ON THE BACK. REFER TO CONTENTS SECTION OF THIS INSTRUCTION MANUAL FOR CORRECT LOCATIONS.
- INCREASE THE CONTACT AREA BY USING YOUR WHOLE PALM TO IMPROVE SENSOR ACTIVATION.

I LOST MY BOTTLE AND/ OR THERMOMETER ACCESSORY.

- YOU CAN STILL PLAY WITH SKYE AS NORMAL - SIMPLY PUSH THE MOUTH BUTTON WITH YOUR FINGER.

WHY WON'T SKYE ENTER SLEEPY MOOD?

- IF ALREADY LYING DOWN, SKYE WON'T ENTER INTO SLEEPY MOOD
- MAKE SURE SKYE IS SITTING UPRIGHT FOR A CHANCE TO ENTER INTO SLEEPY MOOD.

HOW DO I KNOW WHICH GEMS I'VE COLLECTED SO FAR?

- PUSH THE GEM BUTTON (ABOVE THE SCREEN) TO SEE CURRENT GEM STATUS.

WHY WON'T SKYE ENTER ALL THE MOODS?

- IF YOU'VE ALREADY COLLECTED A GEM FOR A SPECIFIC MOOD, SKYE WILL NOT RE-ENTER THAT MOOD.
- TO RESET WHICH GEMS HAVE BEEN COLLECTED, SIMPLY TURN THE SWITCH 'OFF' THEN BACK 'ON'.



CARE FOR SKYE

DISCOVER SKYE'S MOODS & CARE FOR THEM CORRECTLY TO EARN A GEM. **COLLECT ALL 5 GEMS FOR A BIG REWARD!**





HOW DO I KNOW WHEN I'VE COLLECTED ALL THE GEMS?

- AFTER YOU'VE COLLECTED ALL THE GEMS, YOU'LL SEE A MUSICAL ANIMATION ON THE SCREEN AND SKYE WILL BE ECSTATIC!

CAUTION: REMOVE ALL PACKAGING ATTACHMENTS BEFORE GIVING THIS PRODUCT TO A CHILD. INTERNAL ELECTRONICS, SURFACE WASH ONLY.

IMPORTANT: DROPPING LITTLE LIVE PETS™ TOY MAY CAUSE DAMAGE THAT PREVENTS LITTLE LIVE PETS™ FUNCTIONS. RETAIN PACKAGING DETAILS FOR FUTURE REFERENCE. READ ALL INSTRUCTIONS BEFORE USING THIS TOY. COLORS AND CONTENTS MAY VARY. RETAIN INSTRUCTIONS FOR FUTURE REFERENCE. PLUSH TOY COMPLIES WITH THE PHYSICAL SAFETY REQUIREMENTS OF THE CCPSA, ASTM F963 AND EN71 FOR AGES 2+.

PLUSH TOY CONTENTS: POLYESTER FIBERS. ALL NEW MATERIAL.

FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: