

※STANDARD DISPLAY AND BUTTON FUNCTION※

Operate and adjust the watch according to the following indications on the screen.
SIGN INDICATION/BUTTON POSITION/FUNCTION

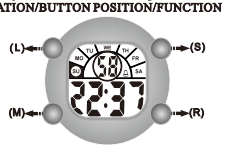

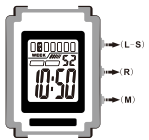

: ALARM ON

A AM : MORNING TIME

P PM : AFTERNOON TIME

L－LIGHT : COLD LIGHT BUTTON (with 3-second delay function)

M－MODE : FUNCTION SELECT BUTTON

S－START : DIGIT CARRY BUTTON
DATE DISPLAY BUTTON
STOPWATCH TIMEKEEPING ON/OFF BUTTON

R－RESET : TIME ADJUST BUTTON
ALARM TIME DISPLAY
STOPWATCH RESET BUTTON


NOTE: Different models have different designs, but have same functions and operation ways.

※FUNCTION AND SPECIFICATION※

1、 Standard display: hour, minute, second, month, date, week
2、 Cold light function
3、 Stopwatch stage timekeeping function
4、 Alarm function
5、 Snooze function
6、 Hourly chime function
7、 Service tempearature: 5℃－35℃
8、 Time accuracy: ±45 seconds/month(T=25℃)
9、 Battery: Hg free alkaline battery or CR2025
10、 Life of battery: able to supply power for 18 months under the following situation
- One illumination operation per day
- One alarm operation per day

※ OPERATION ※

Press "M" button, the mode would change in turn as following:



M*: When operating in "Stopwatch Function Operation Mode" or "Alarm Time Adjust Mode", if "S" or "R" button was pressed before, by pressing "M" button can back to "Normal Time Display Mode" directly.

- In "Normal Time Display Mode": press "S" button to display date; press "R" button to display alarm time.
- 12/24 Time System Display: In "Normal Time Display Mode", press "M" thrice to enter into "Time Adjust State", press "R" button twice to enter into "Hour Adjust State", then press "S" button until 12/24 Time System display on screen, and then press "M" once to back to "Normal Time Display Mode".
- Time Adjusting: In "Normal Time Display Mode", press "M" thrice to enter into "Time Adjust State", the second value blinks, press "S" to adjust second value; press "R" button, the minute value would blink, press "S" to adjust minute value; then press "R" and "S" respectively to adjust hour value, date, month, week; and then press "M" to back to normal mode.
- Alarm Time Setting: In "Normal Time Display Mode", press "M" button twice, then press "S" to set the hour value; press "R" once, then press "S" again to set the minute value; press "M" to back to normal mode.
- How to use stopwatch: In "Normal Time Display Mode", press "M" button once to enter into "Stopwatch Function Operation Mode", press "S" button to start timekeeping, press "S" again to stop timekeeping, the count value would display on the screen; Press "R" button to reset, press "M" button to back to "Normal Time Display Mode".
- How to on/ off Alarm, Hourly Chime function: hold the "R" button, then press "S" to on/off Alarm Function; when "Alarm On", the signal would display on the screen, when the alarm ringing, press "S" to stop ringing, It would ring again after 4-5 minutes, press "R" to stop again-ringing. Hold the "R" button, then press "M" to on/off Hourly Chime Function, when Hourly Chime On, the week would display on screen.

- Cold Light Lamp: press "L" button to turn on the cold light with 3-second time delay. Note: long-term use of cold light would be power-consuming.

The enterprise has past the ISO9001:2008 Quality Control System Verification

MADE IN CHINA

PLEASE RECYCLE

SIZE: 225X84MM