
Juno

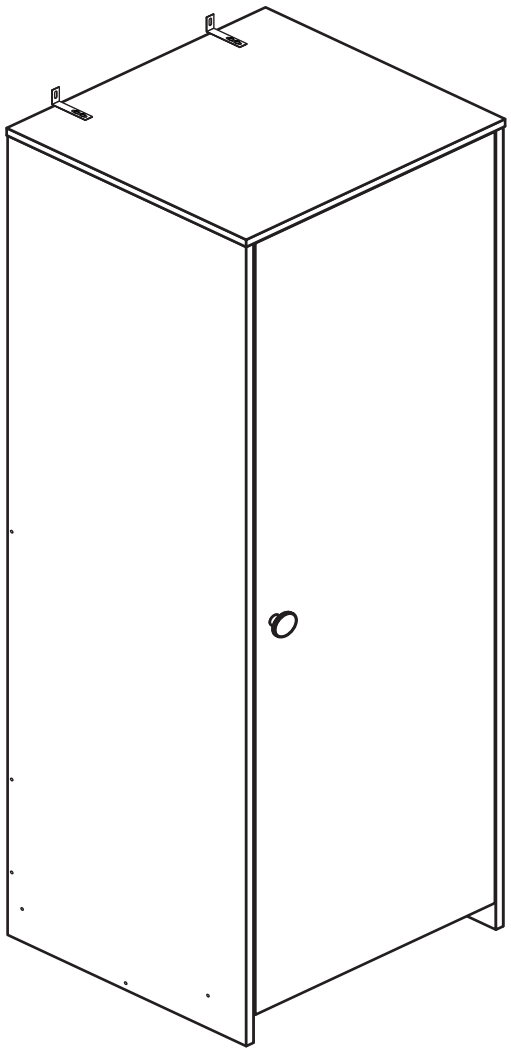

IMPORTANT - Retain these instructions for future reference

This product is suitable for children in the age range 3-12 years for which this product is designed

Spare Parts

Visit: www.argos-support.co.uk

Email: Help@ClickSpares.co.uk

Call: 0370 112 1928

Customer Support

Call: 0345 640 2020

Issue 5 - 28/03/25

⚠ Safety and Care Advice

Product Details

White 872/5703
White (DO) 910/7753

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• This product has been constructed to be used in the domestic environment only and not for commercial purposes.

• Assembly to be carried out by a competent adult only.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).

• Assembly videos are available throughout these instructions by scanning in the QR codes.



• We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and Maintenance

• Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.

• Use a dry cloth to clean the product, furniture polish is not recommended.

• From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.

• Do not stand or put weight on the product, this could cause damage.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Additional Guidance

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.


• Regularly check and ensure that all bolts and fittings are tightened properly.

• This unit weighs approximately 36kgs. Please lift with care.


• **Warning:** To prevent possible overbalancing this unit must be secured to a wall using the overbalance protector kits supplied. Refer to guide after section 18 for wall fixing information.

Sainsbury's Supermarkets Ltd and Argos Limited, London EC1N 2HT, UK. Sainsbury's (NI) Ltd and Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.


Cabinet Panels

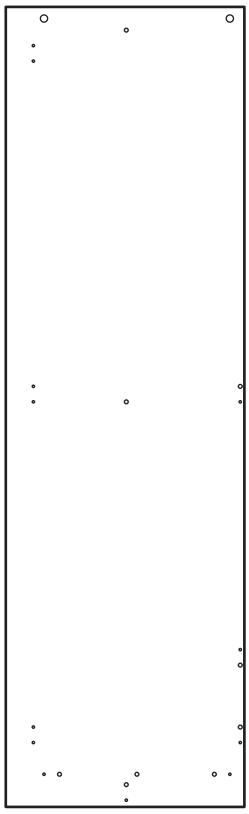


1 165.3 x 49.3cm

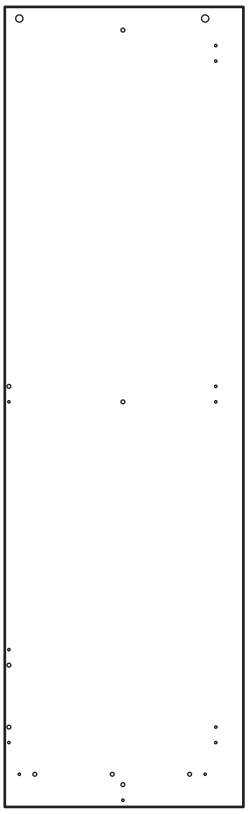

2 165.3 x 49.3cm

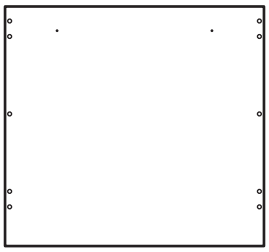


3 53.5 x 49.5cm




4 50.1 x 47.2cm




5 50.1 x 28cm




6 50.1 x 8.1cm



7 50.1 x 6cm

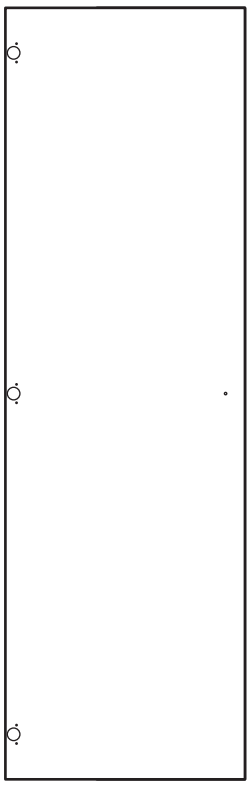

8 159.4 x 49.5cm




9 160.4 x 52.7cm

Fittings

Use these drawings to correctly identify the fittings


Bag 1




A x 4




B x 4




C x 20



D x 12

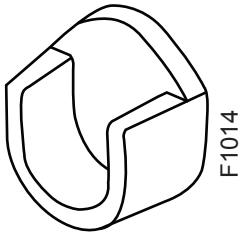

E x 4




F x 1




G x 6




H x 4




I x 4




J x 28

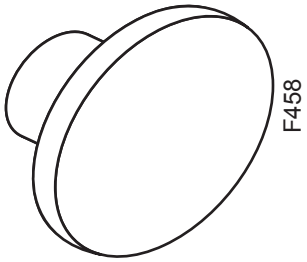


K x 1

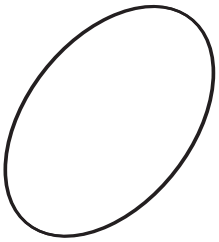


L x 4

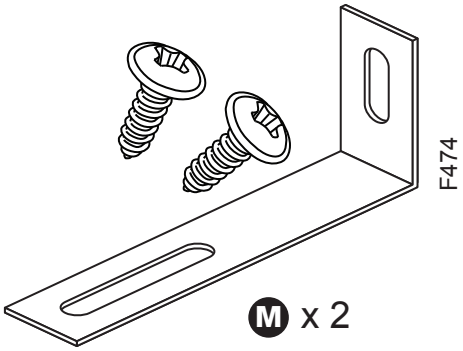

M x 2

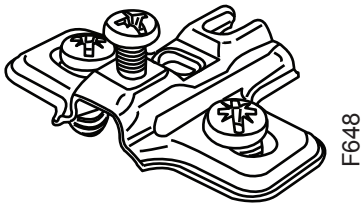

N x 3

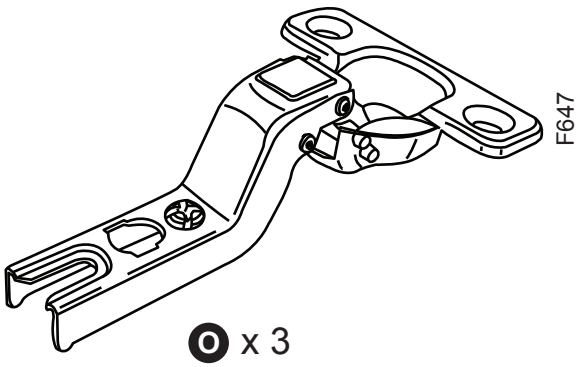


O x 3



P x 2

Tools

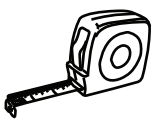















Only used for drilling walls


1

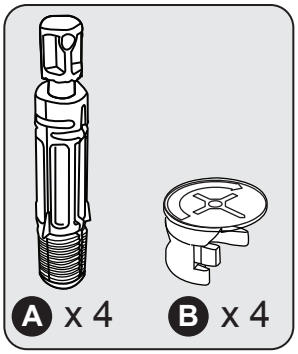

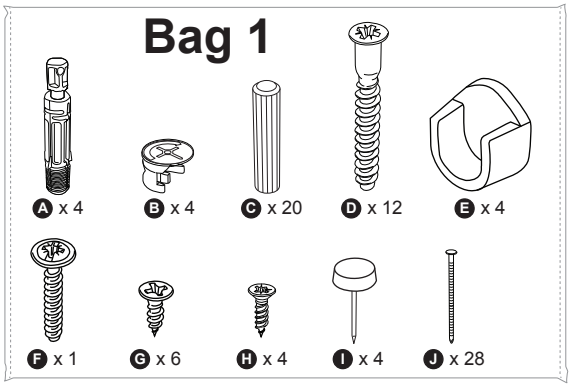


Panel Assembly


https://www.youtube.com/watch?v=33kDsSSfxjw

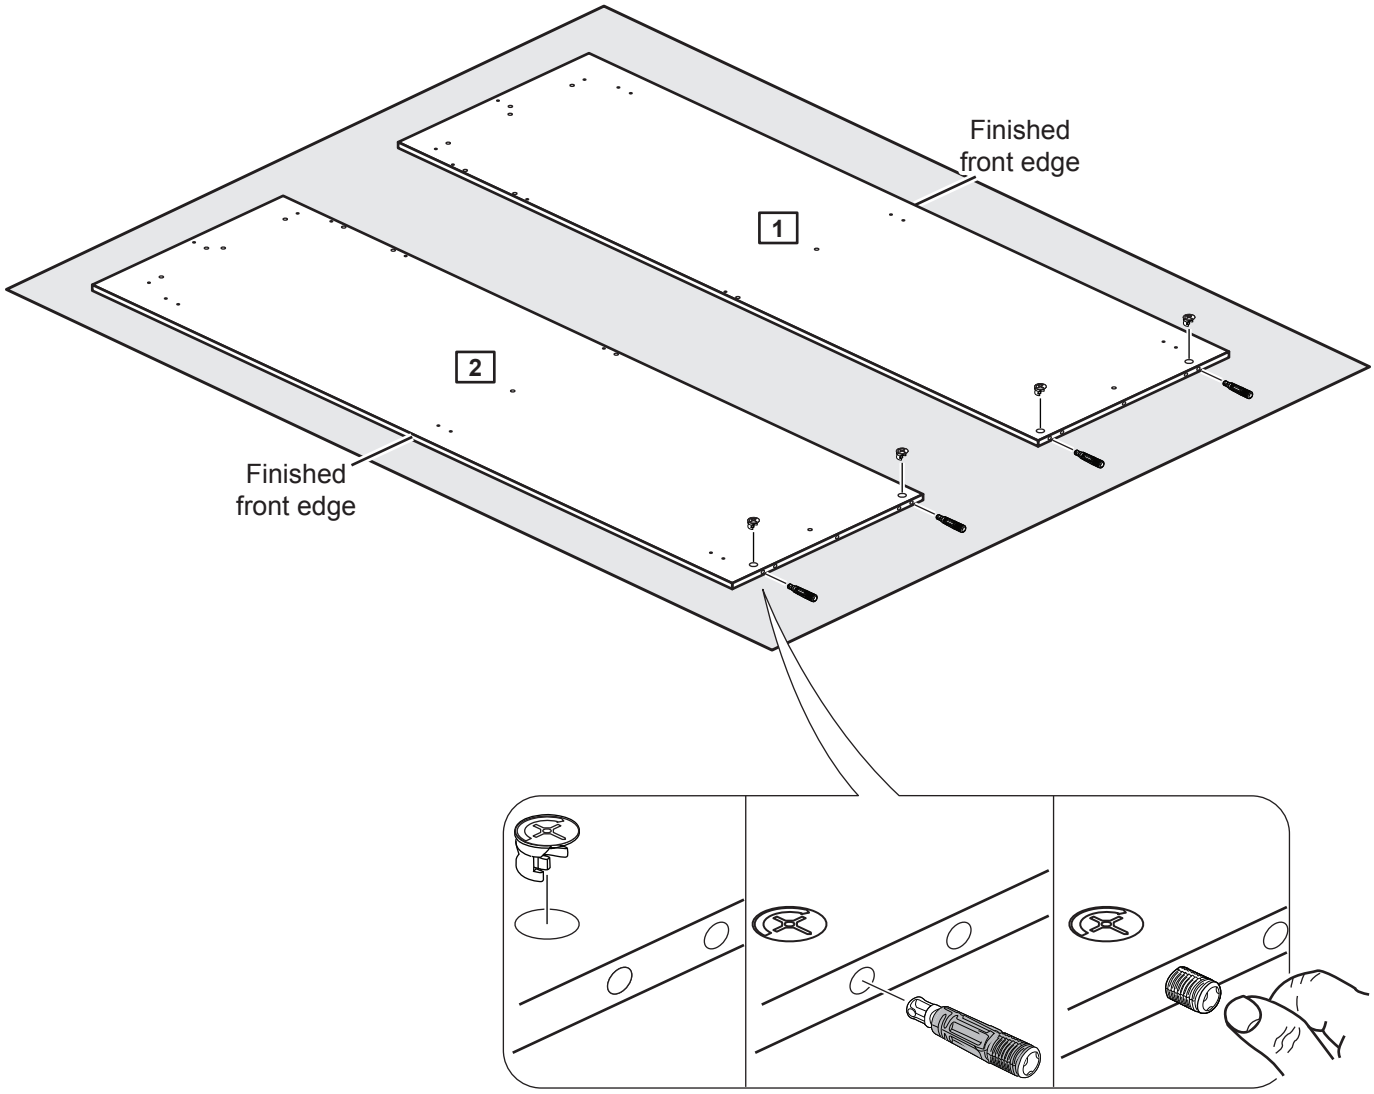


2

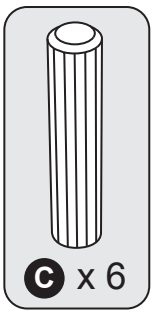


3

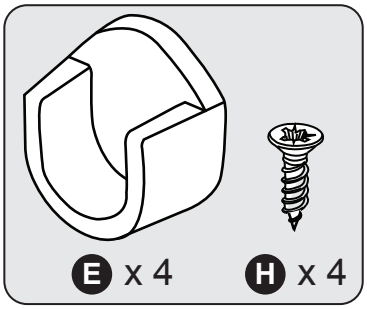


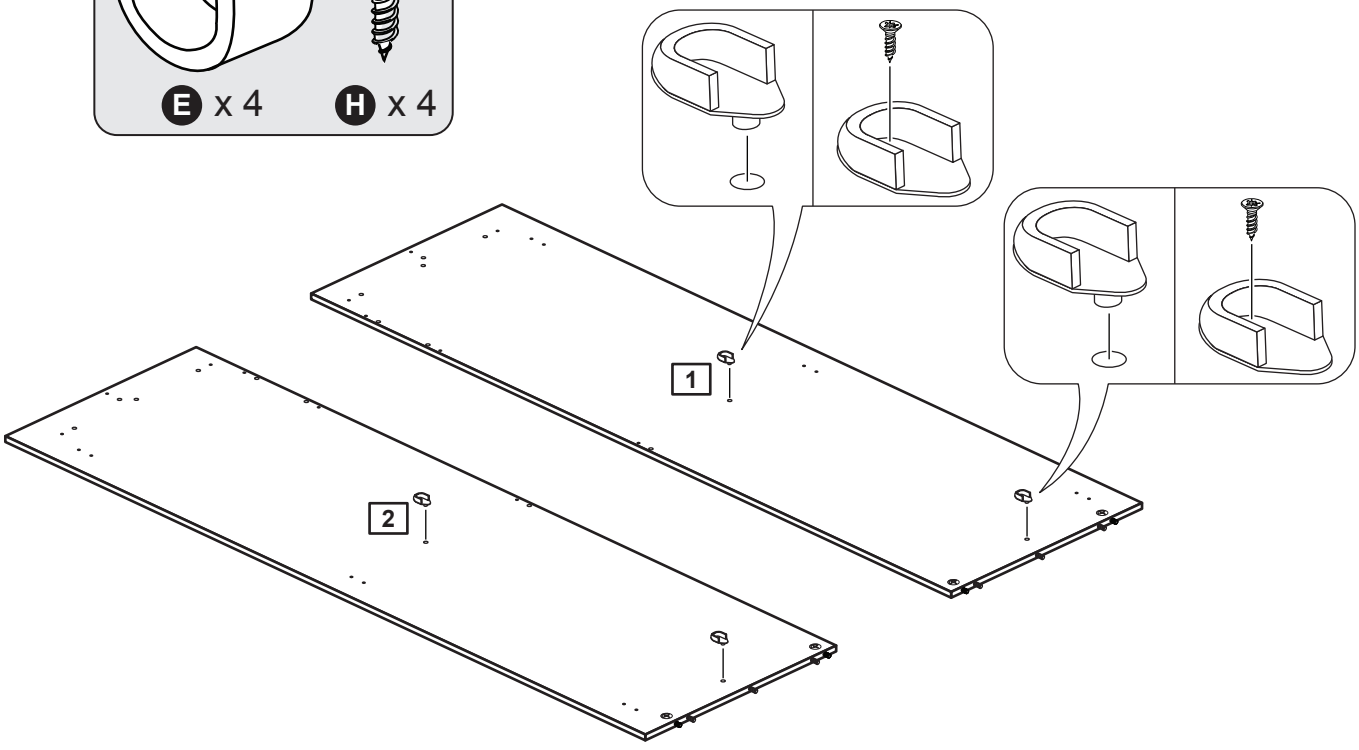


4

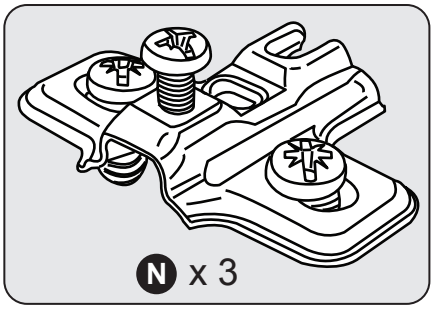


Choose which side to fit the Door

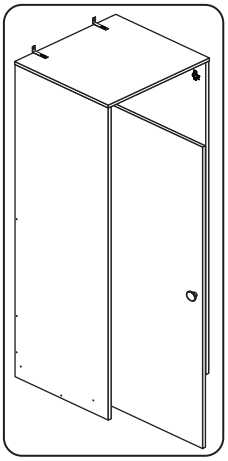


IMPORTANT
Only fit hinges to the Left Side if you want your door to open this way

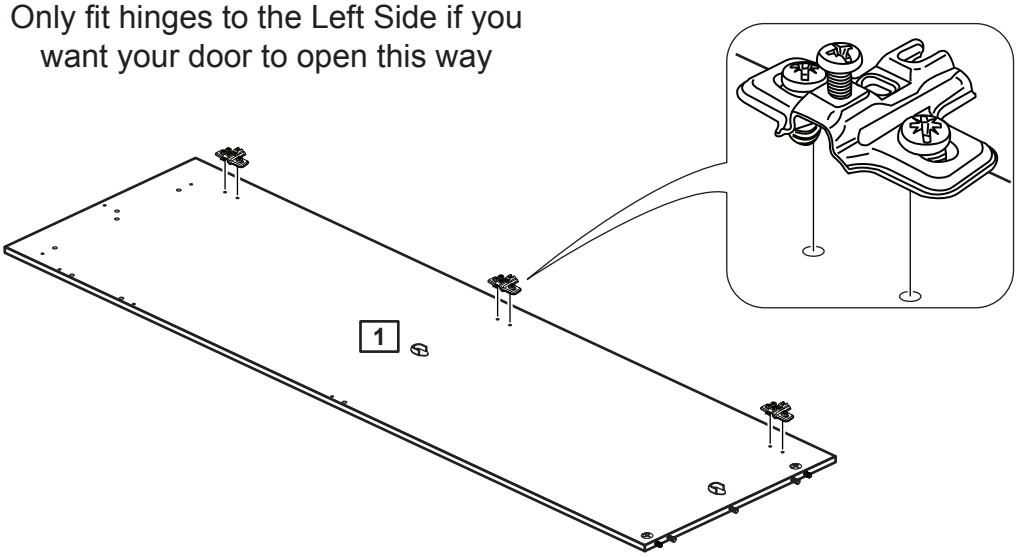


or

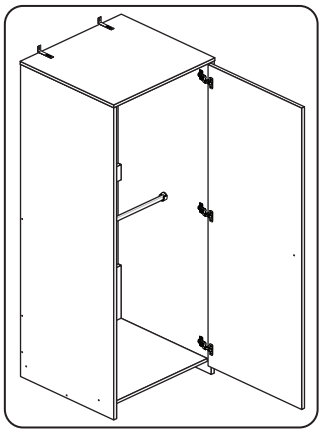


IMPORTANT
Only fit hinges to the Right Side if you want your door to open this way

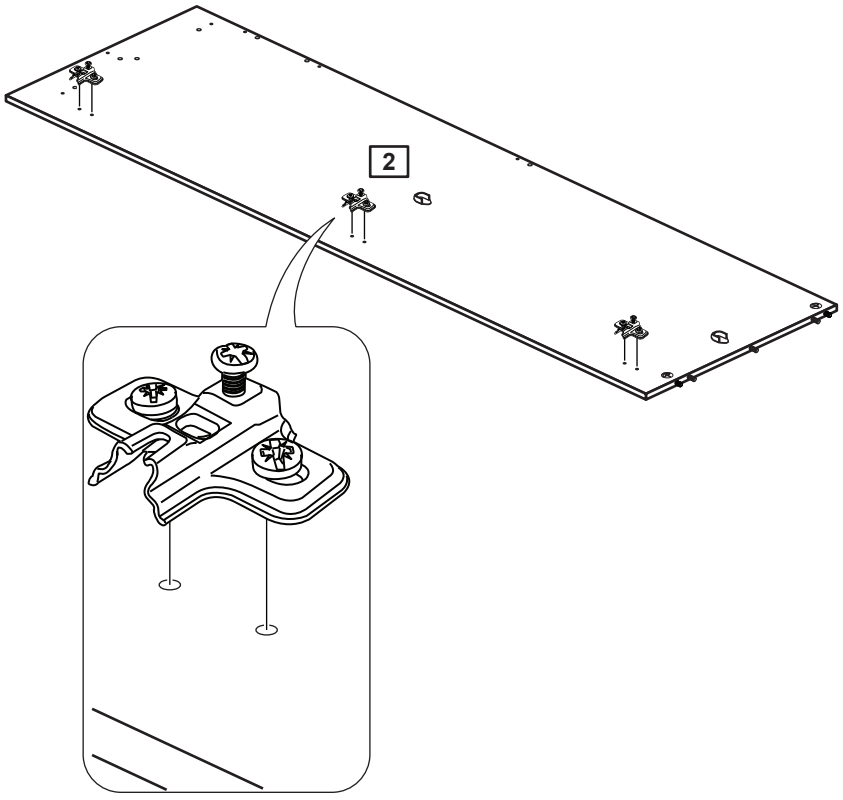


5

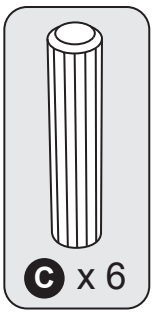

C x 6

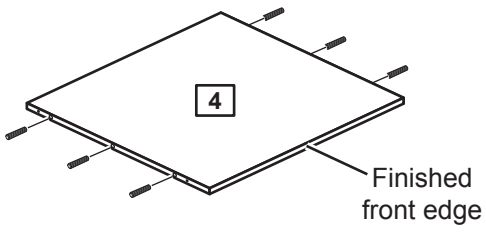

4
Finished
front edge

6

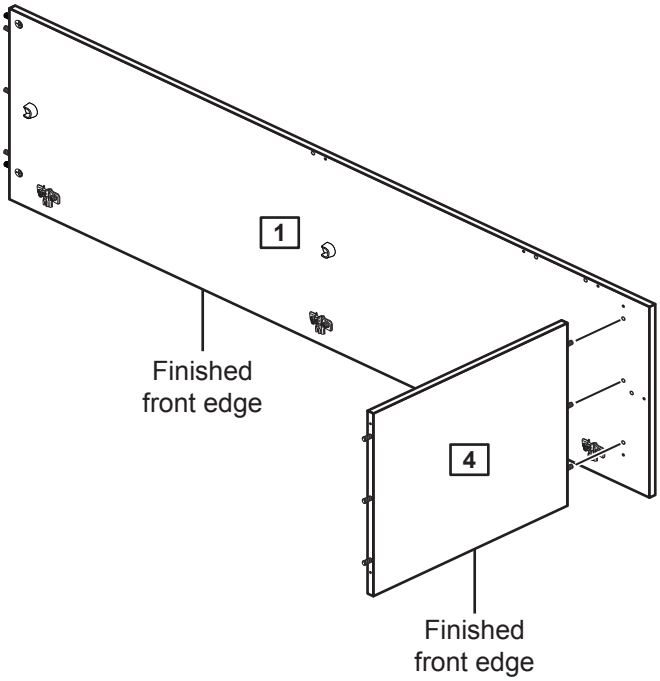

1
Finished
front edge
4
Finished
front edge


7

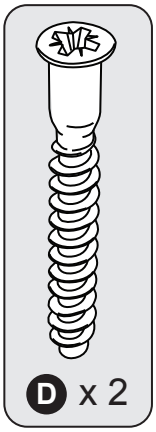
D x 2

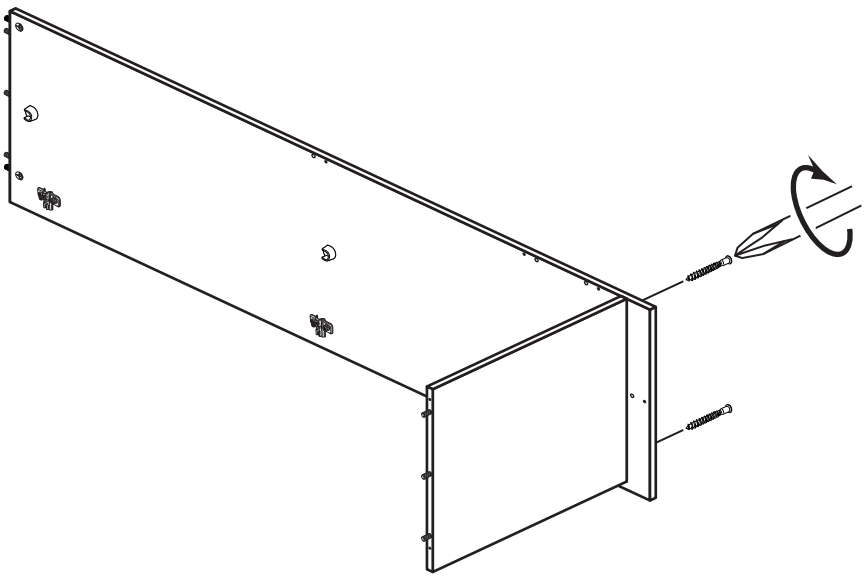



8

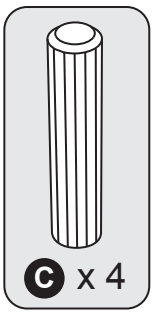
C x 4

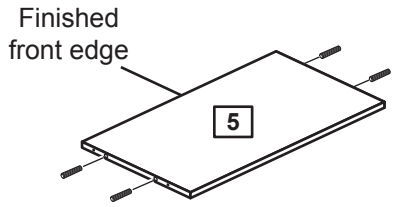

Finished
front edge
5


9

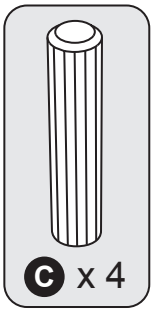

C x 4

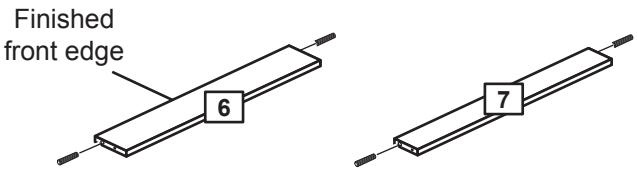
Finished
front edge
6
7


10

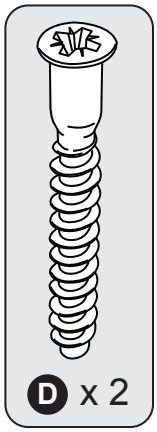

D x 2

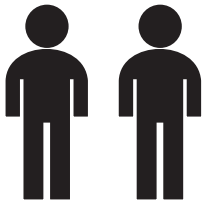


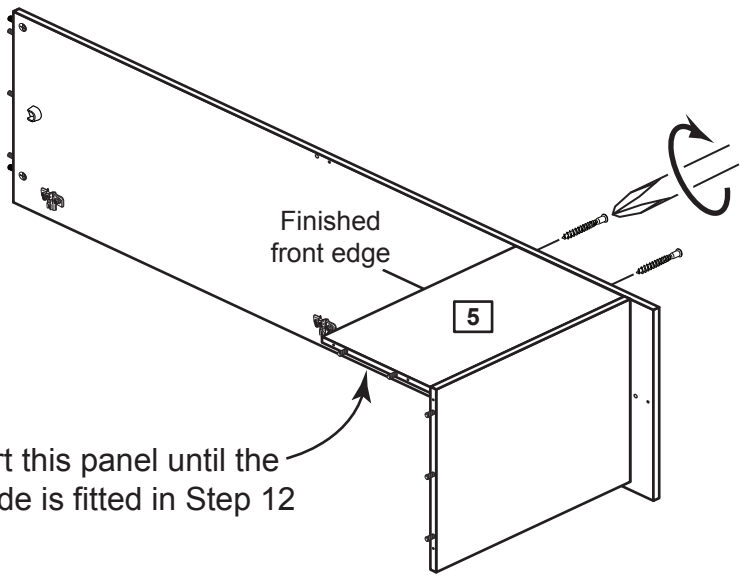
Finished
front edge
5
Support this panel until the
Right Side is fitted in Step 12


11

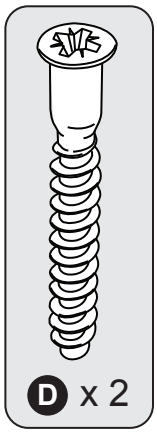

D x 2

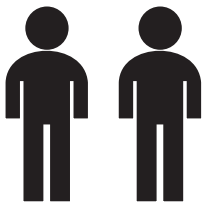

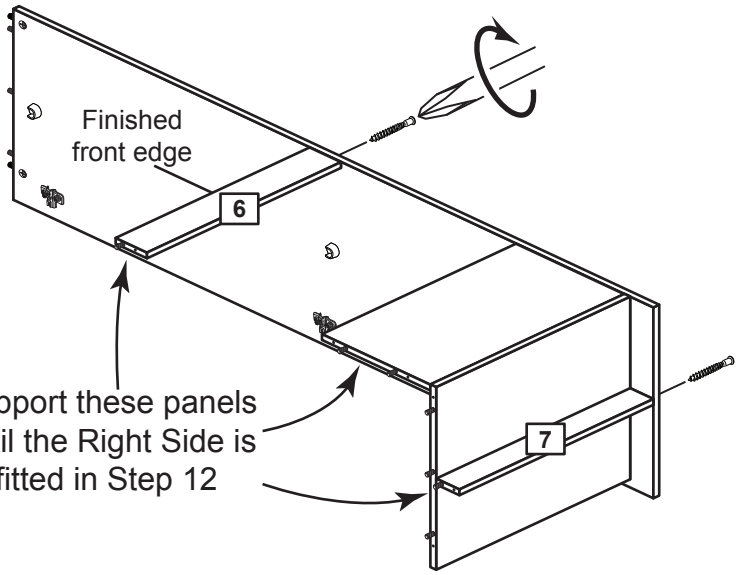
Finished
front edge
6
7
Support these panels
until the Right Side is
fitted in Step 12

12

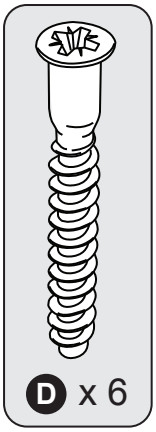


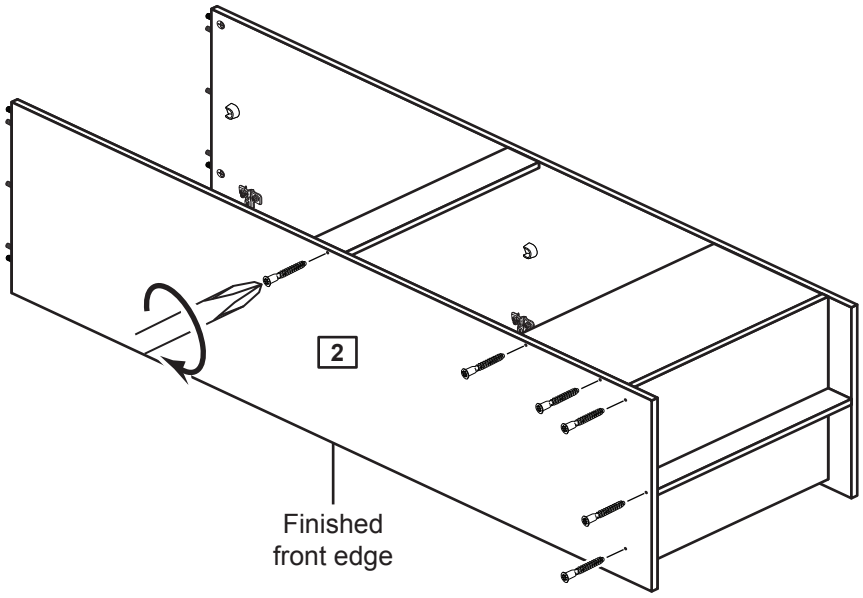


13


Panel Assembly

https://www.youtube.com/watch?v=33kDsSSfxjw

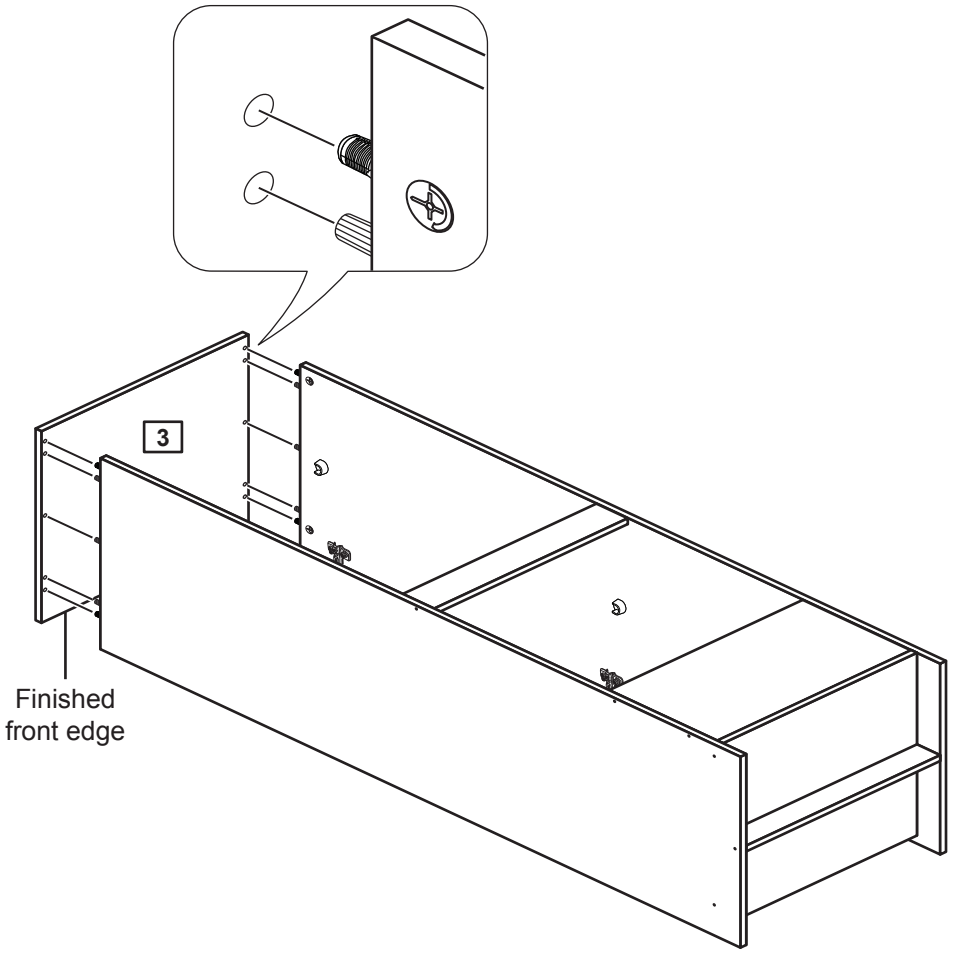

14

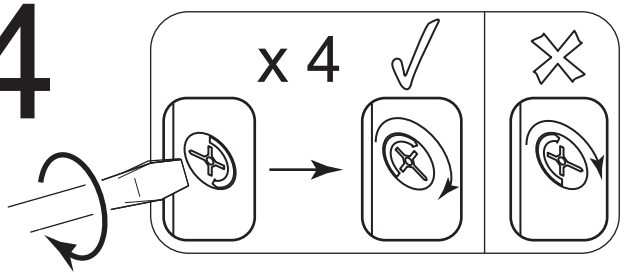

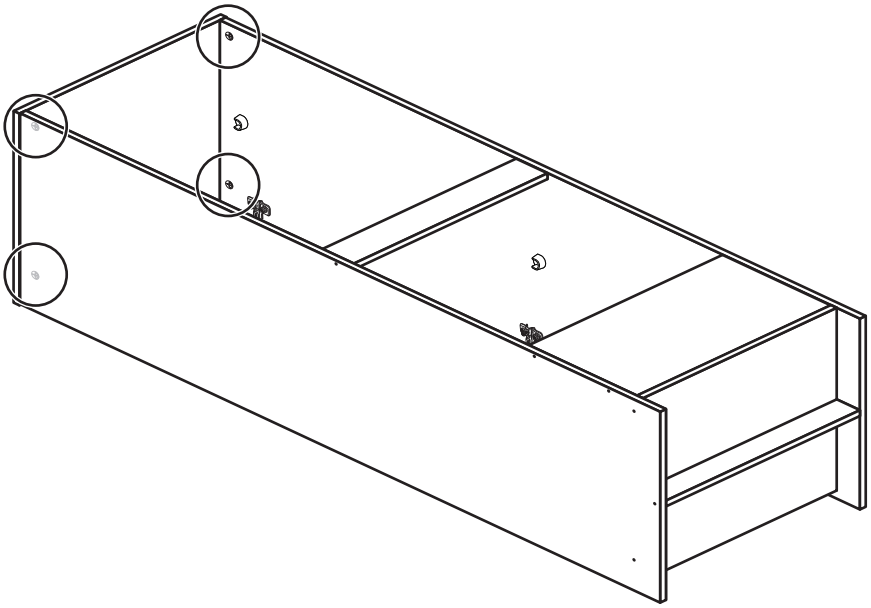


15


Squaring up a Chest and fitting the Back Panel
www.youtube.com/watch?v=Feal6541z7o




Make sure measurement A and B
are the same before attaching part 8

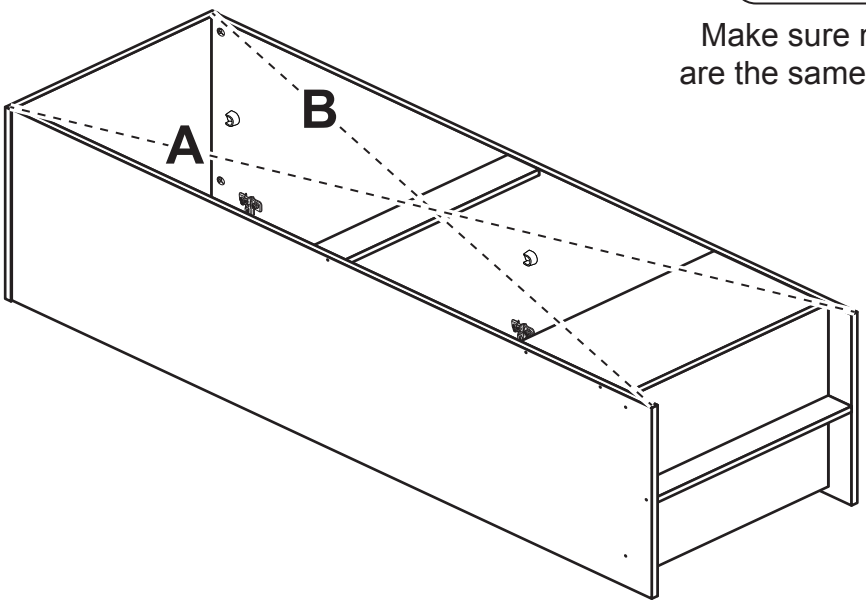



16

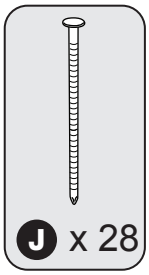

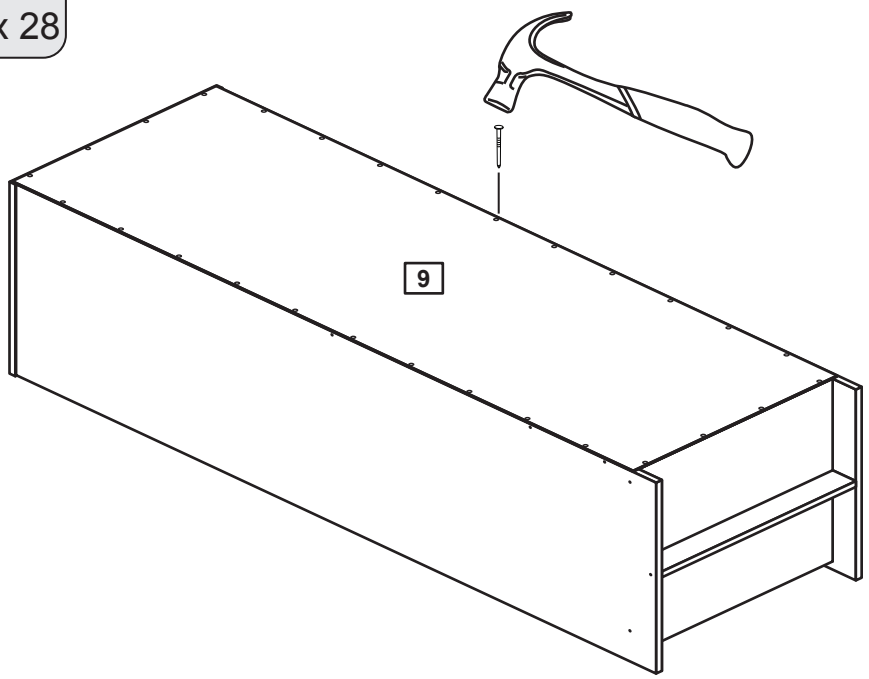


17

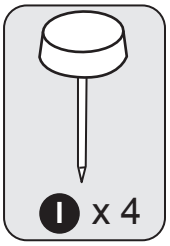

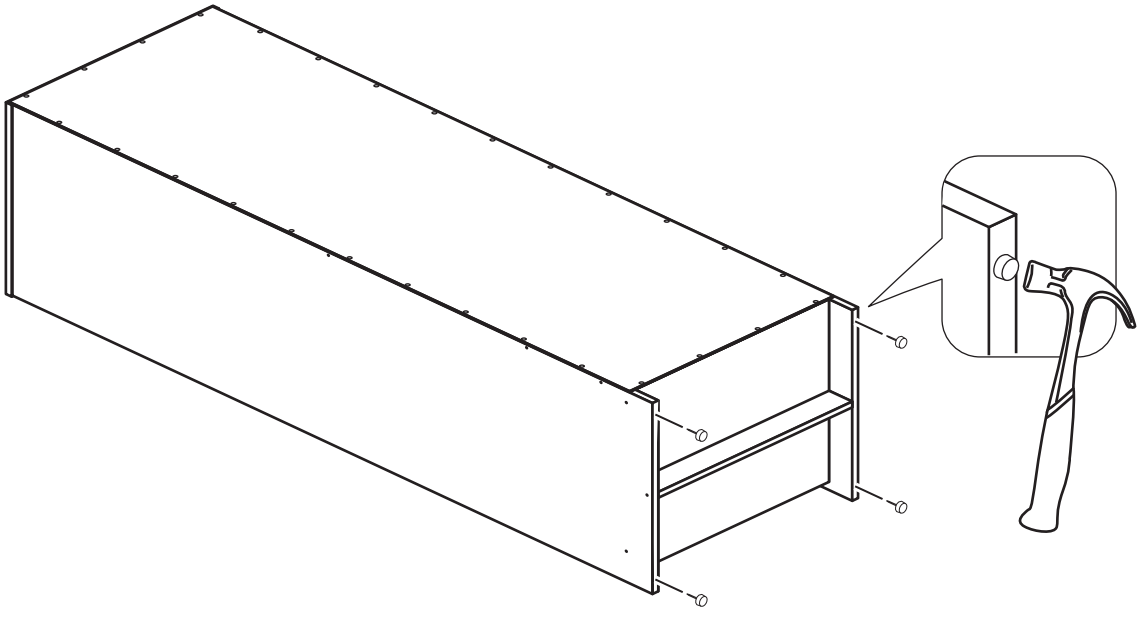



18

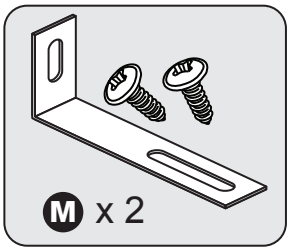

WARNING!

In order to prevent overturning this product must be used with the 2 wall attachment devices provided

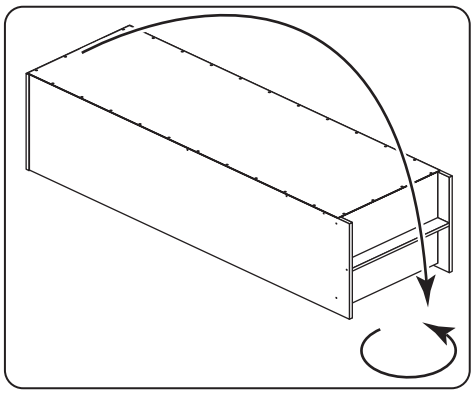

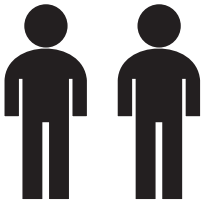

See the next section for a guide to wall mounting and fixings

Loosely fit the 1st screw through the brackets into the top panel.


Slide the brackets against the wall and mark the slot at the back of the brackets for drilling into the wall.

Swivel the brackets away from the wall and drill the wall using a suitable drill-bit and fit your wall fixings (wall fixings are not supplied as they will need to suit the wall type).

Swivel the brackets back and fix them to the wall.

Fit the 2nd screw into top panel and tighten both screws from the kits.


Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

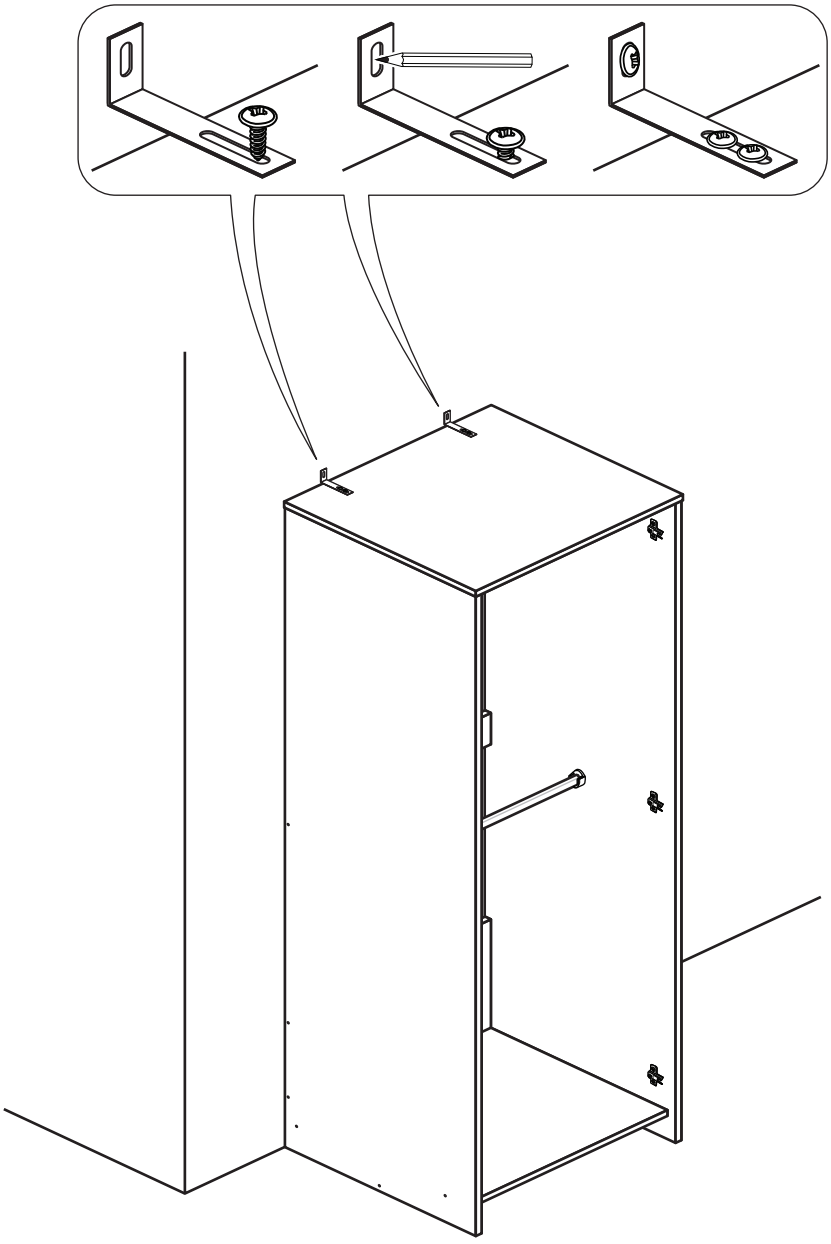

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

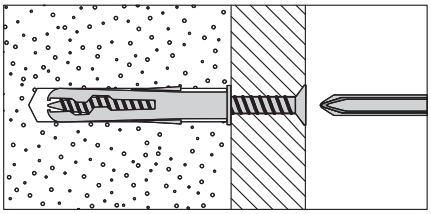


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

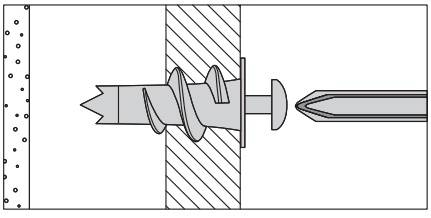


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

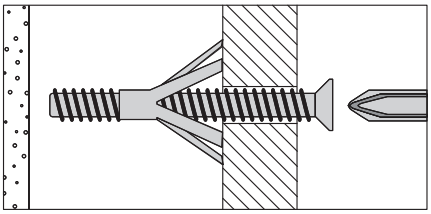


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

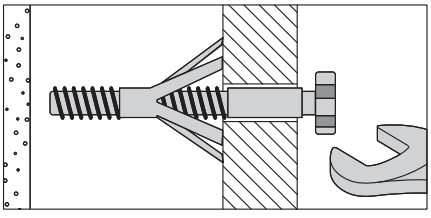


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

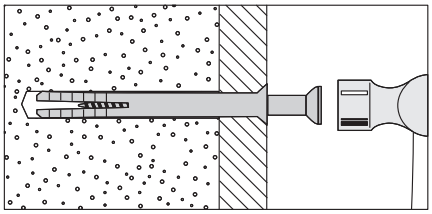

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

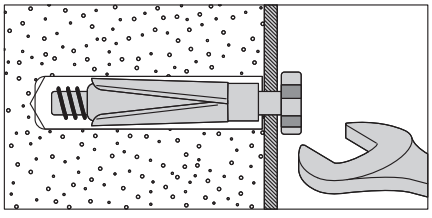


For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.


Care & Maintenance


Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.


19

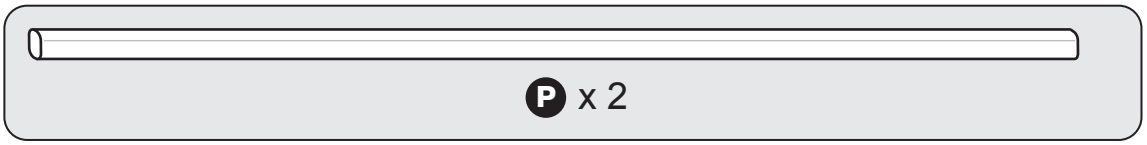

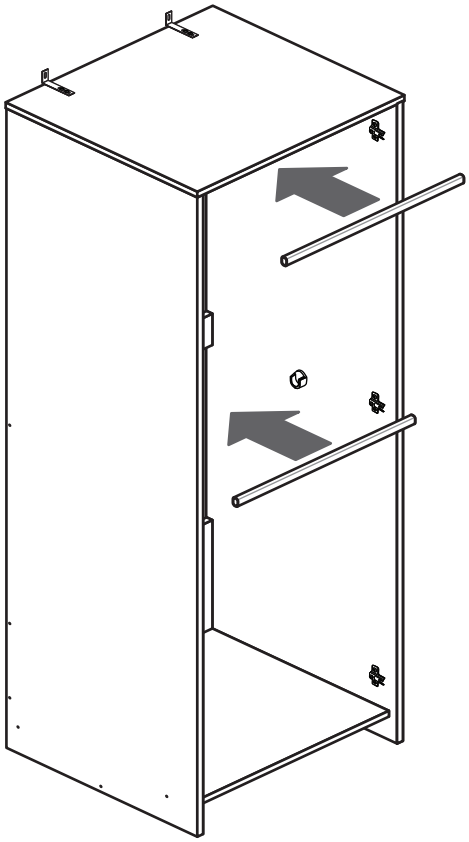

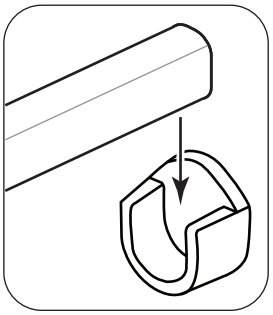



20

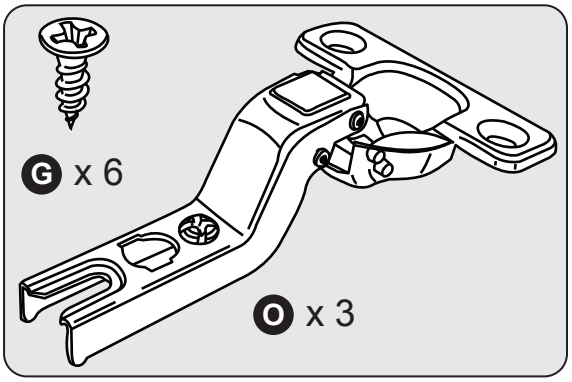


Hinge Fixing and Door Adjustment

www.youtube.com/watch?v=wIMhUHeLBtg

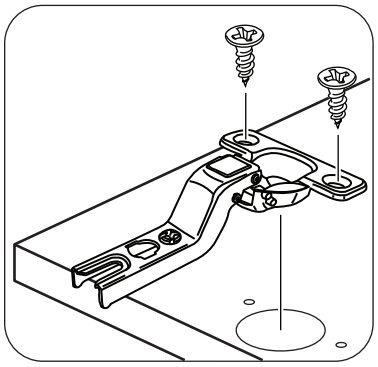

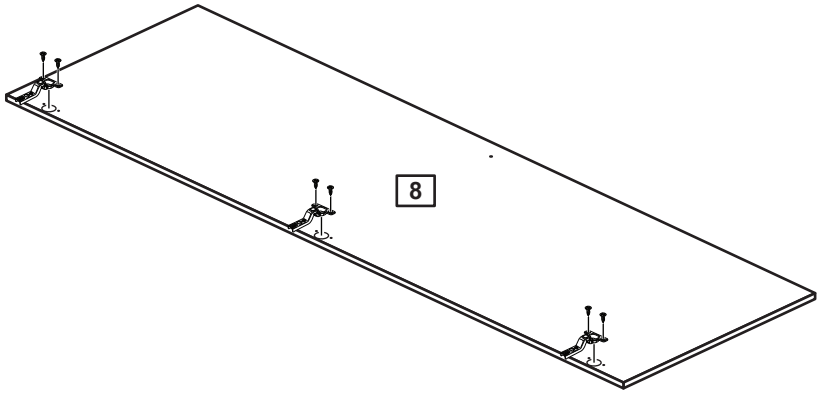

21

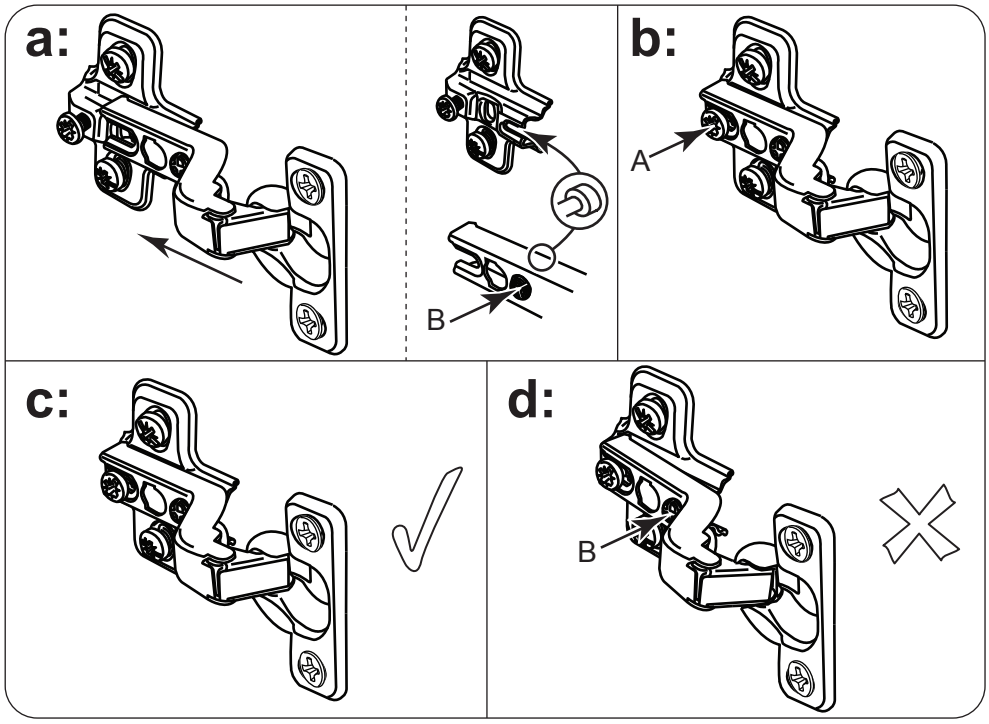

Hinge Fixing and Door Adjustment

www.youtube.com/watch?v=wIMhUHeLBtg

This shows the Door being fitted to Hinge Plates on the right side. You may have fitted them to the left side.


Note: The easiest way to attach the Door is to fit the top Hinge first, then align and fit the other Hinges.

a: Push the Hinge onto the front part of the Hinge Plate.
The recess at the bottom of screw B goes into the slot in the Hinge Plate.


b: Keep the Hinge FLAT against the Hinge Plate as you slide it across as far as it will go.
Tighten screw A.


c: The Hinge must be flat against the Hinge Plate prior to any adjustment.

d: The Hinge must NOT be AT AN ANGLE to the Hinge Plate when assembled.
This would indicate that the recess at the bottom of screw B had not located in the slot in the Hinge Plate and the Hinge would not be secure.
Remove the Hinge from the Hinge Plate and then re-assemble being careful to follow instructions a-c.

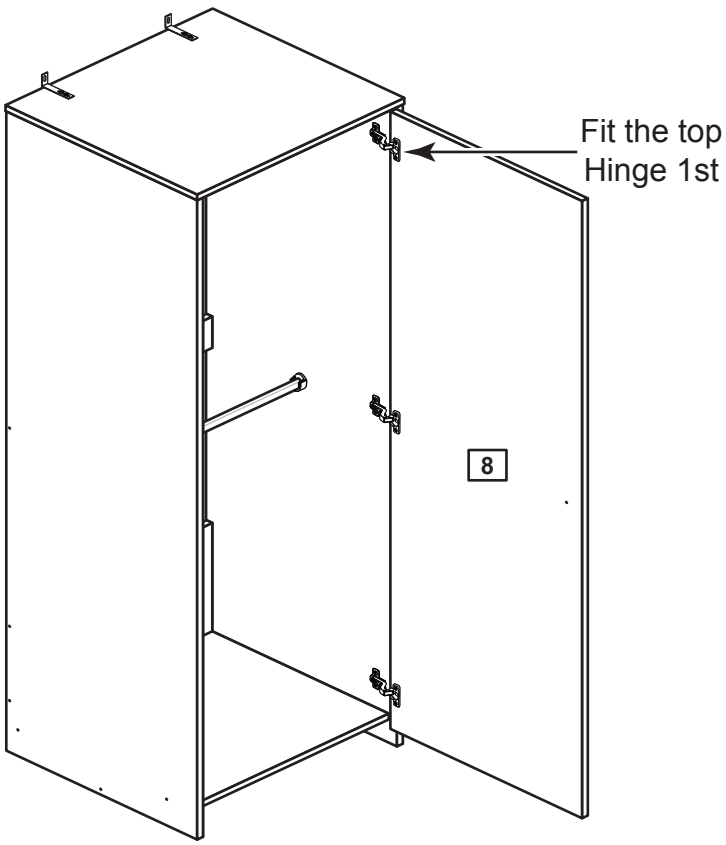

22

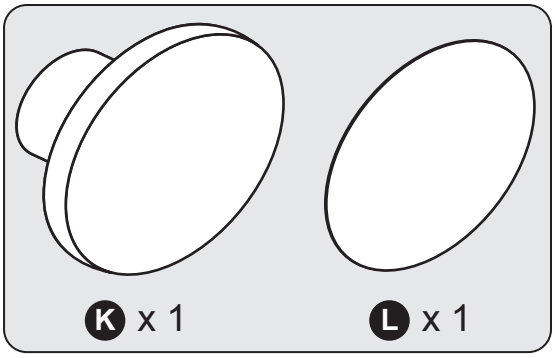


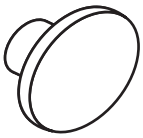

Make sure that the handle is clean and dry





Choose the colour of the handle sticker and peel of the backing paper

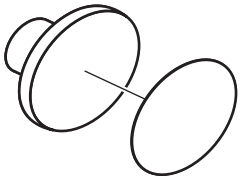

Position the sticker onto the centre of the handle and press firmly

23

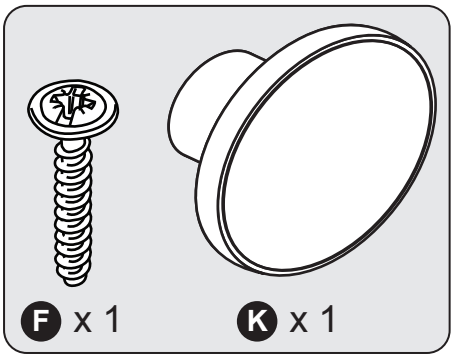

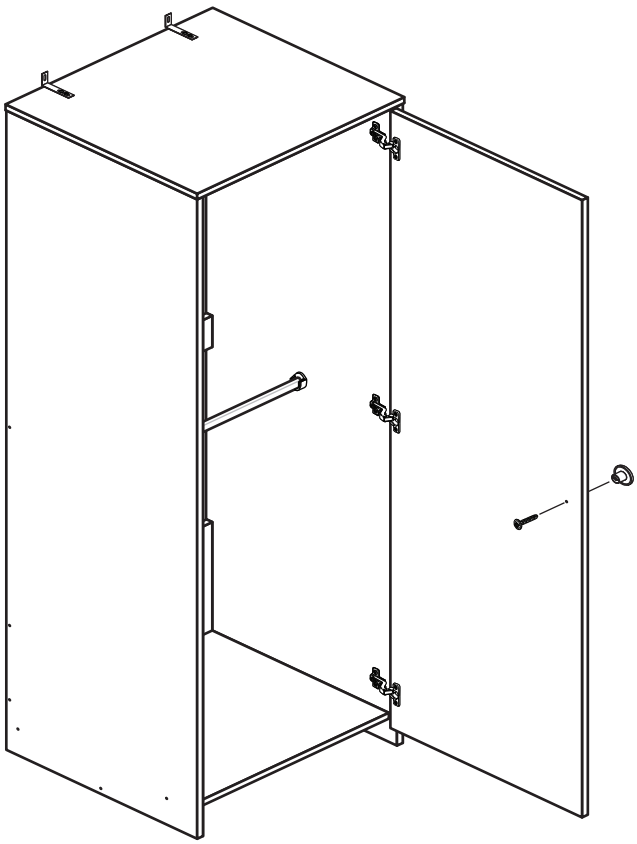

Hinge Fixing and Door Adjustment

www.youtube.com/watch?v=wIMhUHeLBtg


Adjust the Door if needed

a: Before adjusting the Door, use a Spirit Level to check the Top (or Base) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the Hinges, as shown.


b: Height adjustment.
Loosen screws A on Hinge Plates and move Door up or down as required. Retighten screw A.

c: Forward and Back adjustment.
Loosen screw B on Hinge Plate and move Door in or out as required. Retighten screw B.

d: Sideways adjustment.
To move Door ‘out’ loosen screw C.
To move Door ‘in’ tighten screw C.

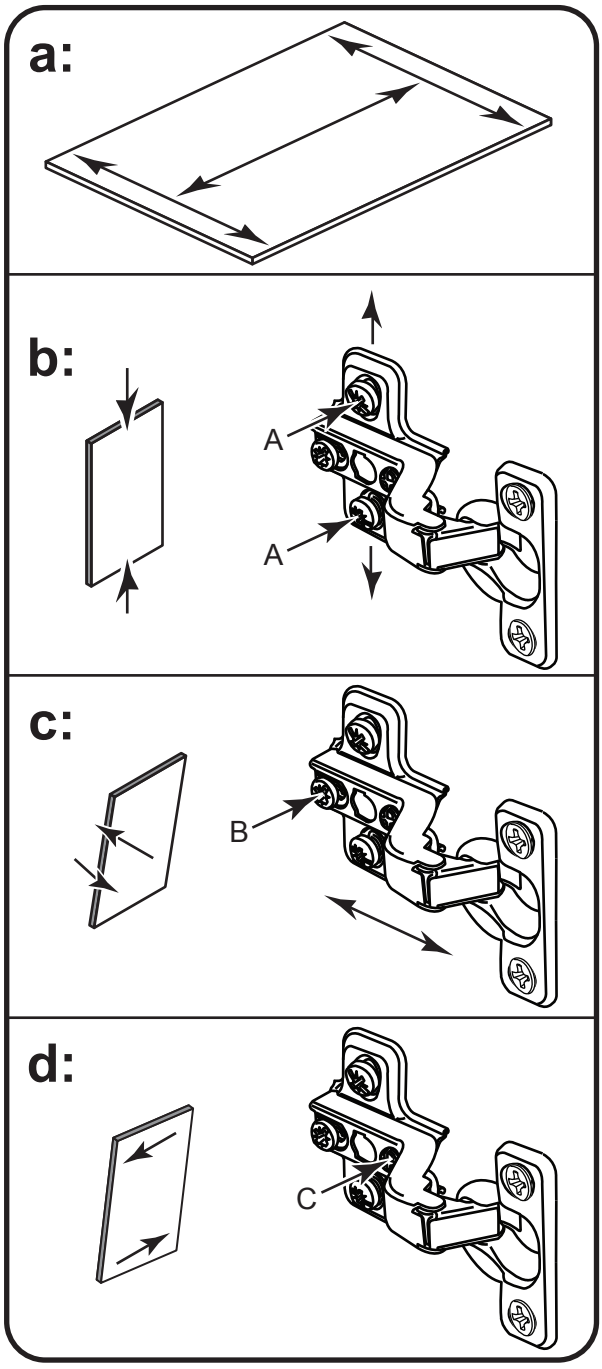

25

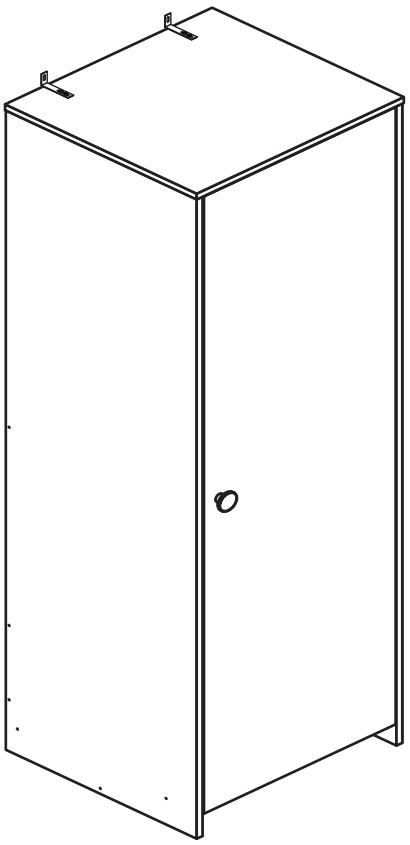

IMPORTANT
On a regular basis please check that the screws and fittings have not become loose as this could present a potential choke hazard.

Assembly is complete