BUSH

Customer Service Manual

BIE7030FF

BIE7030FFE



Customer service manual

Contents

Precautions	Page 3
Tools for disassembly and reassembly	Page 4
Door hinges	Page 5
Glass shelf	Page 6
Flap Cover	Page 7
Door Shelf	Page 8
Adjustable Door Shelf	Page 9
Basket, Chiller, Crisper Change	Page 10
Maxifresh Change	Page 11
Door gaskets	Page 12
Additional Support	Page 14

Precautions:

Always follow safety advice.

Always switch off and unplug the appliance before attempting to remove any part.

Always wear appropriate protective equipment when carrying out any work.

Always use the correct tools for carrying out any work.

Some repairs may not be suitable for unqualified users to carry out. If in doubt seek the advice of a profession repairer.

SAFETY PRECAUTIONS





Read all instructions before repairing the product.

Before any disassembly make sure appliance is unplugged.

There is electrical shock risk.

Use rated control equipment.

DO NOT attempt a product repair if you have any doubts as to your ability to complete the repair in a safe and satisfactory manner.

Make sure to check out Model name, Rated voltage, Rated current, Operation Temp, etc.

When you replace the parts, please use authentic parts to replace defective parts.

Before starting the dismantling, wear protective equipment.

Do not use multiple receptacles or extension cord.

Do not plug in damaged, torn or old plugs.

Do not allow children to play with the appliance or let them hang off the door.

Do not plug-in or out the plug from the receptacle with wet hands to prevent electrocution.

Do not place glass bottles or beverage cans in the freezer department. Bottles or cans may explode

When taking ice made in the freezer department, do not touch it, ice may cause ice burns and/or cuts.

Do not cover the body or top of fridge with lace. This affects the performance of your fridge.

Fix the accessories in the fridge during transportation to prevent damage to accessories.

Leave to stand for at least before switching on to allow compressor oil to settle if transported horizontally.

Do not damage the refrigerant circuit.

Care must be taken while cleaning/carrying the appliance not to touch the bottom of the condenser metal wires at the back of the appliance, as this could cause injury to fingers and hands.

1. Necessary Tools



A. Pliers
B. Flat head thin screwdriver
C. Cordless screwdriver or classic screwdriver with torx bits (T20)

2. Disconnection





REPLACEMENT PROCEDURE	Applicable models General	EN

Part name	Door hinge	

1 - Unscrew the two screws fixing the top hinge (Pic-1) and remove the refrigerator door. (Pic-2)




2 - Unscrew the two screws fixing the middle hinge side bracket and remove it. (Pic-3)





3. Unscrew the two screws fixing the middle hinge (Pic-4) and remove the freezer door. (Pic-5)



4. Remove the bottom hinge pin (Pic-6)


REPLACEMENT PROCEDURE	Applicable models General	EN
Part name	**Glass Shelf**	

First gently lift the front side of glass up. Then you can pull the glass out by directly pulling towards yourself.

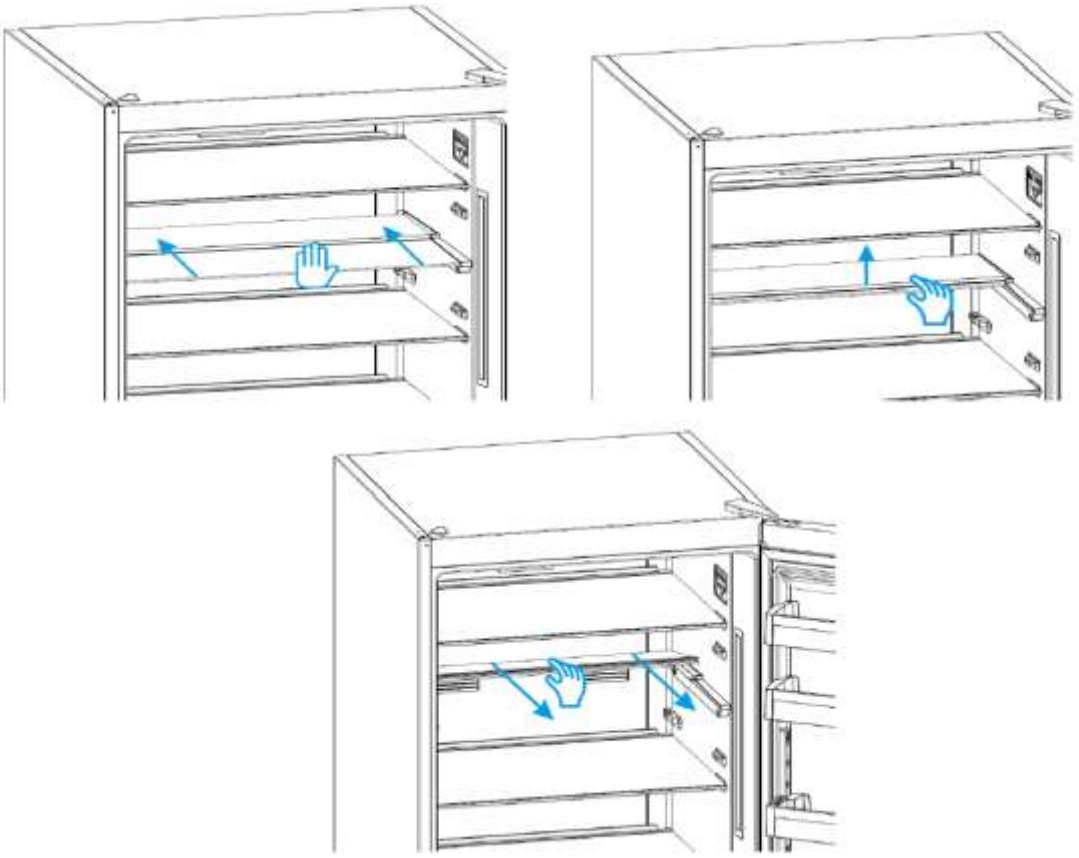

REPLACEMENT PROCEDURE	Applicable models General	EN
Part name	**Flap Cover**	


First open the flap slightly, now push the flap up from its bottom edge, focusing on only one side.
When the flap is freed from this side, repeat same operation for the other side.

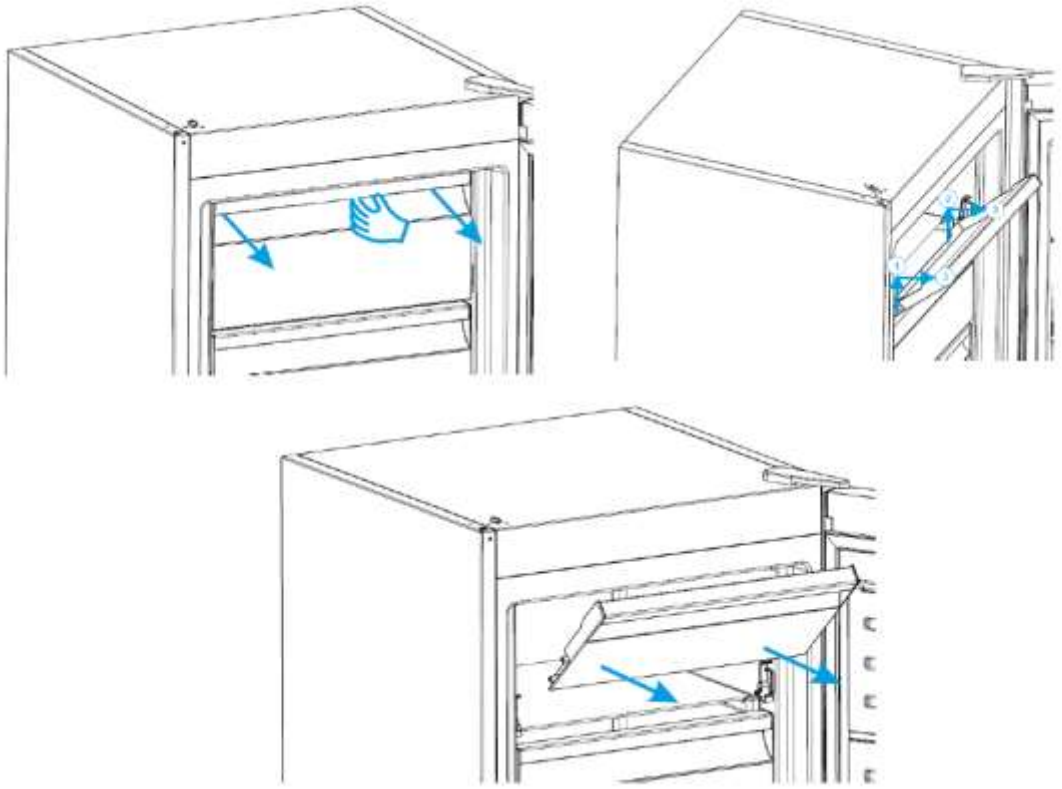

REPLACEMENT PROCEDURE	Applicable models General	EN

Part name	Door Shelf	


Gently pull the shelf up using both hands, without bending or twisting the shelf.
When shelf is free from assembly details on right and left side, you can take the shelf out by pulling to yourself.

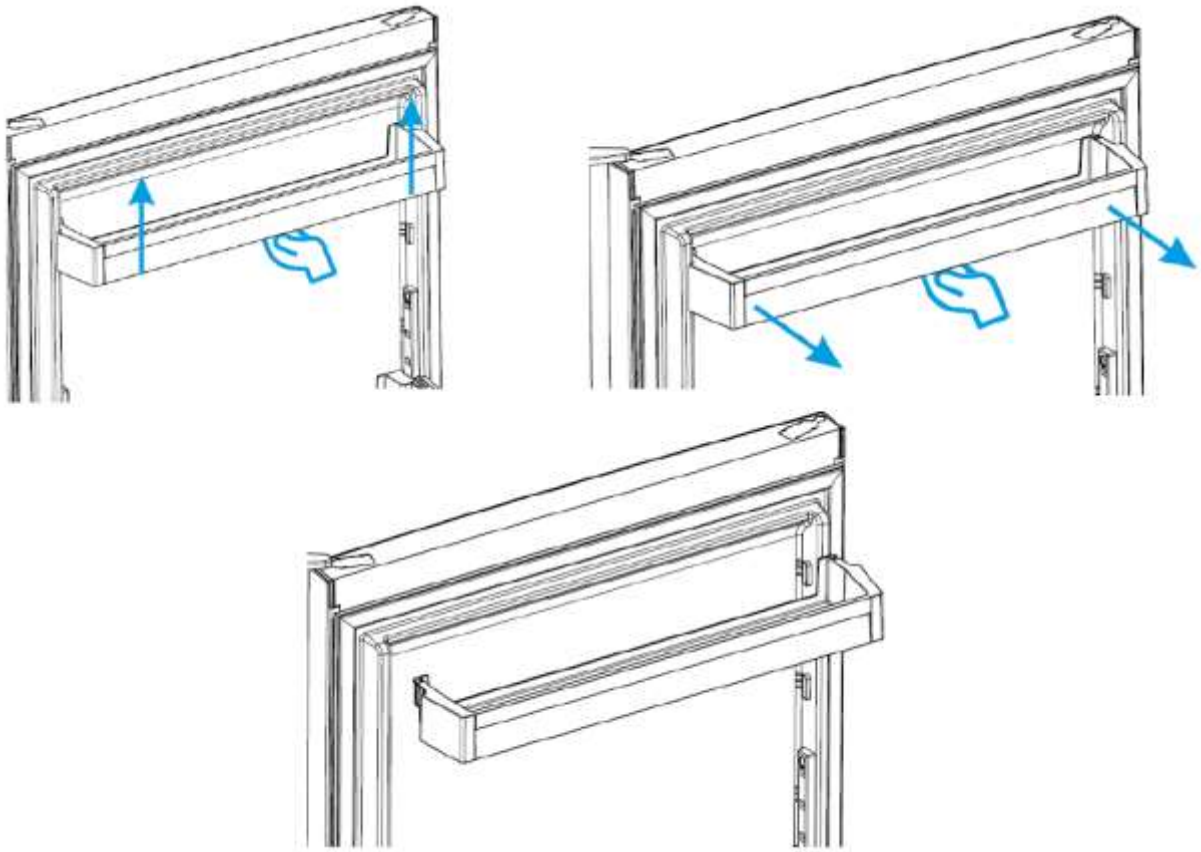


REPLACEMENT PROCEDURE	Applicable models General	EN

Part name	Adjustable Door Shelf	


First grip the door shelf by both hands, at the same time using your thumbs, pull latches on sides towards yourself.
This will unlock the mechanism, so you can lift the shelf all the way up and free the shelf from its guides on the door.

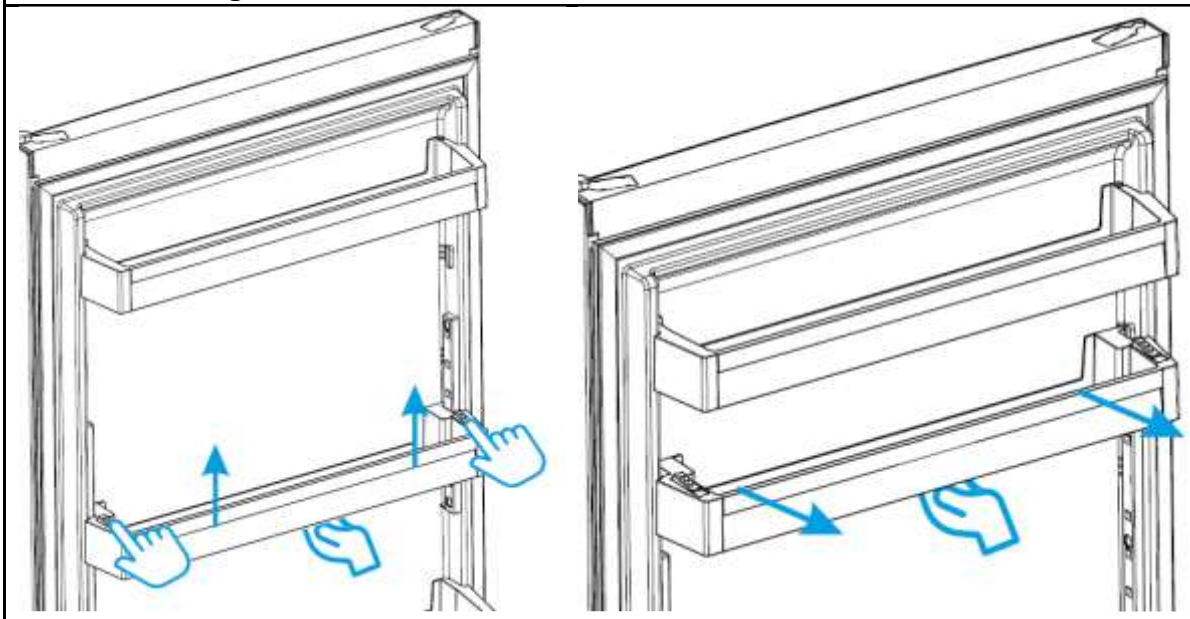


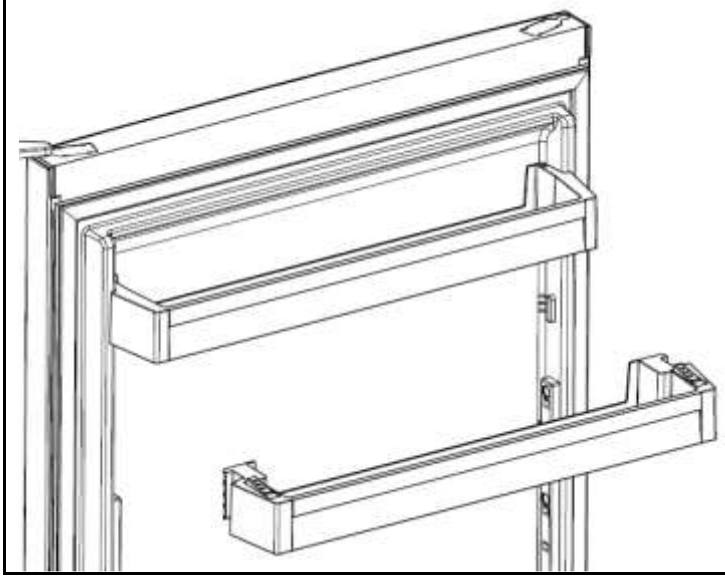


REPLACEMENT PROCEDURE	Applicable models General	EN
Part name	**Basket, Chiller, Crisper Change**	


First pull the basket out until it reaches end position. Then gently pull front side up until frees from its guides on the sides. Finally continue pulling it out and remove it from place.

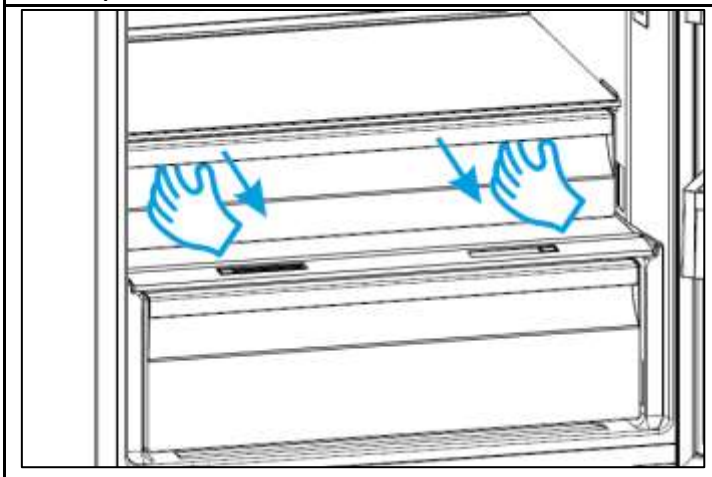


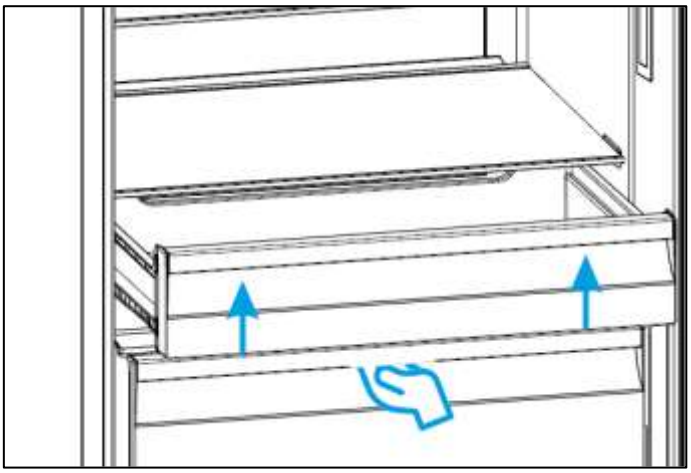

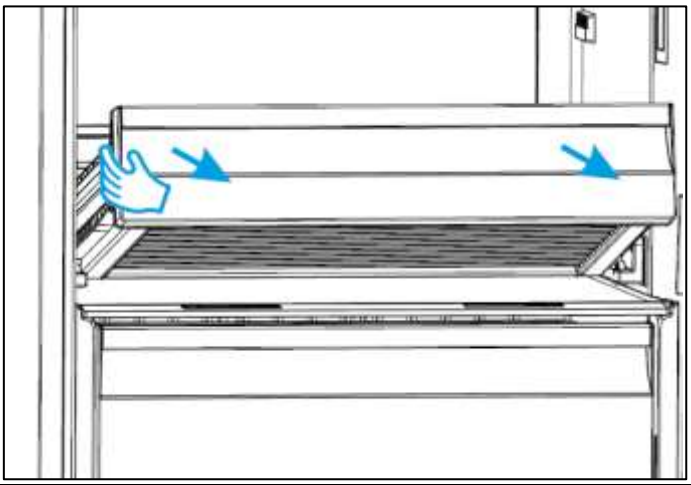

REPLACEMENT PROCEDURE	Applicable models General	EN
Part name	**Maxifresh Change**	

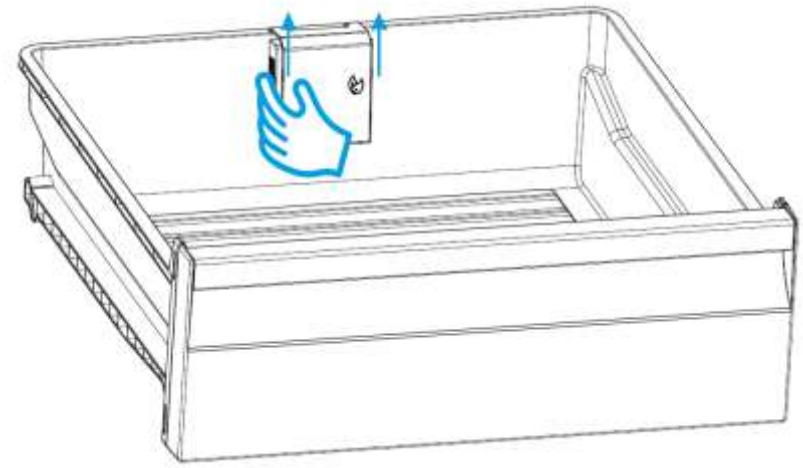


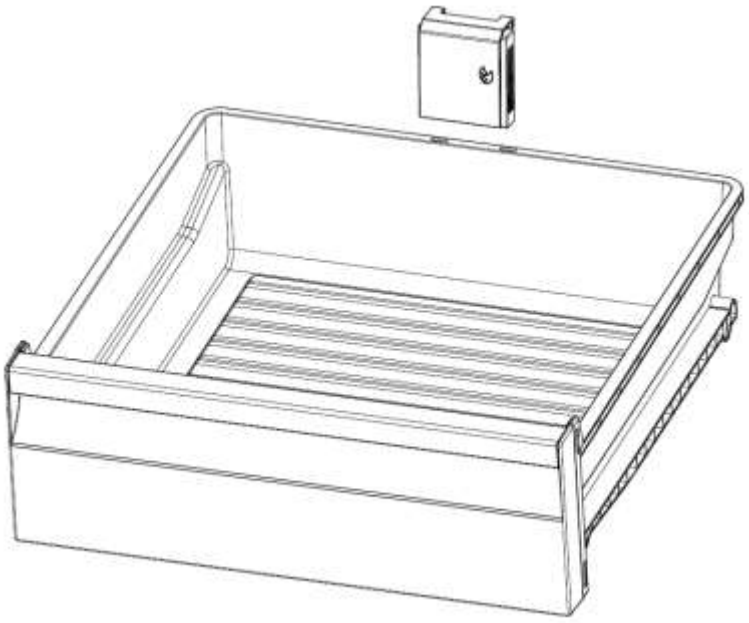


REPLACEMENT PROCEDURE	Applicable models General	EN
Part name	**Door Gasket**	

Replacement of Door Gasket

Pull the gasket towards starting from top right corner
Slowly pull the rest of the gasket.
Completely remove the gasket from door.

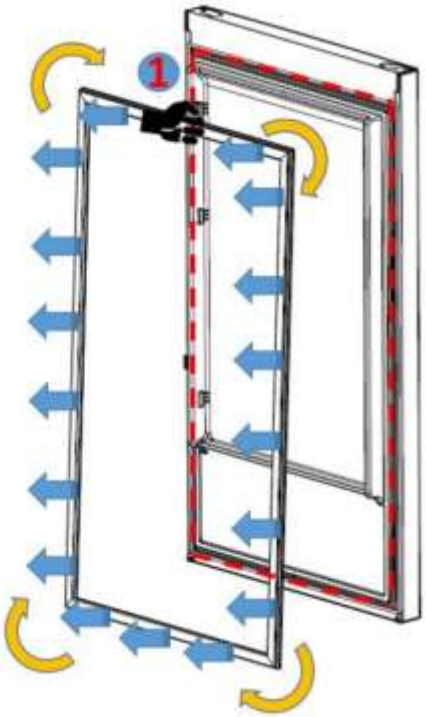

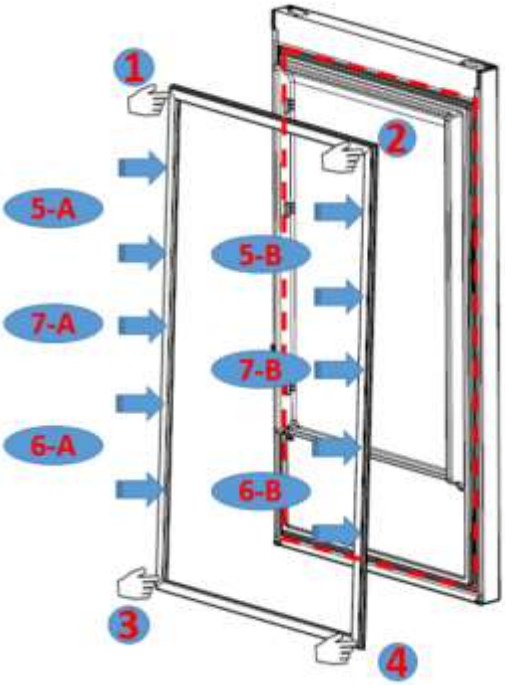

Check the replacement gasket form
Starting with upper right corner, press on the gasket until it fits to its place..
Place the other sides of the gasket with the help of your thumb

After the replacement check if there any non-fitting point on the gasket. Also check if there any opening at the gasket while the door is closed. If so that might cause condensation/icing or insufficient cooling/freezing. To prevent this soften the form of the gasket with the help of a hair dryer or hot water and make sure that all points are closing perfectly.

The following parts are available for the customer to undertake repairs at their own risk. Please carefully follow the guidance given in this manual including all safety measures.

- Door
- Door hinge and seals
- Other seals
- Door locking assembly
- Plastic peripherals such as detergent dispensers

Parts can be obtained by calling the support service listed in this section.
All repairs in this manual can be achieved using commonly available tools.

If you are in any doubt of your ability to carry out a repair, please use a professional service, also available through the support service.
Damage sustained to the appliance or future faults arising from poorly carried out repairs will not be covered under warranty.

Help and assistance

If you require any technical guidance or find that your washing machine is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.bush-support.com**

If you still require further assistance, call one of our experts on **0345 257 7271***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.		You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your appliance
Serial number		
Date of purchase		This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Notes on disposal :



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.