BUSH

Instruction Manual

CSPk401WWI




IMPORTANT SAFETY INFORMATION

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE ANY COVER. NO USER-SERVICEABLE PARTS INSIDE, REFER ANY SERVICING TO QUALIFIED SERVICE PERSONNEL.

- Please read this owner's guide
- Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features.
- Please save this owner's guide for future reference.
- The product label is located on the back of the product.
- This product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
- Heed all warnings - on the product and in the owner's guide.
- Do not use this apparatus near water or moisture. Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time - to prevent damage to this product.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped - Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards.
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
- Use proper power sources - Plug the product into a proper power source, as described in the operating instructions or as marked on the product
- The mains plug is used as the disconnect device, the disconnect device shall remain readily accessible

EXPLANATION OF SYMBOLS

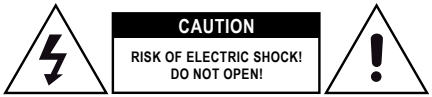

This lightning flash symbol is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's encasement that may be of sufficient magnitude to constitute a risk of electric shock to persons. This exclamation mark symbol is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

To prevent fire or shock hazard, do not expose this appliance to rain or moisture.
If this happens, make sure the power to the electrical outlet is turned off before you touch or unplug the unit.

Made for iPod iPhone

Made for iPod," and "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance

iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

INDEX

Important safety information....1
Specifications....2
Care and maintenance....2
Contact details....2
Contents....2
Location....2
Controls and connectors....3

POWER OPTIONS

Connecting the mains power....3
Replacing the remote batteries....4

GENERAL OPERATION

Getting started....4
Standby mode....4
Volume adjustment....4
Mute function....4
EQ sound effects....4

IPOD / IPHONE OPERATION

Connecting an ipod / iphone....4
IPod / iPhone playback....5
IPod / iPhone controls....5
IPod / iPhone video output....5

AUX OPERATION

Aux input mode....5-6
Troubleshooting....6
Warranty....7

SPECIFICATIONS

Supply Voltage, Mains:....100-240V~50/60Hz
Output:....18V, 2A
Max. Power Consumption....35W
Speaker Power:....2 x 20W
Speaker Impedance:....8 Ohms
Dimensions:....283(L) x 127(W) x 124(H) approx

CARE AND MAINTENANCE

AFTER USE

- Set to Standby.
- Switch the unit off at the mains and unplug it if you are leaving it unattended for a long period (holidays etc).

CARE AND CLEANING

All care and cleaning operations should be carried out with the unit unplugged from the mains power.
Occasionally wipe the cabinet with a lint free duster. Never clean the unit with liquids or solvents.

LOCATION

Place the unit on a dry stable surface away from heat and damp and where it is unlikely to fall or be knocked over.

CONTACT DETAILS

In the unlikely event of difficulties with your appliance please contact the retailer if the machine is still under guarantee.

Customer helpline: 0870 600 3030

PRELIMINARIES

CONTENTS


The carton should contain:

- 1 x CSPK401Wi
- 1 x Mains power adaptor
- 1 x Operating manual
- 1 x Remote control (with battery)
- 4 x Adhesive rubber feet


CE This appliance complies with the following EU directives: 2006/95/EC Low voltage directive / 2004/108/EC EMC directive , 2002/96/EC WEEE directive.

The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.

CONTROLS AND CONNECTORS

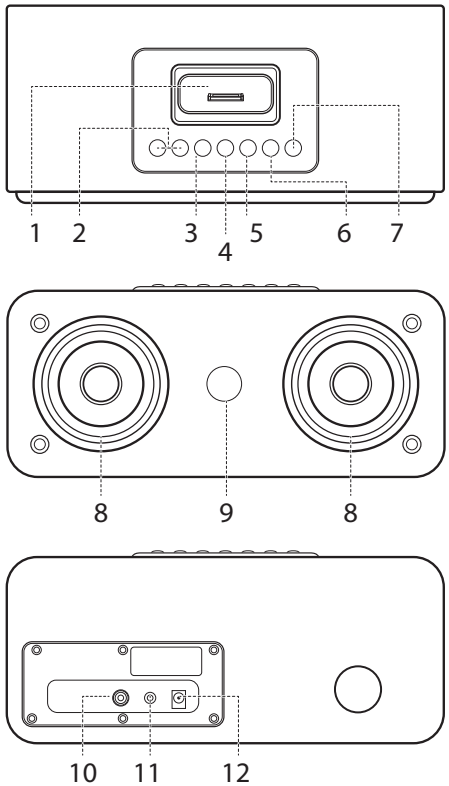


1. iPod / iPhone dock connector
2. VOLUME control buttons
3. INPUT MODE button
4. STANDBY button

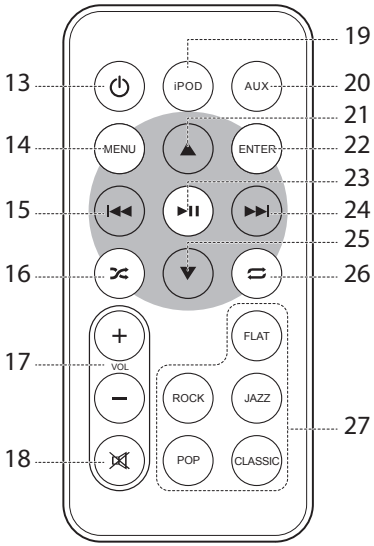

5. PLAY / PAUSE ▶/❚❚ button
6. PREV / FRWD ⏮ button
7. NEXT / FFWD ⏭ button
8. Speakers
9. IR remote sensor /POWER indicator
10. Composite video output socket
11. AUX IN socket
12. DC IN mains power socket
13. STANDBY button
14. MENU button
15. PREV / FRWD ⏮ button
16. SHUFFLE/RANDOM button
17. VOLUME control buttons
18. MUTE button
19. IPOD input button
20. AUX input button
21. ▲ UP navigation button
22. ENTER button
23. PLAY / PAUSE ▶/❚❚ button
24. NEXT / FFWD ⏭ button
25. ▼ DOWN navigation button
26. REPEAT ONE/ALL button
27. SOUND EQ buttons

POWER OPTIONS

CONNECTING MAINS POWER

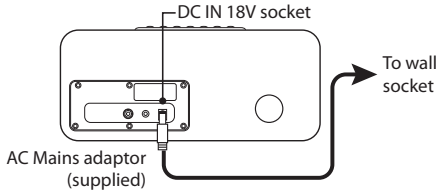


- Connect the mains adaptor to the wall socket
- Connect the other end of the adaptor (18V jack) into the **DC mains input socket** on the rear of the unit (12).
- Switch the wall socket **ON**.

NOTE: Only use the supplied mains adaptor. Do not use any other AC power adaptor to avoid damaging the unit.

POWER OPTIONS

REPLACING THE REMOTE BATTERIES

- Replace the remote control battery when it no longer operates the unit, or the range is reduced considerably.
- Use only CR2025 3V lithium batteries
- Bear in mind that lighting & other room conditions, in addition to battery age, can affect the operating range of an infrared remote control.

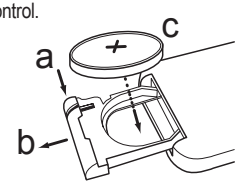

1. Press the tab on the bottom of the remote control inwards as shown (a).
2. Pull the battery compartment out (b).
3. Remove old battery and replace with the same type with the + facing upwards (c).
4. Push the battery compartment back inside the remote and close.

GENERAL OPERATION

GETTING STARTED

Before use the remote control will need the plastic protection tab removing from the bottom. Just pull this tab out so the battery can make the connection with the terminals.

STANDBY MODE

Press the **STANDBY** button (4,13) to enter **STANDBY** mode, the **POWER indicator** (9) will go out. To power the unit **ON** press the **STANDBY** button once more The **POWER indicator** will illuminate '**green**' to indicate iPod / iPhone mode.

NOTE: As part of the power saving mode the unit will enter **STANDBY** mode automatically after 20 minutes (approx) of no audio output. A docked iPod / iPhone will continue to charge.

VOLUME ADJUSTMENT

1. To increase the volume level press the **VOLUME +** button (2,17) repeatedly or press and hold for fast adjustment.
2. To decrease the volume level press the **VOLUME-** button (2,17) repeatedly or press and hold for fast adjustment.

MUTE FUNCTION

To temporarily mute the sound output of the speaker, press the **MUTE** button (18). To resume the sound output press again.

EQ SOUND EFFECTS


There are five sound EQ presets available to choose from.

1. Press one of the options from the **SOUND EQ** buttons (27). Choose from **FLAT**, **ROCK**, **JAZZ**, **POP** & **CLASSIC**. Each button will alter the audio EQ output. So you may want to try each one to get an idea of what effect it has on the genre of music.


IPOD / IPHONE OPERATION

CONNECTING AN IPOD / IPHONE

1. Press the **STANDBY** button (4,13) to power the unit **ON**. You will see the **POWER indicator** (9) illuminate with a green dot, to indicate the unit is **ON** and in iPod/iPhone mode (default mode).

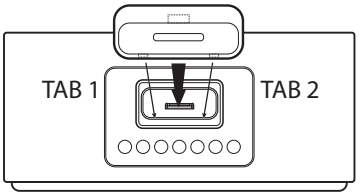

2. Place your official iPod / iPhone® docking adapter onto the iPod / iPhone dock, taking care to match and insert the two locking tabs into the two rectangular holes in the front of the dock and press down gently to secure.

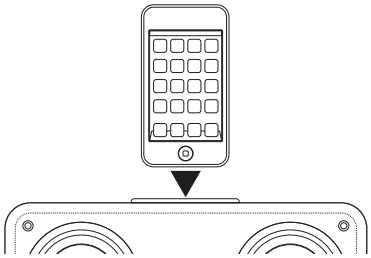

3. Connect a compatible iPod / iPhone to the dock connector (1). Take care when connecting not to damage the 30 pin connector.

IPOD / IPHONE OPERATION

IPOD / IPHONE PLAYBACK

1. Press the **IPOD** button (19) on the remote control to switch to the iPod mode (if not already in that mode).
2. The unit will begin to play back the last selected track on your device automatically. If you can't hear any sound after 20 seconds, remove & re-seat the device.

NOTE: Before you re-dock the device, make sure you are not playing a video.

3. You can now either select audio from your device to play using the iPod / iPhone's controls or by using the remote control. See iPod / iPhone controls below.
4. While the iPod / iPhone is docked the internal battery will be charged until full.

IPOD / IPHONE CONTROLS

1. To skip through the available iPod / iPhone menus press the **MENU** button (14).
2. Use the ▲ **UP** / ▼ **DOWN** navigation buttons (21,25) to scroll up and down through the menu items.
3. To select an item press the **ENTER** button (22). This button will also select a track to begin playback.
4. You can skip to the next track by pressing the **NEXT / FFWD** ▶▶| button (7,24). Press and hold to fast forward the current track.
5. You can skip to the previous track by pressing the **PREV / FRWD** |◀◀ button (6,15). Press and hold to fast rewind the current track.
6. To play a track press the **PLAY/PAUSE** ▶/❚❚ button (5,23), to pause a track that's currently playing press again.

IPOD / IPHONE OPERATION


7. To enable the shuffle/random function of your device press the **SHUFFLE/RANDOM** button (16). Press again to cancel.
8. To repeat the current track press the **REPEAT ONE/ALL** button (26). To repeat all the tracks in an album press again. To cancel press once more.

NOTE: IOS 7 no longer supports the following remote functions (Navigation UP /DOWN, SELECT & MENU).

IPOD / IPHONE VIDEO OUTPUT

It is possible to view videos stored on your iPod / iPhone through the speaker and onto your TV screen.

1. Connect a composite video cable (not supplied) to the '**Composite video output socket**' (10).

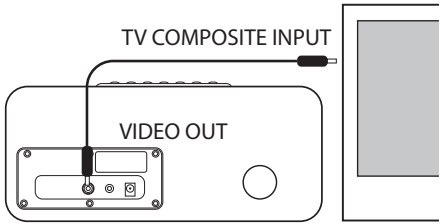

2. Connect the other end of the composite video cable to the **VIDEO** input on your TV. The connector is usually a yellow colour.
3. Dock your iPod / iPhone (if not already).
4. Ensure the **POWER** is **ON**.

IPOD / IPHONE OPERATION

5. Press the **IPOD** button on the remote to switch to iPod / iPhone mode.
6. Switch the TV input mode to composite.
7. Play the video on your device and the video will appear on the TV screen.


NOTE: The audio of the video will still come from the CSPK401Wi speaker because the cable only carries a video signal.

AUX INPUT OPERATION

AUX INPUT MODE

Follow the steps below to connect the unit to an external audio device using a **3.5mm** audio cable (not supplied).

1. Connect one end of the cable (not supplied) to the MP3 players headphone / Line output and the other end to the AUX input (11) on the rear of the unit.

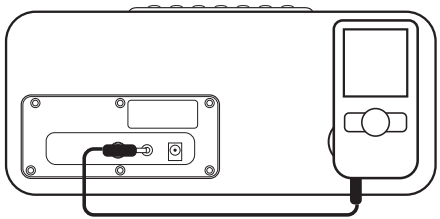

AUX INPUT OPERATION

2. Press the **STANDBY** button to power **ON** from **STANDBY** mode (if not already powered **ON**). The **POWER indicator** will illuminate '**green**' to indicate the default iPod/iPhone mode is active.
3. Press the **INPUT MODE** button on the unit (3) or the **AUX** button on the remote (20) to switch to **AUX** mode. The **POWER indicator** will now illuminate '**red**' to indicate **AUX** mode is active.
4. Press **PLAY** on the external audio source EG:-MP3 player.

NOTE: The volume output is effected by the volume level on the source EG: MP3 player so make sure that is set to about 70-80% (not too loud to avoid distortion).

5. Adjust the **VOLUME** controls (2,17) on the unit or remote to the required listening level.

TROUBLESHOOTING

Symptom	Possible Cause	Solution
The iPod/iPhone will not play	1. The unit is not in iPod mode. 2. The iPod/iPhone is not connected correctly.	1. Press **MODE** button on the unit repeatedly or press IPOD button to switch to iPod mode. 2. Reconnect the iPod/iPhone.
No iPod/iPhone sound.	1. The unit is not in iPod mode. 2. The volume has been muted or is on the minimum setting.	1. Press **MODE** button on the unit repeatedly or press IPOD button to switch to iPod mode. 2. Adjust the volume level or press **MUTE** button to resume audio.
No sound in AUX IN mode.	1. The audio device is not connected to the unit properly. 2. The volume level of the unit or the audio device is too low.	1. Re-connect the audio device to the unit. 2. Adjust the volume level of the unit and the external audio device.

FITTING THE RUBBER FEET

Supplied with the unit are four adhesive rubber feet to aid grip on a flat surface. Follow the diagram below to fit.

1. Turn the unit over so the bottom is facing upwards.
2. Peel the backing film off each rubber foot, and place one in each corner of the unit as shown in the diagram opposite.



BUSH

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalided if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Limited
489 - 499 Avebury Boulevard
Central Milton Keynes MK9 2NW