
BUSH

Instruction Manual

122/4809

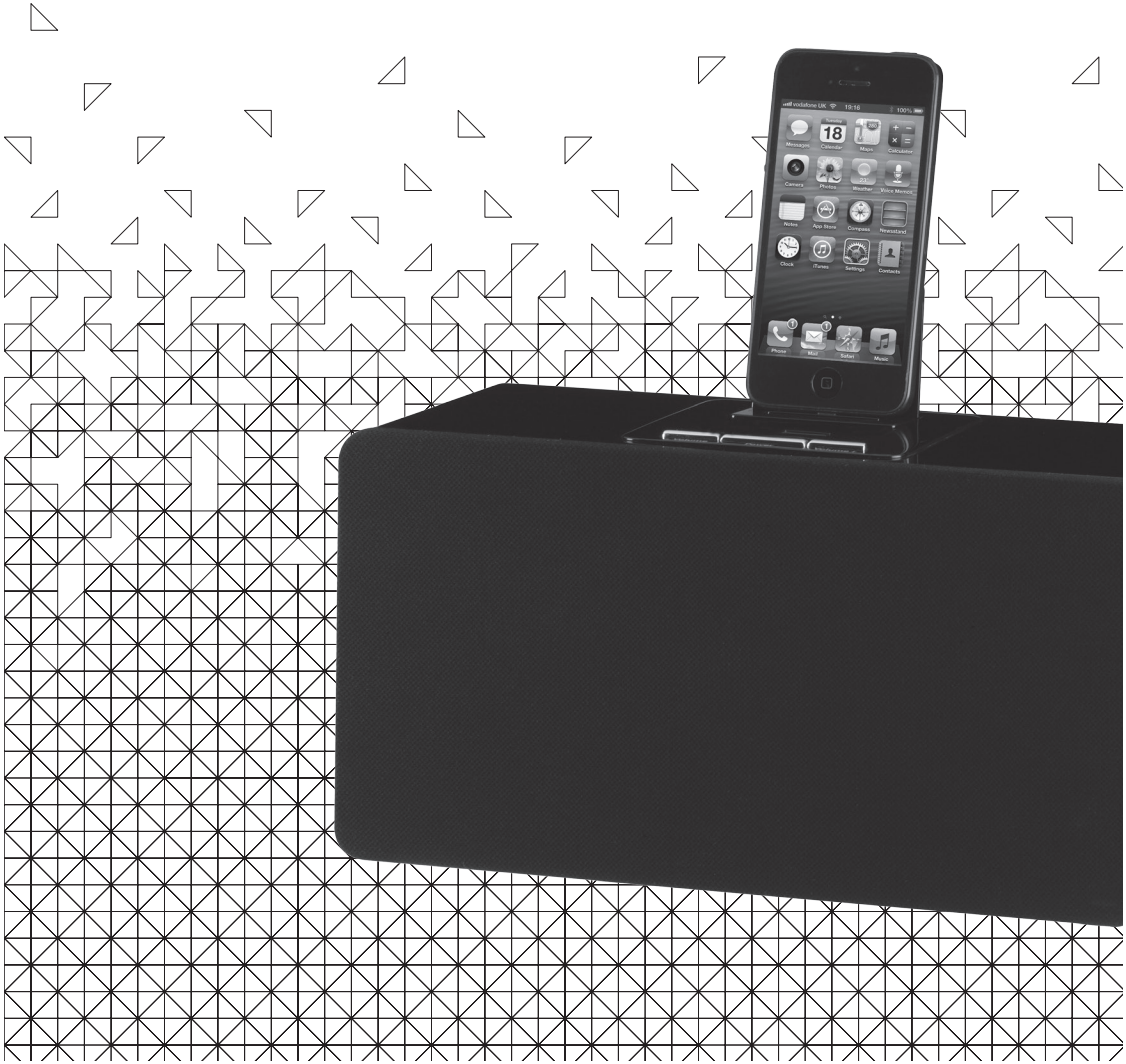

Contents

Important safety information....3
Product set up....4
- What's in the box?....4
- Where to put your speaker dock....4
- Setting up....4

Your stereo speaker dock....5
Using your stereo speaker dock....6
- Switch on/off....6
- To turn the speaker dock off:....6
- Changing modes....6
- Docking an iPod / iPhone / iPad....6
- To remove your iPod / iPhone / iPad from the dock:....6
- Charging an iPod / iPhone / iPad....7
- Playing from a docked iPod / iPhone / iPad:....7
- Aux in mode....7
- Connecting to the Audio Input jack....7

Simple solutions....8
General information....9
Product guarantee....10

⚠ Important safety information

Your Speaker Dock should be treated with care. The information below has been provided in the interest of safety and will help you to enjoy this product and the benefits it brings for many years.

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- Do NOT block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product
- Do NOT store in dusty or dirty areas.
- Disconnect your Speaker Dock from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Speaker Dock, before you change or disconnect the power supply.
- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do NOT use your Speaker Dock near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.
- Do NOT use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.

Product set up

What's in the box?

- 1 x Stereo speaker dock
- 1 x Mains power adaptor
- 1 x User guide
- 1 x Warranty card

Where to put your speaker dock

It is important that you consider carefully in advance where your product will be situated and make sure that it is:

- on a flat and stable surface
- within 1.4 metres of a power socket
- away from bright sunlight or heat sources, such as a radiator
- not in a humid or very damp place such as a bathroom

Setting up


1. Connect the mains power lead into the socket on the back of the dock and plug the power adaptor into the mains power wall socket and switch on.
2. Switch on the power button on the back of the dock and then press the 'Standby/Mode' button on the top of the speaker dock.
3. Briefly press the 'Standby/Mode' button to switch between 'iPod' and 'Aux in' mode.
   - iPod mode: The LED on the front of the product will be blue.
   - Aux in mode: The LED on the front on the product will be red. Please see Page 7 for 'Aux in' mode.
4. Open the cover on the top of the speaker dock to reveal the iPod / iPhone / iPad dock connector.
5. In 'iPod' mode, line up the connector on the bottom of your iPod / iPhone / iPad with the dock connector on the top of the speaker dock and push down to connect. The dock will begin to charge your iPod / iPhone / iPad, if necessary, and will begin to play the music stored on your iPod / iPhone / iPad.

   Charging will stop automatically when your iPod / iPhone / iPad is fully charged (check your iPod / iPhone / iPad display).


Note: Care should be taken when connecting your iPod / iPhone / iPad to the dock connector on your speaker dock product to avoid damage. Please ensure to line up your iPod / iPhone / iPad with the dock connector before pushing down.

Your stereo speaker dock

Top view

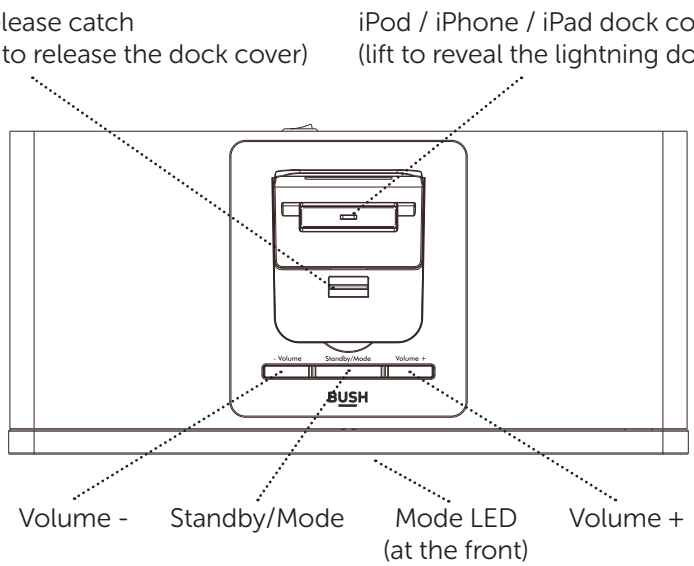

Back view

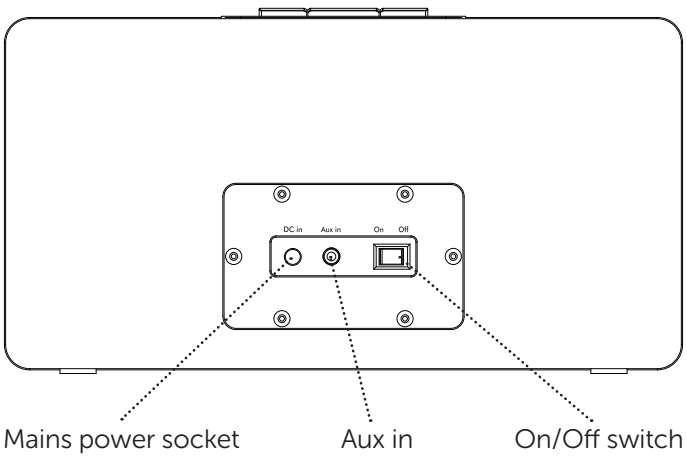

Using your stereo speaker dock

Switch on/off

To turn the speaker dock on:

- Press the on/off switch on the back of the speaker dock to 'On' and press the 'Standby/Mode' button on the top of the speaker dock. The product will switch on.

To turn the speaker dock off:

- Press and hold the 'Standby/Mode' button for approximately 5 seconds to go to 'Standby' mode. The mode LED on the front of the speaker dock will turn off.
- To switch off your product, press the on/off switch on the back of the speaker dock to 'Off'. The product will switch off.

  Note: To completely disconnect your speaker dock product, please switch off the mains power at the plug socket.

Changing modes

Briefly press the 'Standby/Mode' button to switch between 'iPod' and 'Aux in' modes.

- iPod mode: The LED on the front of the product will be blue.
- Aux in mode: The LED on the front of the product will be red.

Docking an iPod / iPhone / iPad

Note: If you use a cover with your iPod / iPhone / iPad, please remove it before attempting to dock your product.

- Open the cover on the top of the speaker dock to reveal the iPod / iPhone / iPad dock connector.
- In 'iPod' mode, line up the connector on the bottom of your iPod / iPhone / iPad with the dock connector and press down to connect. The dock will begin to play the music on your iPod / iPhone / iPad.

To remove your iPod / iPhone / iPad from the dock:

- Press and hold the 'Standby/Mode' button for approximately 5 seconds to go to 'Standby' mode. The mode LED on the front of the speaker dock will turn off.
- Grip the iPod / iPhone / iPad by the sides and pull up.
- Press the cover switch on the top of the speaker dock to release the cover, which can then be folded down over the dock connector.

Charging an iPod / iPhone / iPad

When an iPod / iPhone / iPad is docked, the iPod / iPhone / iPad will begin to charge automatically.

Notes:

The iPod / iPhone / iPad will charge when the speaker dock is connected to mains power, including in 'Standby' mode. Charging will stop when your iPod / iPhone / iPad is fully charged. (Check your iPod / iPhone / iPad display).

If you use a cover with your iPod / iPhone / iPad, please remove it before attempting to dock your product.

Playing from a docked iPod / iPhone / iPad:

You can use the controls on your iPod / iPhone / iPad as normal when it is docked with your speaker dock.

Adjusting the volume

- To increase the volume: Press the 'Vol +' button on the top of the speaker dock.
- To decrease the volume: Press the 'Vol -' button on the top of the speaker dock.

Note:

If you experience problems with playback from your Apple product, please ensure that it has been updated with the latest software version

Aux in mode

Using the Aux in socket on the back of the speaker dock you can connect an external sound source with a Line or Headphone analogue output to play through your speaker dock.

These may include -

- iPod, iPhone or iPad models that cannot be docked to the unit
- MP3 players
- CD or tape walkmans
- Personal computers or laptops

Connecting to the Audio Input jack

In Aux in mode, connect a 3.5mm Audio Input cable (not included), between the headphone or LINE/AUX output of the personal audio player and the Aux in socket on the back of the speaker dock.

To gain optimal volume levels, adjust the output volume level on both the external secondary device and on your speaker dock.

Simple solutions

If you are experiencing problems with your speaker dock there are some quick and easy checks that you can do, which may help to solve the problem.

Problem	Solution
No sound/low volume:	• Adjust the volume using the Vol + button. • Check that the mains power lead is connected at the back of the product, the mains power wall socket is switched on, the speaker dock is switched on at the back, you have pressed the 'Standby/Mode' button and are in 'iPod' mode. • Check that your iPod / iPhone / iPad is switched on and that a music track is selected and playing. • Check that your iPod / iPhone / iPad is not paused. • Remove your iPod / iPhone / iPad and then reconnect it. • In 'Aux in' mode, check that the volume control is turned up on the external source
Your iPod / iPhone / iPad does not dock	• If you use a cover with your iPod / iPhone / iPad, please remove it before attempting to dock your product. • Remove your iPod / iPhone / iPad and check that the connector on the dock and your iPod / iPhone / iPad are clean and free from obstructions.
Your iPod / iPhone / iPad is not charging	• Check that the mains power lead is connected at the back of the product, the mains power wall socket is switched on and the speaker dock is switched on at the back. • If you use a cover with your iPod / iPhone / iPad, please remove it before attempting to dock your product. • Check that your iPod / iPhone / iPad has been pushed fully home onto the dock connector.

General information

This symbol  indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk

BUSH

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.

The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd.,
489-499 Avebury Boulevard
Central Milton Keynes
MK9 2NW

CE

Jun15/Issue2.2