
Freeview+ HD Digital TV Recorder

Installation & Operating Instructions | 127/8037

BUSH

BU102ZRH50

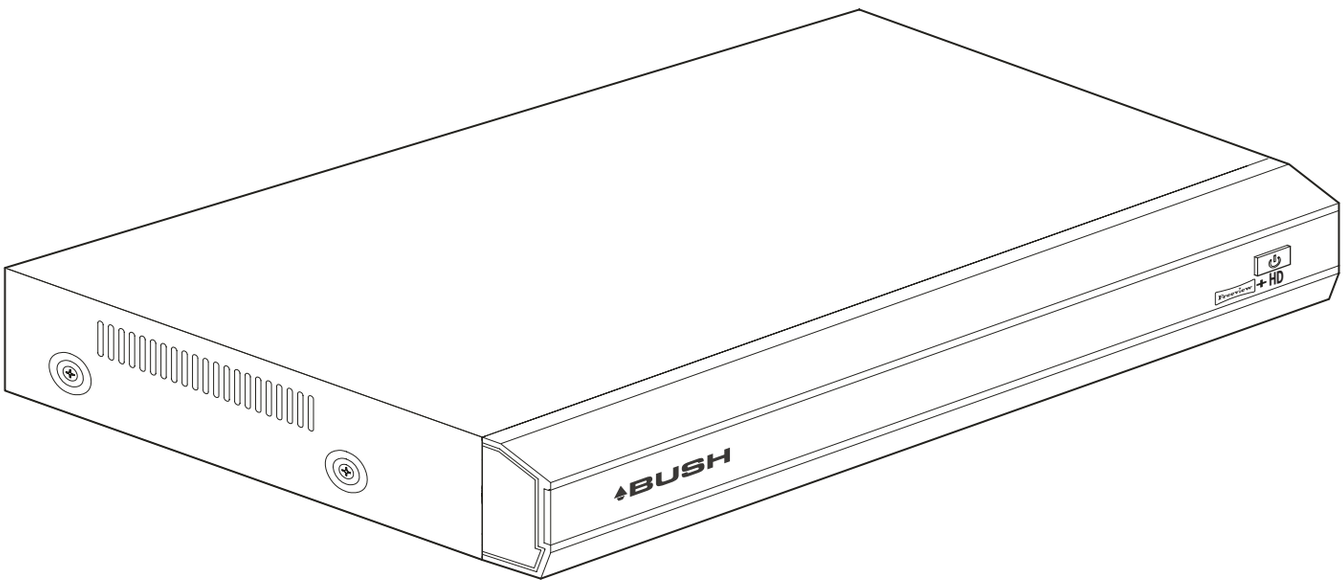

Freeview +HD

Important - Please read these instructions fully before installing or operating

These instructions contain important information which will help you get the best from your digital TV recorder and ensure safe and correct installation and operation.

For any help concerning set up and use of your digital TV recorder please call the Customer Helpline: 0845 604 0105

Lines open: 9am - 8pm Monday to Saturday and 10am - 4pm Sunday

BU102ZRH50 - 13/6/13

Contents

Getting Started **4-9**

- Product Features 4
- Accessories included 4
- Recording and Playback - Features 4
- Your remote control 5
- Connecting your digital box to your TV 6
- Connecting your digital box to your broadband router 6
- Power connection 7
- Remote control - inserting batteries 7
- Initial set up 8

Basic Features **10-14**

- Using your digital box 10
- Selecting channels 10
- Using the number buttons 10
- Using the change channel buttons 10
- Using the guide 10
- Using the channel list 10
- Changing the volume 11
- Using mute 11
- Pausing live TV 11
- Recording a programme 12
- Using the library 12
- Other remote control buttons 13

Advanced Features **15-22**

- Main menu 15
- Guide 15
- Recording 16
- Setting a reminder 18
- Library 19
- BBC iPlayer 21
- Channel list 21

Settings Menu **23-28**

- Using settings 23
- Display and audio 23
- Language 24
- Parental 24
- Recording 25
- System 27

Safety Information **29**

Product Support **31-34**

- Argos technical helpline 31
- Trouble shooting 32
- Disposal information 34

Guarantee **36**

BU102ZRH50 User Guide_v2.indd 2 13/06/2013 09:49:12

Getting Started

The Argos Technical Helpline is here to help

Technical experts are available 7 days a week

- **Simple help and advice on setting up your digital TV recorder.**
- **Guidance on connecting other devices to your digital TV recorder such as a DVD player.**
- **Order spare parts, including that lost remote control.**
- **Any other technical issues you may need assistance with.**

Call us today: 0845 604 0105

Local call rates applies*

Lines open 9am-8pm Monday to Saturday and 10am-4pm Sunday.

* Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

BU102ZRH50 User Guide_v2.indd 3 13/06/2013 09:49:12

Getting Started

Product Features

- Twin tuners.
- Play, pause, record and rewind live TV.
- 8 day Electronic Programme Guide (EPG).
- Watch High Definition (HD) programmes.
- Catch up TV service (BBC iPlayer).
- First time install wizard.
- High definition user interface.
- Less than 0.5 Watt standby power consumption.
- Subtiltles.
- Audio description.

Recording and Playback - Features

- Hard Disk Drive information.
- Record over 300 hours of your favourite programmes:
  312 hours standard definition.
  125 hours high definition.
- Simultaneously watch one channel and record another.

Accessories included

Remote control

RF cable

Batteries: 2 x AAA


Instruction Book


Power Adapter


HDMI cable





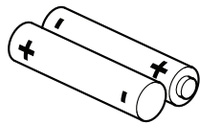

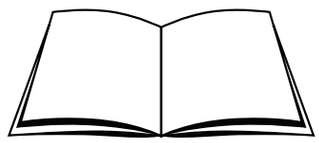

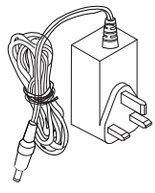




For any help concerning set up and use of your digital TV recorder please call the **Customer Helpline: 0845 604 0105**

BU102ZRH50 User Guide_v2.indd 4 13/06/2013 09:49:12

Getting Started

Your remote control

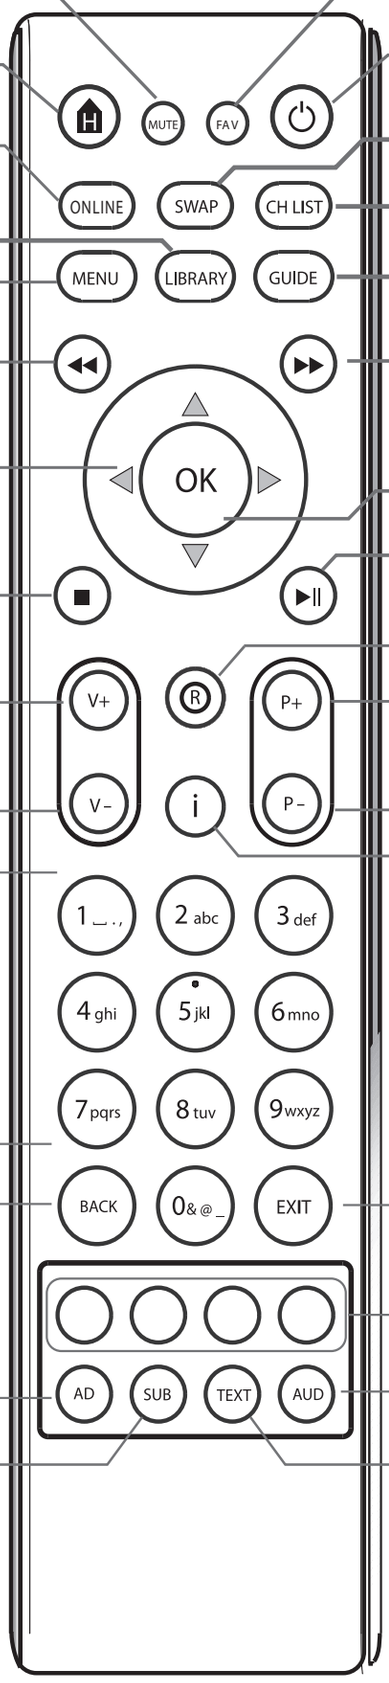

MUTE: Turns your TV sound on/off

HOME: Press to return to BBC1 at any time

ONLINE: Display the online menu

LIBRARY: Displays a library of previously recorded programming

MENU: Display the Main Menu

◄◄ **REWIND**: (1) Fast Rewind at variable speeds (2) Step through menu bars

▲▼◄► Navigation: Navigate up/down/left/right in menus/on screen displays

■ **STOP:** Stops recording or live paused TV

Volume (V+ V-): Changes your TV volume

0 – 9: Numerical keys

BACK: Return to previous menu

AD: Set Audio Description on/off

SUB: Set subtitles on/off

FAV (Favourites List): Displays the list of your favourite channels

POWER: Switches the main unit to standby

SWAP: Switches between previous and currently watched TV channels

CH LIST (Channel List): Display the list of stored channels

GUIDE: Display the TV programme guide

►► **FAST FWD**: (1) Fast Forward at variable speeds (2) Step through menu bars

OK: Press to confirm current selection

►II **PLAY/PAUSE** : Toggle action for recordings and Live Pause TV

Ⓡ **(RECORD)** (1) Record a programme (2) Set a future recording

P+, **P-** (Change Channel): Changes your TV channels

i (Information): Displays information about programmes and recordings

EXIT: Exit the menu and return to live TV

RED, GREEN, YELLOW, BLUE Coloured Buttons: quick keys

AUD: Select audio language (if available)

TEXT: Load text services available on some channels


BU102ZRH50 User Guide_v2.indd 5 13/06/2013 09:49:13

Getting Started

Connecting your digital box to your TV

Your digital box connects to your TV via an HDMI connection.


There are three cables to be connected as shown below.

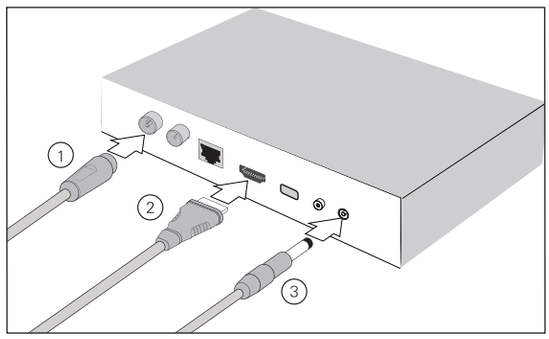

1. **Cable 1.** Connect the aerial cable between the RF IN socket on your digital box and your external aerial wall socket.
2. **Cable 2.** (HDMI). Connect the HDMI cable between the HDMI socket on the back of your digital box and an HDMI socket on your HD Ready TV.
3. **Cable 3.** Connect the power socket on the cable from the power adaptor to the 12V DC IN connection on the back of your digital box.

Connecting your digital box to your broadband router

If you are not ready to complete this stage of the setup at this time, you can skip this step and continue with setting up your digital box. Connecting to the internet enables you to use catch up TV services such as BBC iPlayer.

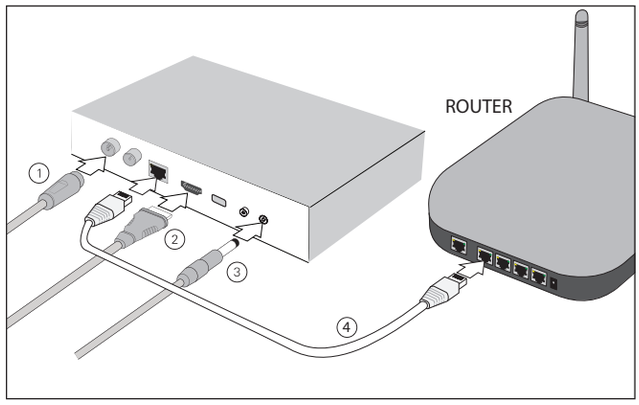

4. **Cables 1, 2 and 3.** First follow the set up instructions as shown above.
5. **Cable 4.** Connect an Ethernet cable (not included) to the NETWORK connection on your digital box. Connect the other end of the Ethernet cable to a free Ethernet socket on the back of your router.


For any help concerning set up and use of your digital TV recorder please call the **Customer Helpline: 0845 604 0105**

BU102ZRH50 User Guide_v2.indd 6 13/06/2013 09:49:13

Getting Started

Power Connection

Before connecting the power to the digital box, check that the mains voltage on the rating plate is the same as the voltage in your area. Plug the power connector on the power supply into the 12V DC IN connector on the rear panel of the digital box. Plug the power adapter into the wall socket and switch on the mains power.

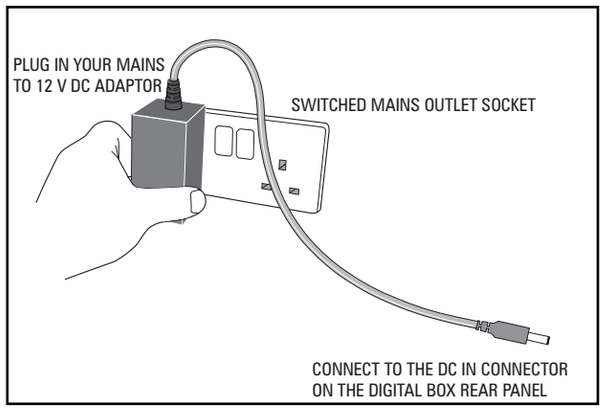

Remote control - inserting batteries

Remove the battery cover on the back of the remote control, gently push down and pull backwards at the same time.

Insert two AAA/R3 or equivalent type batteries. Ensure the batteries are inserted the correct way and replace the battery cover.

Note: *When the remote control is not going to be used for long periods of time, the batteries should be removed. Otherwise the remote control may be damaged, caused by battery leakage and corrosion.*

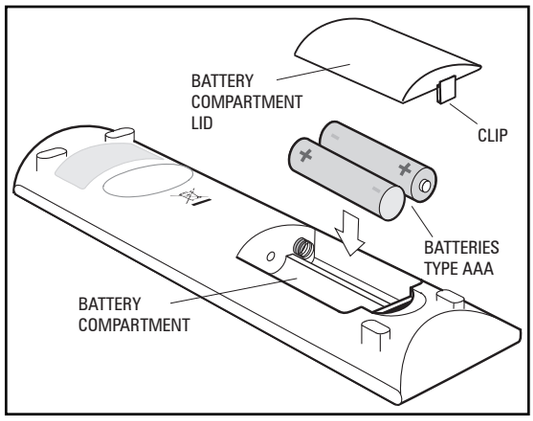


fig.**4b**

BU102ZRH50 User Guide_v2.indd 7 13/06/2013 09:49:13

Getting Started

Initial set up

Easy install (recommended)

When you first connect your digital box to a TV and turn it on, the 'First Time Installation' screen will be displayed.

Easy install is the recommended option as it will attempt to find the optimal settings for your TV and digital box.

'First Time Installation' will scan for TV and Radio channels and store the results on the digital box. This process will take approximately 8-10 minutes to complete.

You can press the **BACK** Button at any time to return to the previous step.

Easy install may not always provide the optimum setting level for your TV. If you know the screen size (aspect ratio) of your display you can set this manually by following the Advanced install set-up process.

1. The Installer screen will be displayed. If 'Easy' is not already selected, press the ◄ Button on your remote control to select it.




2. Press the **OK** Button to begin.
3. The 'Easy Setup' screen will be displayed with the 'TV Setup' function selected.



4. Press the **OK** Button.
5. The 'Set PIN' function will run. You can choose a new PIN using the number keys (**0 to 9**) on the remote control. Press **OK** to confirm your selection, or
6. Press the **OK** button to skip this stage. The PIN can be set later.

> **DON'T FORGET!** Remember to make a note of your PIN for later use. The default PIN setting is 0000, if you choose to skip the 'Set PIN' stage, this will remain the Parental PIN number until changed.
>
> If you change your PIN, write it here:
> .....

7. The 'Tuning' function will be selected, showing the number of TV and Radio channels currently stored in the digital box. For a first time install, these will both be 0.

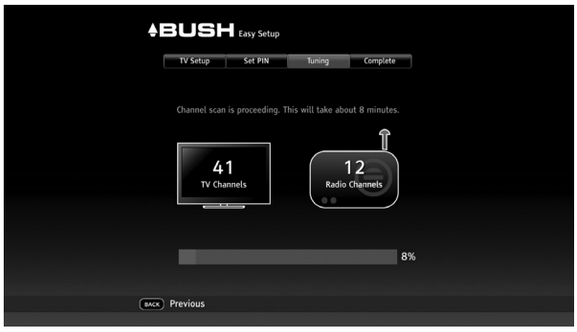

8. Press the **OK** Button. The system will scan for TV and Radio channels and updates the number of channels found. During this time a progress bar advances until complete (100%). This step takes about 8 min.
9. When scanning has finished, press the **OK** button. The screen displays 'Installation complete'.
10. Press the **OK** Button to begin watching the first TV channel stored. If there has not been a button press for 15 seconds, the channel will be displayed automatically.

If multiple TV regions are available in your area, you will be prompted to choose a region during the installation process.

For any help concerning set up and use of your digital TV recorder please call the **Customer Helpline: 0845 604 0105**

BU102ZRH50 User Guide_v2.indd 8 13/06/2013 09:49:13

Getting Started

Initial set up

Advanced install

The Easy install is the recommended installation option.


However you may want to choose the ‘Advanced’ option to manually select the specific aspect ratio or display resolution of your screen.

DON’T FORGET!

You can re-run the install process again at any time.

To carry out an ‘Advanced’ installation:

1. If ‘Advanced’ is not selected, press the ► Button to select it.
2. Press the **OK** Button. The ‘Advanced Setup’ screen will be displayed with the ‘TV Setup’ function selected. How your digital box is connected to your TV will also be shown.

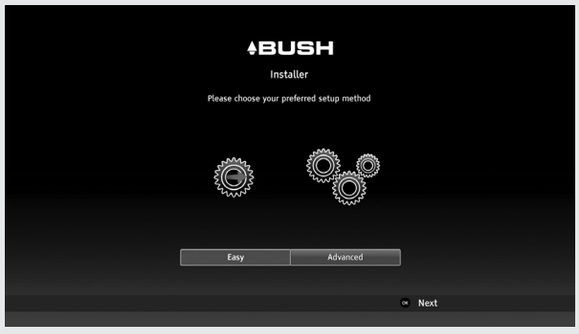

3. Press the **OK** Button.
4. Repeatedly press the ► Button until the screen size (aspect ratio) of your TV appears in the highlighted panel.
5. Press the the ▼ Button to highlight the screen resolution panel.
6. Repeatedly press the ► Button until the resolution of your TV appears in the highlighted panel.



7. Press the **OK** Button. The ‘Set PIN’ function will be selected.
8. Press the **OK** Button. The PIN can be set later (see ‘Easy’ install in box 5).
9. The ‘Tuning’ function will be selected, showing the number of TV and Radio channels currently stored in the digital box. For a first time install, these will both be 0.



10. Press the **OK** Button. The system will scan for TV and Radio channels and updates the number of channels found. During this time a progress bar advances until complete (100%).
11. Press the **GREEN** Button if you want to view the TV and Radio channels found. Press the **GREEN** Button again to hide the lists.



12. When scanning has finished, press the **OK** button. The screen displays ‘Installation complete’.



13. Press the **OK** button to begin watching the first TV channel stored.

BU102ZRH50 User Guide_v2.indd 9 13/06/2013 09:49:14

Basic Features

Using your digital box

Your digital box has some functions you will use everyday, and others that you only use occasionally.

You can find commonly used functions in this section so you can get your digital box up and running as quickly as possible.

We suggest you read this section carefully, then use other sections when you need extra information or guidance for settings.

Selecting channels

This can be done in several ways:

• Directly from the numerical buttons (0-9) on the remote control

• Using the channel change buttons (P+ and P-) on the remote control.

• Using the Guide

• Using the Channel List

Using the number buttons

1. Enter the channel number using the numerical buttons on the remote control. As they are entered they are displayed in the top right of the screen.
2. To enter '51' for example, enter 5 and then soon after, enter 1.
3. The TV will switch to channel 51.



Using the channel change buttons

1. Press the **P+** button to change to the next channel.
2. Press the **P-** Button to change to the previous channel.

Using the guide

The Guide lets you view information about current and scheduled TV and Radio programmes. Here you can select a programme to watch or listen to.

When you open the Guide, the current channel is displayed at the top of the list with the programme being watched highlighted.




1. Press the **GUIDE** Button to display the Guide.
2. Use the ▼ and ▲ Buttons to select a channel to browse.
3. Use the ◄ and ► Buttons to move along the channel row to select the desired programme.

Available options for the programme selected will be displayed as well as a brief description.

Using the channel list

The Channel List contains all the channels found during installation and is displayed in a single column format in numerical order. A total of 16 channels are displayed at a time.

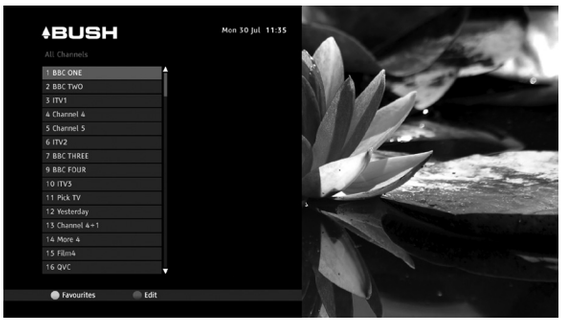

The ▼ and ▲ Buttons are used to scroll down or up the list respectively to show all channels in the list.

1. Press the **CH LIST** Button to open the Channel List.
2. Press the ▼ and ▲ Buttons to select the channel required.
3. Press the **OK** Button to watch the channel.
4. The Channel List will be removed from the screen and you will be returned to live TV with

For any help concerning set up and use of your digital TV recorder please call the **Customer Helpline: 0845 604 0105**

BU102ZRH50 User Guide_v2.indd 10 13/06/2013 09:49:15

Basic Features

Using the channel list (continued)

1. The mini information panel displayed along the bottom which will be removed automatically after a set time.

   To view additional information about the current programme at this time press the i Button, see ‘i-Button’.

Changing the volume

You can change the volume using the V+ and V- buttons on the remote control.

1. Press the **V+** Button to increase the volume.
2. Press the **V-** Button to decrease the volume.

A symbol will be displayed in the top right of the screen to indicate the volume level is being changed.



Using mute

To turn off the sound:

1. Press the **MUTE** button on the remote control. The mute symbol will be displayed in the top right of the screen and the sound will be turned off.



2. To restore the sound at its previous level, press the **MUTE** Button again.

Pausing live TV

You can pause the TV channel you are watching and resume watching it from the paused position (provided you have not changed to another channel during this time).

You can Fast Forward (up to the current time) and Rewind to any time from the time you started viewing the channel.

The amount you can Rewind can be set with the ‘Timeshift Amount’ option in the ‘Recording’ menu, see page 31.

To pause a live TV programme

1. Press the **PAUSE/PLAY** Button.
2. The TV picture will freeze.

To resume play of the TV programme

1. Press the **PAUSE PLAY** Button again to resume playback from the paused time.

To rewind a paused TV programme

1. Repeatedly press the **REWIND** Button until the desired Rewind speed is displayed in the bottom left of screen. Each press of this button steps through the preset speeds:
   x2, x4, x8, x16, x32, x64.
2. Press the **PAUSE PLAY** Button to resume playback at normal speed. The rewind time relative to live TV will be shown in the bottom left corner.

To fast forward a paused TV programme

1. Repeatedly press the **FFWD** Button until the desired forward speed is displayed in the bottom left of screen. Each press of this button steps through the preset speeds:
   x2, x4, x8, x16, x32, x64.
2. Press the **FFWD** Button again to resume playback at normal speed.

BU102ZRH50 User Guide_v2.indd 11 13/06/2013 09:49:15

Basic Features

Recording a programme

The Record button is used to record programmes while watching Live TV or from within the Guide.

To record a programme:

1. While watching live TV, press the **RECORD** Button.
2. If the programme you are watching is not part of a series, the programme will start to record.
3. If the programme you are watching is an episode of a series, then a message box will be displayed:
   - Record once
   - Record series
4. Use the ▼ and ▲ Buttons to select one of the options.
5. Press the **OK** Button to start recording.

Future programmes can be scheduled for recording in the Guide.

Using the library

The Library lists the recordings you have made and stored on your digital box. The recordings can be selected and played from here.



Playing a recording

1. Press the **LIBRARY** Button on the remote control to open the Library.
2. Use the ▼ and ▲ Buttons to select the recording you wish to play.
3. Press the **PAUSE/PLAY** or the **OK** Button.
4. The recording will start to play from the beginning.

BU102ZRH50 User Guide_v2.indd 12 13/06/2013 09:49:15

Basic Features

Other remote control buttons

Exit

1. Press the **EXIT** button at any time to exit a menu and return to live TV.

Home

1. Press the **HOME** button at any time to watch the first programme stored (typically BBC1).

Audio description

Some broadcasts have Audio Description (AD) narration added to enhance the programme for visually impaired viewers. The narration describes all significant visual information such as body language, facial expressions, scenery, costumes and anything important to the plot of the story.

Audio Description narrative can be turned on or off using the **AD** Button on the remote control.

When turned on, the narrative will be heard at the volume set in the 'Settings' / 'Language' menu.

Subtitles

Subtitles, if present, can be set to be displayed (overlay the TV picture) or not displayed.

To turn Subtitles on

1. Press the **SUB** Button.
2. 'Subtitle ON' is displayed on the screen for a short time and the subtitles, if available, will be displayed on the screen.

To turn Subtitles off

1. Press the **SUB** Button.
2. 'Subtitle OFF' is displayed on the screen for a short time and subtitles will no longer be displayed.

Back

3. Press the **BACK** Button at any time to return to the previous menu or programme display.

Information (i button)

The i Button displays information about the programme you are watching.


To display this information:

1. Press the **i** Button while watching a programme. Information about the channel, name, and broadcast times for the next two programmes will be displayed.



2. Press the **i** Button again to display an extended information:

- A synopsis of the programme
- Programme start and finish times
- Genre
- Output features such as HD, AD, Audio, Parental Guidance, Split for example

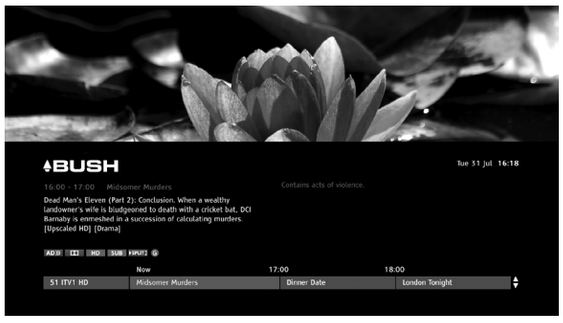

This information stays on the screen for about 60 seconds.

To remove the information before this time has elapsed:


BU102ZRH50 User Guide_v2.indd 13 13/06/2013 09:49:16

Basic Features

Other remote control buttons (continued)

Audio

Selects the Audio Language of a broadcast, if available.

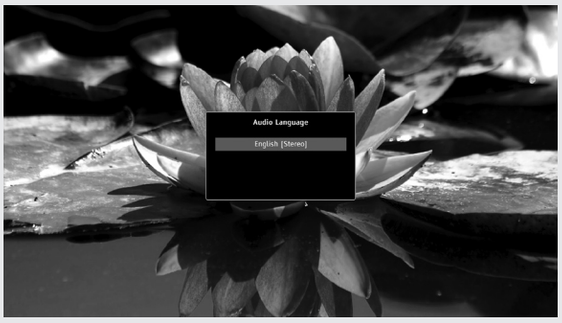

To select an audio language:

1. Press the **AUD** Button. The ‘Audio Language’ menu opens.
2. Use the ▼ and ▲ Buttons to select the desired language.
3. Press the **OK** Button to confirm your selection.

If not appropriate (for example when viewing a photograph or any other media type that has no soundtrack), the Audio Language dialogue box will display ‘Not available’.

Swap

This button lets you swap between the current and last watched channels. It has a toggle action.

1. Press the **SWAP** Button to change to the previously watched channel.
2. Press the **SWAP** Button again to return to the last channel you were watching.

Text

Some channels offer additional services via the digital text button on your remote control. When digital services are available the red button services will be shown in the top right hand part of your TV screen.

1. Press the **TEXT** button to open the menu. An example is shown below.



For any help concerning set up and use of your digital TV recorder please call the **Customer Helpline: 0845 604 0105**

BU102ZRH50 User Guide_v2.indd 14 13/06/2013 09:49:16

Advanced Features

Main menu

The Main menu is a list of items arranged in a column located on the left side of the display screen.



This icon menu is displayed when the **MENU** Button on the remote control is pressed. From here you can access the following items:

- Guide
- Library
- BBC iPlayer
- Channel List
- Settings

DON'T FORGET! The Guide, Library and Channel List functions are also accessible from the remote control buttons.

To open an item in the Main menu,

1. Press the ▼ and ▲ Buttons to select the required item. This will be indicated by a red outline around the icon.
2. Press the **OK** button to enter.

Guide

The Guide displays current and scheduled TV and Radio programmes. This allows you to select a programme to watch now, set a reminder for a later event, record live programmes or plan a future recording, and view information about selected programmes.

In the Guide you can browse the TV and radio schedules for the next 7 days and you can display any two-hour window over the next 7-days.

You can select programmes to:

- Watch or listen now
- Set reminders for programmes you wish to be alerted about shortly before they are broadcast
- Mark programmes you want to record and store
- View information such as programme content and broadcast features

To display the Guide,

1. Press the **GUIDE** button on the remote control.



Guide structure

The Guide is made up of sections. These are:

- **Header:** Provides information specific to the selected programme, including synopsis, scheduled times and the programme name. Also displays the currently selected programme in a preview window
- **Guide table:** A variable two-hour window in the next 7 days organised by time and date. Shows programme names, times and content information
- **Footer:** A set of coloured buttons having functions applicable to navigating the Guide table and marking.

The current-time position in the form of a vertical line across the main Guide Table gives a graphical representation of elapsed time and the time remaining before the start of later programmes.

BU102ZRH50 User Guide_v2.indd 15 13/06/2013 09:49:17

Advanced Features

Guide (continued)

Programme information

This information is displayed in the header section located above the table.

The following information is displayed:

- Start and finish times
- Name of the programme
- A brief programme synopsis
- The programme genre (e.g. Sport, Drama, News) and information regarding stereo and parental guidance for example
- Output features (for example, HD and Dolby).

Setting the time window

You can jump forward or backwards to specific times within time range of the the Guide (0 to 7 days) as follows:

- To step backward 2 hours, press the **RED** button. Repeat as required
- To step forward 2 hours, press the **GREEN** button. Repeat as required
- To step back 24 hours, press the **YELLOW** button. Repeat as required
- To step forward 24 hours, press the **BLUE** Button. Repeat as required.

Navigate to and watch a programme

To navigate the Guide:

1. Use the ▼ and ▲ Buttons to select a channel
2. Use the ◄ and ► Buttons to move and select a programme
3. Press the **OK** Button to watch the selected programme.

Recording

Record the programme you are watching

To record a programme:

1. While watching live TV, press the **RECORD** Button.
2. If the programme you are watching is not part of a series, the programme will start to record.
3. If the programme you are watching is an episode of a series, then a message box will be displayed.



4. Use the ▼ and ▲ Buttons to select one of these options.
5. Press **OK** to start recording.
6. If the programme is available in HD you will be asked if you want to record in standard definition (SD) or in high definition (HD).

> **DON'T FORGET!** HD requires more disk space than SD.

If you selected 'Record once', the programme will start to record and the 'RECORD, icon will be placed next to the programme name in the Guide.

If you selected 'Record series', the programme will start to record and a 'multi-RECORD' icon will be placed next to the programme name in the Guide.

Cancel a recording

To cancel a recording:

1. Press the **GUIDE** Button.
2. Use the ▼, ▲, ◄ and ► Buttons to navigate to the programme you wish to cancel recording.
3. Press the **RECORD** button as directed in the guide footer.

BU102ZRH50 User Guide_v2.indd 16 13/06/2013 09:49:17

Advanced Features

Recording (continued)

If the recording was set as ‘Record once’ it will be immediately cancelled. If the recording was set as ‘Record series’ then a message box will be displayed:

- Stop recording
- Stop series

4. Use the ▼ and ▲ Buttons to select one of these options.
5. Press the **OK** button.

If you selected ‘Stop recording’ and the programme was part of a ‘series’ recording, then the current recording will stop but the next episode in the series will be marked with the icon and will be recorded when next broadcast.

If you selected ‘Stop series’, then the current recording will stop and the icon will be removed from the programme cell in the Guide table.

Recording a future programme

To record a scheduled programme:

1. Use the ▼, ▲, ◄ and ► Buttons to navigate to the required programme in the guide table.
2. Press the **RECORD** Button on the remote control.
3. If the programme you have selected is not part of a series, the programme will start to record.
4. If the programme you are watching is an episode of a series, then a message box will be displayed:
   - Record once
   - Record series
5. Use the ▼ and ▲ Buttons to select one of these options.
6. Press **OK** to start recording.



7. If the programme is available in HD you will be asked if you want to record in standard definition (SD) or in high definition (HD).
8. The ‘Record icon’ will be placed alongside the programme cell in the table.

The programme will start to be recorded at the set broadcast time.

Cancel a future recording

To cancel a scheduled recording:

1. Press the **GUIDE** Button.
2. Use the ▼, ▲, ◄ and ► Buttons to navigate to the programme you wish to cancel recording.
3. Press the **RECORD** button as directed in the guide footer.

If the recording was set as ‘Record once’ the ‘Record’ icon will be removed and the recording will not take place.

If the recording was set as ‘Record series’ then a message box will be displayed:

- Stop recording
- Stop series

4. Use the ▼ and ▲ Buttons to select one of these options.
5. Press the **OK** button.

If you selected ‘Stop recording’ and the programme was part of a ‘series’ recording, then the current recording will stop but the next episode in the series will be marked with the ‘multi-RECORD’ icon and will be recorded at the next broadcast time.

If you selected ‘Stop series’, then the current recording will stop and the ‘multi-RECORD’ icon for this programme will be removed from the guide table.

Resolving recording conflicts

If you try to record two programmes where the broadcast times overlap, the ‘Conflict Management’ window will be displayed. This allows you to choose a recording to cancel.

BU102ZRH50 User Guide_v2.indd 17 13/06/2013 09:49:17

Advanced Features

Recording (continued)



1. Use the ▼ and ▲ Buttons to select the recording(s) you wish to cancel.

> **DON'T FORGET!** All 'recordings' with a Cancel marking will be cancelled when you press the **OK** Button.

2. Use the ◄ and ► Buttons to toggle the command between 'Leave alone' and 'Cancel'.
3. Press the **OK** Button to confirm.

If after a minute of being notified you have not made changes to resolve the conflict, the system will cancel one automatically. A notification message will be displayed in the 'Conflict Management' window.

Setting a reminder

If you do not want to miss the start of a programme, you can set your digital box to let you know when the programme is about to start. The 'Reminder' function lets you do this.



1. Use the ▼, ▲, ◄ and ► Buttons to navigate to the desired programme in the guide table.
2. Press the **OK** Button on the remote control.
3. The 'Reminder' icon will be placed alongside the selected programme in the table.


Cancel a reminder

1. Use the ▼, ▲, ◄ and ► Buttons to navigate to the programme to be unmarked in the guide table.
2. Press the **OK** Button on the remote control.
3. The 'Reminder' icon will be removed from alongside the selected programme in the table.

BU102ZRH50 User Guide_v2.indd 18 13/06/2013 09:49:18

Advanced Features

Library

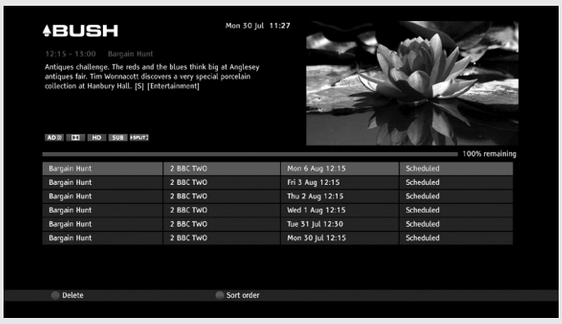

The Library lists the recordings you have made and stored on your digital box. The recordings can be selected and played from here, and also deleted.

Accessing the Library

The Library lists recorded programmes and scheduled recordings in a four column list and shows the following information:

- Programme Name
- Channel Number and Name
- Date of recording
- Status (Recording, Watched and Recorded)

The Library tools along the bottom of the display allow you to:

- Sort in Date order

The Library has three sections:

- **Header:** This displays information specific to the selected recording, and includes programme synopsis, broadcast time and the programme name
- **Library table:** The table lists the recordings and other relevant information
- **Footer:** Provides a set of coloured buttons to carry out functions used for management and playback of the recordings

Playing a recording

To play a recording:

1. Press the **LIBRARY** Button on the remote control to open the library.
2. to navigate to the recording you wish to play.
3. Press the **OK** button.

The recording will start to play from the beginning.

DON'T FORGET! You can also access the Library from the Main menu.

Pausing and resuming play

To pause and resume playback of a recording:

4. During play, press the **PLAY/PAUSE** Button.
5. Play will be paused and the screen display will be 'frozen'.
6. A progress bar will be displayed at the foot of the screen which shows elapsed play time and total play time.
7. Press the **PLAY/PAUSE** Button on to resume play from the paused position.

'Resume play' and 'Play from start' options

You can set a recording to play from the last viewed position or from the start.

1. Press the **LIBRARY** Button on the remote control to open the library.
2. Use the ▼, ▲, ◄ and ► Buttons to navigate to the recording you wish to play.
3. Press the **GREEN** Button. The 'Options' menu will be displayed.
4. Use the Use the ▼and ▲Buttons to select from 'Resume play' or 'Play from start'.
5. Press the **OK** Button.
6. The recording will playback now according to the option selected.

'Play from time' option

You may know the time in a recording that you would like to start playback from.

1. Press the **LIBRARY** Button on the remote control to open the library.
2. Use the ▼, ▲, ◄ and ► Buttons to navigate to the recording you wish to play.
3. Press the **GREEN** Button. The 'Options' menu will be displayed.
4. Use the ▼and ▲ Buttons to select 'Play from time'.
5. Press the **OK** Button.
6. A dialogue box will open named 'Play from time'.
7. Use the numerical buttons on the remote control

BU102ZRH50 User Guide_v2.indd 19 13/06/2013 09:49:18

Advanced Features

Library (continued)

to enter the start time in hours and minutes.

8. Use the ◄ and ► Buttons to switch between the hours and minutes counters in the box.
9. Press the **OK** Button to begin playback at the selected time.

Protecting a recording

To prevent anyone from deleting your recordings, you can lock the recording so that your PIN needs to be entered before the recording can be deleted.



1. Press the **LIBRARY** Button on the remote control to open the library.
2. Use the ▼, ▲, ◄ and ► Buttons to navigate to the recording you wish to play.
3. Press the **GREEN** Button. The 'Options' menu will be displayed.
4. Use the ▼and ▲ Buttons to select 'Protect the recording'.
5. Press the **OK** Button.
6. A message box will open named 'Parental control'.
7. Use the **numerical** Buttons on the remote control and enter your four-digit parental control PIN.
8. After a brief delay, the box will disappear and a locked padlock symbol will be displayed alongside the recording in the table.

To remove the protection, follow the above procedure and select 'Remove protection' at step 4.

Stop playing a recording

This function will stop playback and close the playback session.

1. During playback, press the button on the remote control.
2. Playback will stop and the Library will be displayed.

Deleting a recording

When you wish to permanently remove a recording from the hard disk:

1. Use the ▼, ▲, ◄ and ► Buttons to navigate to the recording you wish to delete.
2. Press the **RED** Button (Delete). A message box will open named 'Delete Recording'.
3. Use the button to select 'Yes, delete it'.
4. Press the **OK** Button.

The recording will be removed from the list and deleted from the hard-drive.

Fast fwd and fast rewind playback

To playback at higher speeds:

1. Press the ►► Button (or◄◄) Button while the recording is playing.
2. The recording will play at a higher forward (or reverse) speed.

An information panel opens along the bottom of the screen and now shows playback at a speed of x2. An arrow indicates the direction: for forward and for reverse.

3. Press the ►► Button (or◄◄) Button to reach the required playback speed. Each press of the or button steps through the preset speeds: x2, x4, x8, x16, x32, x64.
4. Press the **PLAY/PAUSE** Button to return to normal playback speed in the forward direction.


BU102ZRH50 User Guide_v2.indd 20 13/06/2013 09:49:18

Advanced Features

BBC iPlayer

BBC iPlayer is a free service that lets you catch up with programmes from the past seven days that you may have missed or want to watch again.

To watch BBC iPlayer, your digital box must have a broadband connection to the internet.

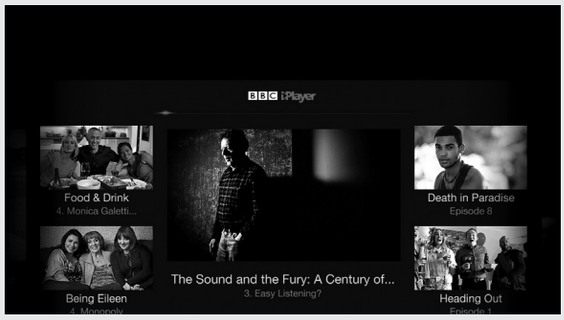


Once you access the BBC iPlayer application, the BBC iPlayer home page is displayed, see above.

Use the ▼, ▲, ◄ and ► Buttons to move around the page and select from the displayed options using the OK button.

Channel list

The channel list function displays a list of all the TV and Radio programmes found during installation in channel number order.

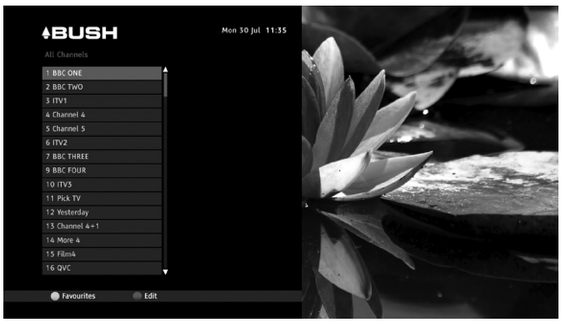

The list is displayed in a single column in numerical order. Sixteen channels are displayed at a time.

You can use the ▼and ▲ Buttons to scroll up or down the list and to see other channels in the list.

1. Press the **CH LIST** Button to open the channel list.
2. Use the ▼and ▲ Buttons to select the channel required.
3. Press the **OK** Button to watch the channel.

The channel list will be removed from the screen and return to live TV.

Favourites list

You can create a list of your favourite channels, the ones you most frequently watch. The favourites list is created by selecting specific channels from the main channel list and adding them to your favourites list. It will be called and displayed using the **FAV** Button.

You can create more than one Favourites list. This will be useful when there is more than one user of the digital box.

How to create your favourites list


1. Press the **CH LIST** Button. The Channel List will be displayed.
2. Press the **BLUE** (Edit) Button.
3. Use the ▼and ▲ Buttons to select a channel you want in your Favourites list.
4. Press the **OK** Button to place a mark (tick) alongside the channel in the main list. (Press the button again to unmark unwanted channels).

BU102ZRH50 User Guide_v2.indd 21 13/06/2013 09:49:18

Advanced Features

Channel list (continued)

1. Repeat steps 3 & 4 until you have finished marking all the channels you want to make up your favourites list.

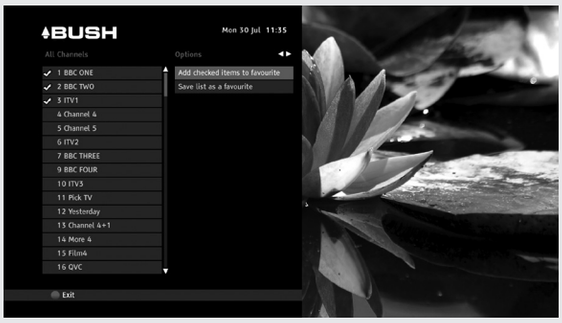

2. Use the ► Button to move to the 'Options' column.
3. Use the ▼and ▲ Buttons to the 'Add checked items to favourite'.
4. Press the **OK** Button.
5. Use the ▼and ▲ Buttons to select 'New favourite'.
6. Press the **OK** Button.
7. Use the ▼, ▲, ◄ and ► Buttons to navigate the on-screen keyboard. Enter the name you want to call your favourites list.
8. When the name has been entered, use the ▼, ▲, ◄ and ► Buttons to select 'Use'.
9. Press the **OK** Button to save the list with this name.



10. Press the **BLUE** Button to exit.
11. Press the **YELLOW** Button to enter the favourites selection screen.
12. Select the required Favourites list.
13. The limited channel set will now appear in the left column.
14. The FAV button will now step through this list.

To display your favourites list

1. Press the **FAV** Button. The Favourites list will be displayed.
2. Use the ▼and ▲ Buttons to select the channel required.
3. Press the **OK** Button to watch the channel.

For any help concerning set up and use of your digital TV recorder please call the **Customer Helpline: 0845 604 0105**

BU102ZRH50 User Guide_v2.indd 22 13/06/2013 09:49:19

Settings Menu

Using settings

The Settings Menu functions let you configure your digital box to your optimal viewing preferences.

To open and display the Settings Menu,

1. Press the **MENU** button.
2. The Main menu will be displayed on the left side of the screen.
3. Press the ▼ and ▲ Buttons to select Settings.
4. Press the **OK** button.
5. After a short delay, during which time ‘Loading ...’ is displayed, the Settings menus will be displayed.



1. Use the ◄ and ► Buttons to step along the menu bar. (The selected item will be coloured red).
2. Press the **OK** button to access the selected menu and display its functions and their settings.
3. Use the ▼ Button to move into the settings list.
4. Use the ▼ and ▲ Buttons to move up and down this list to reach the required function to set.
5. Use the ◄ and ► Buttons to adjust the setting from the available presets, or where the setting is ‘Launch’, press the **OK** Button to ‘Launch’ the function.
6. To exit a menu press the ▲ Button until the menu bar is reached.
7. To exit and return to the Main menu, press the **MENU** Button.
8. To remove the Main menu, press the **MENU** Button again.

Display and audio



HDMI video output

This is the highest quality video output on your digital box. The output resolution can be set to one of four resolutions.

Select the resolution to match the best HDMI input according to your TV’s user manual. Usually the higher the resolution, the better the picture quality.

The available options are 576p, 720p, 1080i and 1080p.

Audio output

This sets the audio output to suit how audio will be heard.

If you have not connected a surround sound system, select ‘Stereo’.

If you have connected your digital box to a surround sound system using the S/PDIF output, or to an AV receiver using HDMI then select ‘Bitstream’.

Screen size

This allows you to set the aspect ratio output by your digital box to your TV.

The available options are: Letterbox 4:3, Pan and Scan 4:3, Widescreen 4:3 and Widescreen 16:9.

Menu timeout

The menus can remain on the screen until turned off manually, or turn off automatically after a preset time.

The available options are On or Off.

Lip-sync

Sometimes the soundtrack in a broadcast is out of sync with the video. The Lip-Sync option can be used to correct this.

To re-synchronise sound and video:

1. Launch the function.

BU102ZRH50 User Guide_v2.indd 23 13/06/2013 09:49:19

Settings Menu


Display and audio (continued)

2. An adjustment bar will be displayed at the bottom of the screen.
3. Use the ◄ and ► buttons to correct the synchronisation between sound and video. The set level is visible in the adjustment bar.
4. Press the **OK** Button to save the current setting.

12/24 hour clock

The time format used to display start and finish times can be set to be 12 hour or 24 hour format.

Language

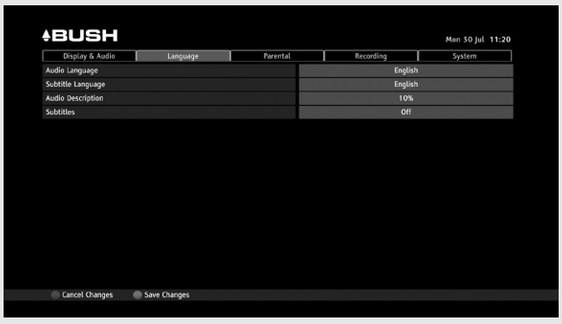

Audio language

The language spoken in a broadcast can be set to one of four languages if available. The programme being watched will be heard in the language set when broadcast.

The available options are: English, Welsh, Gaelic and Old Irish.

Subtitle language

This sets the default subtitle language.

The available options (if broadcasted) are: English, Welsh, Gaelic, Old Irish, English Enhanced, Welsh Enhanced, Gaelic Enhanced and Old Irish Enhanced.

Audio description

This sets the volume of the Audio Description voice in relation to the normal audio as a percentage of the total volume.


The available options are: 10, 20, 30, 40, 50, 60, 70, 80, 90 and 100%.

Subtitles

This option allows you to turn subtitles on or off in a similar manner to the **SUB** button.

The available options are: On and Off.Parental

Parental

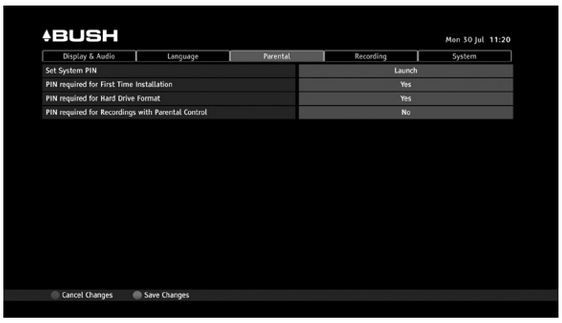

When the settings menu is selected, you must enter the system PIN. Use the numerical buttons on the remote control to enter the PIN.



If the entry is correct, it will be recognised and the Parental settings will be available for checking and editing.

If the incorrect PIN has been entered you will be notified and given another opportunity to enter the correct PIN.

Set system PIN

This function lets you choose your own Parental PIN to replace the factory set PIN.

To set a new PIN of your choice:

1. Use the ▼ and ▲ Buttons to select ‘Set System PIN’. A panel opens asking you to enter your new PIN.
2. Press the **OK** Button.
3. Use the numerical buttons on the remote control and enter your new PIN. The message ‘Please confirm your new PIN’ will be displayed.
4. Use the numerical buttons on the remote control and enter your new PIN again. A message ‘New PIN confirmed’ will be displayed briefly.
5. The Parental PIN will now be set to your new number.

BU102ZRH50 User Guide_v2.indd 24 13/06/2013 09:49:20

Settings Menu

Parental (continued)

PIN required for first time installation

This allows you to prevent a First Time Installation re-run being performed without the correct PIN.

Set to Yes when you require the PIN to be entered before a First Time Installation can be carried out.

PIN required for hard drive format

This prevents the hard drive from being formatted without the correct PIN.

Set to Yes when you require the PIN to be entered before a hard drive format can be carried out.

PIN required for recordings with parental control

You can set your digital box to require the PIN is entered when a programme that has a Parental guidance symbol is being set to recorded.

This symbol appears in the programme descriptor panel to alert you that the programme may be unsuitable for viewing by children' The programme may contain bad language, violence or other adult material.

Set this function to 'Yes' when you require the Parental PIN to be entered when such a programme is being set to record.

Before you can adjust these settings, you must first enter your parental control PIN when requested in the Parental control dialogue box.

Recording



Default recording mode

This lets you set the default recording mode. Note that high definition will use more hard drive space than Standard Definition recordings. If you do not want to specify in advance, Select 'Always Ask' and you will be asked at the time of selecting the recording.

The available options are: High Definition, Standard Definition and Always Ask.

Series link mode

This lets you set the default series link mode (Record once or Record series). If you do not want to specify in advance select 'Always Ask' and you will be asked at the time of selecting the recording.

The available options are: Record Entire Series, Record Single Event Only, Always Ask.

Timeshift amount

Timeshift amount is the amount of time you wish to reserve in order to 'pause' a live programme.

The available options are: 30 minutes, 60 minutes, 90 minutes and 120 minutes.

Add to start of recording

This sets the time added to the beginning of a recording. You are recommended to leave this set to Auto.

The available options are:
Auto, 1 minute, 2 minutes, 3 minutes,
4 minutes and 5 minutes.

Add to end of recording

This sets the time added to the end of a recording. You are recommended to leave this set to Auto.

The available options are:
Auto, 1 minute, 2 minutes, 3 minutes,
4 minutes and 5 minutes.

BU102ZRH50 User Guide_v2.indd 25 13/06/2013 09:49:20

Settings Menu

Recording (continued)

Skip forwards time

This sets the default time duration while fast forwarding through Paused TV.

The available options are: 5 seconds, 15 seconds, 30 seconds and 60 seconds.

Skip backwards time

This sets the default time duration while fast rewinding through Paused TV.

The available options are: 5 seconds, 15 seconds, 30 seconds and 60 seconds.

Automatic hard drive space management

This sets the default 'Hard Drive Space Management'.

When set to On, the management is performed automatically. When your disk is full and you want to make a new recording, the system will automatically delete the oldest watched recording that is not marked to be kept.

If set to Off, then manual management must be performed by you deleting recordings yourself, to make space for your new recordings. If you don't do this, your new recordings will fail.

DON'T FORGET! If you don't do this your new recordings will fail.

Format hard disk drive

DON'T FORGET! Formatting is permanent and cannot be undone.

This lets you format the hard drive in your digital box, deleting all data and recordings.


To format the drive:

1. Use the ▼ and ▲ Buttons to select 'Format Hard Disk Drive'.
2. Press the **OK** Button.
3. The 'Format Hard Disk Drive' message box will be displayed informing you that formatting the hard disk drive will delete all recordings from the hard drive.
4. Use the ◄ and ► Buttons to select 'No' or 'Yes' and press the **OK** Button.
5. If your reply at step 3 is 'No', the function will be exited.
6. If your reply at step 3 is 'Yes', and the function in the 'Format Hard Drive' option in the 'Parental' menu has been set to 'Yes' then formatting will begin.
7. If the 'Format Hard Drive' option in the 'Parental' menu has been set to 'No', then the 'Parental control' message box now will ask for the Parental PIN to be entered.
8. To proceed, enter the PIN and press the **OK** Button.
9. Formatting will begin.

BU102ZRH50 User Guide_v2.indd 26 13/06/2013 09:49:20

Settings Menu

System

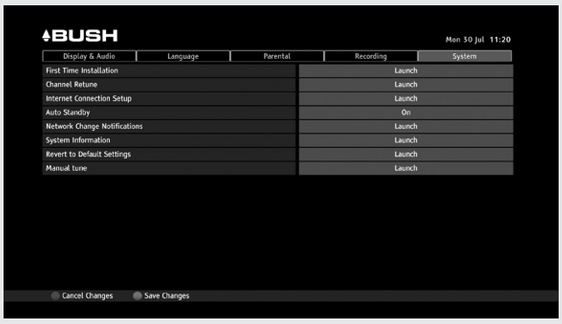

First time installation

This option allows you to perform a First Time Installation re-run. Please refer to Installation in section 2, Getting Started.

Channel retune

Launch this function when you want to scan for channels at any time after First Time Installation, for example if you have moved the digital box to another location where the channel frequencies are different or to another location in the same region, but with a better reception.

DON'T FORGET! Accepting the new scan will overwrite the existing channel information.

Carry out a retune as follows.

1. When the System settings menu is selected, use the ▼ and ▲ Buttons to select 'Channel Retune'.
2. Press the **OK** button.
3. Enter your parental control PIN (if set) in the 'Parental Control' window that opens using the numerical keys on the remote control.
4. The channel scanning window opens displaying TV and Radio channel counters.
5. Press the **BLUE** (Start Scan) Button to begin.
6. Scanning will start and the channel counter will increase incrementally for each channel found. This will take several minutes to complete.
7. The progress bar grows as the scanning proceeds until finished (100%) and the total number of TV and Radio channels is then displayed.
8. Press the **GREEN** (View Channels) Button to see the lists of channels found.
9. Press the **GREEN** (View Channels) Button again to hide the lists.
10. To accept the channels found and overwrite the existing channel details, and exit, press the **OK** Button,
11. Or press the **BACK** Button to exit the function without applying any changes, or press the **BLUE** (Re-Scan) Button to scan again.

Internet connection setup

When enabled your digital box will automatically set up internet connection settings.

When disabled, you can configure the internet settings for your digital box manually.

Auto standby

If set to 'Yes', your digital box will automatically switch to standby mode after 3 hours in order to reduce power consumption. The available options are: Yes and No.

Network change notification

When a network switch-over event occurs, a notification will be broadcast that informs you that you will need to carry out a retune. If you want to receive this notification, select Yes.

The available options are: Yes and No.

System information

This provides system information including Hardware and Software Versions.

Have this information available if you need to contact the customer helpline.

Revert to default settings

This function allows you to return your digital box to its default factory settings.

BU102ZRH50 User Guide_v2.indd 27 13/06/2013 09:49:20

Settings Menu

System (continued)

Manual retune

This function allows you to search for a particular channel. This may be used to scan for a channel that should be, but is not, in your channel list.

This function is only expected to be useful for users with knowledge of transmission frequencies.


To perform a Manual tune, carry out the following.

1. When the System settings menu is selected, use the ▼ and ▲ Buttons to select 'Channel Retune'.
2. Press the **OK** Button.
3. The 'Manual search' window will be displayed.
4. Use the ▼, ▲, ◄ and ► Buttons to navigate and edit the Channel number and Frequency for the channel you are searching for.
5. Press the **BLUE** (Start Scan) Button to start the search, or press the **BACK** button to exit without changing any settings.
6. If the **BLUE** Button has been pressed, scanning will start and the channel counter will increase incrementally for each channel found. This will take a few minutes to complete.
7. The progress bar grows as the scanning proceeds until finished (100%) and the total number of TV and Radio channels will be displayed.

BU102ZRH50 User Guide_v2.indd 28 13/06/2013 09:49:20

Safety Information

Important - Please read these instructions fully before installing or operating

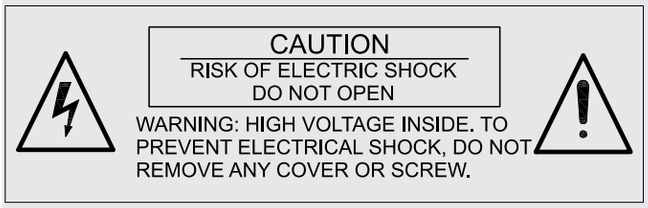



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the products enclosure that may be a risk of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Power source

• The digital TV recorder should be operated only from a 230 V AC, 50 Hz outlet.

• This digital TV recorder has been designed and manufactured to meet European safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

• **Warning: Do not** leave the digital TV recorder switched on when it is unattended for long periods of time, unless it is specifically stated that it is designed for unattended operation or has a standby mode.

• **Warning: Do not** remove any fixed covers as this may expose you to dangerous voltages.

Positioning the digital TV recorder

• **Do not** block the ventilation openings.

• To prevent damage to the digital TV recorder, do not place any objects on top of the digital TV recorder.

• Only use the digital TV recorder in moderate climates.

Power cord and plug

• Make sure that all electrical connections including the mains plug, extension leads and interconnections between pieces of equipment are properly made in accordance with the manufacturer’s instructions.

• The power cord plug should be easily accessible. In case of storms and lightning, when going on holiday, or when the digital TV recorder is not used for a long period of time, disconnect the power cord from the mains power socket.

• **Do not** place the digital TV recorder, furniture, etc. on the power cord or pinch the cord.

• Handle the power cord by the plug. **Do not** unplug the digital TV recorder by pulling the power cord.

• Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock.

• Never make a knot in the power cord or tie it with other cords.

• Power cords should be placed in such a way that they are not likely to be stepped on or driven over.

• A damaged power cord/plug can cause fire or give you an electric shock. When damaged it must be replaced, this should only be done by qualified personnel.

• Switch off and remove the mains plug when making or changing connections.

• **Do not** continue to operate the digital TV recorder if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off, unplug the digital TV recorder from the mains and consult your dealer.

BU102ZRH50 User Guide_v2.indd 29 13/06/2013 09:49:21

Safety Information

Moisture and Water

• **Do not** use this digital TV recorder in a humid or damp place (avoid bathrooms, the sink in the kitchen, and near the washing machine).

• **Do not** expose this digital TV recorder to rain or water, as this may be dangerous.

• **Do not** place objects filled with liquids, such as flower vases, on top of the digital TV recorder. Avoid dripping or splashing.

• If any liquid falls into the digital TV recorder, unplug it and have it checked by qualified personnel before operating it any further.

Ventilation

• The slots and openings on the digital TV recorder are intended for ventilation and to ensure reliable operation.

• To prevent overheating, these openings must not be blocked or covered in any way. Overheating will cause damage and shorten the life of the product.

Heat sources and flames

• **Do not** expose the digital TV recorder to direct sunlight or other heat sources.

• The digital TV recorder should not be placed near to open flames and sources of intense heat such as an electric heater.

• Ensure that no open flame sources, such as lighted candles, are placed on top of the digital TV recorder.

Cleaning

• Before cleaning, unplug the digital TV recorder from the wall socket.

• **Do not** use liquid or aerosol cleaners. Only use a soft, dry cloth.

Batteries

• **Warning:** Incorrect installation of batteries may cause battery leakage and corrosion, resulting in damage to the remote control.

• **Do not** mix old and new batteries, or batteries of different types.



• **Do not** dispose of batteries in a fire.

• **Do not** dispose of batteries with normal household waste, take them to a local recycling centre.

Replacement parts

When replacement parts are required, make sure that the service technician has used replacement parts, which are specified by the manufacturer or have the same specifications as the original one. Unauthorised substitutions may result in fire, electrical shock or other hazards.

Servicing

• **Warning:** Risk of electric shock, do not attempt to repair, service or modify this digital TV recorder yourself. Contact the manufacturer, their approved service agent or the Customer Helpline: 0845 604 0105.

BU102ZRH50 User Guide_v2.indd 30 13/06/2013 09:49:21

Product Support

The Argos Technical Helpline is here to help

Technical experts are available 7 days a week

- **Simple help and advice on setting up your digital TV recorder.**
- **Guidance on connecting other devices to your digital TV recorder such as a DVD player.**
- **Order spare parts, including that lost remote control.**
- **Any other technical issues you may need assistance with.**

Call us today: 0845 604 0105

Local call rates applies*

Lines open 9am-8pm Monday to Saturday and 10am-4pm Sunday.

* Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

BU102ZRH50 User Guide_v2.indd 31 13/06/2013 09:49:21

Product Support

Trouble shooting

No Power

If your digital TV recorder has no power, please check the power cord plug is connected to the mains power socket.

Poor or no picture or sound

1. No Picture means that your digital TV recorder is not receiving a transmission. Have you selected the correct button on the remote control? Try once more.

2. Is the aerial connected properly?

3. Is the digital TV recorder or house aerial located too close to a non-earthed audio equipment or neon lights, etc?

4. Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial. Is the picture unrecognisable?

5. Are the plugs connected tightly to the aerial socket?

6. Is the aerial cable damaged?

7. Are suitable plugs used to connect the aerial?

8. Is the aspect ratio set correctly?

9. Have you selected the correct TV system?

10. Please retune the channels.

11. If you are in doubt, consult your dealer.

No sound

1. Has the digital TV recorder been set to mute? To cancel mute, press the "▲" button, or increase the volume level.

No channels

1. Some TV channels are not available in every area.

2. Is the aerial connected properly? Signal boosters or amplifiers are available to improve reception.

Forgotten PIN

1. If you have forgotten your PIN, please contact the call centre on 0845 604 0105 for assistance. You will need your system information available.

Wrong information screen and unusual behaviour

1. Press **STANDBY** on the remote control to turn the digital TV recorder off and then on again.

2. Try again but wait for 10 seconds before turning it back on again.

3. Contact the call centre on 0845 604 0105 for assistance if this doesn't fix the problem. You will need your system information available.

Remote control does not operate

Your digital TV recorder no longer responds to the remote control. The batteries may be exhaust, if so you can still use the buttons on the front of the digital TV recorder to operate some functions.

BU102ZRH50 User Guide_v2.indd 32 13/06/2013 09:49:21

Product Support

Trouble shooting

Hard Disk Drive (HDD)

This digital TV recorder uses a rewritable electronic storage media called a Hard Disk Drive (HDD) to store any recorded programmes.

Electronic Programme Guide (EPG)

The Electronic Programme Guide (EPG) displays a broadcast schedule for all channels for the next 8 days allowing you to easily select and view programmes. The EPG is capable of displaying additional programme information such as a brief synopsis and if subtitles / audio descriptions are available. Programmes or a series of programmes can easily be selected for recording at the touch of a button through the EPG.

MHEG5

This is an international standard for broadcasting interactive digital content. The digital text received by the digital TV recorder is broadcast using the MHEG5 standard.

Aspect ratio

Depending on the TV connected to your digital TV recorder, you will need to select an appropriate aspect ratio to ensure the picture is displayed correctly. The aspect ratio of the picture is the ratio of its width to its height. This digital TV recorder can display pictures in either 4:3 or 16:9 aspect ratios.

If you have an older TV with a ‘square’ screen, you should select a 4:3 aspect ratio.

If you have a modern widescreen TV, you should select a 16:9 aspect ratio.

RGB

RGB is short for Red Green Blue. This is used to describe a format of the video signal sent between the digital TV recorder and your TV. If you have selected the RGB video output setting, the signal will be broken down into Red, Green and Blue elements. This ensures a high quality picture.

CVBS

CVBS is short for Composite Video, Blanking and Sync. This is used to describe a format of the video signal sent between the digital TV recorder and your TV. If you have selected the CVBS video output setting, a composite signal will be created. This creates a lower quality picture than RGB.

RF IN

The socket on the rear of your digital TV recorder which is used to receive the signal from your aerial.

RF OUT

The socket on the rear of digital TV recorder which is used to transmit the aerial signal from the digital TV recorder to your TV.

BU102ZRH50 User Guide_v2.indd 33 13/06/2013 09:49:21

Product Support

Disposal information


Instructions for waste disposal

Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bags, must be kept away from children.

Information for Users on Disposal of old Equipment and Batteries (European Union only)

These symbols indicate that the equipment with these symbols should not be disposed of as general household waste. If you want to dispose of the product or battery, please consider the collection systems or facilities for appropriate recycling.

Notice: *The sign Pb below the symbol for the batteries indicates that this battery contains lead.*

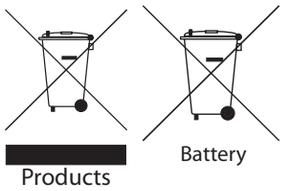

Information for Users in European Union Countries

This symbol on the product or on its packaging means that your electrical and electronic device should be disposed of at the end of its service life separately from your household wastes. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or the dealer where you purchased the product.



BU102ZRH50 User Guide_v2.indd 34 13/06/2013 09:49:22

BU102ZRH50 User Guide_v2.indd 35 13/06/2013 09:49:22

Guarantee

Product Guarantee

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will wither be replaced. refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalided if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.
- In the event of a problem with the product with in the guarantee period call the **Customer Helpline: 0845 604 0105**

Guarantor: Argos Ltd

489 - 499 Avebury Boulevard

Central Milton Keynes

MK9 2NW