BUSH


Instruction Manual

CSPK115RED
CSPK115BLACK



Contents

Safety Information	**2-3**
Disposal information	**3**
Functions & Controls	**4**
LED State Indicator key	**4**
What's included	**5**
User Instructions	**5-7**
Getting started	5
User instructions	6-7
Care and maintenance	**8-11**
Internal battery removal	8
Cleaning instructions	9
Contact details	9
Troubleshooting	10
Technical specifications	10
Guarantee	**11**

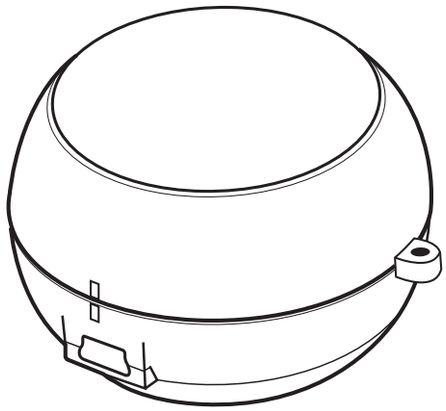

Product Codes

CSPK115

Safety Information


Important – Please read these instructions fully before installation

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE ANY COVER. NO USER-SERVICEABLE PARTS INSIDE, REFER ANY SERVICING TO QUALIFIED SERVICE PERSONNEL.


- Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features.
- Please save this owner's guide for future reference.
- The product label is located on the bottom of the product.
- Do not use this apparatus near water or moisture.
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel
  Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped - Do not attempt to service this product yourself.
  Opening or removing covers may expose you to dangerous voltages or other hazards.
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
- Use proper power sources - Plug the product into a proper power source, as described in the operating instructions or as marked on the product.
- The mains plug is used as the disconnect device, the disconnect device shall remain readily accessible

Safety Information

Important – Please read these instructions fully before installation

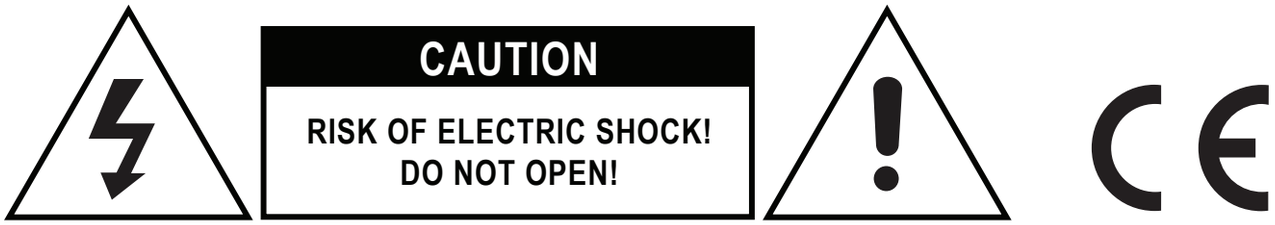

Disposal Information

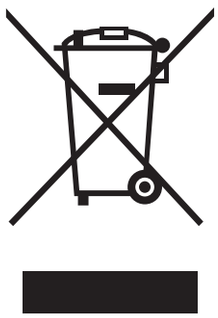



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.


We apologize for any inconvenience caused by any minor inconsistencies in these instructions, which may occur as a result of product improvements and development.

Functions & Controls

Important – Please read these instructions fully before installation

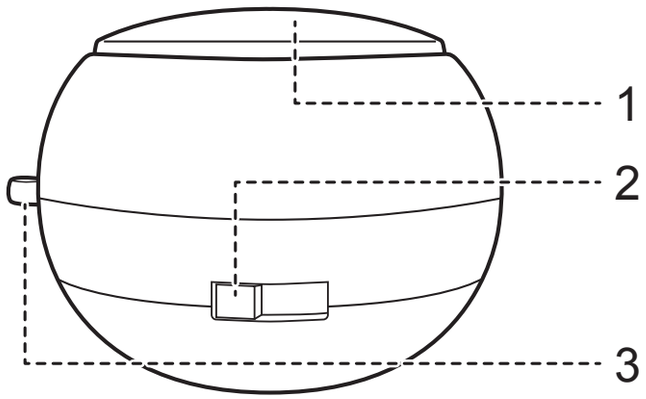

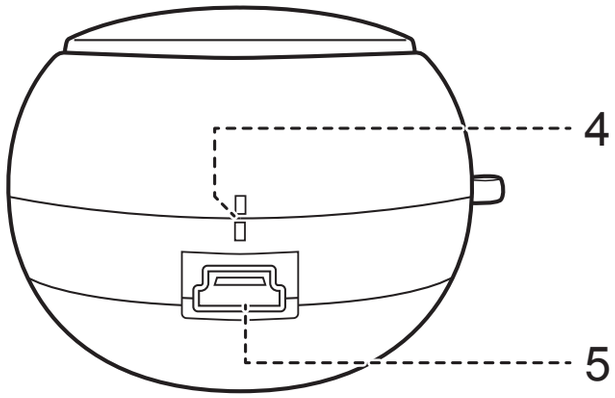

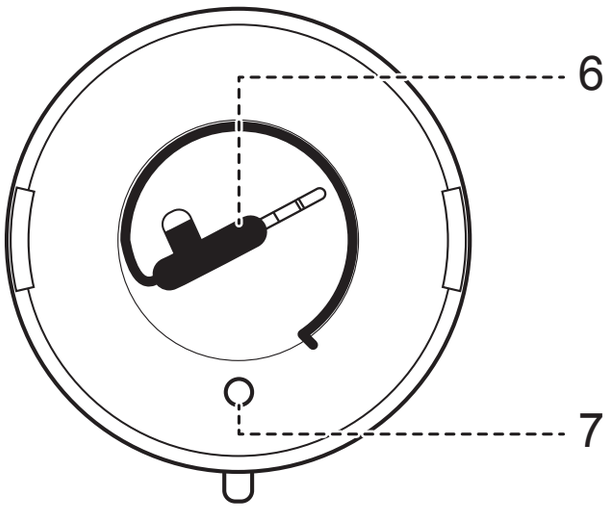

1. Internal speaker
2. POWER VOL HI/ VOL LO/OFF switch
3. Lanyard attachment loop
4. LOCK/UNLOCK indicators
5. MINI USB socket (Charge only)
6. 3.5mm audio jack
7. LED state indicator

LED State Indicator key

Power Off /No Charging	OFF
Power Off /Charging	RED
Power On /No Charging	BLUE
Power On /Charging	PURPLE

User Instructions


What's included

1 x Portable compact speaker 1 x USB charging cable 1 x Instruction manual

Getting started

A full charge is required before using the compact speaker for the first time.

The supplied USB cable supports charging from a PC or Laptop. A compatible USB mains adapter can be purchased from a good electrical store.

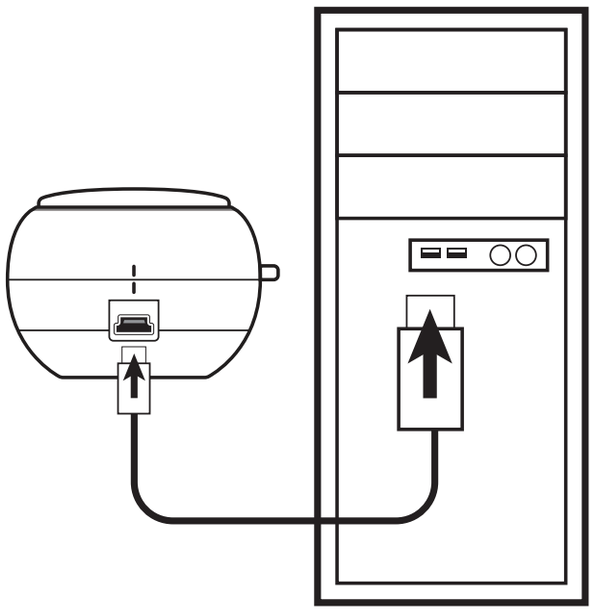

1. Insert the mini USB plug into the MINI USB socket (5) on the compact speaker.

2. Connect the other end of the USB cable (the larger plug) into a free USB socket on a PC or laptop.

3. Power **ON** the PC or laptop and leave to charge the speakers internal battery for approximately 3 hours. The LED state indicator (7) will go OFF when charged. After charging remove the mini USB plug from the speaker and PC or laptop.


   NOTE: See **LED State Indicator Key** on page 4 for further details.

4. The speaker is now ready for use.

User Instructions


User instructions

1. When fully charged the speaker can be extended to the **PLAY** position. See the below diagrams.

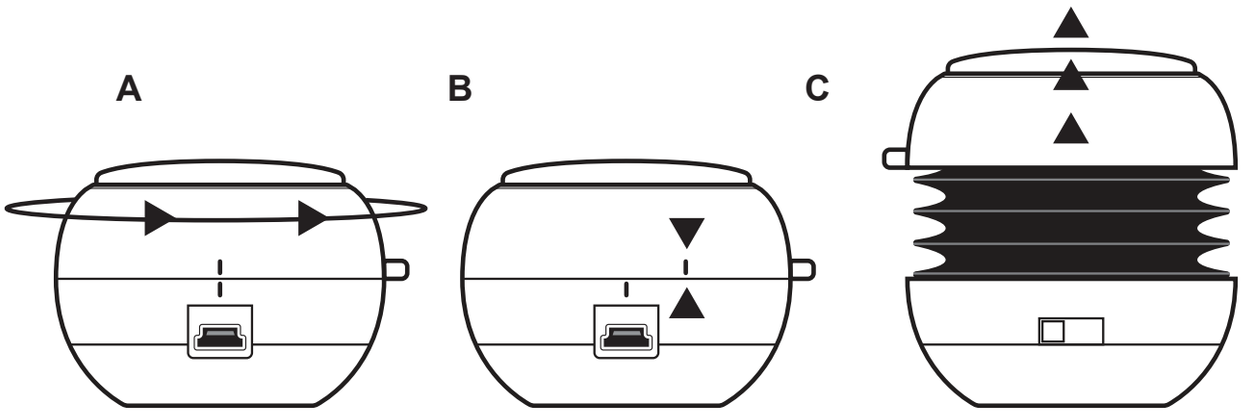

A. Twist the top half of the speaker Anti-clockwise.
B. Note the LOCK/UNLOCK indicators (4) do not line up after twisting. This unlocks the speaker sections.
C. Extend the top section of the speaker as far as it will go without forcing.


2. Now the 3.5mm audio cable can be extended from the base of the speaker (see diagram).

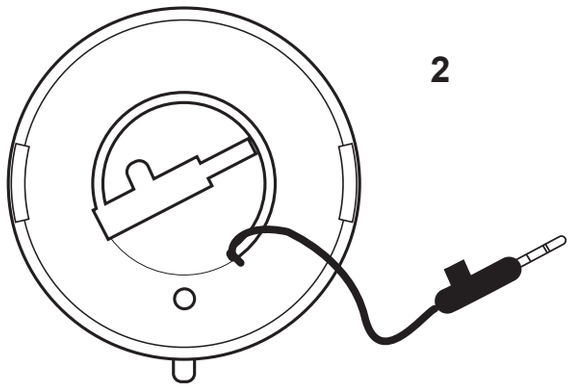

User Instructions

User instructions

3. Connect the 3.5mm audio jack to your audio source. Such as an MP3 player or any audio device with a 3.5mm earphone output.

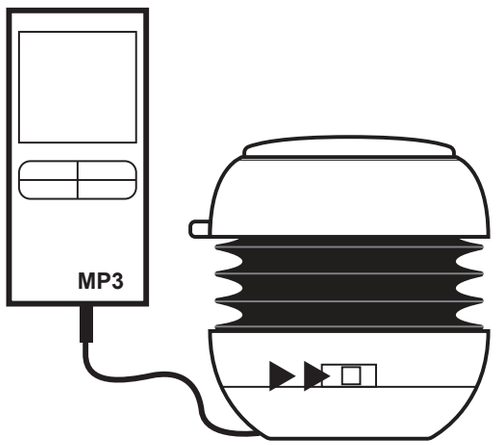


4. Set the **POWER VOL HI/ VOL LO/OFF** switch (2) to **VOL LO** (low volume) or **VOL HI** (High volume).

NOTE: Setting the switch to **VOL HI** will reduce the battery duration, and will require re-charging sooner than **VOL LO**.

4. Press **PLAY** on the audio source, and adjust the volume to about 3/4 of maximum.
NOTE: If you raise the audio source volume too high the sound may become distorted.

5. When you have finished using the speaker, detach the 3.5 audio jack from your audio source, and feed the cable back into the channel on the bottom of the speaker.

6. Rotate the top section of the speaker Clockwise and downwards to **LOCK** once more.

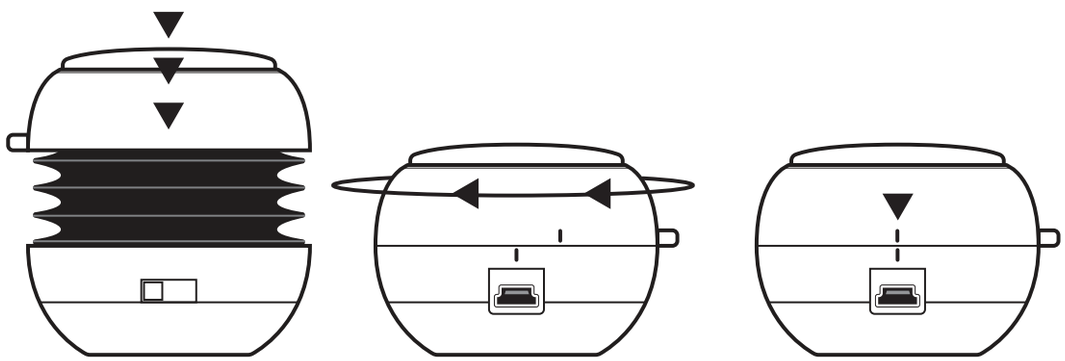

Care & Maintenance

Internal battery removal

Your product contains a built-in rechargable battery covered by the European Directive 2006/66/EC. To safeguard the functionality and safety of your product, always take your product to an official collection point or service centre where a professional can remove the battery.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health. Please do not dispose of your batteries with your normal household waste. Always bring your product to a professional to remove the battery.

This product complies with Electromagnetic compatibility (2004/108/EC) directives.

Care & Maintenance

Important – Please read these instructions fully before installation



Important: Always unplug the appliance from the power socket during cleaning and maintenance.

- Ensure the unit is switched off and unplugged from any electrical outlet
- Wipe the case with a slightly moist lint free cloth
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives
- Do not spray an aerosol at or near the object
- Do not allow liquids to spill or objects to drop into any openings
- Do not insert sharp items into speaker resonator or any other openings
- Always us the original packaging if it is necessary to transport the unit at any time

If the unit is used in a dusty environment, it may be necessary to have the unit serviced at your local dealer periodically. It is not advisable to allow large deposits of dust to accumulate within the unit as it may prevent adequate cooling. Similarly dust deposits which become damp can sometimes lead to electrical problems which may cause severe damage to the delicate electronics within this unit.

Contact

In the unlikely event of difficulties with your appliance please follow the trouble shooting guide on the next page.

If the problem persists, contact the retailer if the machine is still under guarantee.
Customer **helpline: 0870 600 3030**

Troubleshooting

Fault	Solution
No sound	■ Check that the audio source is playing. ■ Check the **POWER/VOLUME** switch (2) is set to either **VOL LO** or **VOL HI**. ■ Check the volume on the audio source is above 3/4 max. ■ Remove and re-insert the 3.5mm audio jack into the audio source. ■ Battery may be too low. Re-charge the internal battery.
Sound distorted	■ Reduce the audio source volume level. ■ Set the **POWER/VOLUME** switch (2) to **VOL LO** if set to **VOL HI**.
Battery flat	■ Recharge the internal battery (see page 5).

Technical Specifications

Power output	1W
Speaker unit	1” 4 Ohm
Frequency response	80Hz - 15Khz
S/N ratio	40 dB

BUSH

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalided if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Limited
489 - 499 Avebury Boulevard
Central Milton Keynes MK9 2NW