
Slim Media Storage With Cupboard

Assembly Instructions - Please keep for future reference | 143/9618

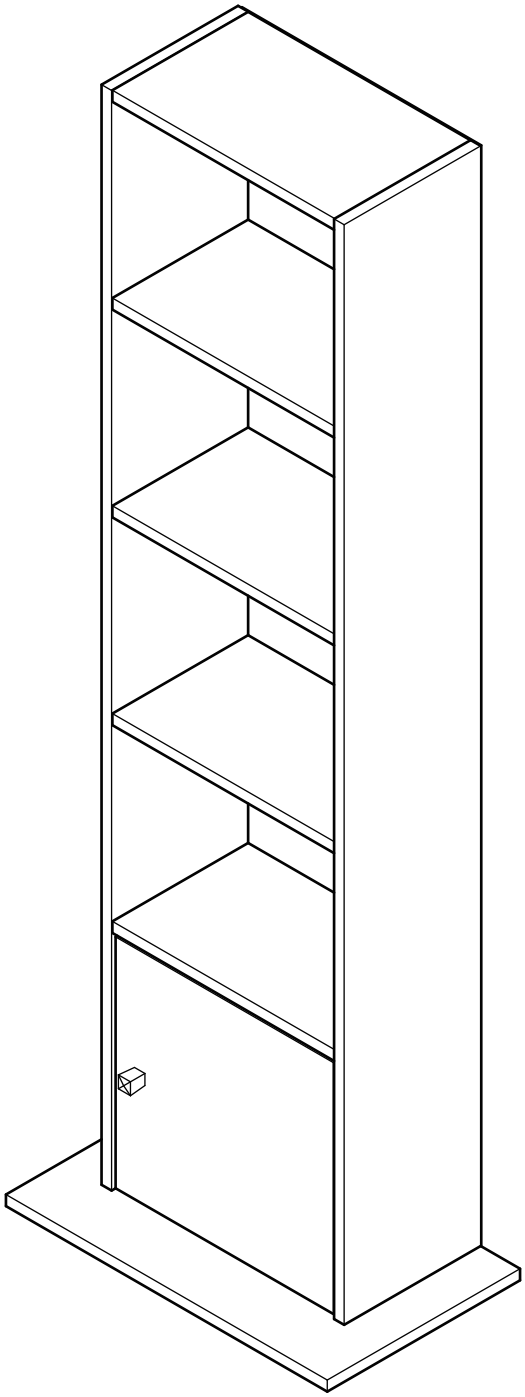

Dimensions
Width - 40cm
Depth - 24.5cm
Height - 120cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Version 2 Date: 28/10/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not use this item if any components are missing or damaged.

• Do not stand on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

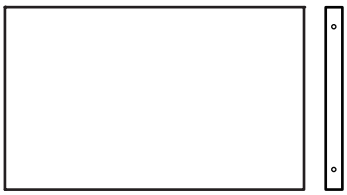

1 Top panel
(27.7 x 16.9cm)




2 Shelf x 3
(27.7 x 16.9cm)

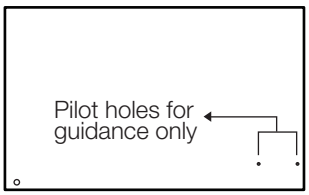


3 Base Shelf
(27.7 x 16.9cm)




4 Door panel
(27 x 27cm)

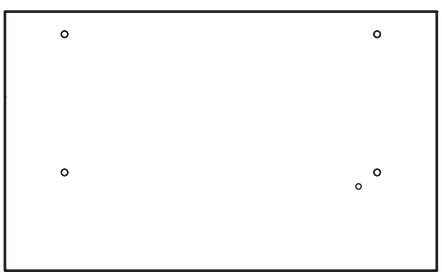


5 Bottom panel
(40 x 24cm)

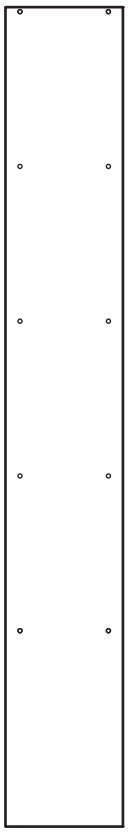

6 Right side panel
(17 x 118.6cm)

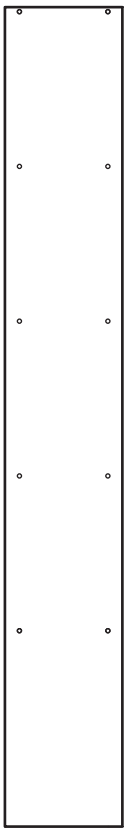

7 Left side panel
(17 x 118.6cm)










8 Back panel
(29.8 x 119.5cm)

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.


A  12mm Screw x 3	**B**  Door stopper x 1	**C**  Door hinge x 2
D  Metal plate x 1	**E**  25mm Screw x 1	**F**  Handle x 1
G  30mm Dowel x 12	**H**  40mm Screw x 12	**I**  Screw cover x 8
J  Nail x 18	**K**  (This screw is included in the wall strap bag)  x 1 Wall strap x 1	**L**  Wall plug x 1
M  14mm Screw x 1		


Tools required


Phillips screwdriver (medium & large)



Bradawl (or sharp point)


Small hammer


Ruler/tape measure


Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws





Assembly Instructions

Step 1

Attaching door stopper

Use Screws Ⓐ to fix the Door stopper Ⓑ onto the Base shelf 3 .

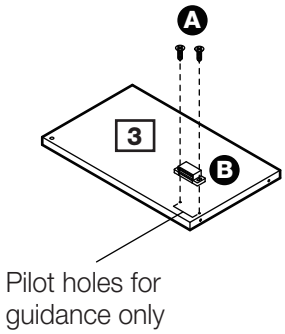

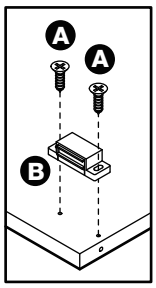



Step 2

Attaching metal plate & door hinges

Use Screw Ⓐ to fix the Metal plate Ⓓ onto the Door panel 4 .

Insert the Door hinges Ⓒ into the Door panel 4 .

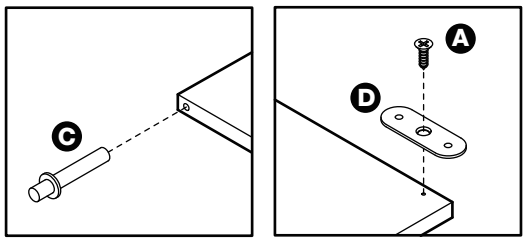


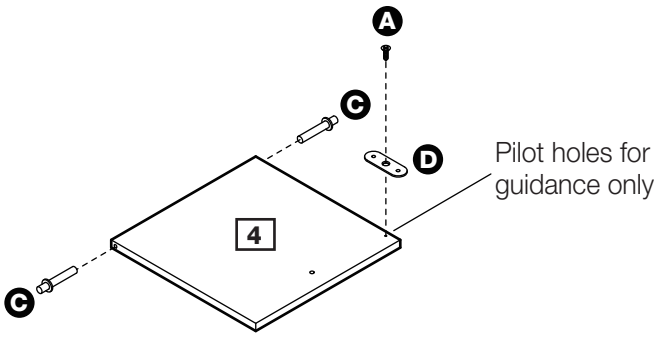

Step 3

Attaching the handle

Use Screws Ⓔ to fix the Handle Ⓕ onto the Door panel 4 .

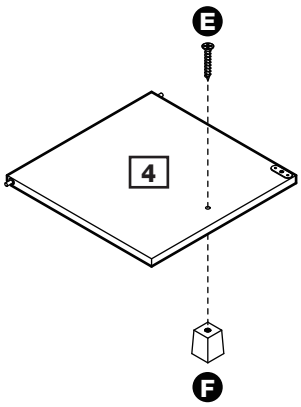


Assembly Instructions

Step 4

Fitting the unit

a: Insert Dowels G into the Shelves 2 .

a:

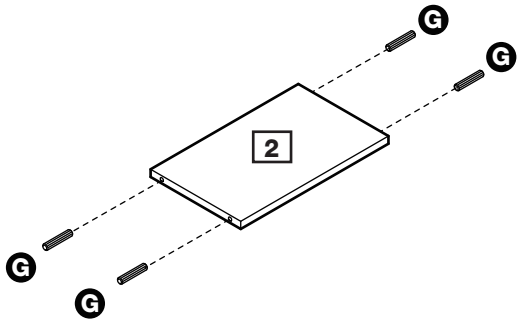


X 3

b: Use Screws H to fix Top panel 1 and Base shelf 3 onto the Right side panel 6 .

Use Screw covers I to cover the screw heads.

b:

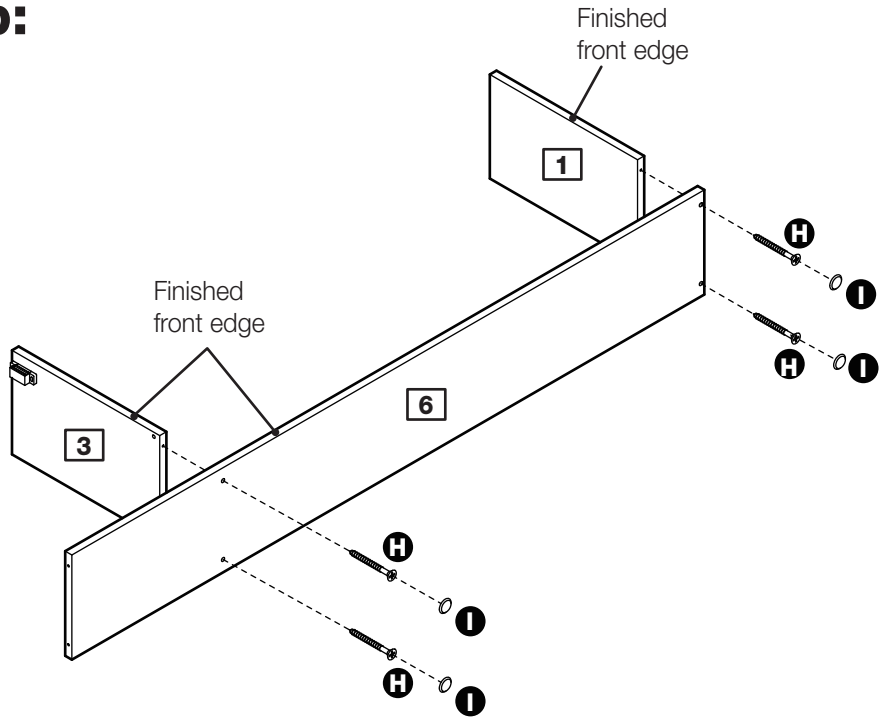


Continued on next page.

Assembly Instructions

Step 4 - continued

c: Position Shelves 2 onto the Right side panel 6 .


c:

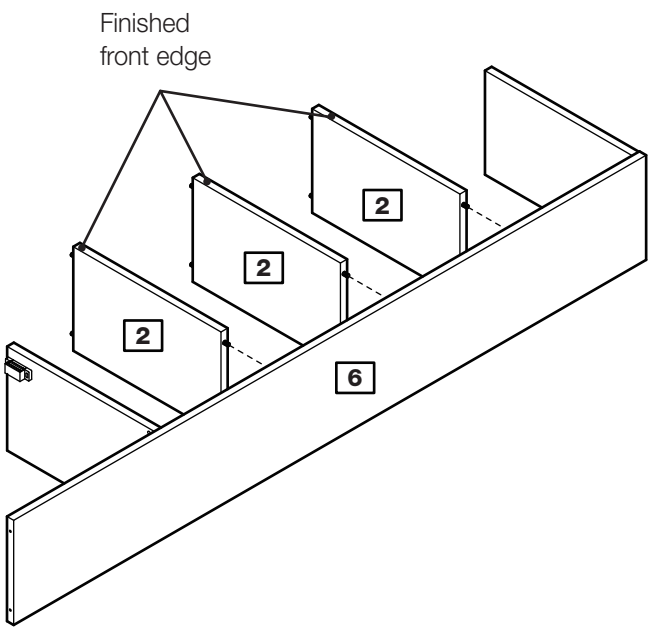

d: Use Screws H to fix the Left side panel 7 onto the unit.

Use Screw covers I to cover the screw heads.

d:

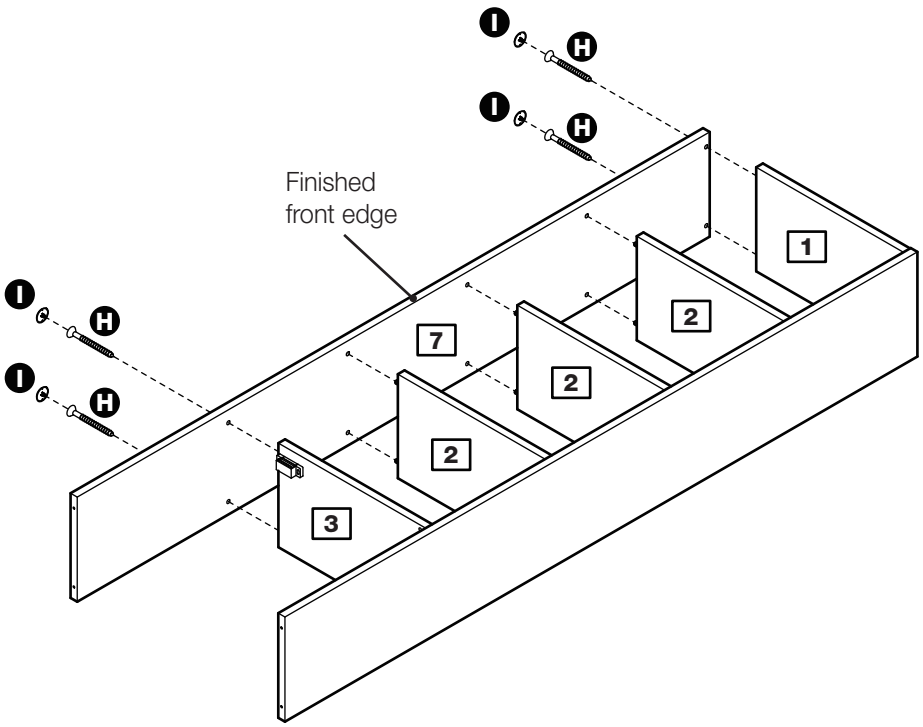

Assembly Instructions


Step 5

Attaching the door panel and Bottom panel

Carefully locate the Door panel [4] onto the unit, aligning the Door hinges with the corresponding holes.

Use Screws (H) to fix the Bottom panel [5] onto the unit.

Note: Ensure the Door hinges are aligned with the corresponding holes.

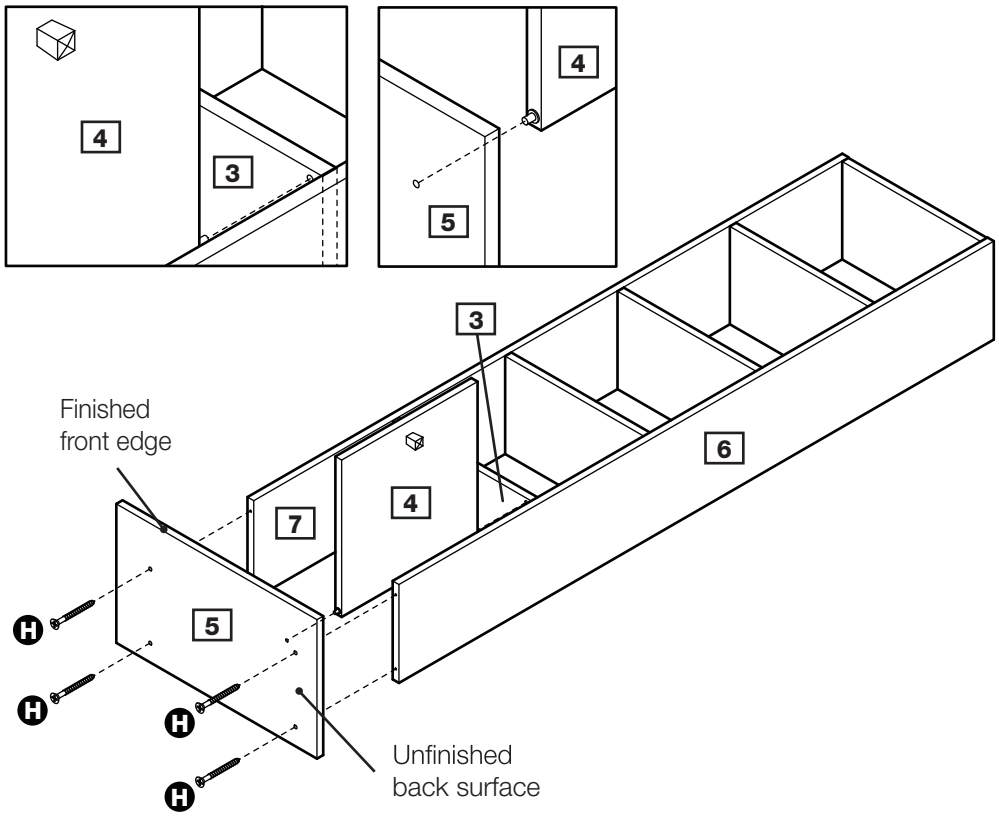


Step 6

Fixing back panel

Use Nails (J) to fix the Back panels [8] onto the unit.

Important:
The unit **MUST** be 'square' when the back is attached.

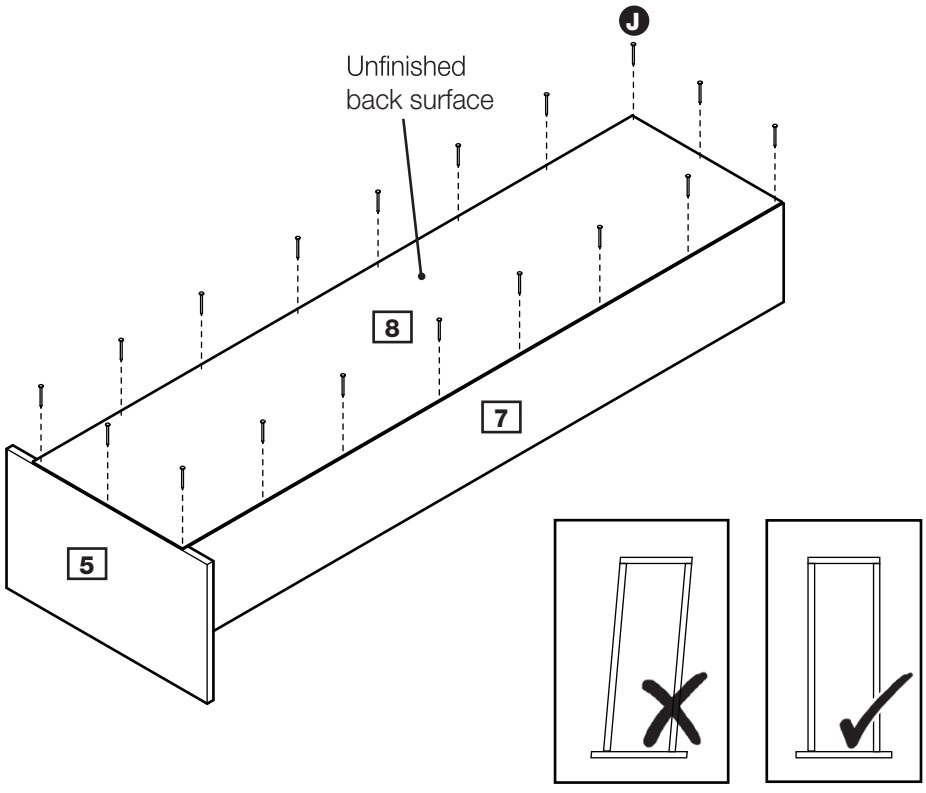

Assembly Instructions

Step 7

Fixing to wall

It is recommended that the unit is fixed to a wall.

Fix Wall strap Ⓚ to top panel using Screw Ⓜ.

With help, move the unit into position.

Warning:
The unit is heavy.
Lift with care.


Mark fixing hole on wall and remove unit.

Drill a hole and insert Wall pulg Ⓛ.


Warning:
Before drilling, check wall for hidden pipes and cables.


Reposition the unit and fix wall strap using Screw Ⓚ.

Assembly is complete.

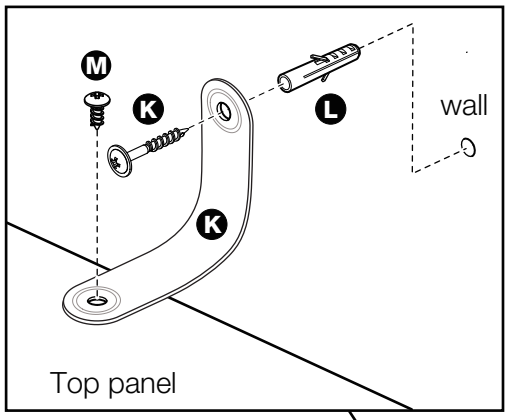

Note: Wall plugs supplied are for solid wall only.
The correct type of fixing must be used for your wall, seek professional advice if in doubt

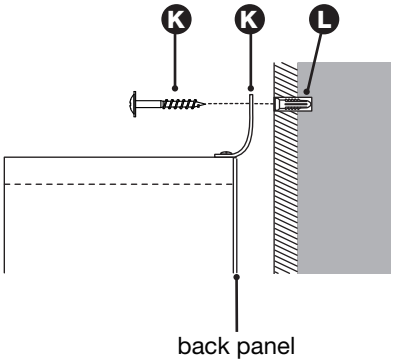

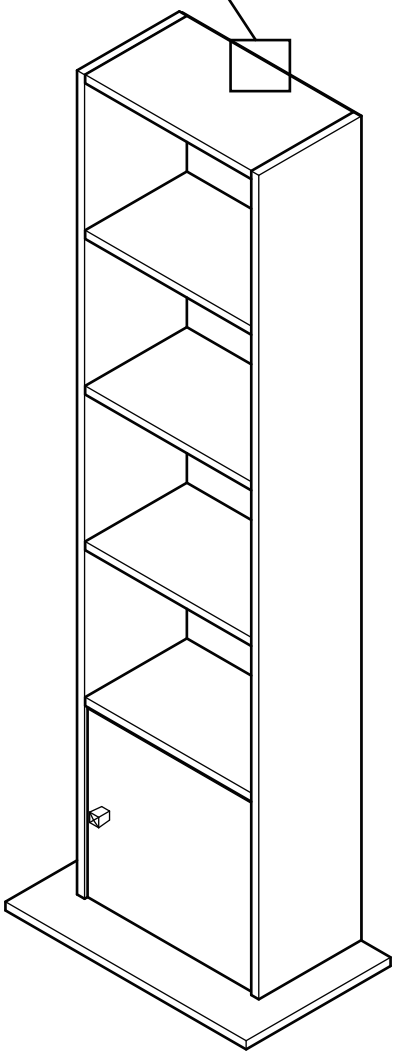

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: **When drilling into walls always check that there are no hidden wires or pipes etc.**

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

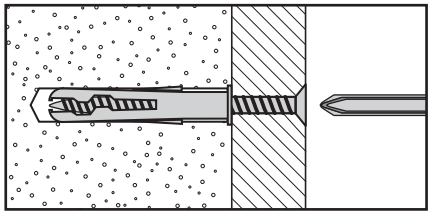


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

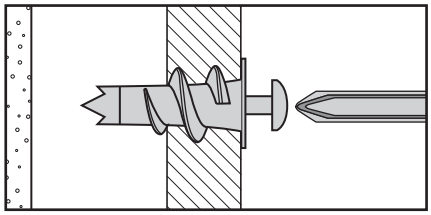


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

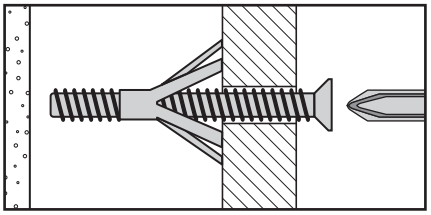


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

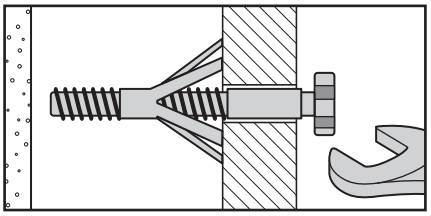


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

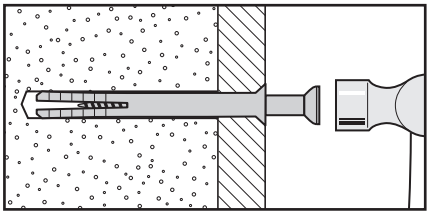

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

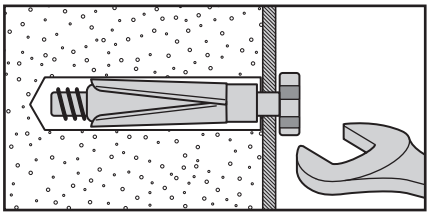

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.