
Haversham - Display Cabinet

Assembly Instructions - Please keep for future reference | 145/2334

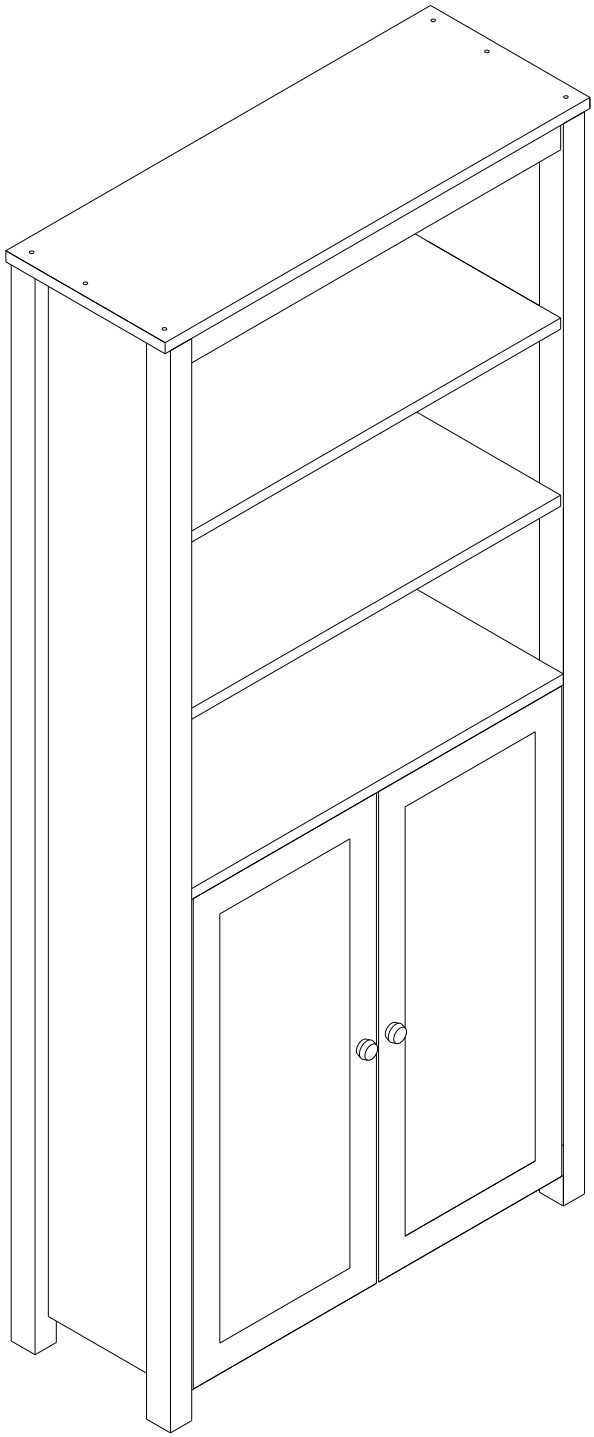

Dimensions

Width - 80cm
Depth - 30cm
Height - 178,5cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 01/10/10

Safety and Care Advice

Important – **Please read these instructions fully before starting assembly**

· Check you have all the components and tools listed on pages 2 and 3.

· Remove all fittings from the plastic bags and separate them into their groups.

· Keep children and animals away from the work area, small parts could choke if swallowed.


· Make sure you have enough space to layout the parts before starting.

· Assemble on a soft level surface to avoid damaging the unit or your floor.

· This product contain Natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

· Do not stand or put weight on the product, this could cause damage.

· Assemble the item as close to its final position (in the same room) as possible.

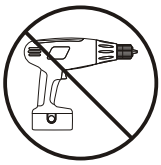

· We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

· Parts of the assembly will be easier with 2 people.

· Dispose of all packaging carefully and responsibly.

Care and maintenance

· Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

· Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


· From time to time check that there are no loose screws on this unit.

· This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below




01 Right front leg (176,5 x 4,5cm)




02 Right back leg (176,5 x 4,5cm)




03 Left front leg (176,5 x 4,5cm)




04 Left back leg (176,5 x 4,5cm)

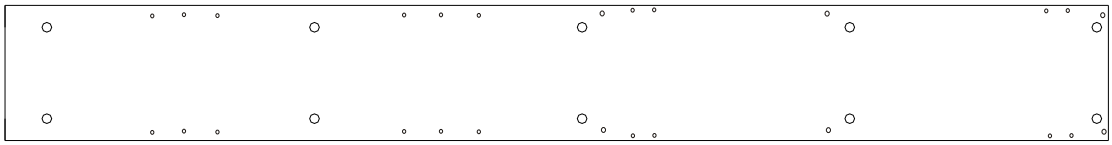


05 Side panel X 2 (171,5 x 20cm)




06 Door X 2 (80 x 34,5cm)

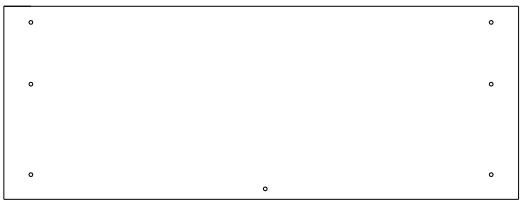

07 Top panel (80 x 30cm)

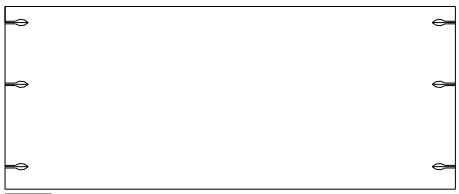


08 Fixed shelf (70 x 28,4cm)

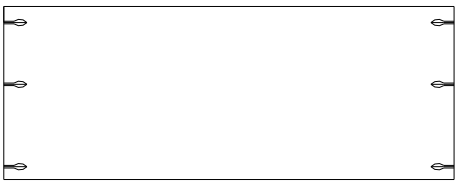

09 Internal shelf X 2 (70 x 26,9cm)




10 Adjustable shelf X 2 (69,9 x 28cm)



11 Cross rail (70 x 4,5cm)



12 Back panel X 2 (172,5 x 35,7cm)








13 H profile (171 x 2,2cm)

Components - Fittings


If you have damaged or missing components, call the Customer Helpline: **08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  8,0 x 30mm Wooden dowel X 36	B  6,0x30mm Thin wooden dowel X 4	C  3,5 x 30mm Screw X 22
D  3,5 x 14mm Screw X 16	E  Handle X 2	F  Plastic cap X 20
G  10 x 10 Nail X 45	H  Foot pad X 4	I  3,5 x 40mm Screw X 7
J  Locking nut X 20	L  Silver plug X 8	M  Hinge plate X 4
N  Hinge X 4	O  Metal dowel X 20	P  Wall strap X 1
Q  Washer X 2		


Tools required




Phillips screwdriver (medium & large)

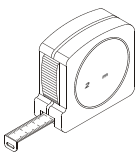

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Parts 01 ,02 ,03 and 04 are labelled for easier identification.

Insert wooden dowels A into leg 01, 02, 03 and 04 as shown.

Screw metal dowels O into leg 01, 02, 03 and 04 .

Do note over tighten metal dowels

.

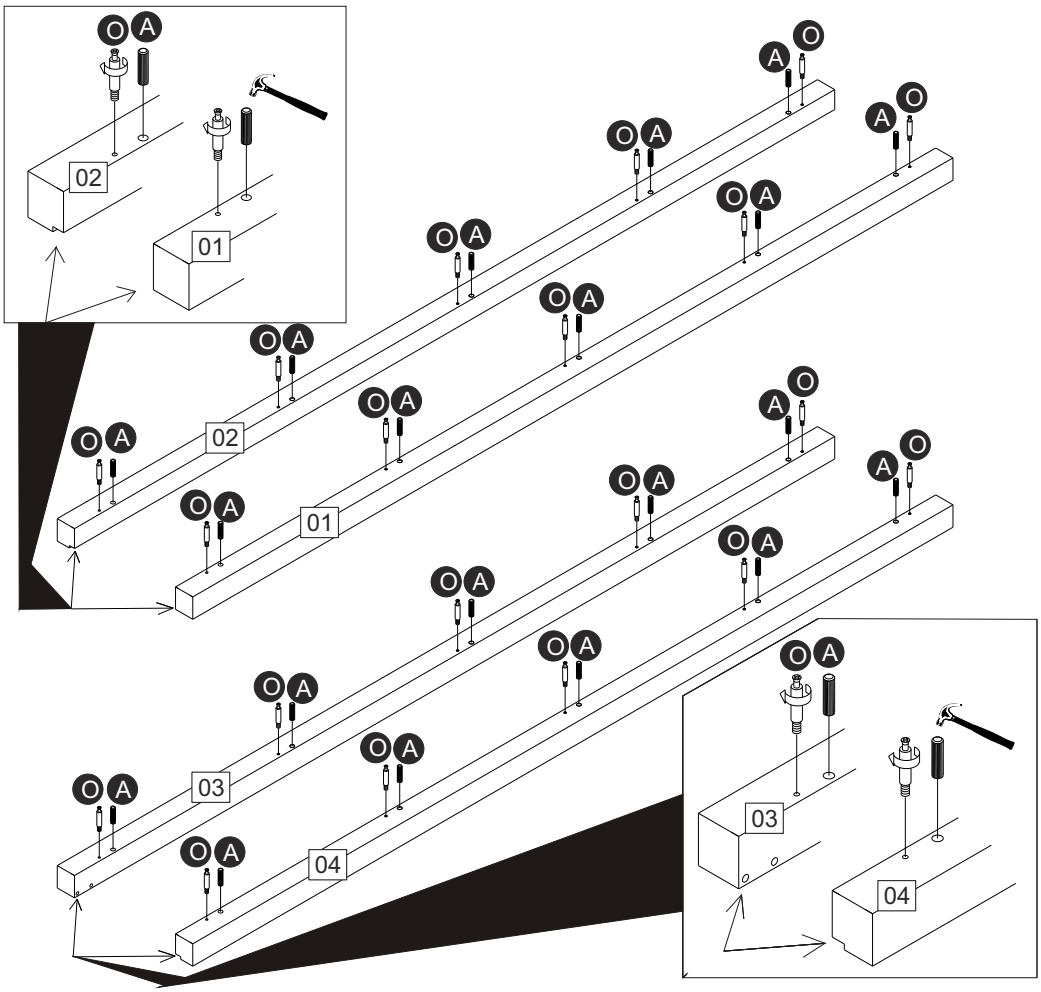


Step 2

a) Fit side panel 05, left front leg 03 and left back leg 04 together.

b) Insert locking nuts J where shown. Use a screwdriver to turn locking nuts clockwise to lock.

Fix hinge plates M using screws D as shown.

With a hammer, insert silver plugs L where shown.

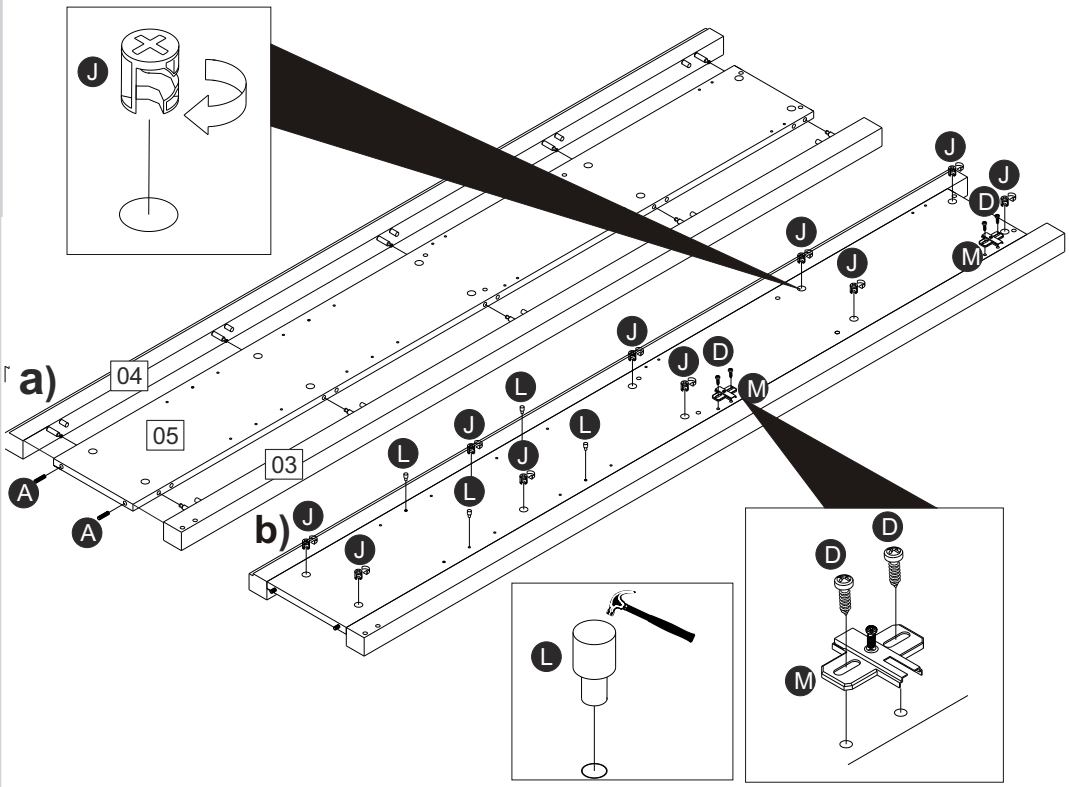

Assembly Instructions


Step 3

a) Fit side panel 05 , right front leg 01 and right back leg 02 together.

b) Insert locking nuts J where shown. Use a screwdriver to turn locking nuts clockwise to lock.


Fix hinge plates M using screws D as shown.

With a hammer, insert silver plugs L where shown.

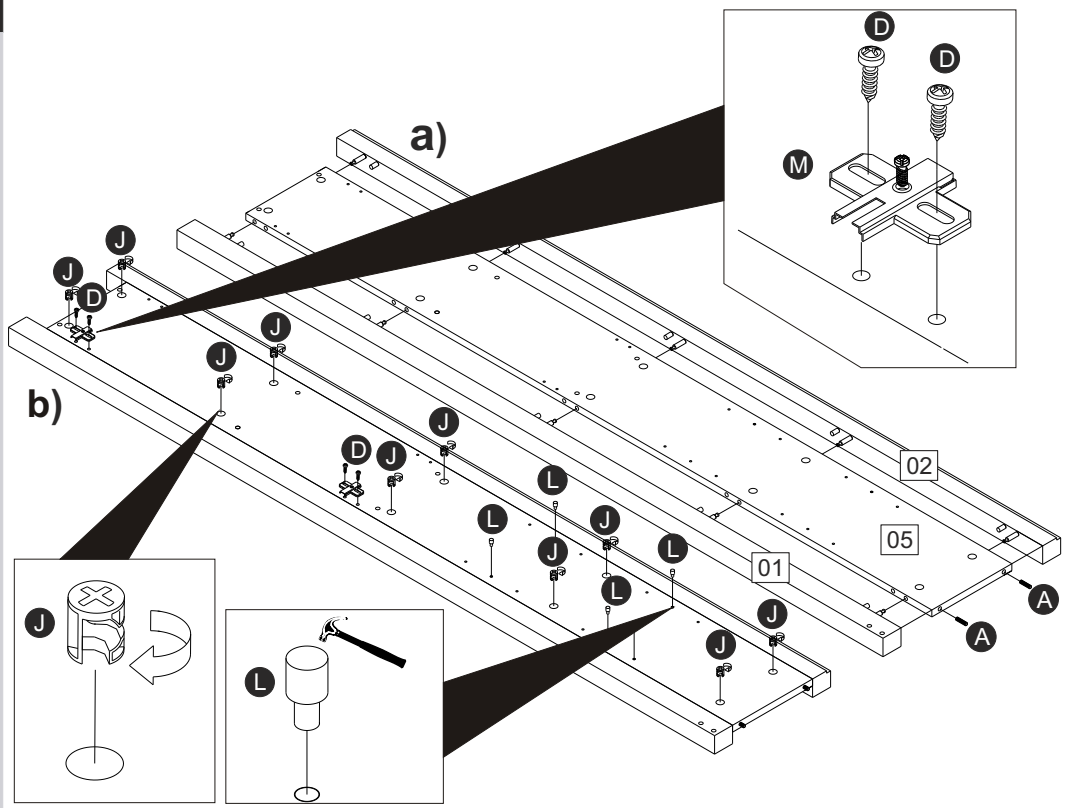

Step 4


Insert wooden dowels A into shelves 08 and 09 and wooden dowels B into cross rail 11 as shown.

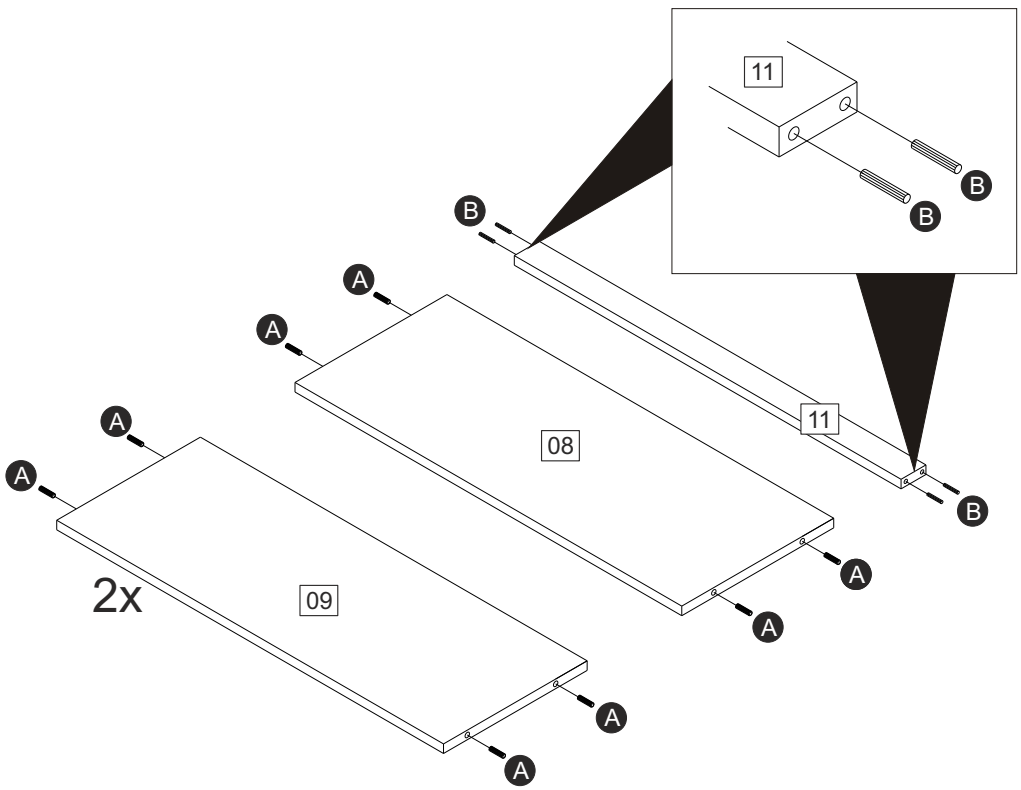

Assembly Instructions


Step 5

Fix shelves 08 and 09 and cross rail 11 to the side assembled with panels 05, 03 and 04 using screws C.

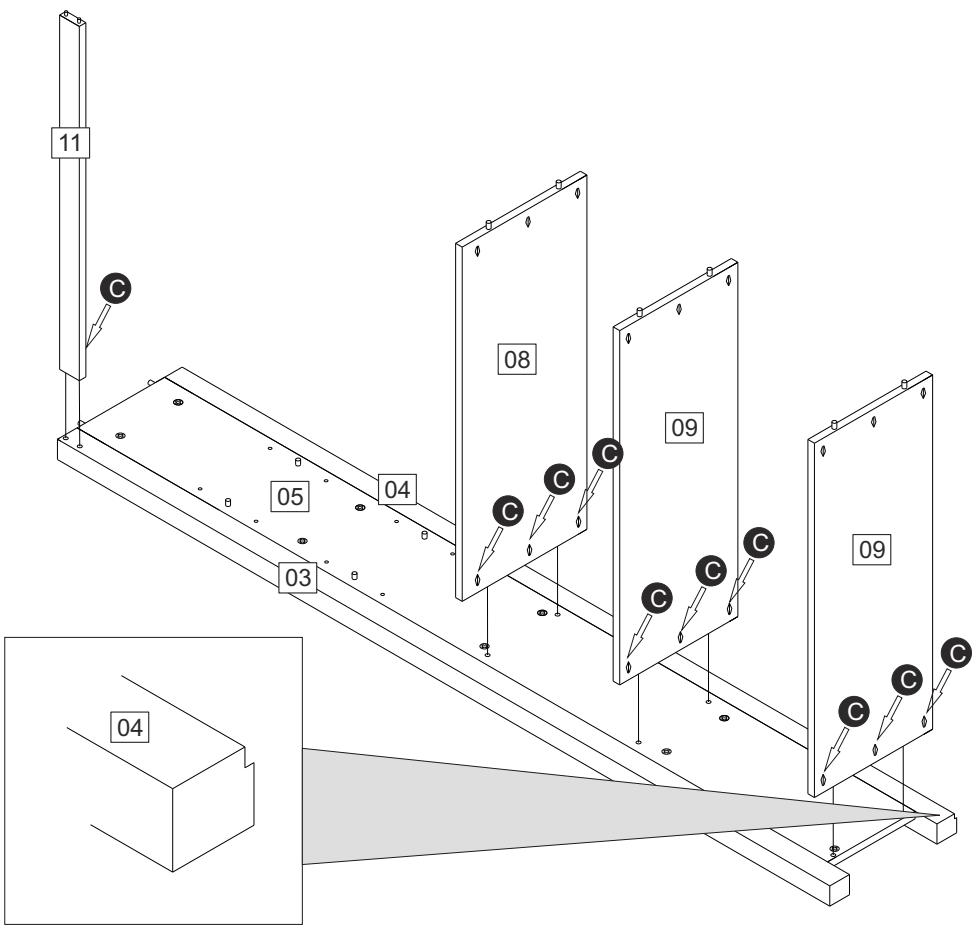

Step 6

Fix the other side panel using screws C.

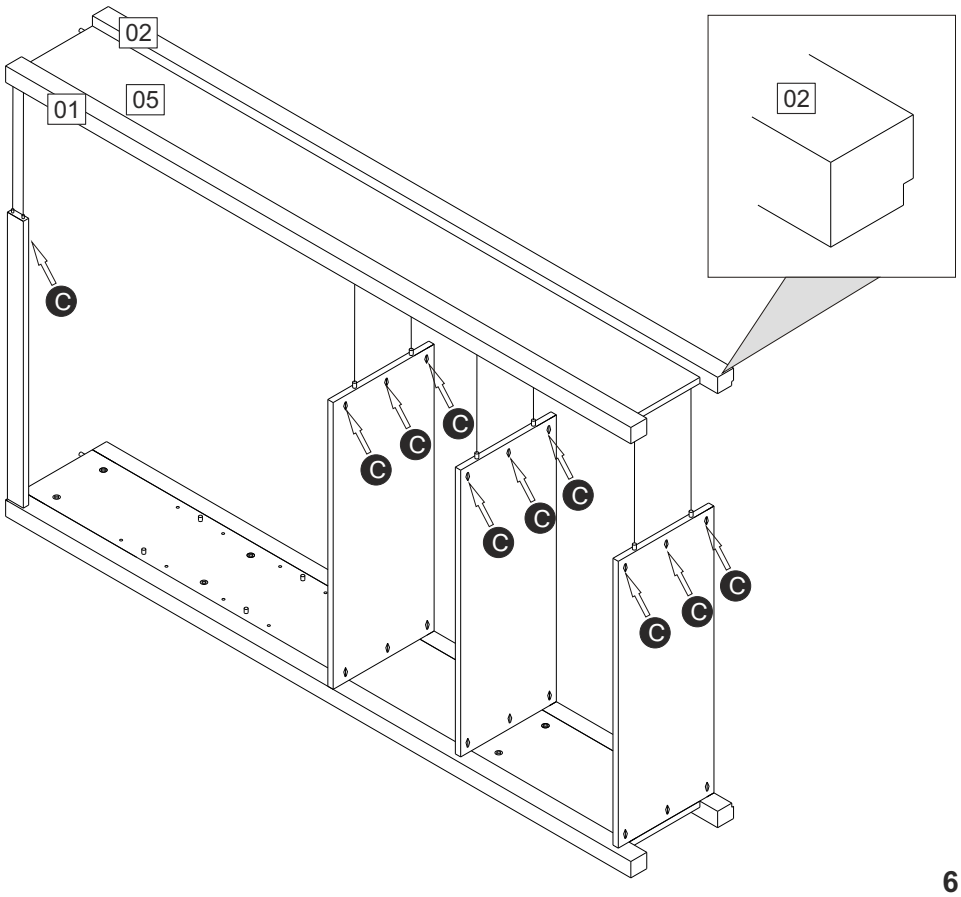

Assembly Instructions


Step 7

Fixing panels:

With help, turn the product with its front facing down.

Fix top panel 07 to the assembled cabinet using screws I.

Note: Make sure top panel is correctly positioned as shown in the diagram prior to fixing.

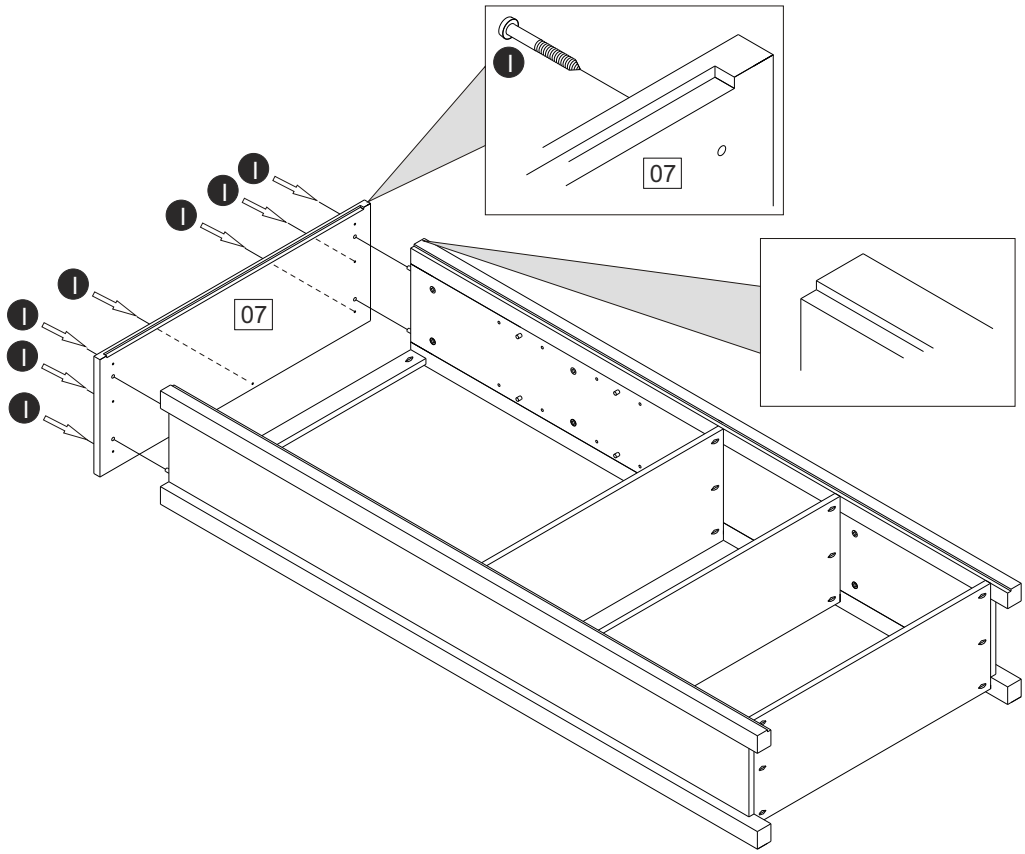

Step 8


Position back panels 12 within rebates with profile 13 in place as shown.

Attach back panels 12 using nails G.

IMPORTANT
Cabinet must be "square" when back is attached.

Insert screws G to the fixed shelf through back panels as shown. Insert screws at 921mm from top edge.

With the help of a hammer, fix foot pads H as shown.

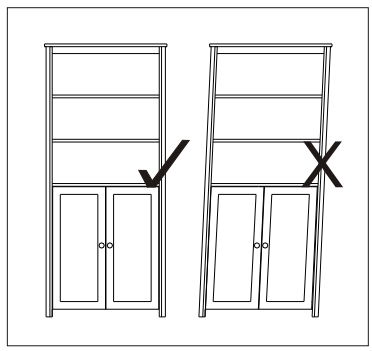


Assembly Instructions

Step 9

With help, turn the product upright and insert shelves to the unit as shown.

Fixing wall strap:


Fix wall strap P to top of product (edge) using washer Q and screw D as shown.

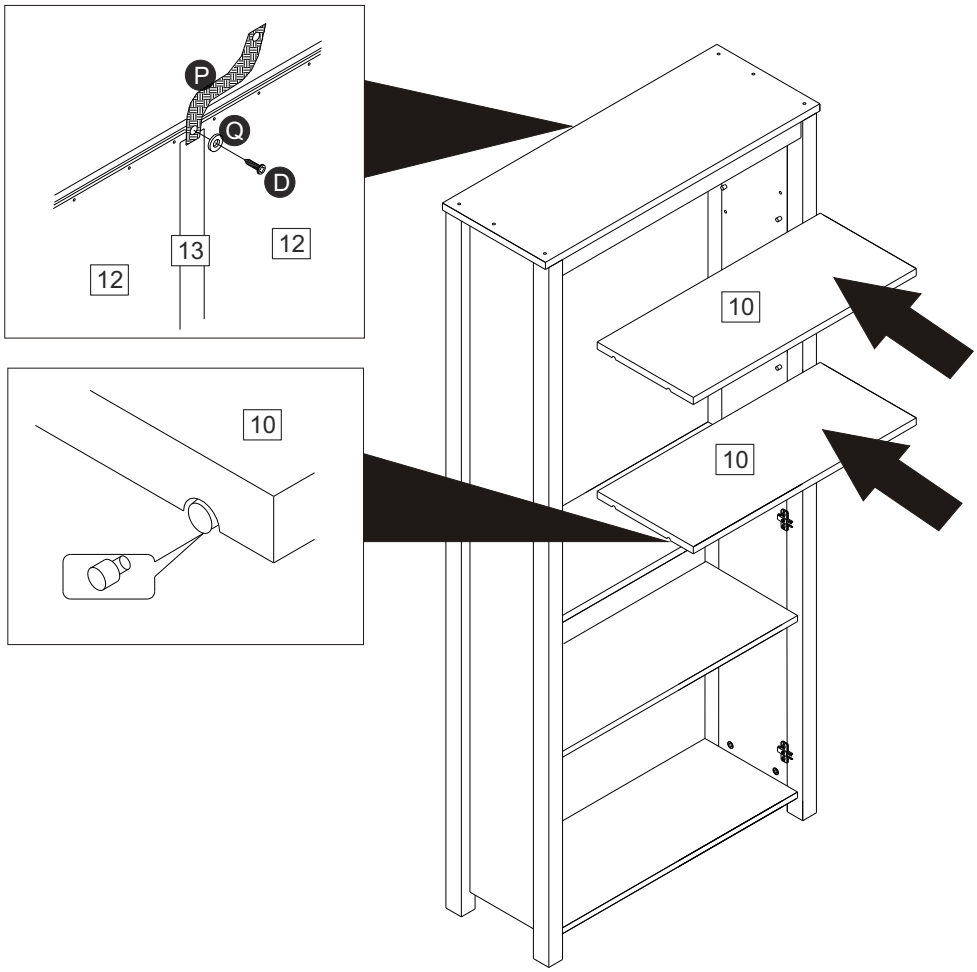

Step 10

Attach hinges N to the doors 06 using screws D as shown.

Fix handle E using screw C as shown.

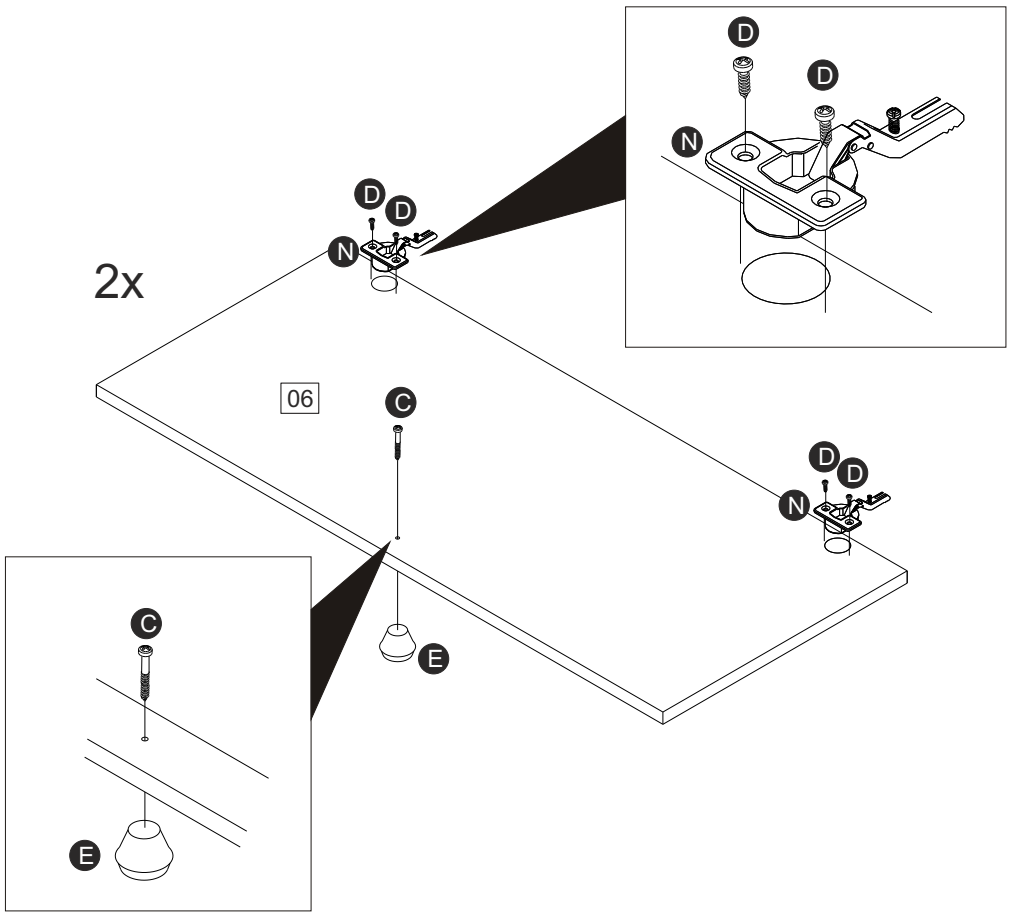


Assembly Instructions

Step 11

Hanging doors:

With help, slot door hinges (N) onto hinge plates (M) and tighten screw.

Insert plastic caps (F) in the right and left side panel as shown.

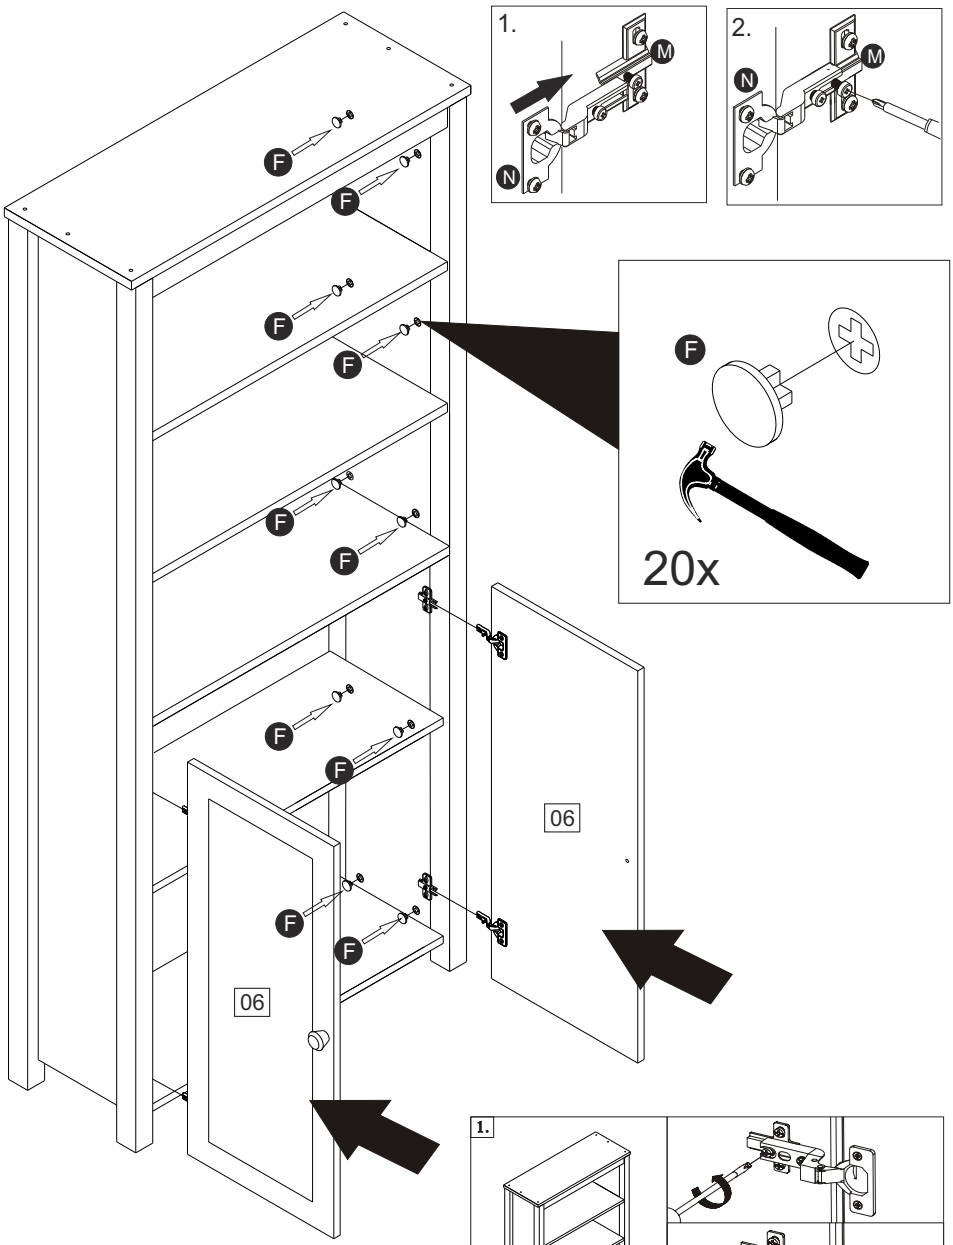


Hinge adjustment:

1- To move doors left or right, loosen screw shown and move doors to suit. Re-tighten screws.

2 - To move doors in or out, loosen screw shown and move doors to suit. Re-tighten screws.

3 - To move doors up or down, loosen screws shown and movedoors to suit. Re-tighten screws.

Assemble is complete

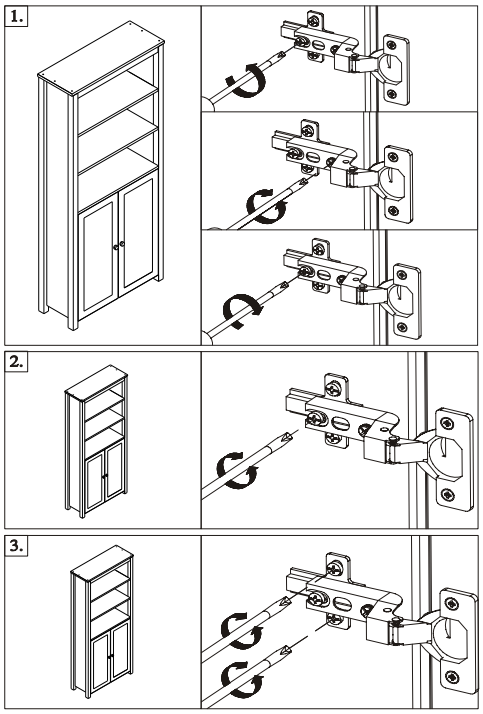


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

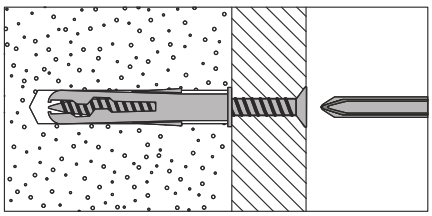


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

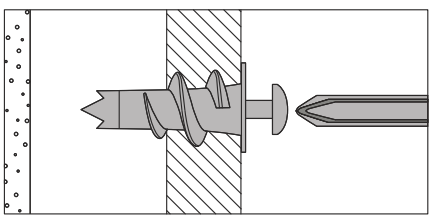


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

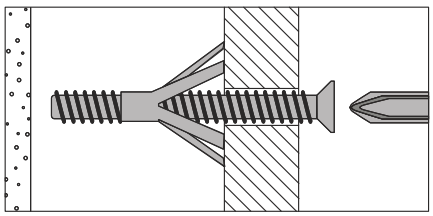


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

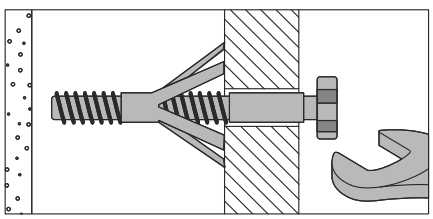


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

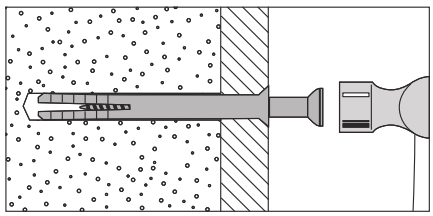

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"ShieldAnchor" wall plug Heavy loads**

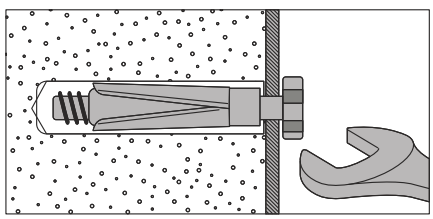

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.