# Black Reclining Sunlounger

**Assembly Instructions** - Please keep for future reference | 1474958



## Dimensions

Width - 66cm
Depth - 88cm
Height - 111cm

**Important** – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
**ARGOS = 0345 640 0800**

# Safety and Care Advice

**Important** – Please read these instructions fully before starting assembly

- Maximum Weight loading 110kg per lounger
- Always please the seat on a firm level base and ensure that the chair legs remain in contact with the ground at all times.
- Do not use without the plastic feet attached or with armrests and leg hinges in locked position
- Do not stand on this relaxer or sit on the arms
- Take care when opening and adjusting; keep hands away from moving parts in order to prevent injury.
- Children using the chair should be closely supervised by an adult.
- Please read the instructions and guidance carefully to ensure safe use of the product.
- Plastic bags can be dangerous. to avoid danger of suffocation keep bags away from babies and children.
- Do not use this product if any parts appeared to be damaged or missing. Instead please contact a member of

Argos Customer Helpline
0345 640 0800

## Care and maintenance

- To clean, wipe with mild soap and water, rinse thoroughly. Do not use bleach, acid, colvents or abrasive cleaners on this item.
- This product is not guaranteed against corrosion. Wash metal parts on a regular basis.
- Use Car Polish or similar to provide extra protection.
- Periodically empty water from the frame to avoid stainging to your patio or decking.
- If the furniture is being used for long periods or during winter, store inside or under a suitable cover.
- Before putting into storage, insure the item is clean and dry.

***Note:*** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Assembly Instructions

## Step 1

After removing this item from its packaging place the back leg of the lounger on the ground/floor and hold as shown in Fig.1



①

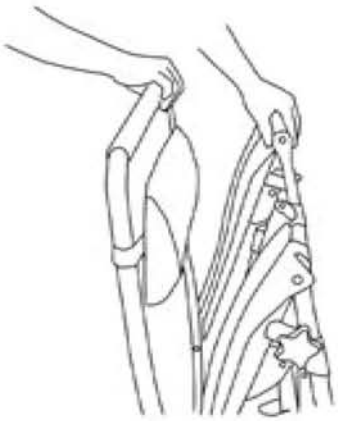

②

## Step 2&3

Unfold the chair-holding the chair by the backrest tube in one hand , exert outward and downward pressure on the armrest with your other hand, this will cause the lounger to open as indicated in Fig. 2 & 3. Be careful not to trap or pinch fingers in the moving parts or the loungers.



③



④

## Step 4

Placing one foot on the rear leg, slide the backrest back fully and then forward into the most upright position. Fig.4. ensure that the front and back legs are in the fully extended position by checking that the back leg hinge and bracket are in the correct position as shown in Fig. 4a & ab.

***Warning:*** The lounger must not be used unless these parts are in the correct position.



4a



4b

# Assembly Instructions

## Step 5


Before sitting on the lounger,ensure that the front legrest is in the most upright positionso that it is almost tipping the ground. Fig 5.




## Step 6&7

To recline the lounger; hold the front of the armrests in each hand and slowly lean backward to the required position. Lock the chair in position by turning the locking knobs in the direction indicated.
Fig 6 & 7.

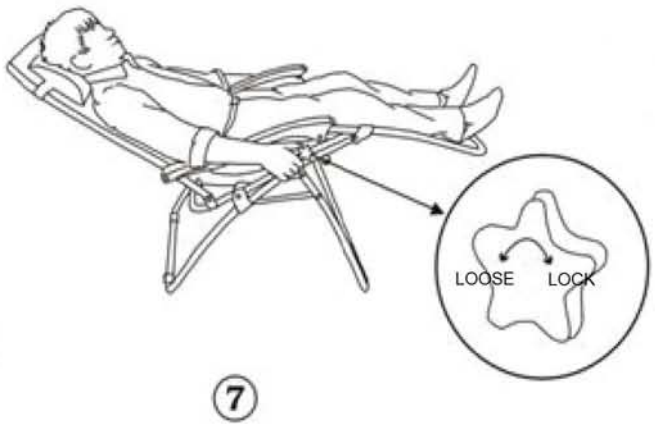


## Step 8

When you are finished using the lounger, simply turn the knob in the required direction to unlock.Place both hands on the frontof the armrest and lean forward.this will bring the lounger back to the most upright position.
Fig. 8.




To fold the lounger, reverse steps 1-3 .