
CD/DVD Cabinet

Assembly Instructions - Please keep for future reference | 151/9239

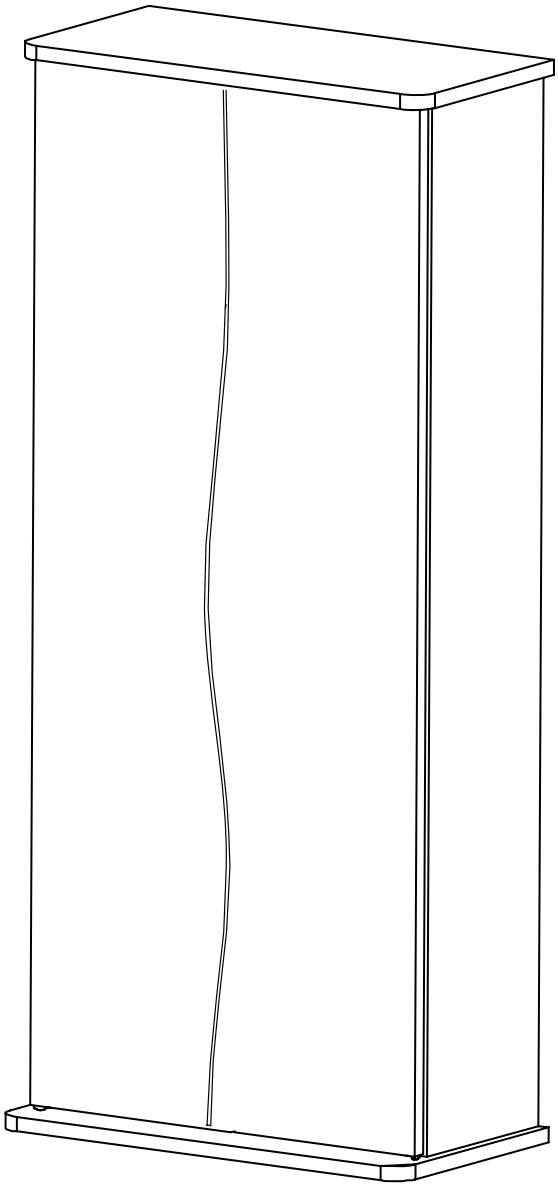

Dimensions

Width - 39cm

Depth - 21cm

Height - 88cm

Important – Please read these instructions fully starting assembly

If you need help or have damage or missing parts, call the **Customer Helpline:08456 400800**

Issue 1 - 12/11/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Assemble the item as close to its final position (in the same room) as possible.

• Make sure you have enough space to layout the parts before starting.

• Dispose of all packaging carefully and responsibly.

• Keep these instructions for further use.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline:08456 400800**


Please check you have all the panels listed below




1 Base panel (390 ×210mm)

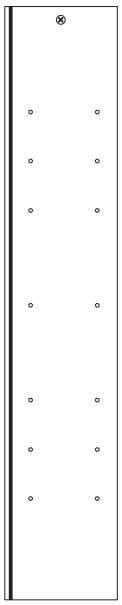


2 Side panel (Left) (160 × 855mm)

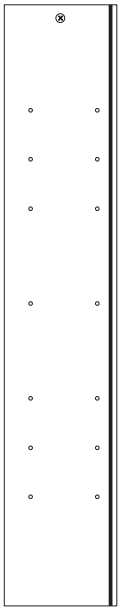

3 Side panel (Right) (160 × 855mm)




4 Back panel (858 × 354mm)

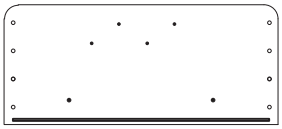


5 Top panel (390 × 190mm)



6 Shelf x 5 (345 × 128mm)

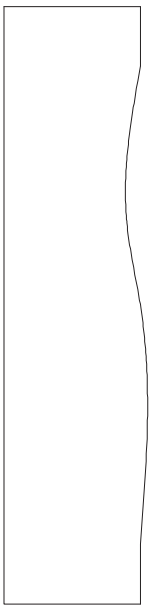

7 Door (Left) (194 × 850mm)





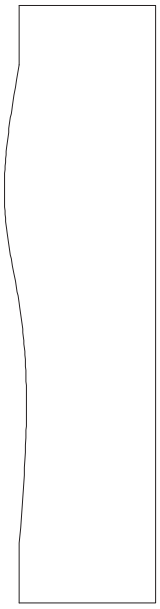


8 Door (Right) (194 × 850mm)


Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than are required.

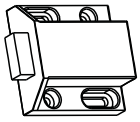
A  Metal dowel x 2	B  Magnetic catch x 2	C  Screw x 4 (¢5xM3x9.8mm)
D  Hinge pin x 4	E  Wooden dowel x 4	F  Screw x 4 (ST4x38mm)
G  Locking nut x 2	H  Shelf support pin x 20	J  Plastic support frame x 5
K  Metal plate x 2	L  Screw x 2 (¢8.2xM4x12L)	M  Wall strap x 2
N  Screw x 2 (¢6.3xM3x12mm)		

Tools required


Phillips screwdriver
(medium & large)


Ruler/tape measure

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Preparing top panel

Place top panel [5] upside down onto a clean flat surface.

Fit magnetic catches (B) to the underside of top panel [5] using screws (C).

Screw metal dowels (A) into the underside of top panel [5].

Note: Screw metal dowels as far as shown. Do not overtighten.

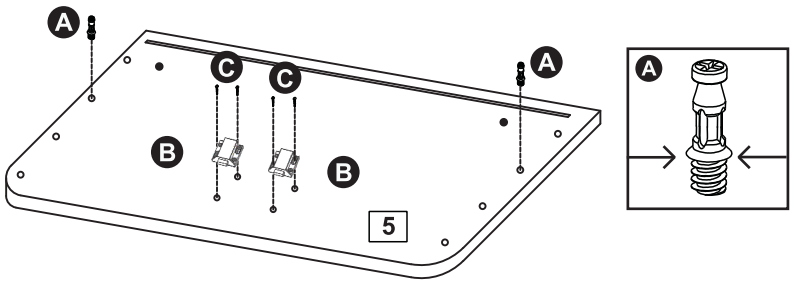


Step 2

Preparing doors

Assemble metal plates (K) to doors [7] and [8] using screws (N).

Push hinge pins (D) into the holes in the top and bottom of doors [7] and [8].

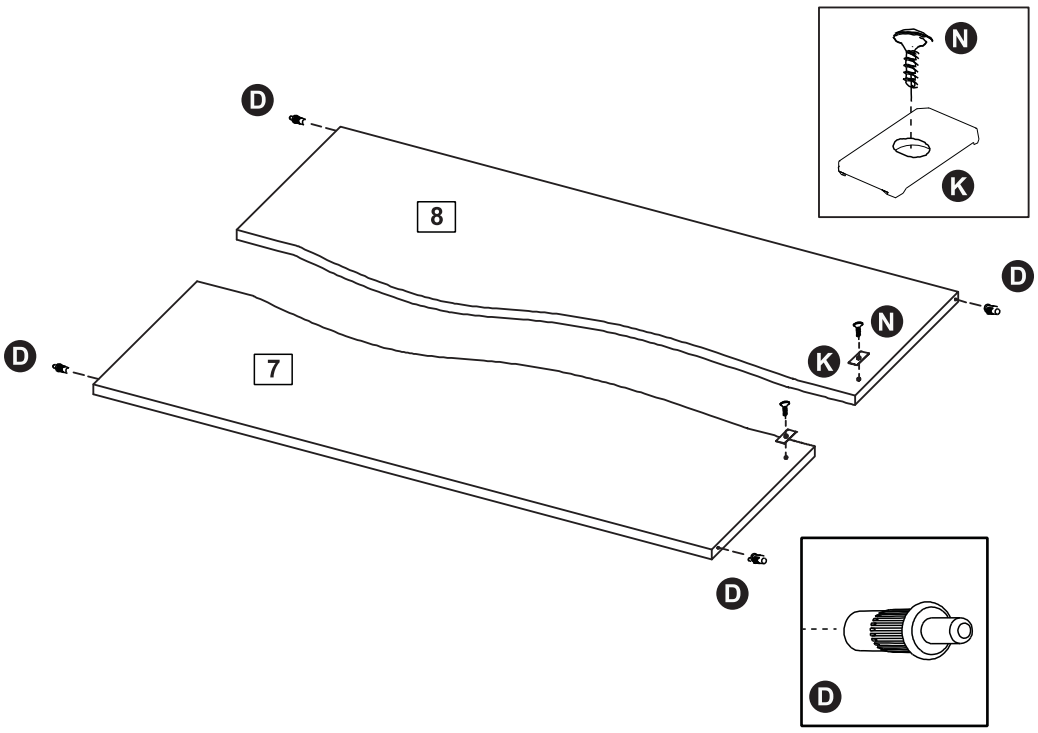


Step 3

Assembling base

Assemble base panel 1 to side panels 2 and 3 using screws F.

Note: ensure the grooves in side panels 2 and 3 are at the back.

Fit wood dowels E into the holes in the top of side panels 2 and 3.

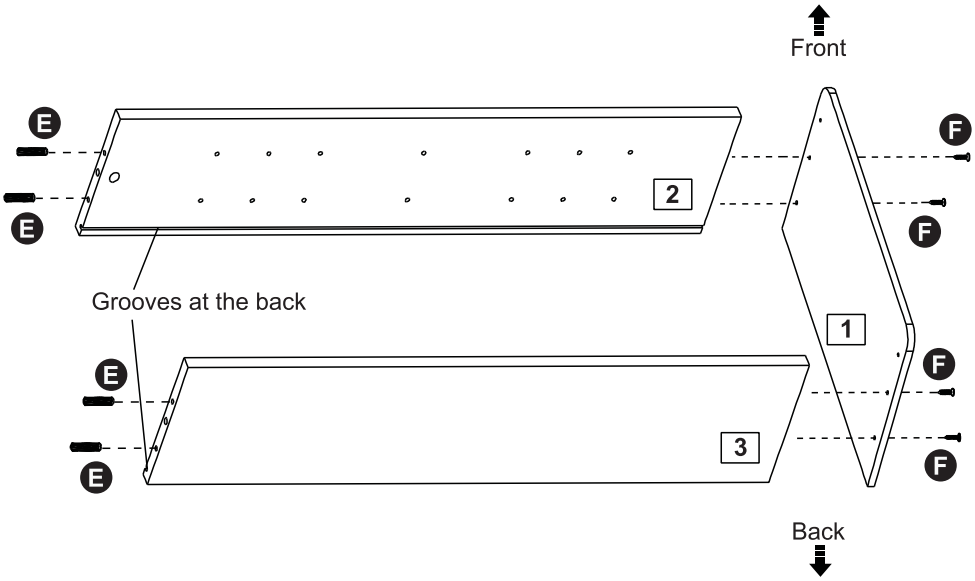


Step 4

Fitting back panel

Carefully slide back panel 4 into the grooves in side panels 2 and 3

Note: ensure the cut outs in back panel 4 are at the top.

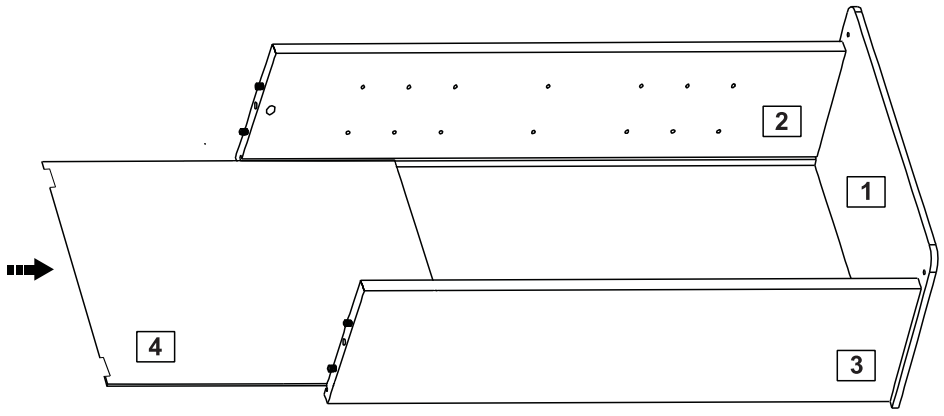


Step 5


Assembling top

Carefully locate top panel 5 into position.

Insert cam locks G into the holdes in side panels 2 and 3 as shown.

Using screwdriver, turn cam locks clockwise to secure.

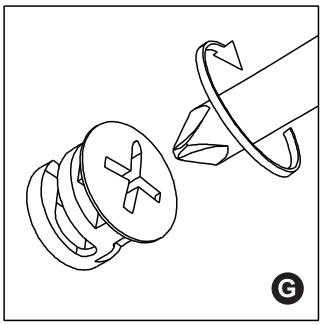

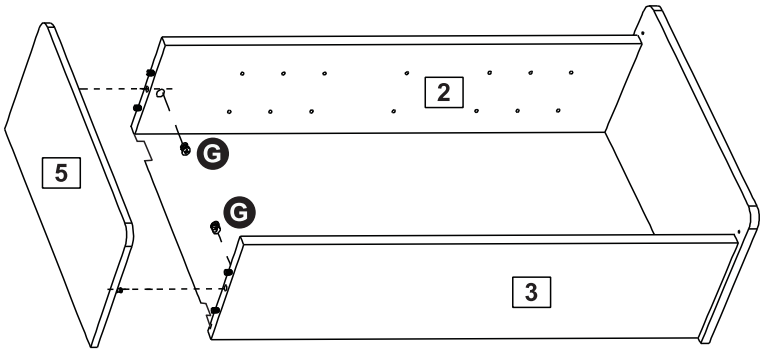


Step 6

Fitting shelf supports

Carefully stand the unit upright.


Fit shelf support pins H into the holes in side panels 2 and 3.

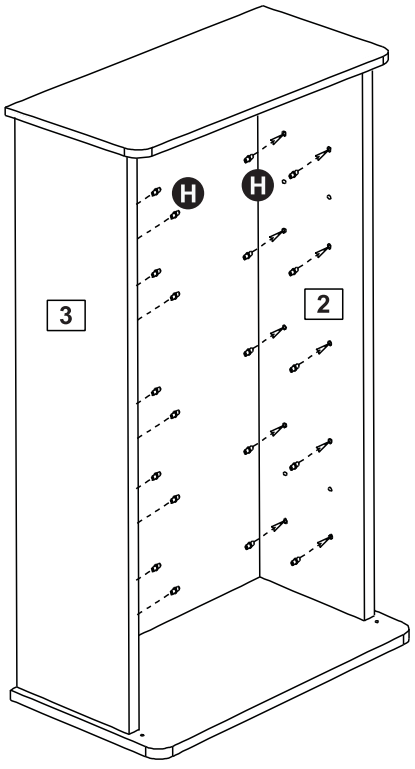

Step 7

Locating shelves


Carefully locate shelves 6 onto the support pins.

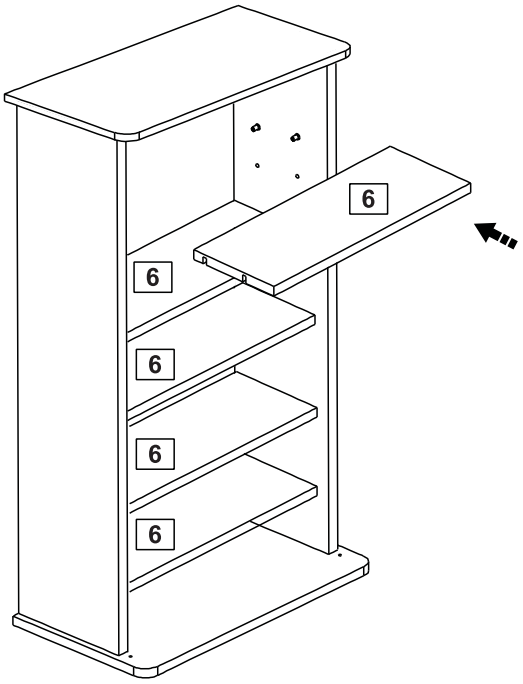

Step 8

Locate support frames


Carefully locate plastic support frames J onto the shelves.

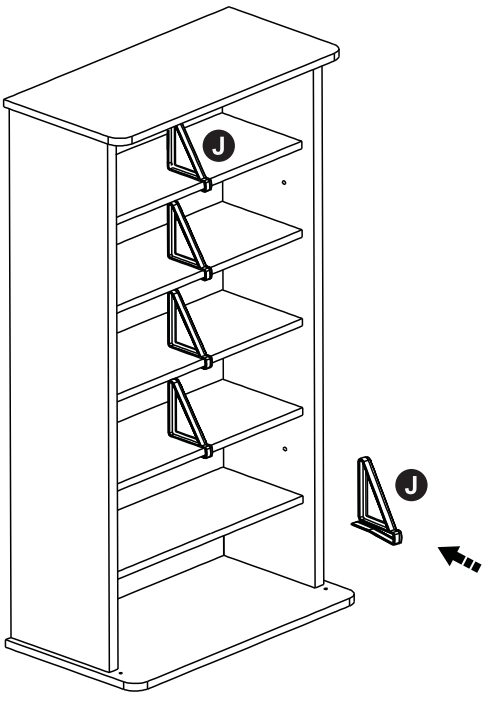

Step 9

Fitting doors

Carefully tilt the doors 7 and 8 to insert the hinge pins into the holes in the top panel and the base panel.

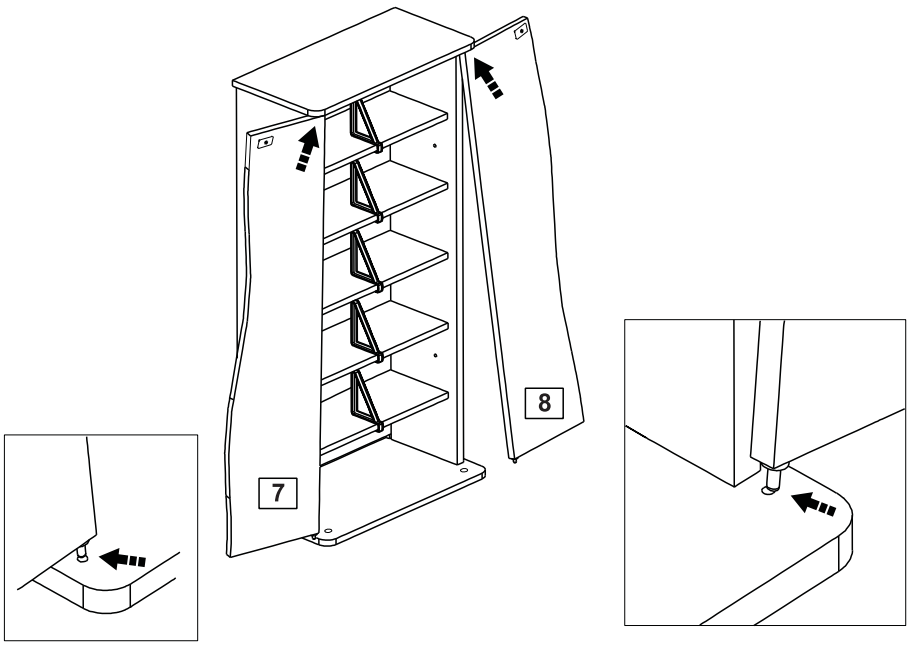

Step10

Fixing to the wall

It's recommended that the unit is fixed to the wall to ensure stability.

Fix wall strap M to top of unit using screw L.


Make the fixing hole locations on the wall and remove the unit.

Drill the wall and fit suitable plugs for your wall type.

Warning:
Before drilling check the wall for hidden pipes or cables.

Re-position the unit and secure the wall straps to the wall.

Assembly is complete.

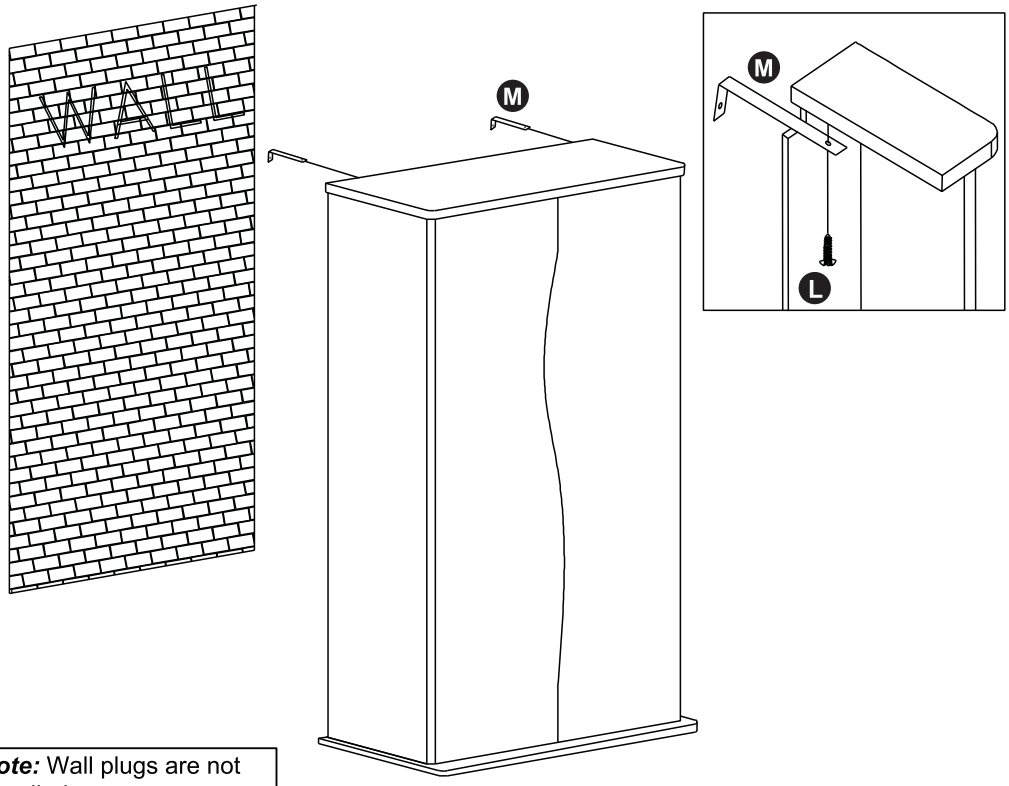

Note: Wall plugs are not supplied.

The correct type of fixing must be used for your wall, seek professional advice if in doubt.

If you need help or have damaged or missing parts,call the **Customer helpline:08456 400800**
Home Retail Group