Nordic - 3 Drawer Chest

Assembly Instructions - Please keep for future reference | 1529810



Dimensions

Width : 43,7 cm

Depth : 39,7 cm

Height : 56,2 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 30 30

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.
• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you have damaged or missing components, call the **Argos Customer Helpline**: **0845 640 30 30**

Please check you have all the panels listed below


1 Top
437x397x15 mm
V155859

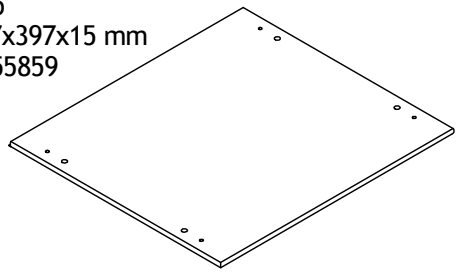


4 Plinth, back
383x60x15 mm
P155865

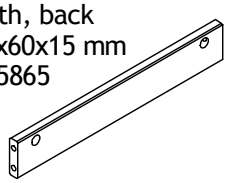


3 Side, right
547x379x15 mm
V155846

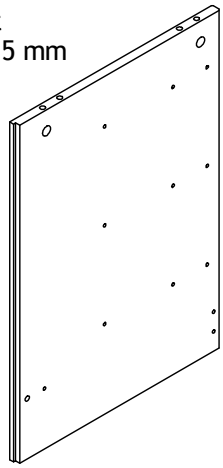


5 Plinth, front
395x96x15 mm
V155802

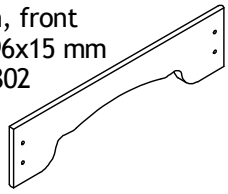


2 Side, left
547x379x15 mm
V155847

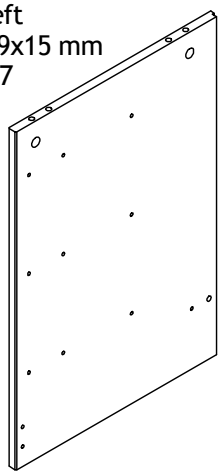


6 Back
464x397x3 mm
NM415851

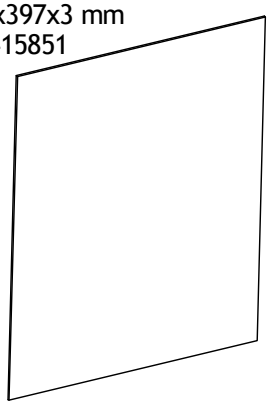


7 Drawerfront, small
395x125x15 mm
V155810

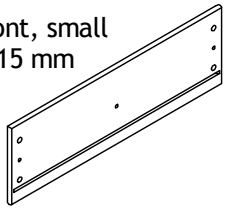


9 Drawer side, right/left x6
350x98x12 mm
S120653

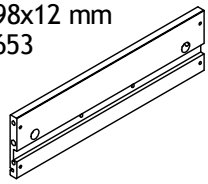


11 Drawer bottom x3
361x347x3 mm
NM415850

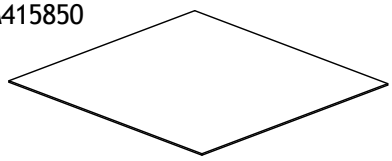

8 Drawerfront x2
395x157x15 mm
V155811

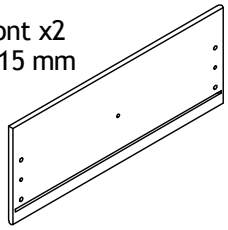

10 Drawer back x3
351x98x12 mm
S120650






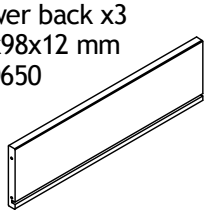


Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0845 640 30 30**

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

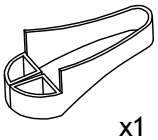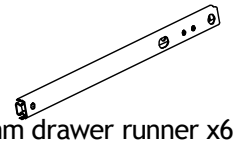A  BA10390 ø8x30 mm wooden dowel x6	**B**  BA10400 ø6x30 mm wooden dowel x12	**R**  BA10170 ø4,0x35 mm Screw x15
Y  Ba10688 Nail holder x1	**C**  BA10590 ø15x9,5 mm x12	**D**  BA10603 ø5/11x34 mm bolt x12
i  BA10025 ø1,2x20 mm x25	**F**  BA10833 15x15x10 mm x6	**G**  BA10468 ø40x30 mm wooden knob x3
H  BA10191 M4x9 mm screw x6	**K**  BA10270 ø5,8x8 mmscrew x18	**E**  BA10240 ø6,1x11,5 mmscrew x8
S  B14359 17x246 mm drawer runner x6	**V**  BA10801 Angle 20x20x2mm x4	

Tools required


Flatblade screwdriver (Medium)


Hammer


Phillips screwdriver (Medium & large)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

Fix the drawer sides 9 to the drawer back 10 as shown, using screws R

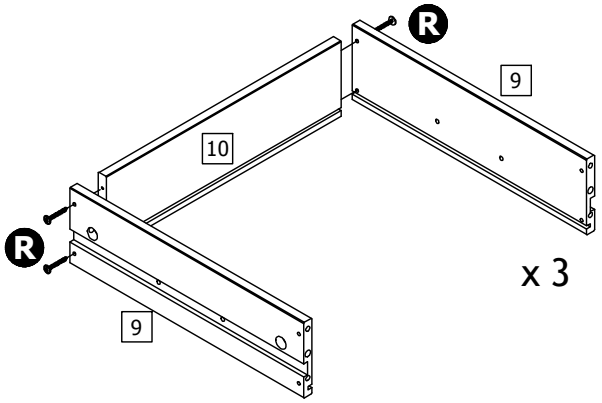


Step 2

Knock the dowels B into the holes indicated on the drawer sides 9 using a small hammer

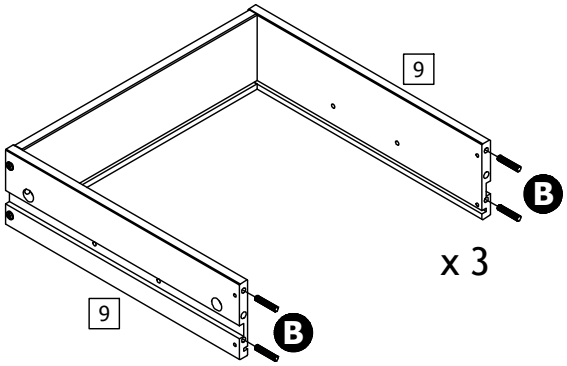


Step 3


Slide the drawer bottom 11 into the drawer sides 9

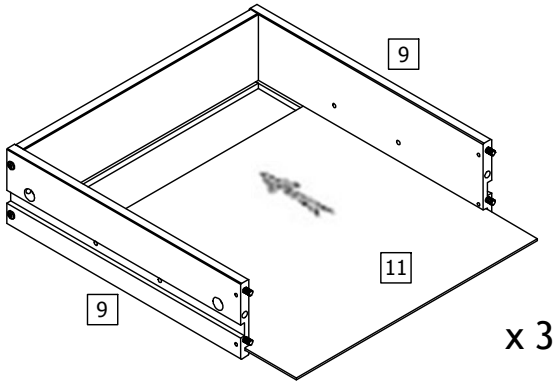

Step 4

Screw the bolts C into the holes indicated on the drawer fronts 7 and 8

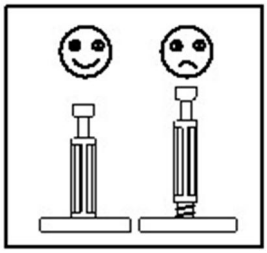

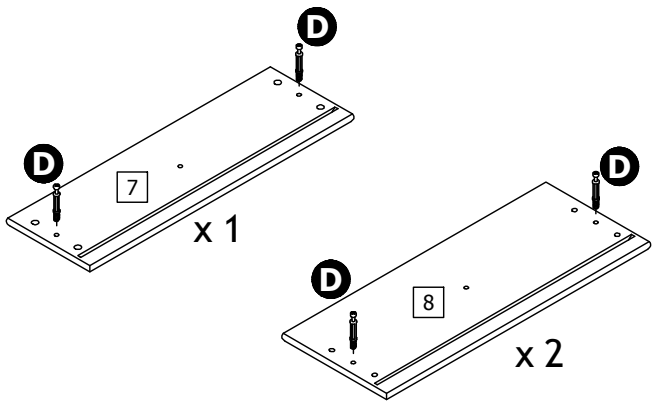


Assembly Instructions


Step 5

Push the drawer fronts 7 and 8 onto the drawer sides 9 as shown

Push cams C into the holes indicated. Arrow pointing toward the front.

Turn the cams C to the right to fix the fronts 7 and 8

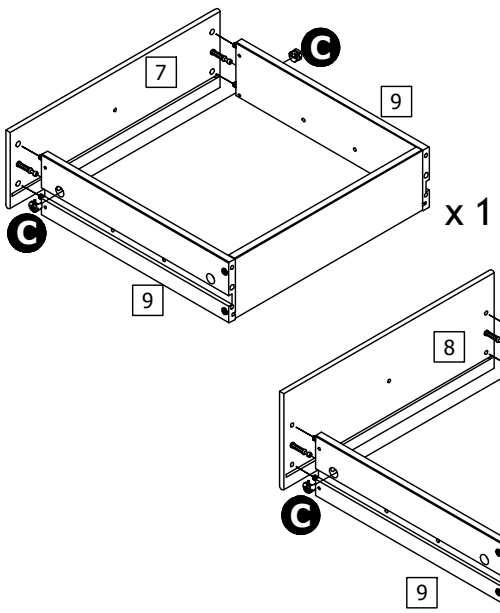

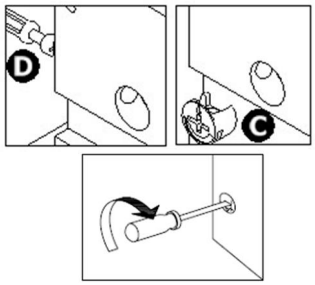



Step 6


Important! Make sure the angle between the drawer fronts 7 and 8 and the drawer sides 9 are 90° before the drawer bottom 11 are fixed.


Fix the drawer bottom 11 to the drawer backs 10 and the drawer fronts 7 and 8 using F.

To adjust the angle between the drawer sides and the drawer fronts push the fitting F sidewards. See details

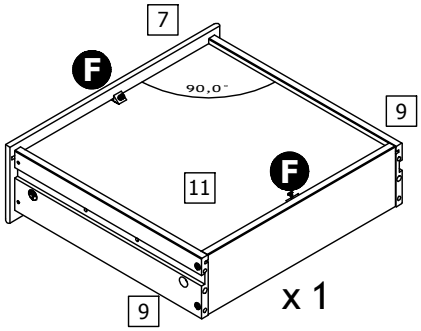

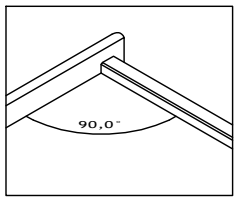


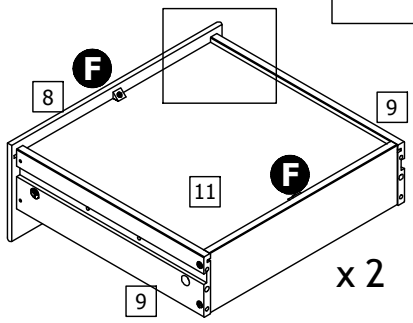


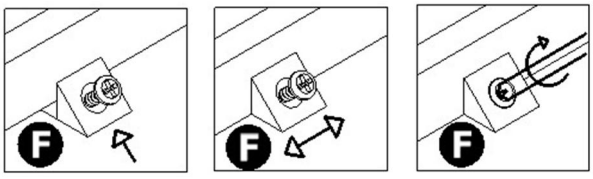

Step 7

Fix the wooden knobs G to the drawer fronts 7 and 8 using screws R.

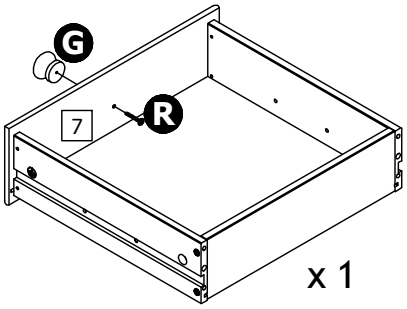


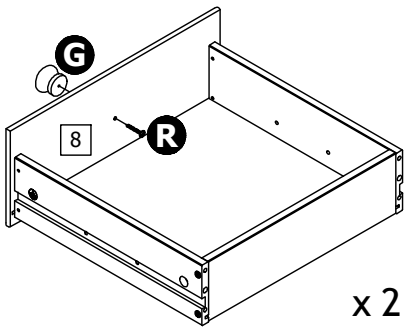


Assembly Instructions

Step 8

Screw the bolts C into the holes indicated on the top 1.

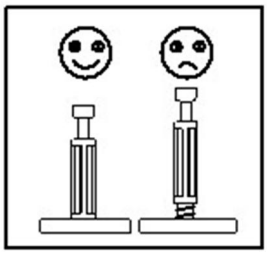

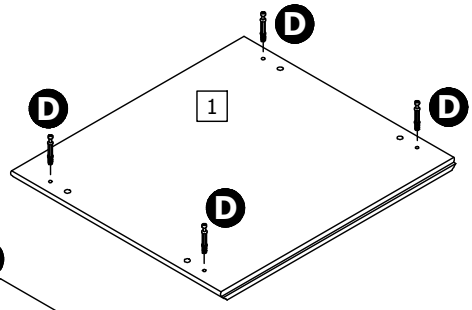



Step 9

Screw the bolts into the holes indicated on the sides 2 and 3.

Fix the angles V on to the sides 2 and 3 using screws E. Place the angles as shown.
See details.

Knock the dowels A into the holes indicated on 2 and 3 using a small hammer

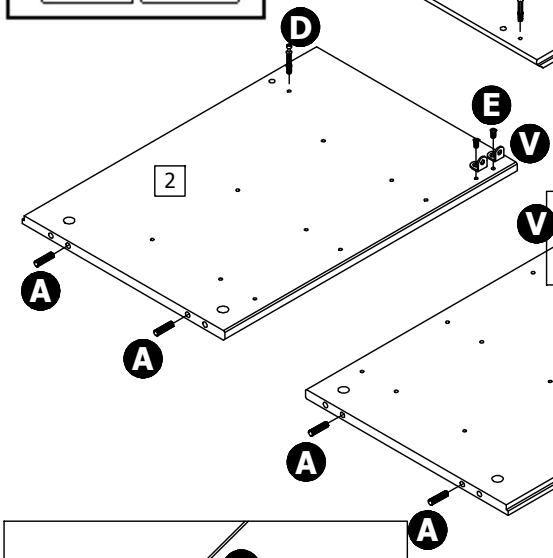


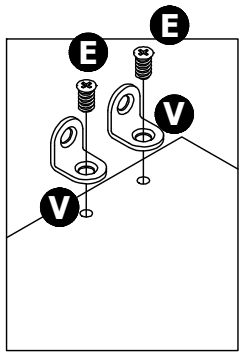

Step 10

Slide the top of the drawer runners S backwards.


Fix the front end of the drawer runners S to the sides 2 an 3 using screws K through the holes indicated.
See details.

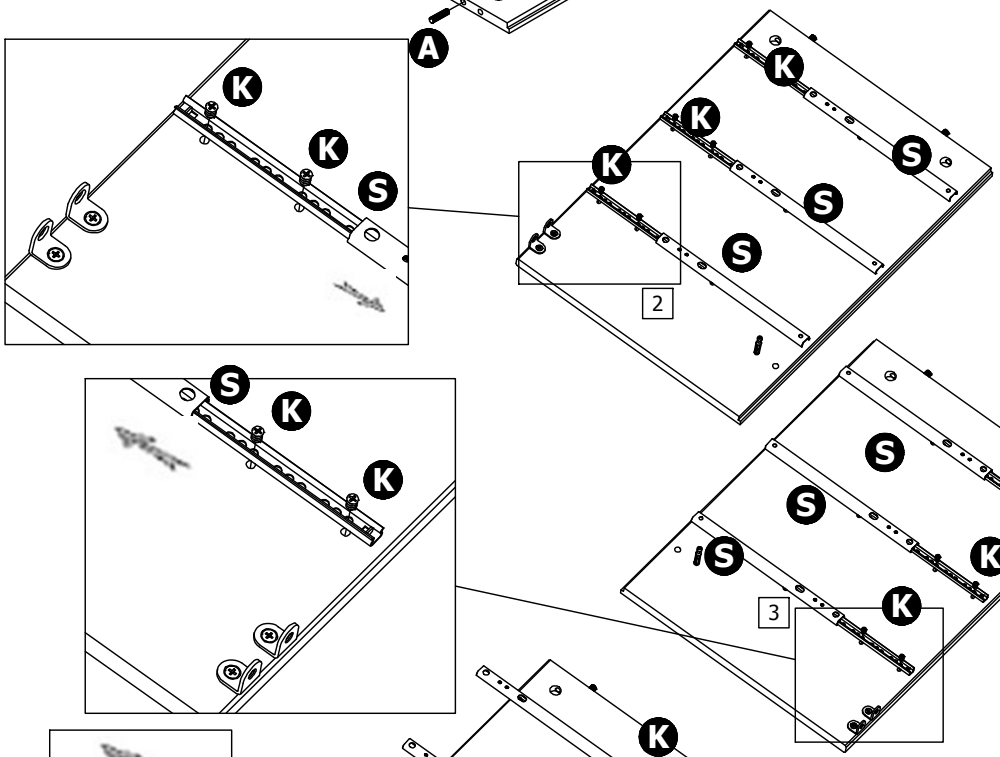

Step 11

Slide the top of the drawer runners S forwards.


Fix the backend of the drawer runners S to the sides 2 and 3 using screws K through the holes indicated.
See details

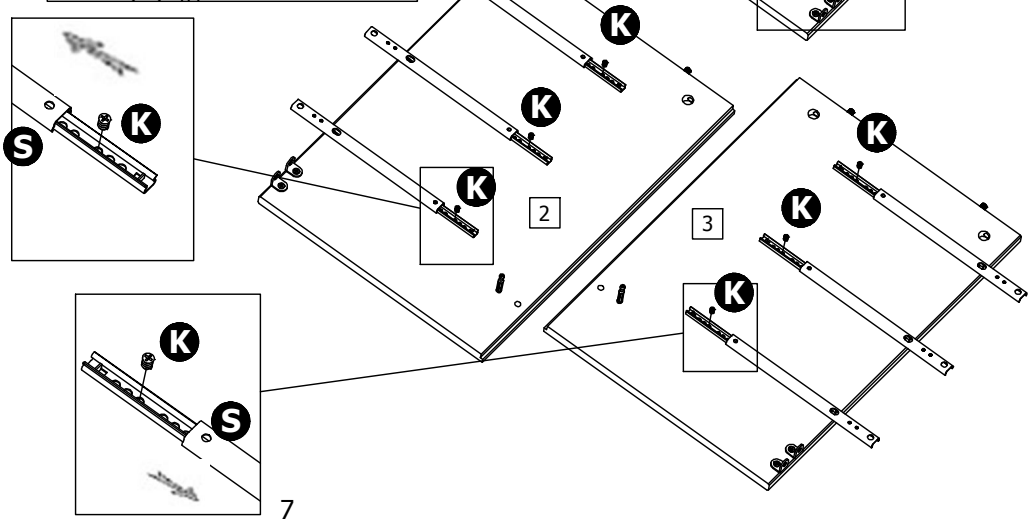

Assembly Instructions

Step 12

Knock down the dowels A into the holes indicated on the back plinth 4

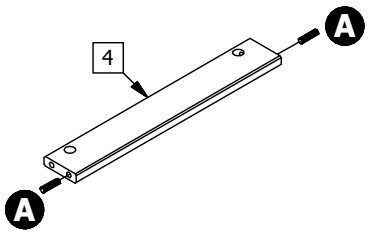



Step 13

Fix the back plinth 4 to sides 2 and 3.

Push the cams C into the holes indicated on the back plinth 4.
Arrow pointing towards the sides 2 and 3.

Turn the cams C to the right to fix the sides 2 and 3.

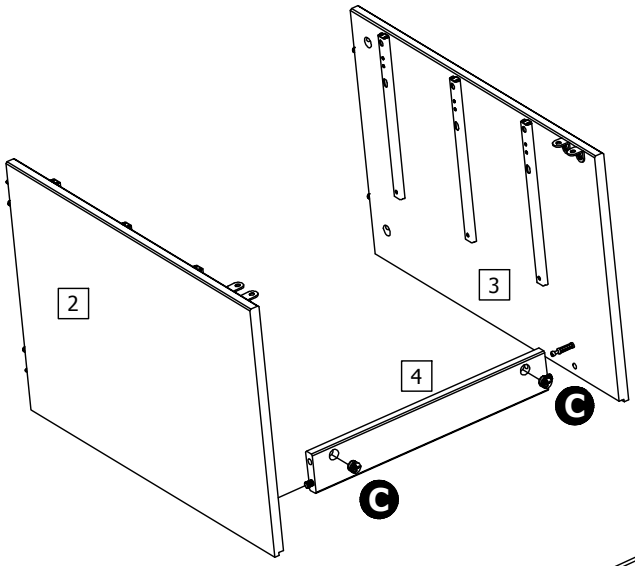

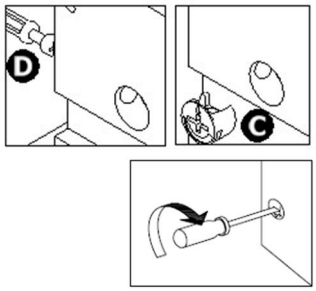


Step 14

Press the top 1 onto the sides 2 and 3.

Push the cams C into the holes indicated on the sides 2 and 3. Arrows pointing towards the top 1.

Turn the cams C to the right to fix the top 1.

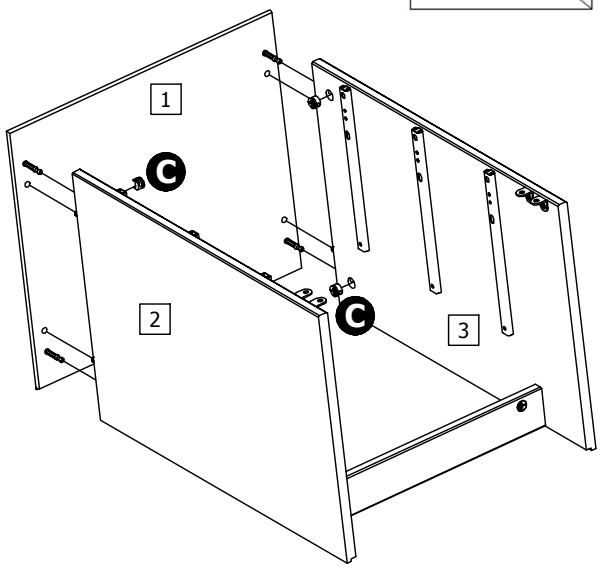



Step 15

Turn around the chest so that it lies on its front edge.

Place the front plinth 5 as shown.

Fix the front plinth 5 to the sides 2 and 3 using screws E into the angles V.

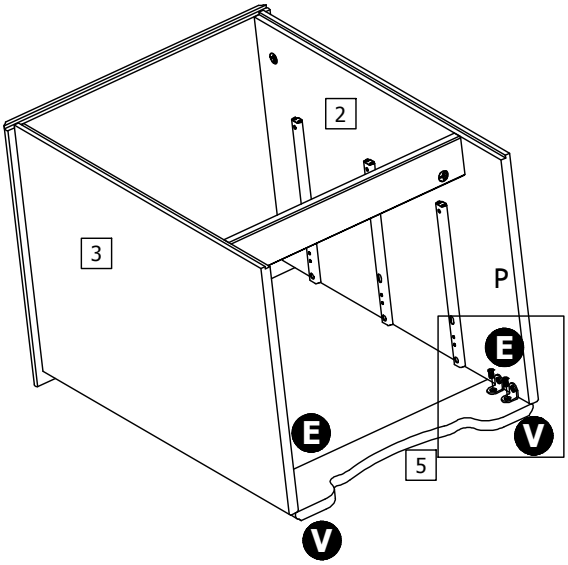

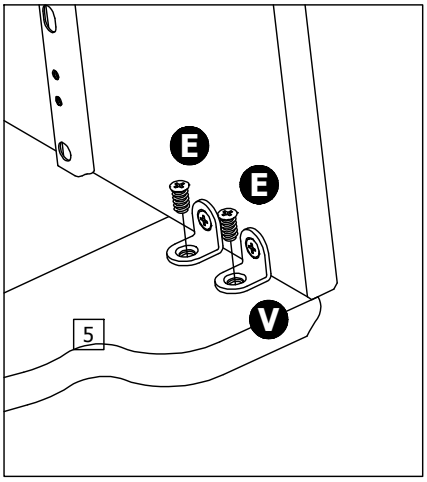

Assembly Instructions


Step 16


Place the back 6 into the rebates in the sides 2 and 3.

Important!
Make sure the angle between the top 1 and the sides 2 an 3 is 90° when this is attached

Fix the back 6 to the sides 2 and 3, the top 1 and the rail using nails i.

Use the nail holder Yd and a small hammer.

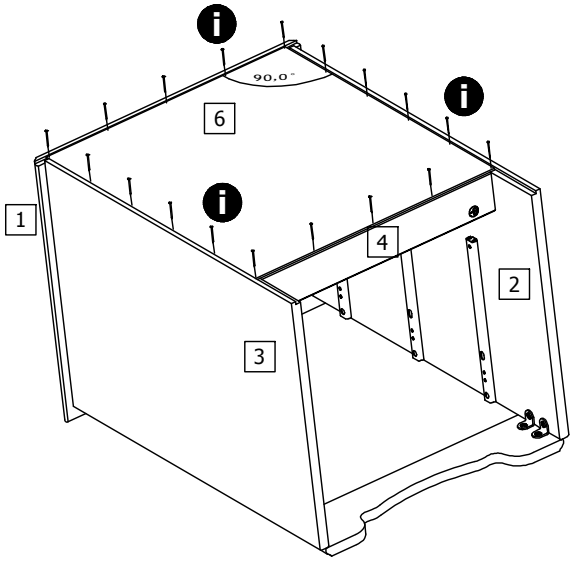

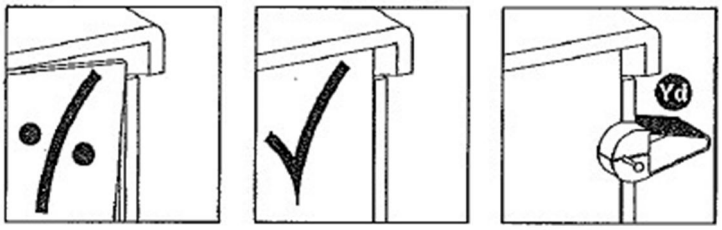



Step 17


Pull out the drawer runners. Slide the drawers onto the runners.

Fit and fix the lower drawer first and Work your way up.

Fix drawers to the drawer runners using the screws H.

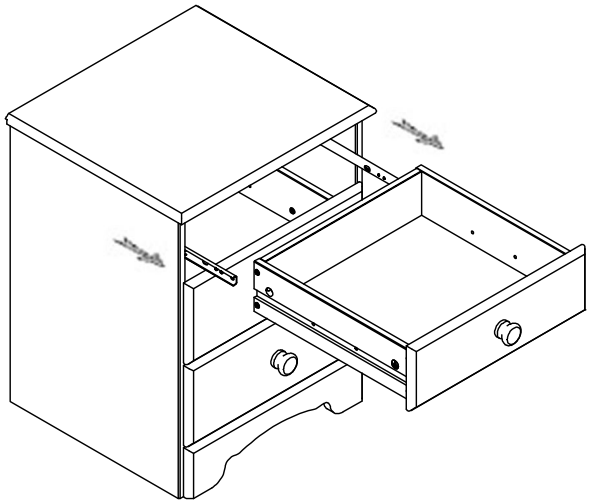

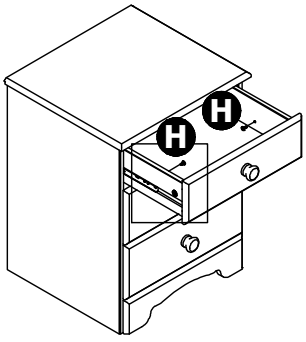

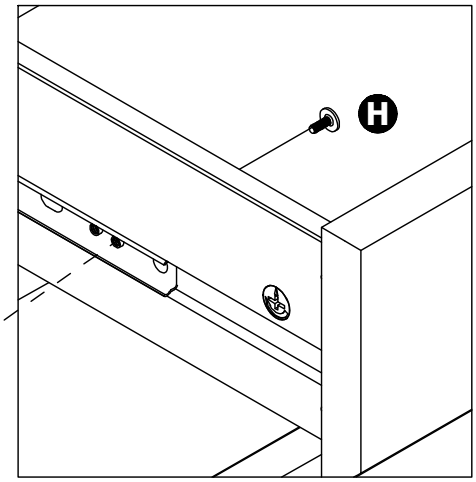

If you need help or have damaged or missing parts, **call the Customer Helpline: 0845 640 30 30**
Home Retail Group - 489-499 Avebury Boulevard - Saxon Gate West - Central Milton Keynes MK9 2NW