
Phoenix 2 Half Door Storage Cubes

Assembly Instructions - Please keep for future reference

162/2690
166/6230
166/6632
181/5971

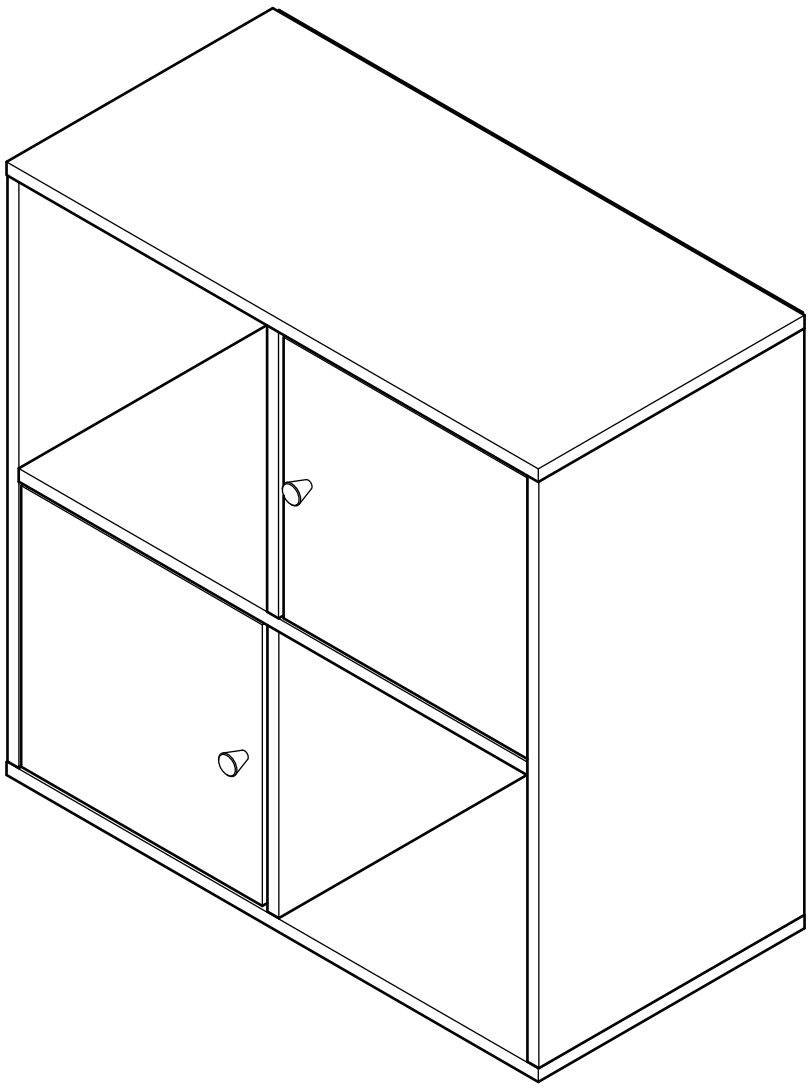

Dimensions

Width - 70cm
Depth - 35.5cm
Height - 70cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Version2 Date: 23/10/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not use this item if any components are missing or damaged.

• Do not stand on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• Assembly to be carried out by the competent adult only.

• During assembly children should be kept away from the product due to the potential risk of injury.



• We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

• Argos Ltd. MK9 2 NW.

• This product is suitable for children in the age 6 or above.

• Maximum load: 20 kgs.


• Regularly check all fastenings to ensure that they are properly tightened.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

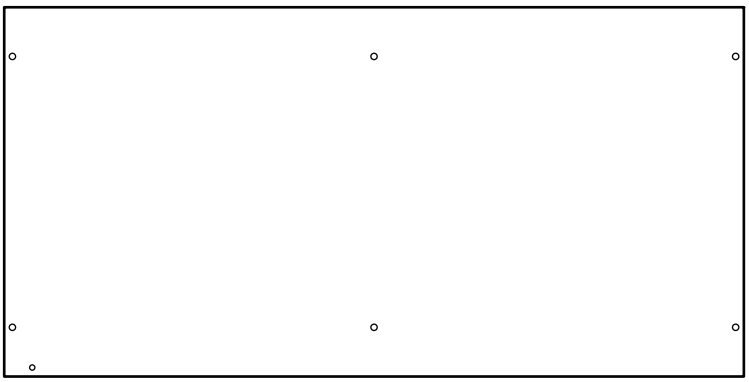


1 Top/Bottom panel x 2 (69.9 x 34.9cm)

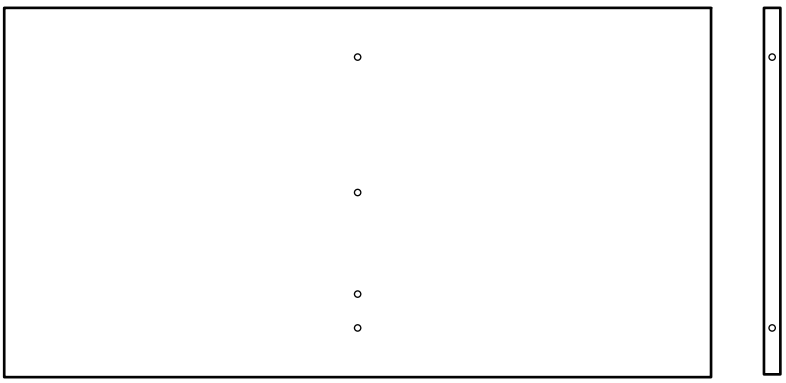


2 Side panel x 2 (66.8 x 34.9cm)

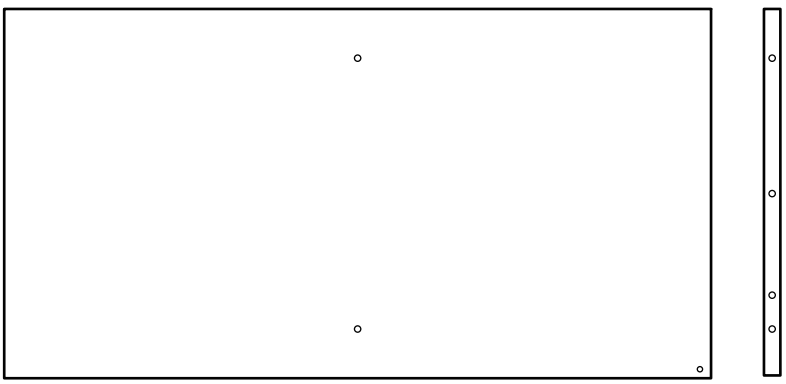


3 Shelf (66.8 x 34.9cm)

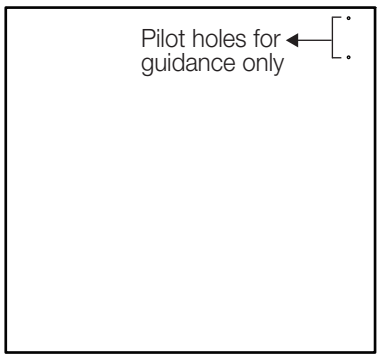

4 Middle support x 2
(34.9 x 32.6cm)



5 Back panel x 2
(34.5 x 69.5cm)





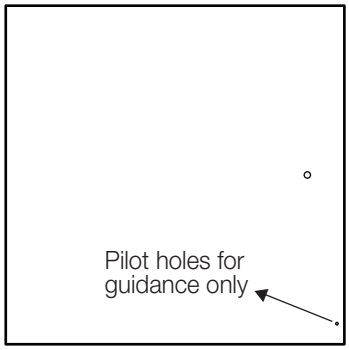


6 Door panel x 2
(32 x 32cm)

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.

A  50mm Dowel x 2	**B**  30mm Dowel x 12	**C**  50mm Screw x 8
D  25mm Screw x 2	**E**  12mm Screw x 6	**F** Nail x 22
G  Screw cover x 4	**H**  Door Stopper x 2	**I**  Handle x 2
J  Door hinge x 4	**K**  Metal plate x 2	**L**  33mm Screw x 1
M  Wall strap x 2	**N**  Wall plug x 1	**O**  14mm Screw x 3


Note: Please keep the **M** & **O** as back fixing parts in case you wish to stack up with another unit.


Tools required


Phillips screwdriver
(medium & large)



Bradawl
(or sharp point)


Small
hammer


Ruler/tape
measure


Eye protection
(when using a
hammer or glue)

Ruler - Use this ruler to help correctly identify the screws





Assembly Instructions

Step 1

Attaching door stoppers

Use Screws E to fix the Door stoppers H onto the Middle supports 4 .

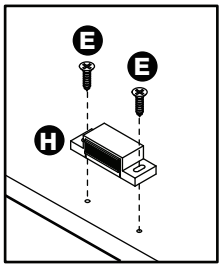

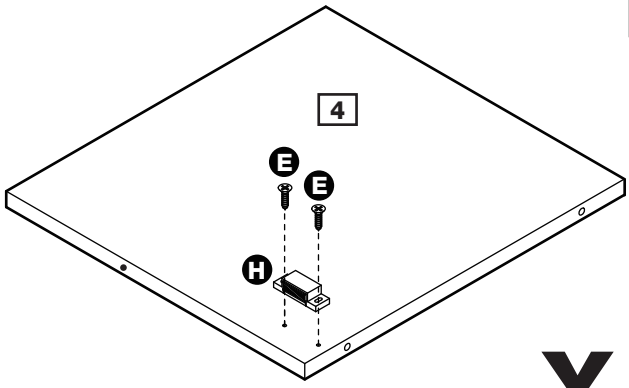


X 2


Step 2

Attaching metal plates & door hinges

Use Screws E to fix the Metal plates K onto the Door panels 6 .

Insert the Door hinges J into the Door panels 6 .

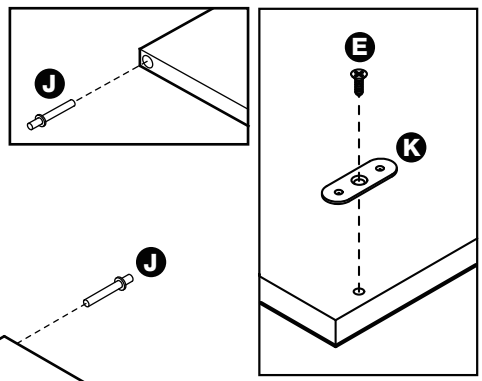

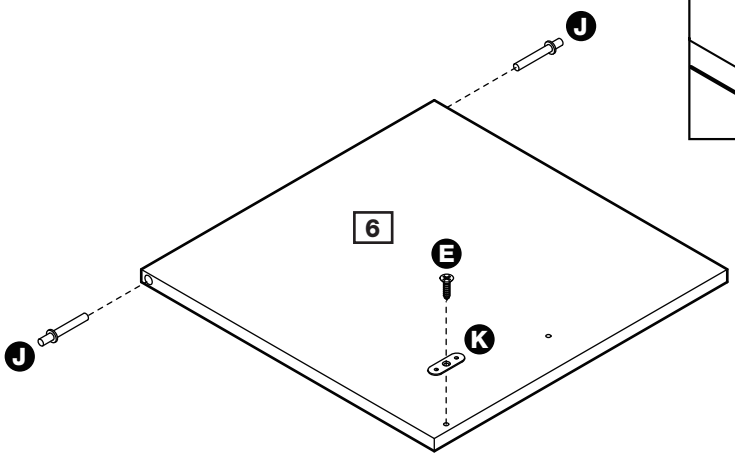

X 2

Assembly Instructions


Step 3

Attaching the side panels

a: Insert Dowels Ⓑ into the Shelf 3 and Middle supports 4 .


Use Dowels Ⓐ to fix the Middle supports 4 onto the Shelf 3 .

a:

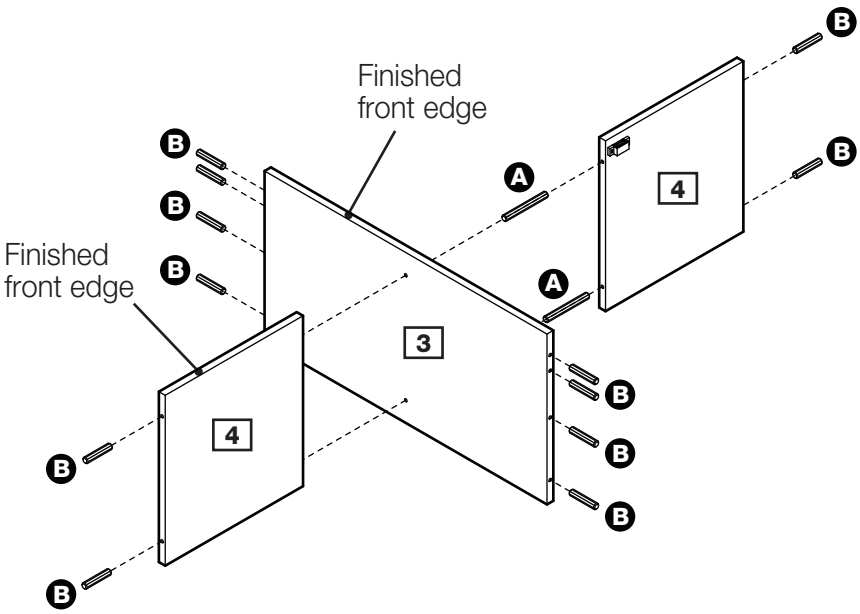

b: Fix the Side panels 2 onto the Shelf 3 .

b:

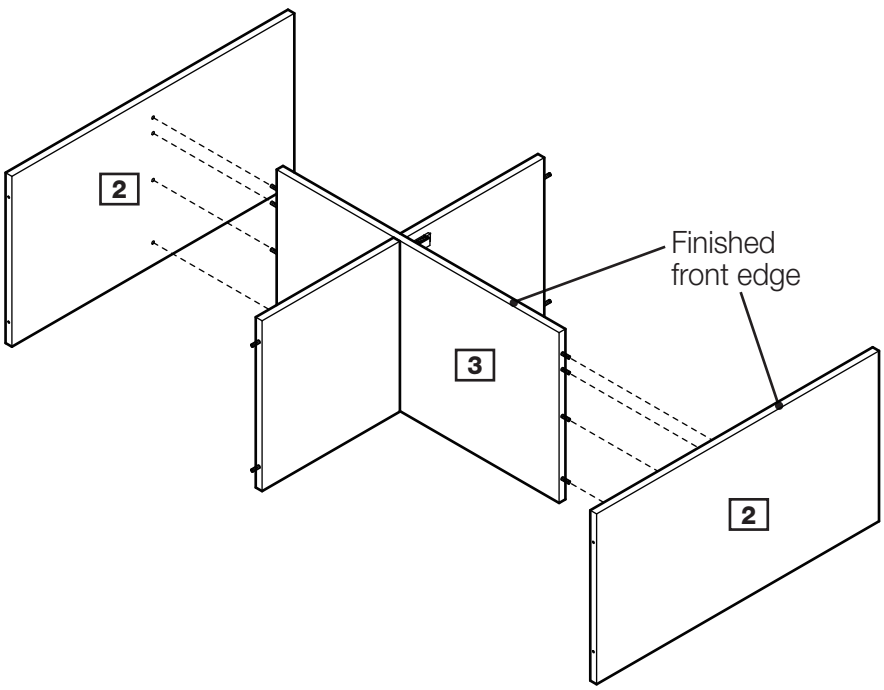

Assembly Instructions

Step 4


Attaching the door panels

a: Carefully locate the Door panel 6 onto the unit, aligning the Door hinges with the corresponding holes.

Use Screws C to fix the Bottom panel 1 onto the unit.

Note: Ensure the Door hinges are aligned with the corresponding holes.

a:

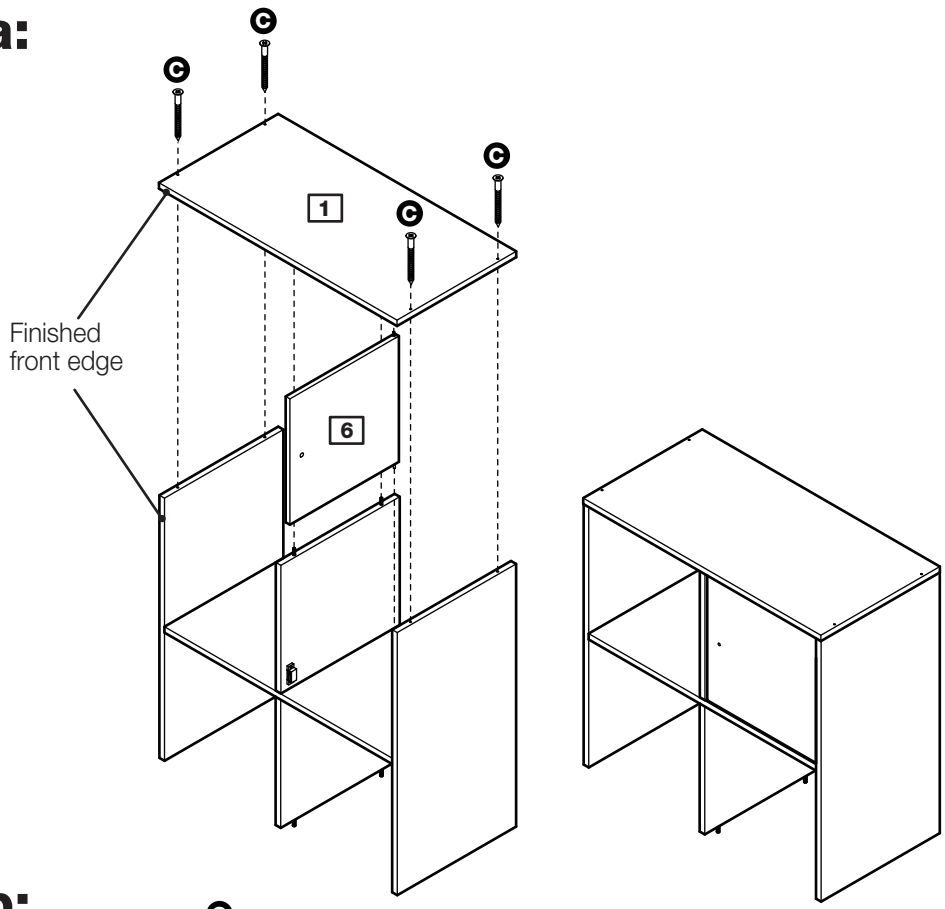


b: Carefully locate the Door panel 6 onto the unit, aligning the Door hinges with the corresponding holes.

Use Screws C to fix the Top panel 1 onto the unit.

Note: Ensure the Door hinges are aligned with the corresponding holes.

b:

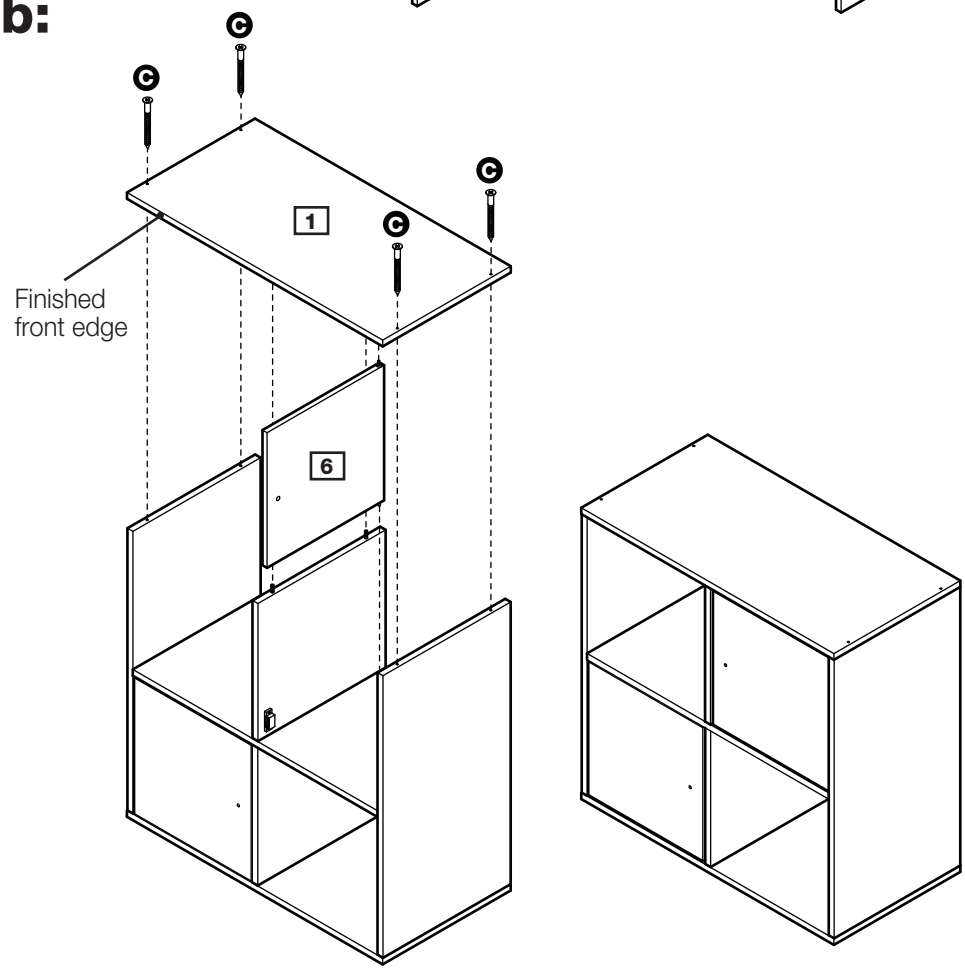


Assembly Instructions

Step 5

Fixing back panel

Use Nails (F) to fix the Back panels [5] onto the unit.


Important:
The unit **MUST** be 'square' when the back is attached.

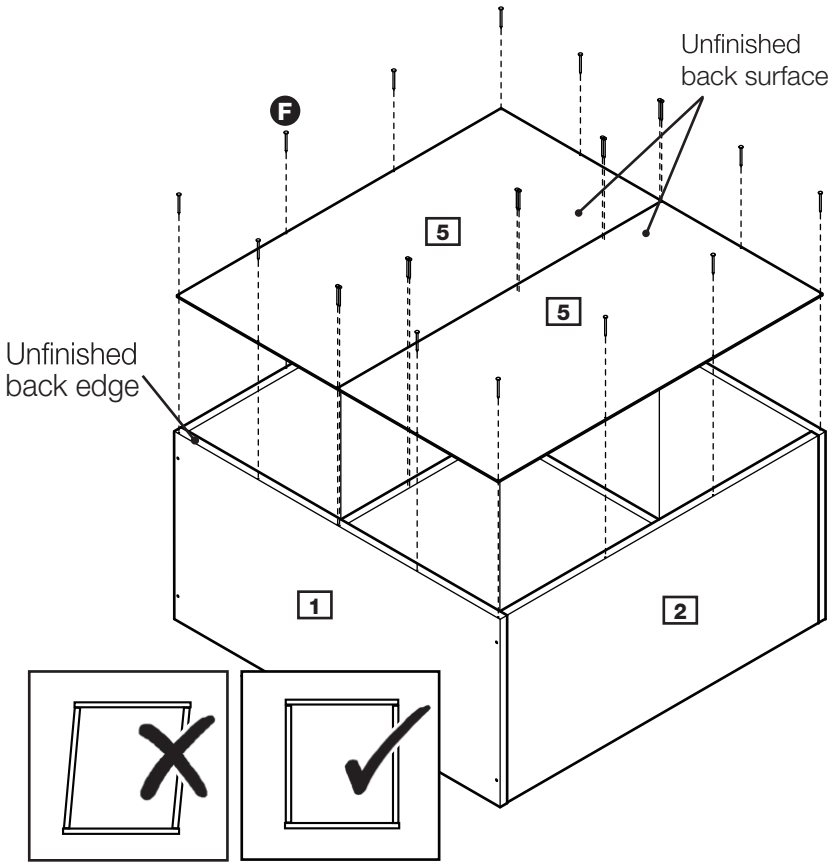


Step 6

Attaching the handles

Use Screws (D) to fix the Handles (I) onto the Door panels [6].

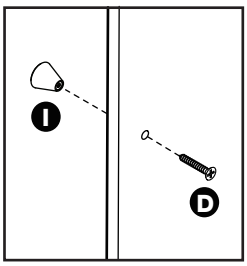

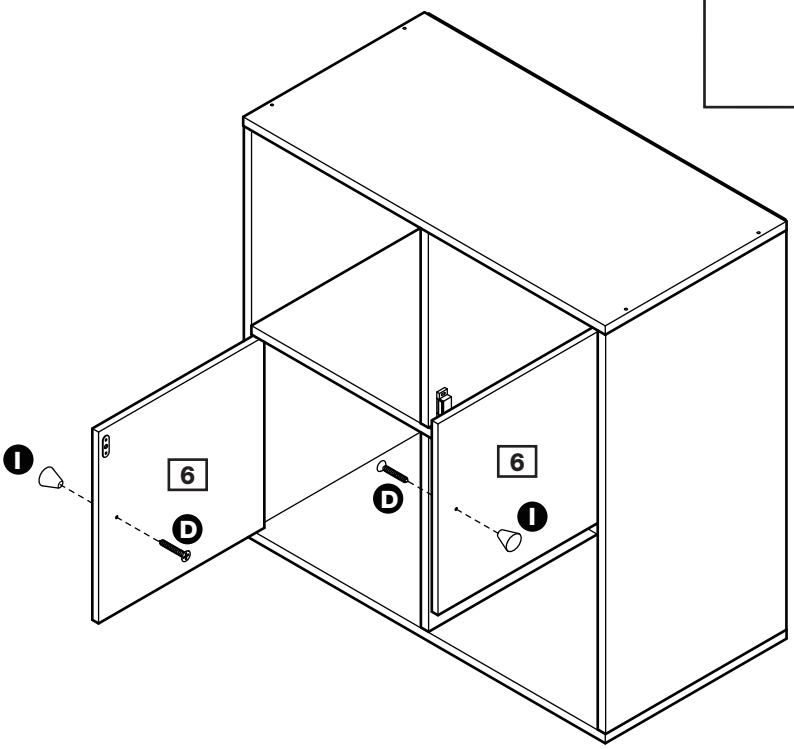


Assembly Instructions

Step 7

Attaching the screw covers


Use Screw covers G to cover the screw heads.

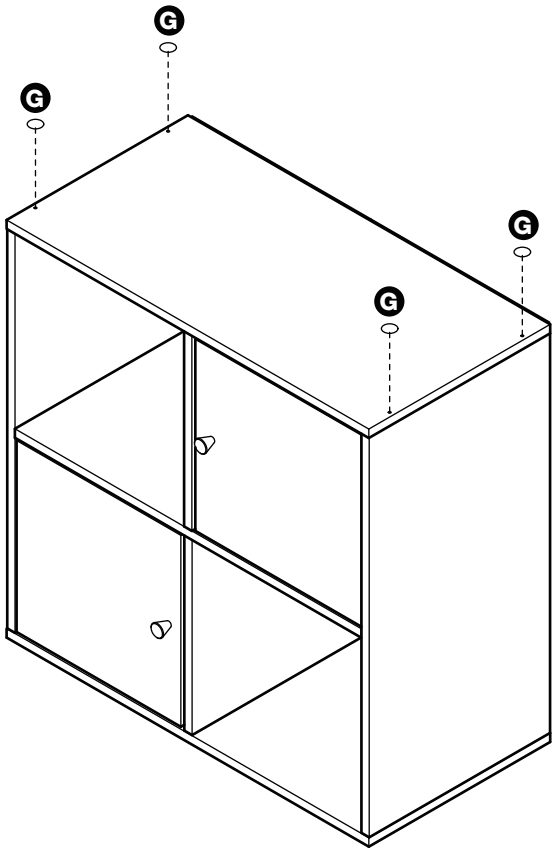

Step 8

Finishing the unit

With help, place the unit in the intended position.

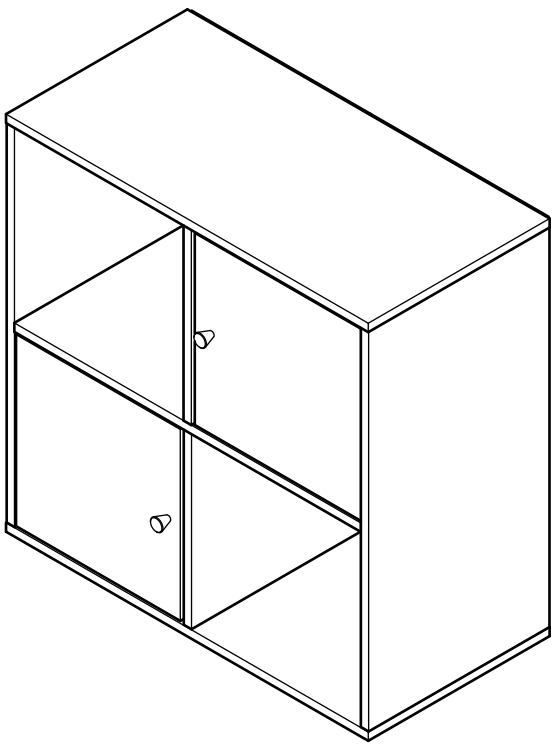

Assembly is complete.

Assembly Instructions

Step 9

Fixing with another unit

Warning:
The unit is heavy.
Lift with care.

a: Use Screws O to fix the Wall strap M to link another unit from the back.

It is recommended that the unit is fixed to a wall.

Fixing to wall

With help, move the unit into position.

Warning:
Before drilling, check wall for hidden pipes and cables.


b: Mark fixing hole on wall and remove the unit.

Drill a hole and insert Wall plug N.

Use Screw O to fix the Wall strap M onto the top panel.


Reposition the unit and fix wall strap using Screw L.

a:

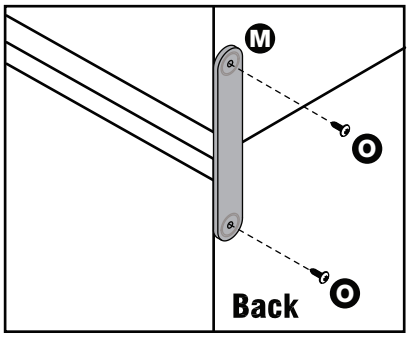



X 2

b:

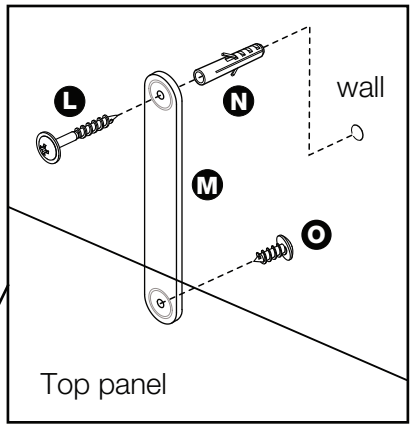

Note: Wall plugs supplied are for solid wall only.
The correct type of fixing must be used for your wall, seek professional advice if in doubt

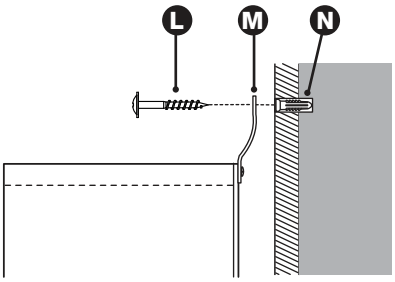

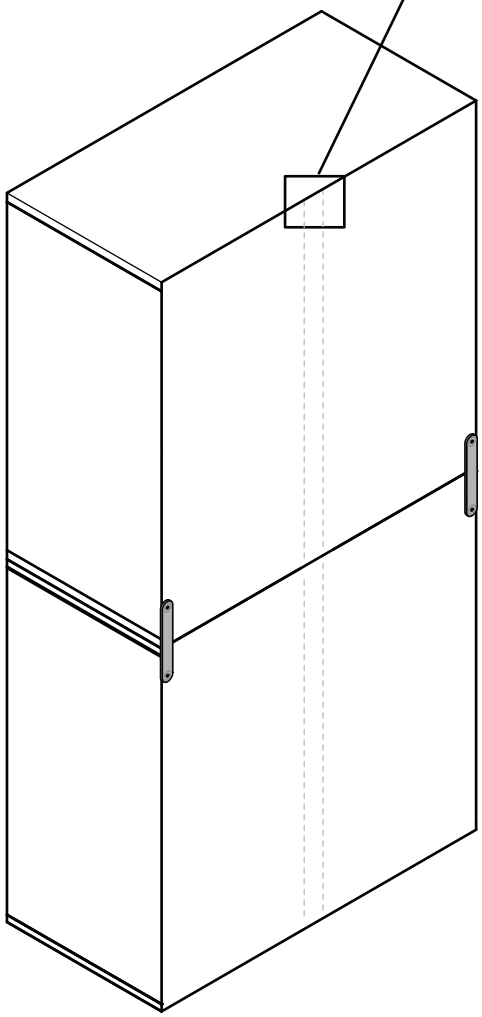

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

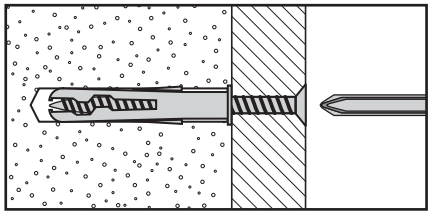


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

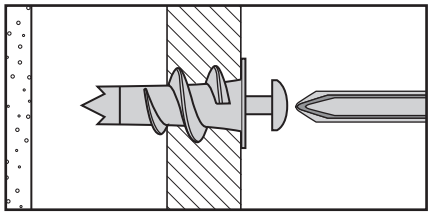


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

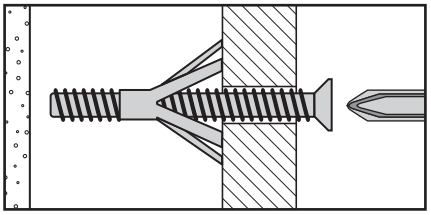


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

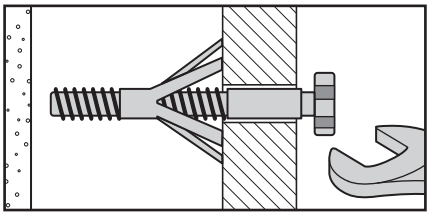


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

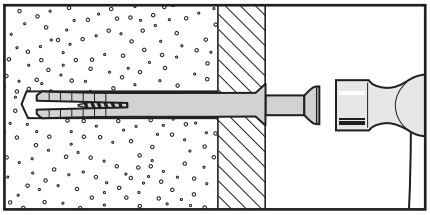

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

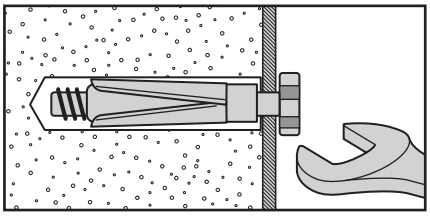

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.