Bluetooth Speaker with Dock

Bluetooth Speaker with Lightning Dock

Set up & Operating Instructions - Please keep for future reference | 170/4680

BUSH

Real Life Technology



Important - Please read these instructions fully before using your product

These instructions contain important information which will help you get the very best from your Bluetooth Speaker with dock and ensure safe and correct set up and operation.

Bluetooth Speaker with Dock

Contents

Important safety information . . . 3
Instructions for use. 5
Check the package contents . 5
Where to put your Bluetooth speaker. 5
Setting up 5
Connecting or 'Pairing' with your Bluetooth speaker 5
NFC touch point 6
Change the mode 6
Using your Bluetooth Speaker with Dock 7
Switch on 7
Switch off 7
Change the mode 7
Adjusting the volume 7
Dock cover 7
USB charging socket 7
Your Bluetooth Speaker with Dock 8
Bluetooth mode 10
Connecting or 'Pairing' with your Bluetooth speaker 10
NFC touch point 11
Listening to Music/Audio using Bluetooth 11
iPod/iPhone/iPad mode 12
Dock your iPod/iPhone/iPad 12
Playing your iPod/iPhone/iPad 12
Remove your iPod/iPhone/iPad 12
Aux in mode 13
Troubleshooting 14
General information 17
Guarantee 18

⚠ Important safety information

Your Bluetooth speaker with dock should be treated with care. The information below has been provided in the interest of safety and will help you to enjoy this product and the benefits it brings for many years.

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- **Do NOT** leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- **Do NOT** leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- **Do NOT** block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product
- **Do NOT** store in dusty or dirty areas.
- Disconnect your Bluetooth speaker from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Bluetooth speaker, before you change or disconnect the power supply.
- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.

- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- **Do NOT** attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- **Do NOT** use your Bluetooth speaker near emergency/ intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.
- **Do NOT** use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a damp (not wet) soft cloth to clean.

Instructions for use

Check the package contents

The package contains:

- 1 x Bluetooth speaker with dock
- 1 x Mains adaptor
- 1 x Instruction manual

Where to put your Bluetooth speaker

It is important that you consider carefully in advance where your Bluetooth speaker will be situated and make sure that it is:

* on a flat and stable surface

  Note: Never place your Bluetooth speaker directly onto antique or polished surfaces.

* within 1.4 metres of a power socket. Please ensure that the mains power lead is not a trip hazard.
* at least 1 metre away from other electrical appliances to avoid interference.
* where you can easily access the dock connector on the top of the product.
* away from bright sunlight or heat sources, such as a radiator.
* not in a humid or very damp place such as a bathroom.

Setting up

1. Connect the mains power lead into the 'DC IN' socket on the back of the Bluetooth speaker.

2. Plug the power adaptor into the mains power wall socket and switch on. The speaker will power up in Bluetooth mode and the LED ring around the outside of the volume control will light up and flash blue quickly.

3. If there is no action/operation of the product for 10 minutes, it will automatically go to standby mode and the LED indicator around the volume control will switch off. Press and release the 'Volume/Standby' knob and the bluetooth speaker will return to the mode it was last in.

Connecting or 'Pairing' with your Bluetooth speaker

In Bluetooth (BT) Mode:

1. On your speaker the LED ring around the outside of the volume control will light up and flash blue quickly whilst trying to connect with other Bluetooth devices.

Note: If a device has not been 'paired' or connected with your Bluetooth speaker after 5 minutes, the blue LED indicator will begin to flash slowly. Press and hold the 'Volume/Standby' knob to go to Standby mode and then press and hold again to switch back on. The LED indicator will begin to flash blue quickly again.

2. On the device that you would like to connect to your Bluetooth speaker via Bluetooth (e.g. iPhone/iPad/Android/other phone/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. Select to 'Add new device', if necessary.

Note: Some products will automatically search for a new device and so the 'Add new device' option is not available.

4. When found, your Bluetooth speaker will be displayed as 'BUSH Audio'. Select the device name to begin pairing.

5. When pairing is complete the LED indicator around the volume control will stop flashing and will remain on.

6. Now that you have paired your device with the Bluetooth speaker, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.

NFC touch point

Your Bluetooth speaker has an NFC touch point to enable quick and easy Bluetooth pairing with other NFC enabled devices.

In Bluetooth mode, just touch your other NFC enabled device to the NFC logo on the top of your Bluetooth speaker to pair.

Change the mode

Briefly press and release the 'Volume/Standby' knob to change modes. Bluetooth/iPod and Aux in modes are available.

Blue = Bluetooth mode

Green = iPod mode

Red = Aux in mode

Using your Bluetooth Speaker with Dock

Switch on

Press and hold the 'Volume/ Standby' knob to switch on.

Switch off

Press and hold the 'Volume/ Standby' knob. The Bluetooth speaker will go into Standby mode.

To completely switch off the Bluetooth speaker, switch off the mains power at the wall socket.

Note: If you do not use your Bluetooth speaker for 10 minutes and no audio signal is received, the speaker will automatically go into standby mode. Press and release the 'Volume/Standby' knob and the bluetooth speaker will return to the mode it was last in.

Change the mode

Briefly press and release the 'Volume/Standby' knob to change modes. Bluetooth/iPod and Aux in modes are available.

Blue = Bluetooth mode

Green = iPod mode

Red = Aux in mode

Adjusting the volume

Use the rotary volume control on the front of the Bluetooth speaker to adjust the volume.

Turn clockwise to increase the volume and anti-clockwise to decrease the volume.

Dock cover

To open the dock cover slide your finger under the front flap, then pull up and push back until it locks into place.


To close the dock cover, slide forward the release catch (refer to the drawing at the bottom of page 8), then fold down the cover until it is flush with the top surface of your Bluetooth speaker.

USB charging socket


You can use the USB charging socket on the back of your Bluetooth speaker to charge smartphones that do not have a lightning socket and so are unable to dock on the top of the Bluetooth speaker to charge.

Your Bluetooth Speaker with Dock

Top view:

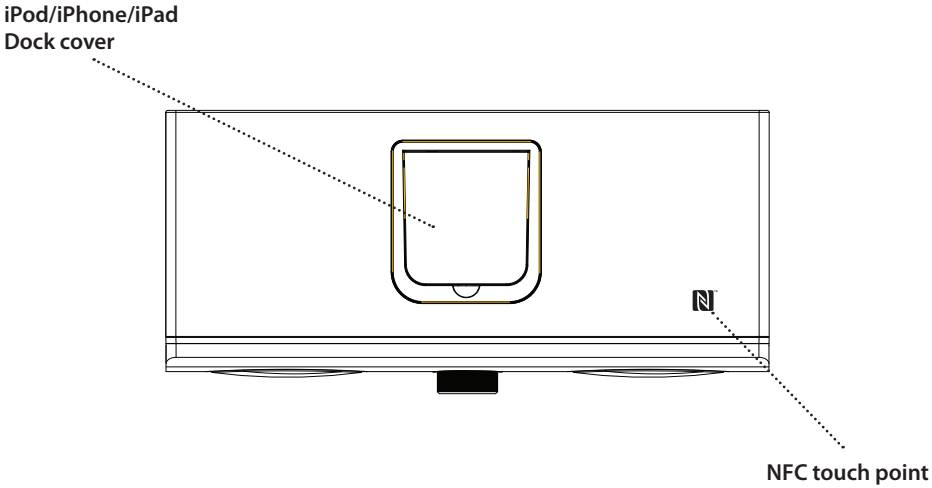

Top view (cover open):

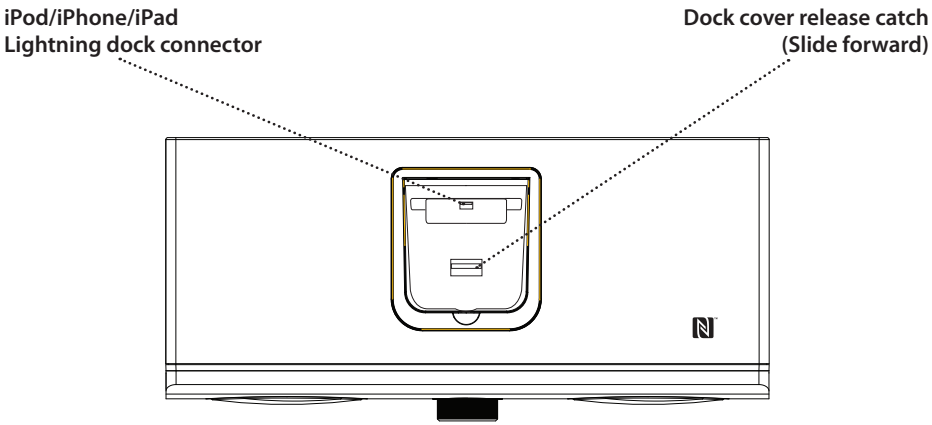

Your Bluetooth Speaker with Dock


Front view:

Rotary volume control

Press and hold to go to Standby mode

Press and release to change modes (BT/iPod/Aux in)


LED indicator ring

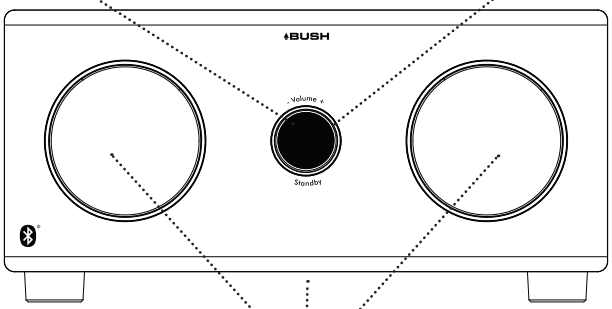

Speakers

Back view:

2.0 USB charging socket (for charging smartphones)

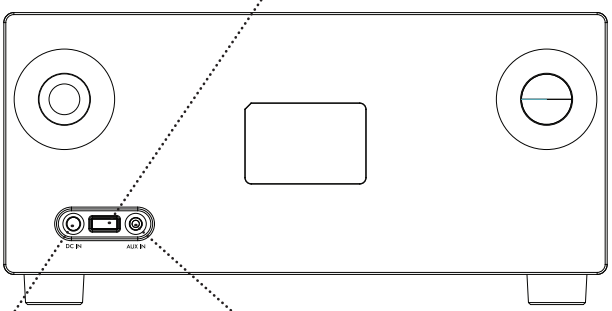

DC IN Mains power socket

Aux in socket

Bluetooth mode

Bluetooth (BT) mode

Check that your Bluetooth speaker is in Bluetooth mode. The LED indicator ring will be blue colour in Bluetooth mode.

If you are not already in Bluetooth mode, briefly press and release the 'Volume/Standby' knob until you are in Bluetooth mode.

Connecting or 'Pairing' with your Bluetooth speaker

In Bluetooth (BT) Mode:

1. On your speaker the LED ring around the outside of the volume control will light up and flash blue quickly whilst trying to connect with other Bluetooth devices.

Note: If a device has not been 'paired' or connected with your Bluetooth speaker after 5 minutes, the blue LED indicator will begin to flash slowly. Press and hold the 'Volume/Standby' knob to go to Standby mode and then press and hold again to switch back on. The LED indicator will begin to flash blue quickly again.

2. On the device that you would like to connect to your Bluetooth speaker via Bluetooth (e.g. iPhone/iPad/Android/other phone/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. Select to 'Add new device', if necessary.

Note: Some products will automatically search for a new device and so the 'Add new device' option is not available.

4. When found, your Bluetooth speaker will be displayed as 'BUSH Audio'. Select the device name to begin pairing.

5. When pairing is complete the LED indicator around the volume control will stop flashing and will remain on.

6. Now that you have paired your device with the Bluetooth speaker, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.

NFC touch point

Your Bluetooth speaker has an NFC touch point to enable quick and easy Bluetooth pairing with other NFC enabled devices.

In Bluetooth mode, just touch your other NFC enabled device to the NFC logo on the top of your Bluetooth speaker to pair.

Please ensure that you disconnect any audio connection cables from the Aux in socket on the back of the Bluetooth speaker before you attempt to play any music via Bluetooth.

Listening to Music/Audio using Bluetooth

In Bluetooth mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device.

iPod/iPhone/iPad mode

iPod/iPhone/iPad mode

Check that your Bluetooth speaker is in iPod mode. The LED indicator ring will be green colour in iPod mode.

If you are not already in iPod mode, briefly press and release the 'Volume/Standby' knob, until you are in iPod mode.

Note: Your Bluetooth speaker has an Apple lightning connector. The lightning connector works with iPhone 5, iPad (4th generation), iPad mini, iPod touch (5th generation and iPod nano (7th generation).

Dock your iPod/iPhone/iPad

Note: If you use a cover with your iPod/iPhone/iPad, please remove it before attempting to dock your product.

1. Lift up the cover on the top of the Bluetooth speaker to reveal the iPod/iPhone/iPad dock connector.

2. Line up the connector on the bottom of your iPod/iPhone/iPad with the dock connector on the top of the Bluetooth speaker and push down to connect.

The dock will begin to charge your iPod/iPhone/iPad, if necessary. Charging will stop automatically when your iPod/iPhone/iPad is fully charged (check your iPod/iPhone/iPad display).

Note: Care should be taken when connecting your iPod/iPhone/iPad to the dock connector to avoid damage. Please ensure to line up your iPod/iPhone/iPad with the dock connector before pushing down.

Playing your iPod/iPhone/iPad

You can use the controls on your iPod/iPhone/iPad to play the music through the Bluetooth speaker, when it is docked.

Note: If there is no audio input for 10 minutes the Bluetooth speaker will go to standby mode automatically. You can press and hold the 'Volume/Standby' knob to switch the Bluetooth speaker back on.

Remove your iPod/iPhone/iPad

1. Hold the Bluetooth speaker steady with one hand and pull up your iPod/iPhone/iPad with the other hand, until it is clear of the dock connector.

Aux in mode

Aux in mode

Check that your Bluetooth speaker is in Aux in mode. The LED indicator ring will be red colour in Aux in mode.

If you are not already in Aux in mode, briefly press and release the 'Volume/Standby' knob, until you are in Aux in mode.

Using a 3.5mm audio input connection cable (not included), Aux in allows for a quick and easy connection to an external sound source.

1. Connect one end of the 3.5mm audio connection cable to the headphone (or auxiliary out) socket of your secondary device, connect the other end to the Aux in socket on the back of your Bluetooth speaker.

2. Press the 'Play' button on your external device to start playback through the Bluetooth speaker.

3. To gain optimal volume levels, adjust the output volume level on both the secondary device and on the Bluetooth speaker

Troubleshooting

If you are experiencing problems with your Bluetooth speaker with dock, there are some quick and easy checks that you can do, which may help to solve the problem.

Problem	Solution
No sound / power:	- Check that the mains power cable is connected securely, is plugged in and the power switched on. - Check that you are not in Standby mode. Press and hold the 'Volume/Standby' knob to switch on. - Increase the volume. - The connected device is not in playback mode. - Check that you are in the correct mode for the music that you wish to listen to. Press and release the 'Volume/Standby' knob to change the mode.
Sound distortion:	- The volume level is too high. Please reduce the volume level. - The volume level of the connected device is too high. Please reduce the volume of the connected device.
Your iPod/iPhone/ iPad does not dock:	- If you use a cover with your iPod/iPhone/ iPad, please remove it before docking your product. - Remove your iPod/iPhone/iPad and check that the connector on the dock and your iPod/iPhone/iPad are clean and free from obstructions.

iPod/iPhone/iPad does not play:	- Check that the power lead is plugged into the back of the Bluetooth speaker and that the mains adaptor is plugged in and switched on. - Check that the Bluetooth speaker is not in Standby mode. Press and hold the 'Volume/Standby' knob to switch on. - Check that the iPod/iPhone/iPad is docked. Line up the connector on the bottom of your iPod/iPhone/iPad with the connector on the Bluetooth speaker and push down to connect. - Check that you are in iPod mode. Press and release the 'Volume/Standby' knob to change the mode. . - Check that you have selected a music track. - Check that your iPod/iPhone/iPad is not paused and that the volume on the Bluetooth speaker is turned up.
iPod/iPhone does not charge:	- Check that the Bluetooth speaker is connected to mains power. - Check that your iPod/iPhone/iPad has been pushed fully home onto the dock connector. - Your iPod/iPhone/iPad may already be fully charged. Check your iPod/iPhone/ iPad screen.

Unable to pair with a Bluetooth device:	- Check that you are in Bluetooth mode. Press and release the 'Volume/Standby' knob to change the mode. - Ensure that you are within range of the Bluetooth speaker for Bluetooth functionality (less than 10 metres, line of sight). - Move the Bluetooth speaker and Bluetooth device away from other Bluetooth devices/electrical equipment. - If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.
Aux in function failure	- Check that you are in the correct mode for the connected external device. Press and release the 'Volume/Standby' knob to change the mode.

General information



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk

Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.

PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of:



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd.,
489-499 Avebury Boulevard
Central Milton Keynes
MK9 2NW

CE

Aug 14/Issue: 1