
Nordic - Fitment

Assembly Instructions - Please keep for future reference **1739497**

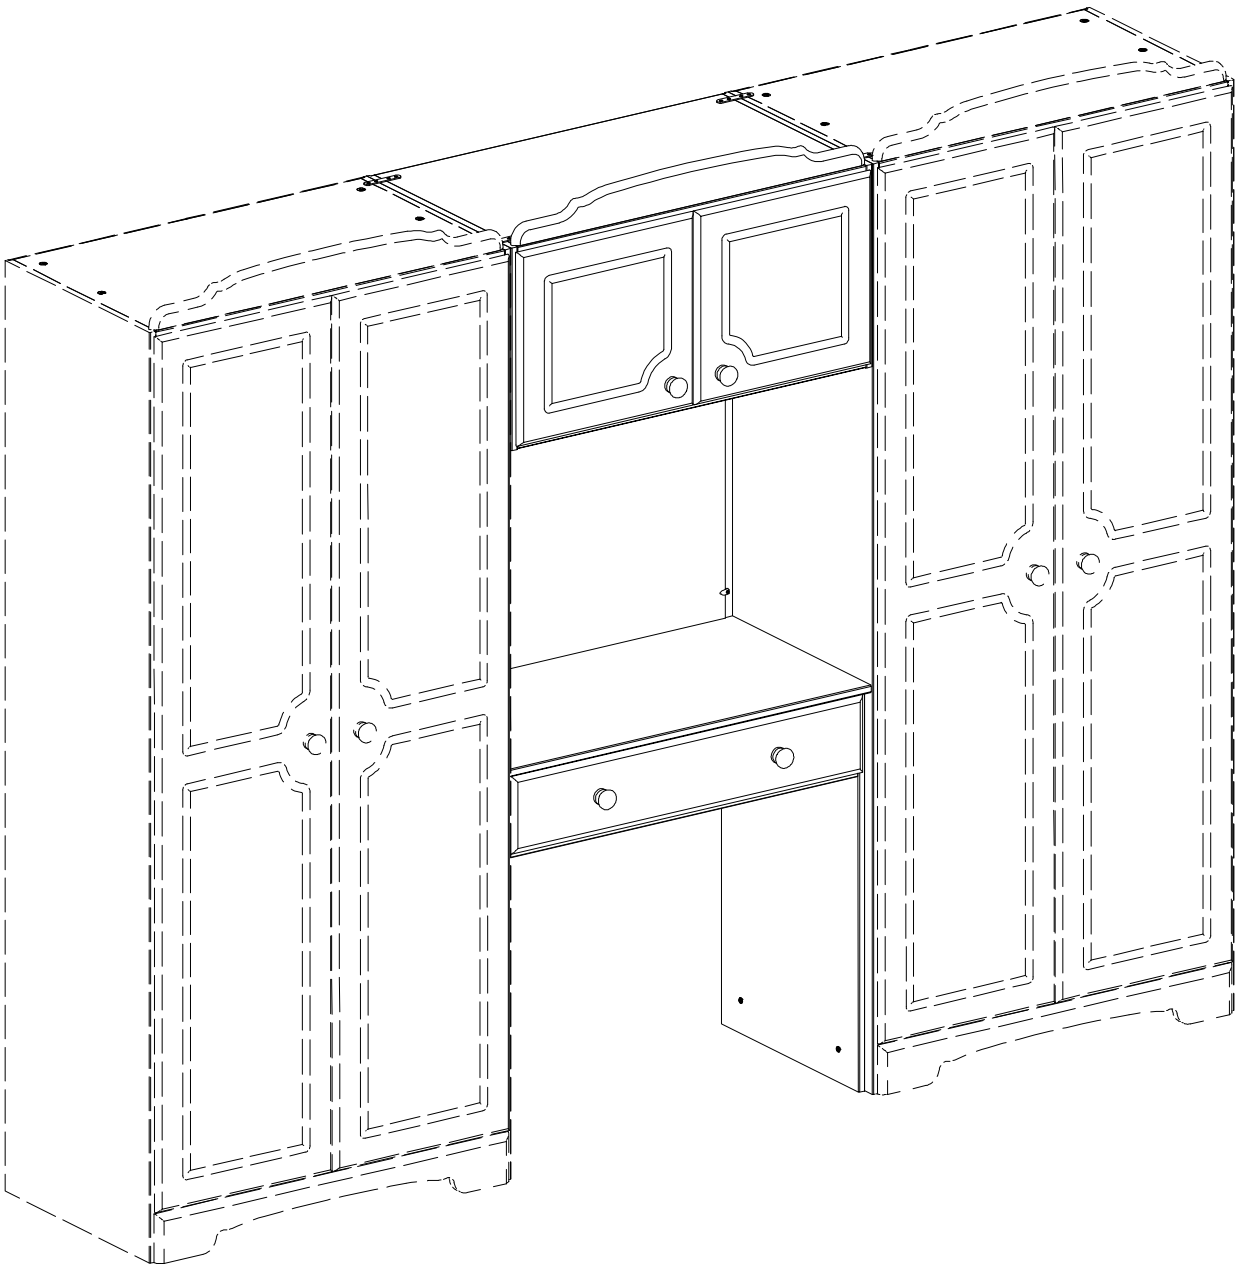

Dimensions

Width : 81,1 cm

Depth : 49,0 cm

Height : 191,3 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 30 30

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Warning

Do not place very hot or very cold items against or in close proximity to glass surfaces unless an adequately thick insulating matenal is used to prevent such items from coming into contact with the glass.

Do not strike the glass with hard or pointed items.

If a glass component is chipped or broken, stop using the product and consult the
Argos Customer Helpline
845 640 30 30

When cleaning glass panels use a damp cloth or leather with washing up liquid or 50ft soap if necessary; do not use washing powders or any other substances containing abrasives since these substances scratch glass.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you have damaged or missing components, call the **Argos Customer Helpline**: **0845 640 30 30**

Please check you have all the panels listed below


1 Side, Left/Right x2
V155845
399x475x15 mm

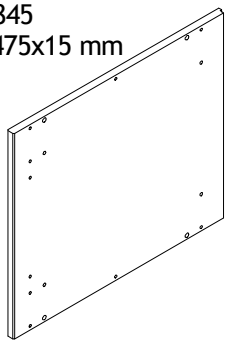


2 Top/Bottom x2
V155872
781x470x15 mm

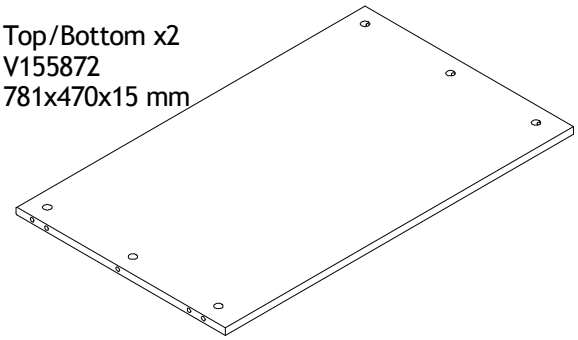


7 Mirror
G315801
620x770x3 mm

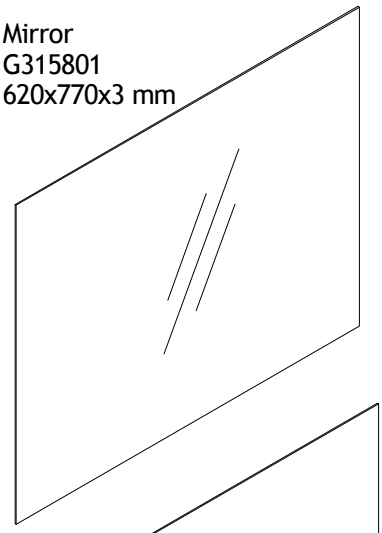


3 Top rail
V155806
792x80x15 mm

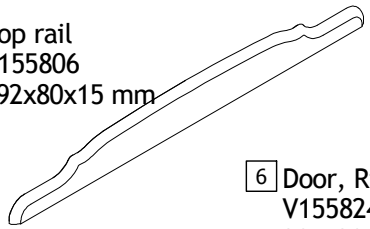


4 Lamp rail
V155817
811x60x15 mm

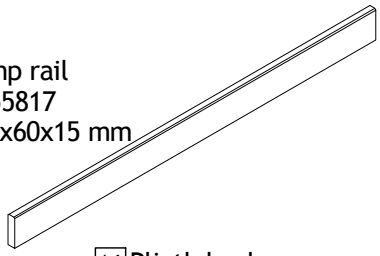


6 Door, Right
V155824
381x395x15 mm

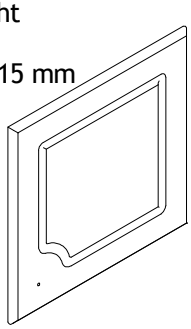


14 Plinth back
P155866
781x60x15 mm

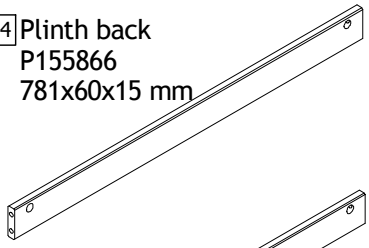


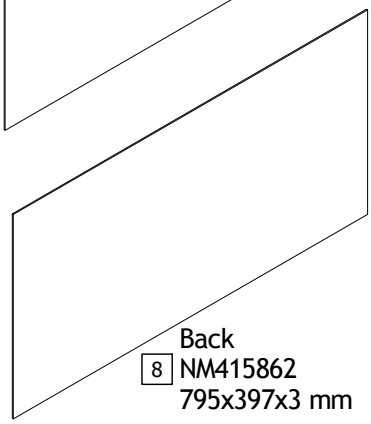

Back
8 NM415862
795x397x3 mm


5 Door, Left
V155823
381x395x15 mm

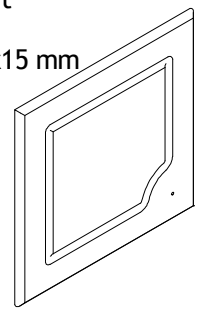

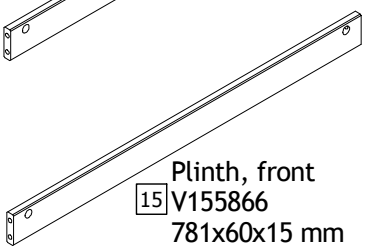



Plinth, front
15 V155866
781x60x15 mm

9 Mirror rail x2
V155854
628x60x15 mm

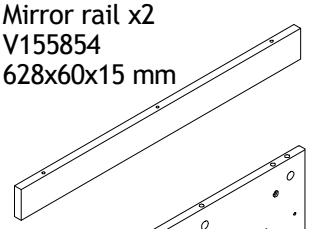


10 Drawer bottom
NM415852
759x447x3 mm

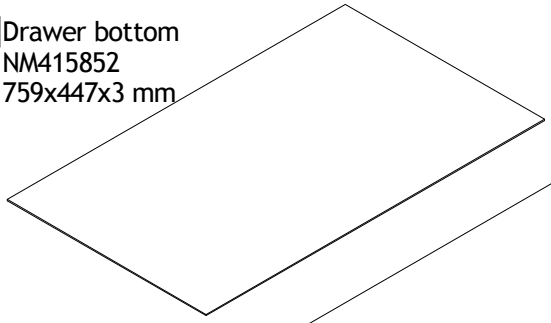


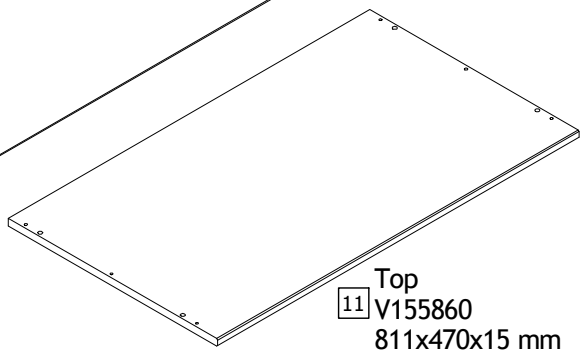

Top
11 V155860
811x470x15 mm

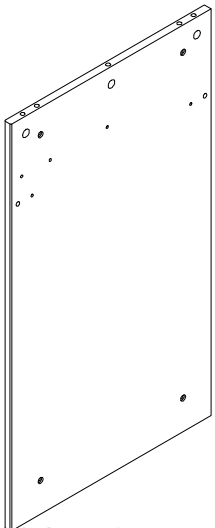



Side, Left
13 V155851
790x450x15 mm

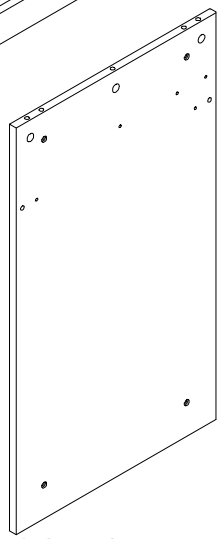


Side Right
12 V155850
790x450x15 mm

Drawer back
17 S120652
749x98x12 mm

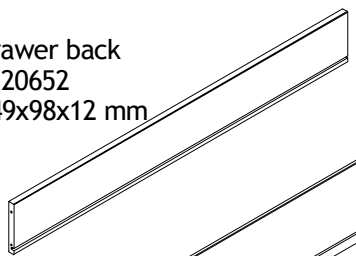

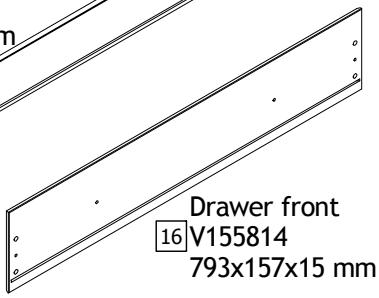


Drawer front
16 V155814
793x157x15 mm

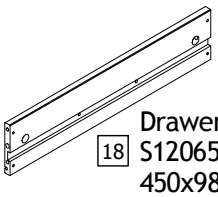

Drawer side, Left/right x2
18 S120654
450x98x12 mm

19 Door rail x2
V155827
316x25x15 mm













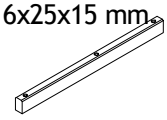


Components - Fittings

If you have damaged or missing components, call the **Argos Customer Helpline**: **0845 640 30 30**

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

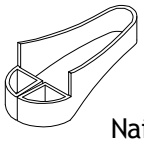A  BA10390 ø8x30 mm wooden dowel x16	**B**  BA10400 ø6x30 mm wooden dowel x4	**O**  BA10130 ø4,0x35 mm screw x6
R  BA10170 ø4,0x35 mm screw x8	**T**  BA10050 ø3,5x15 mm screw x40	**L**  BA10841 Lamp x1
C  BA10590 ø15x9,5 mm cam x24	**M**  BA10106 ø3,0x12 mm screw x4	**N**  BA10158 ø3,5x12 mm screw x2
D  BA10603 ø5/11x34 mm bolt x24	**i**  BA10025 ø1,2x20 mm Nail x25	**J**  BA10840 4 mm mirror fitting x4
K  BA10270 ø5,8x8 mm screw x6	**E**  BA10156 ø4,5x60 mm screw x6	**U**  BA10171 ø4,0x25 mm screw x16
P  BA10532 0 mm/37 mm crossplate x4	**Q**  BA10508 ø26 cup hinge x4	**F**  BA10833 Back fitting 15x15x10 mm x2
G  BA10468 ø40x30 mm wooden knob x4	**S**  B14359 17x246 mm Drawer runner x2	**H**  BA10191 M4x9 mm screw x2
V  BA10796 80x15x2 mm connecting plate x4	**W**  BA10815 50x50x2 mm angle x4	**Yd**  Ba10688 500x250x Nail holder x1
Y  BA103489 ø16 mm Adhesive seal cap x4	**X**  O1043 15x12x1 mm Tape x4	


Tools required

 Flatblade screwdriver (Medium)

 Phillips screwdriver (Medium & large)

 Hammer


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

Fix the drawer sides 18 to the drawer back 17 as shown, using screws R.

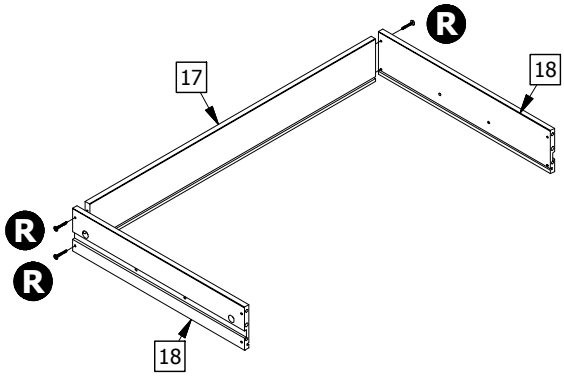


Step 2

Knock down the dowels B into the holes indicated on the drawer sides 18 using a small hammer.

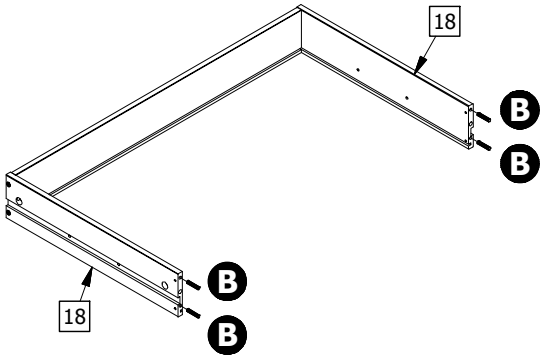


Step 3


Slide the drawer bottom 10 into the drawer sides 18.

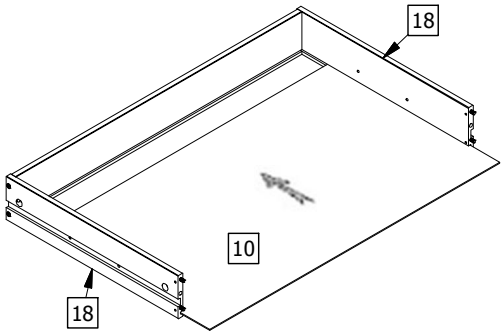

Step 4

Screw the bolts D into the the holes indicated on the drawer front 16.

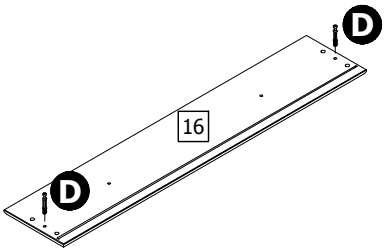

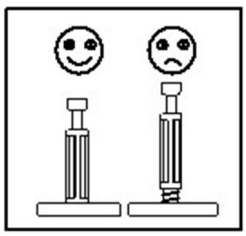



Step 5

Push the drawer front 16 onto the drawer sides 18 as shown.

Push the cams C into the holes indicated. Arrow pointing towards the front.

Turn the cams C to the right to fix the front 16.

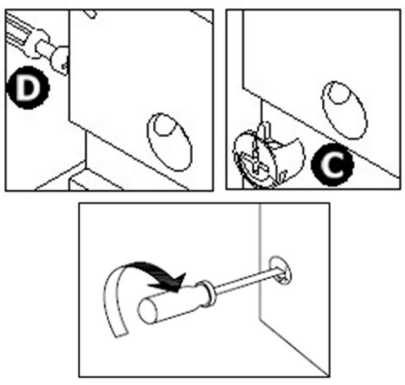

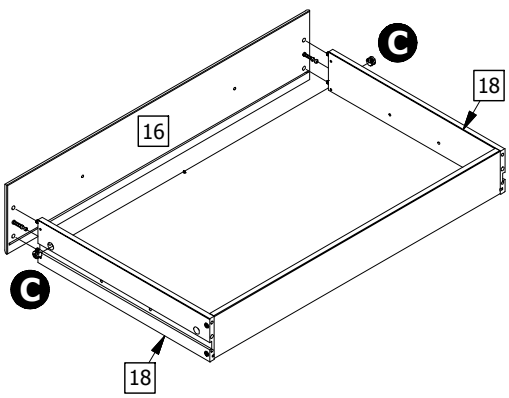


Assembly Instructions


Step 6


Important!
Make sure the angle between the drawer front 16 and the drawer sides 18 is 90° before the drawer bottom 10 is fixed.


Fix the drawer bottom 10 to the drawer back 17 and the drawer front 16 using F.


To adjust the angle between the drawer sides and the drawer bottom push the fitting F sidewards. See detail.

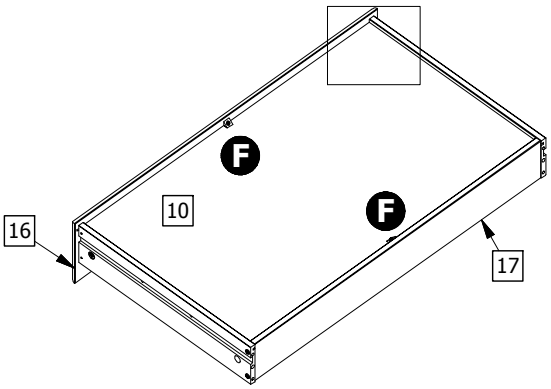

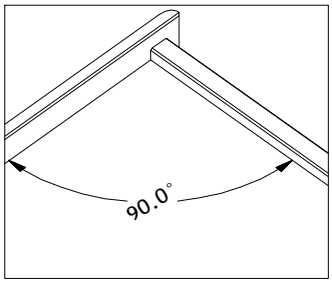

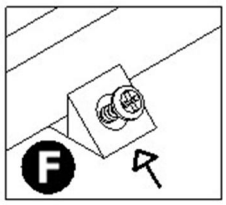


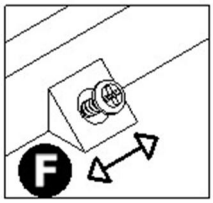

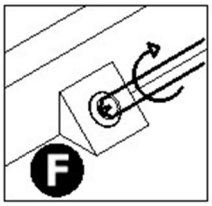

Step 7


Fix the wooden knob G to the drawer front 16 using screws R.

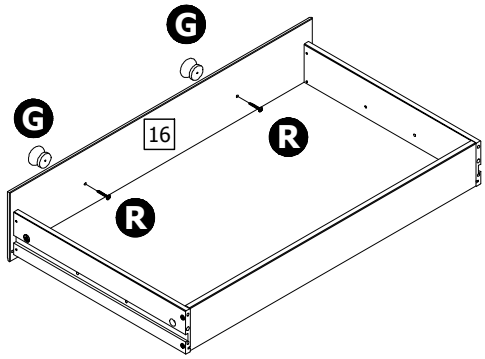

Step 8

Screw the bolts D into the holes indicated on the top 11 and the sides 12 and 13.

Knock down the dowels A into the holes indicated on the sides 12 and 13 and the back 14 and the front plinth 15.

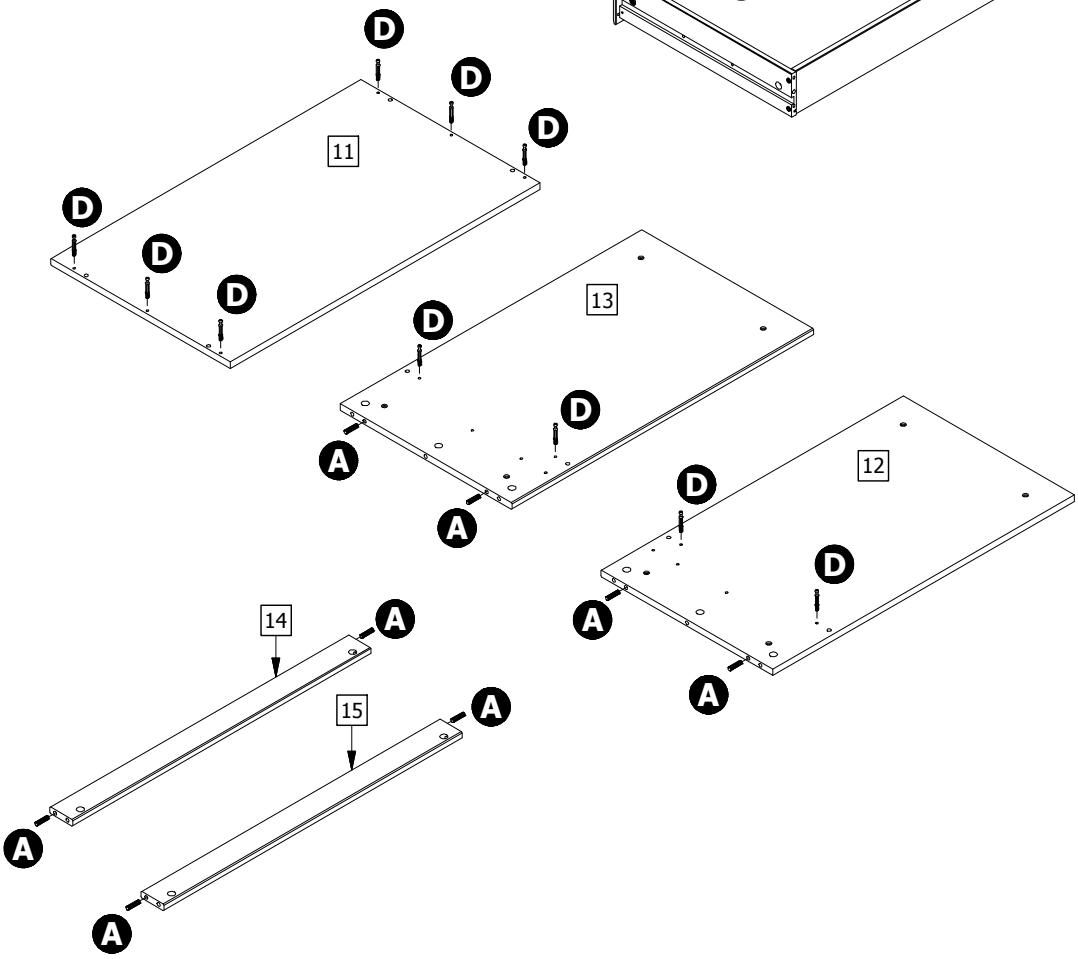


Assembly Instructions

Step 9

Slide the top of the drawer runners S backwards.


Fix the front end of the drawer runners S to the sides 12 and 13 using screws K into the holes indicated.
See details.

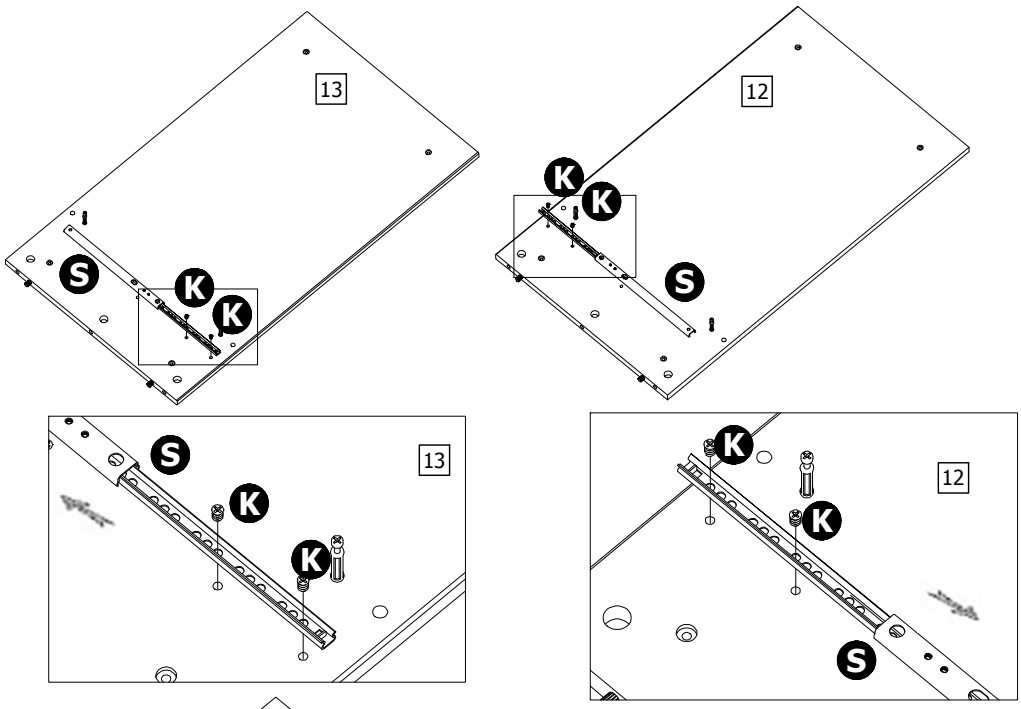

Step 10

Slide the drawer runners S forwards.

Fix the backend of the drawer runners S to the sides 12 and 13 using screws K.
See details.

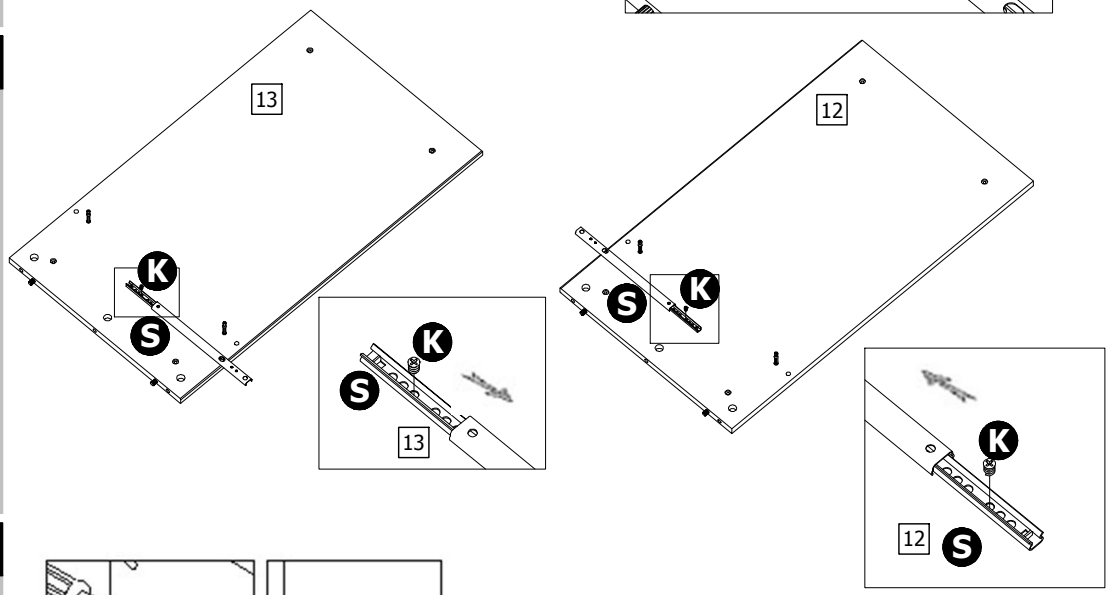


Step 11

Place the sides 12 and 13 onto the back plinth 14 and the front plinth 15.

Push the cams C into the holes indicated on the back plinth 14 and the front plinth 15. Arrows pointing towards the sides 12 and 13.

Turn the cams to the right to fix the sides 12 and 13.

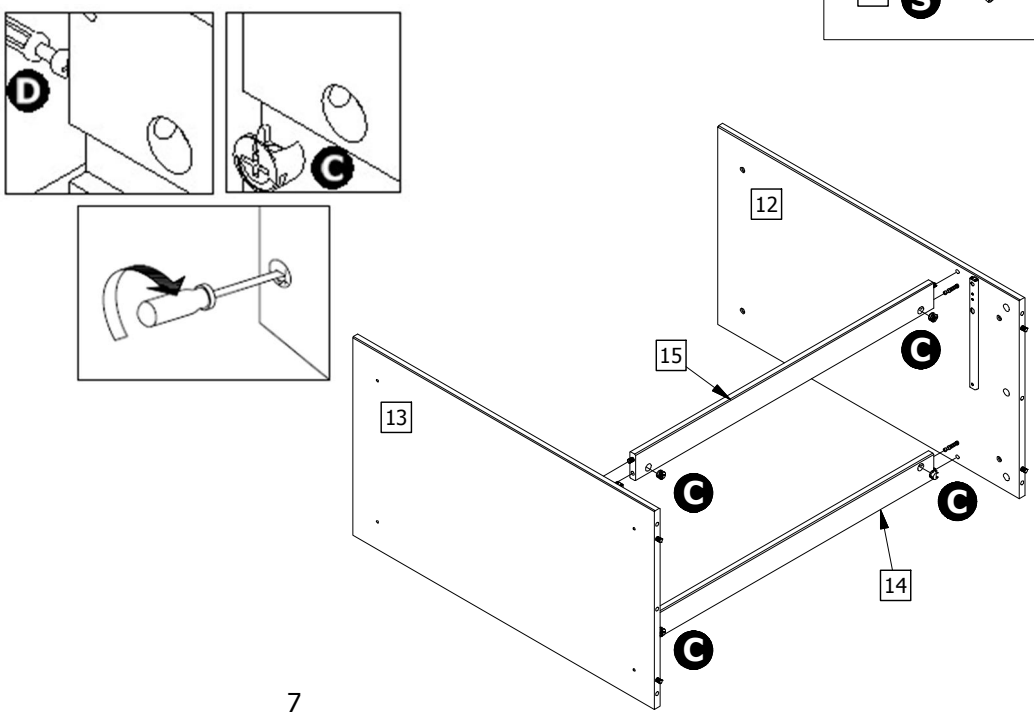


Assembly Instructions


Step 12

Place the sides 12 and 13 onto the top 11.

Push the cams C into the holes indicated on the sides 12 and 13. Arrows pointing towards the top 11.

Turn the cams C to the right to fix the sides.

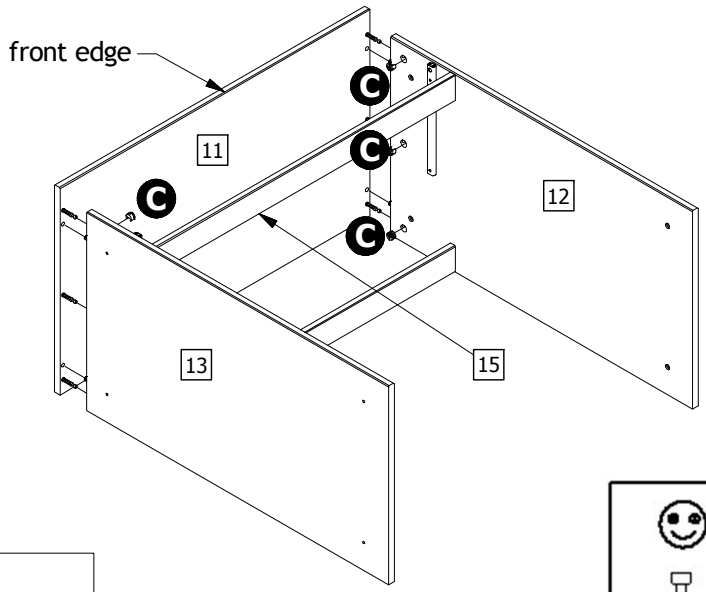

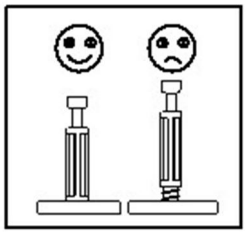



Step 13

Fix the crossplates P to the sides 1, using the pre-mounted screws.

Not the detail. Position the crossplates exactly as shown.


Screw the bolts C into the holes indicated on the sides 1.

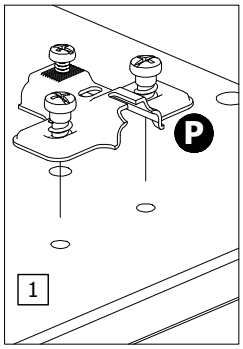


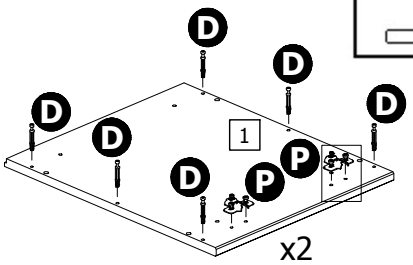

Step 14

Knock down the dowels A into the holes indicated on the top/bottom 2 using a small hammer.

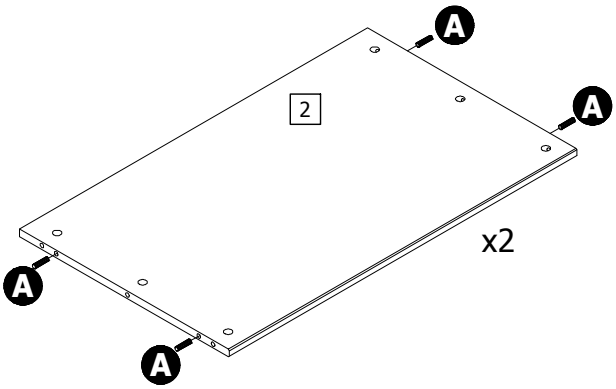

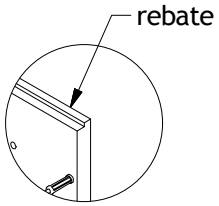



Step 15

Place the sides 1 onto the top/bottom 2.

Push the cams C into the holes indicated . Arrow pointing towards the sides.

Turn the cams C to the right to fix the sides.

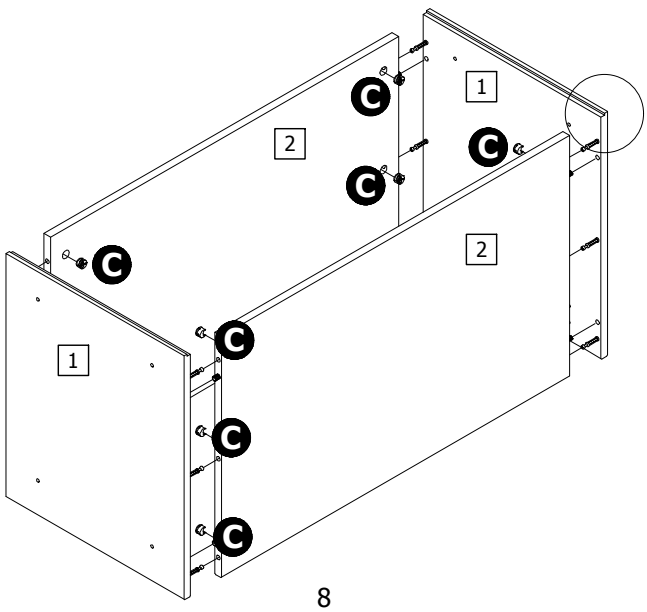

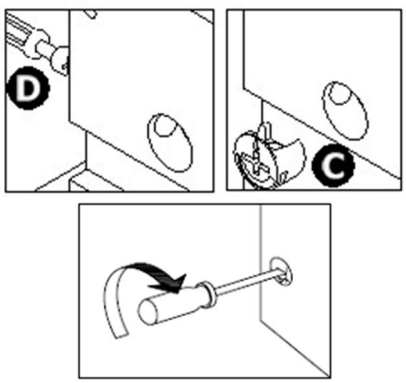

Assembly Instructions


Step 16


Place the back 8 into the rebates in the sides 1 and on the top/bottom 2.

Important!
Make sure the angle between the top and the sides is 90° when the back is attached.


Fix the back 8 to the sides 1 and the top/bottom 2, using nails i.


Use the nail holder Yd

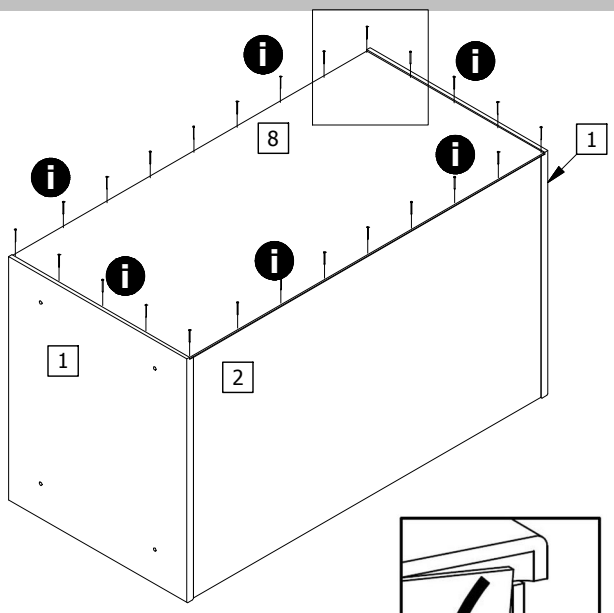

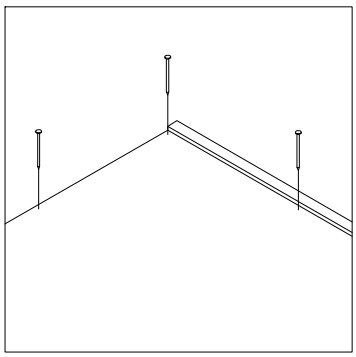



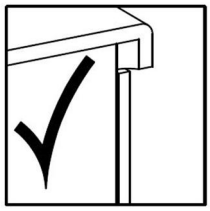

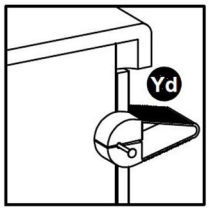


Step 17


Place the lamp rail 4 onto the bottom 2 as shown, 14 cm from the back.


Fix the lamp rail 4 to the bottom 2 using angles W and screws T.


Place the lamp L as shown,
2,5 cm behind the lamp rail 4.


Fix the lamp to the bottom 2 using screws N

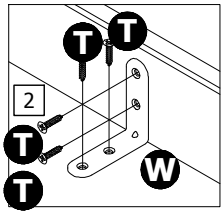

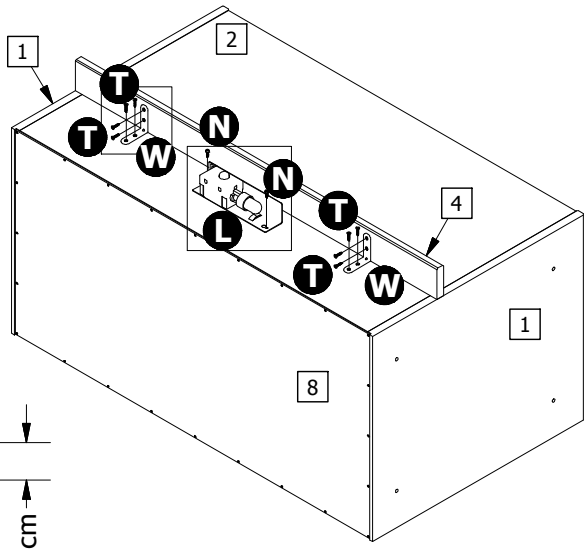

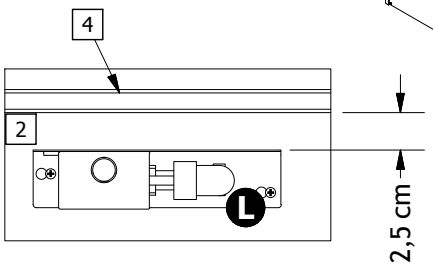

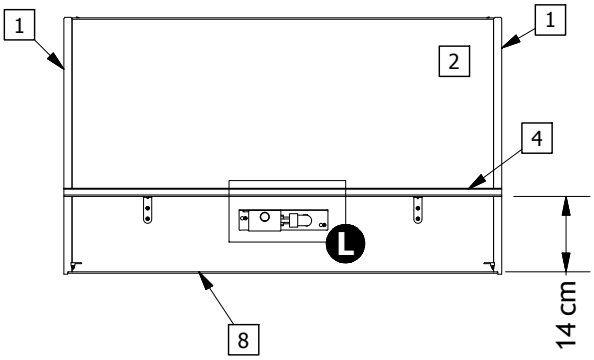

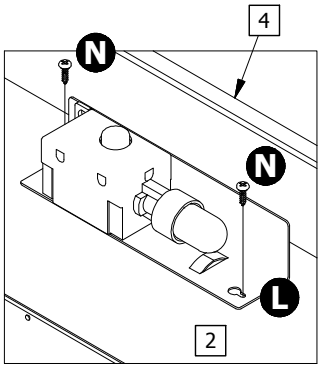

Assembly Instructions


Step 18


Place the connecting place V exactly as shown.


Fix the connecting plates V onto the top 2 using screws T.


Place the top rail 3 onto the top 2.


Fix the top rail 3 to the top using angles W and screw T.

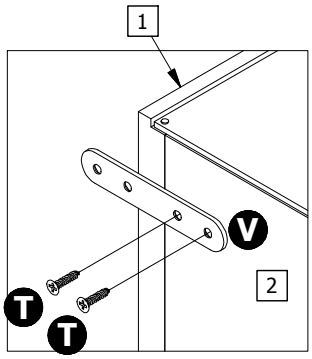


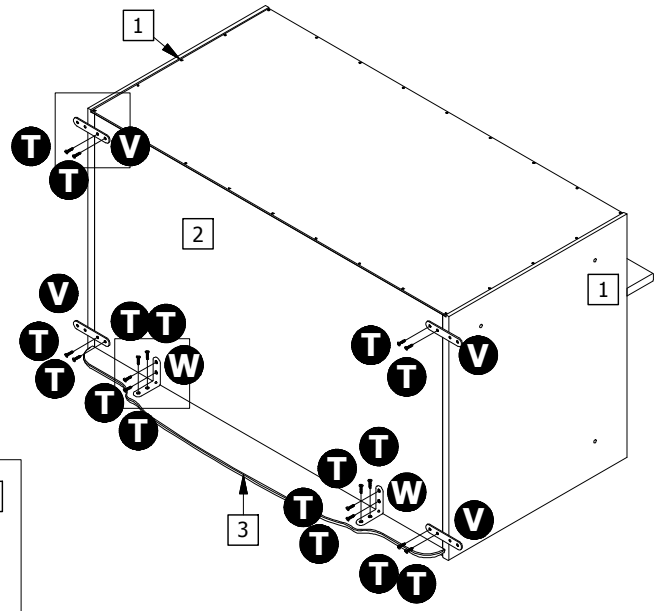

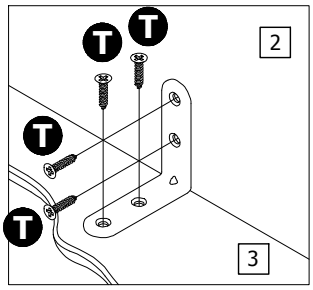

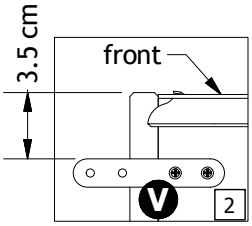

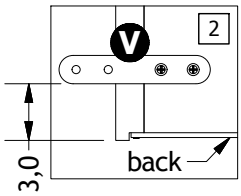

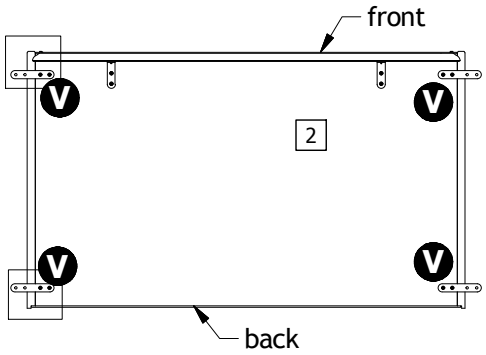


Step 19

Warning !
The wardrobe is heavy. Lift with care.

Place the dressing table as shown.

Fix it using screws U through the holes indicated.

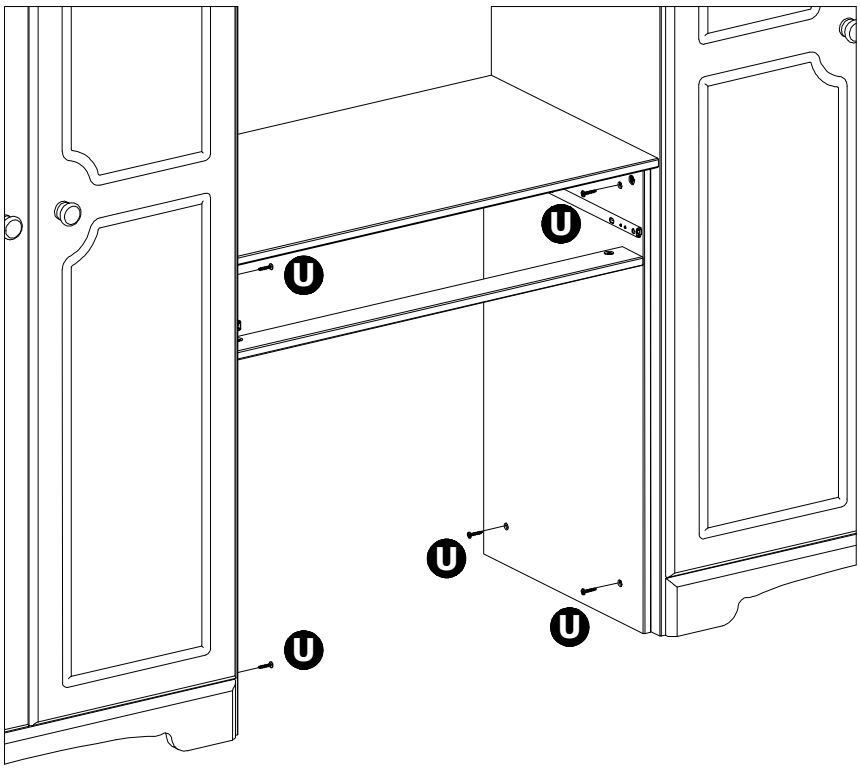


Assembly Instructions

Step 20

Fix the mirror rails 9 to the sides of the wardrobes at both sides, using screws U.

The mirror rails 9 must be placed onto the top 11 of the table and leveled whith the back of the sides.
See details.

Place the adhesive seal caps Y to cover the screws

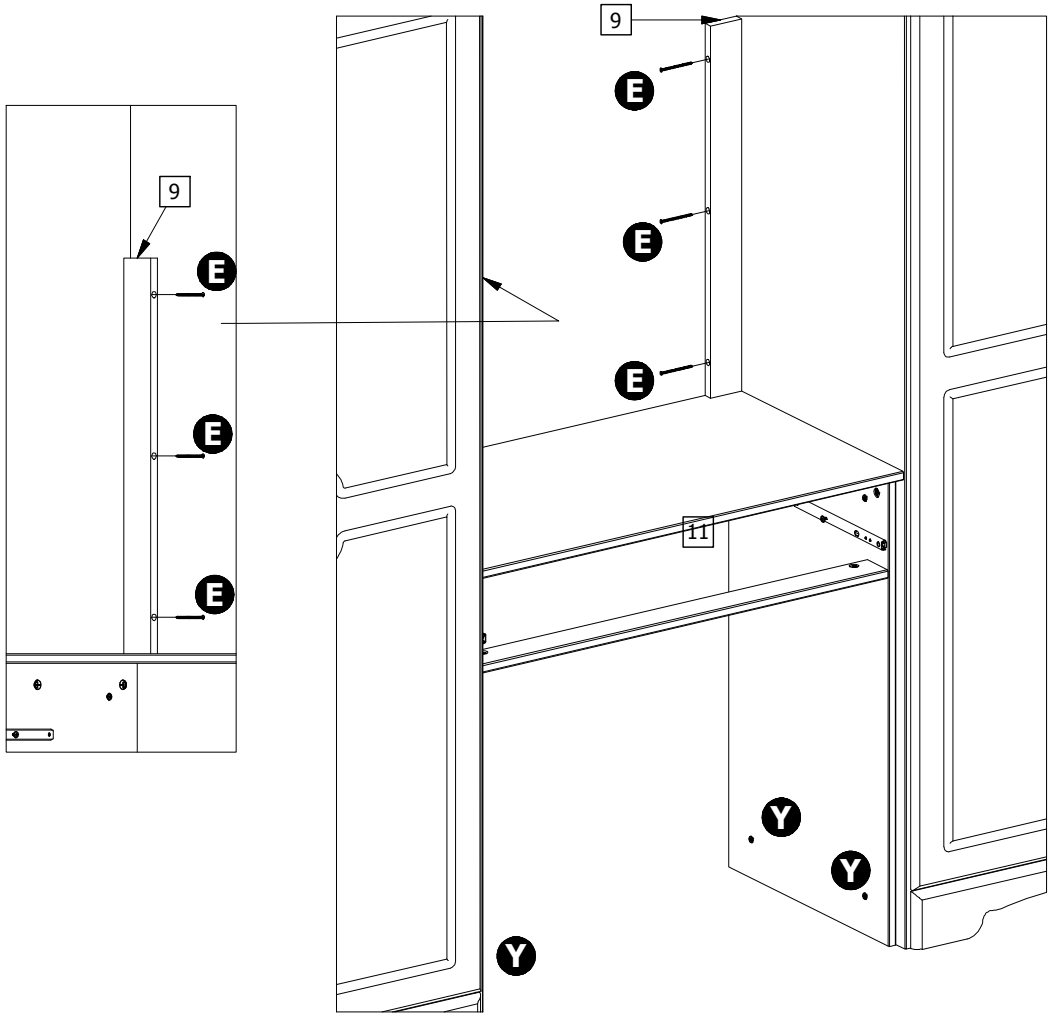

Step 21


Place the two door robe in between the two wardrobes.


Pull the lamp wire around the back of the two door robe and place plug on the top.


Peel off the protection paper on one side of the Tape X. Place the tape X onto the mirror rail 9.

Fix the sides 1 using screws U into the holes indicated.

Fix the connecting plate V on top of both wardrobes, using screws T.

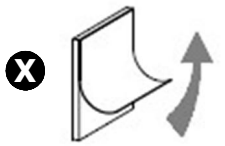

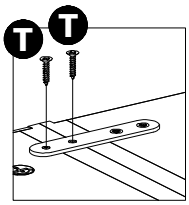

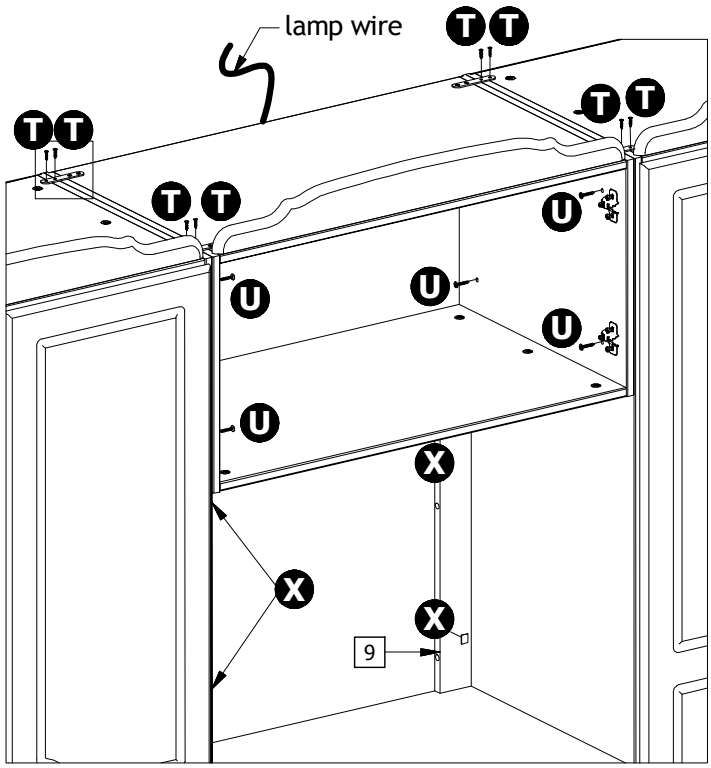

Assembly Instructions


Step 22


Peel off the protection paper on the other side the tape X.

Gently rest the top edge of the mirror 7 against the mirror rail 9.

Carefully slide the bottom edge of the mirror 7 backwards to position the mirror.

Centralize the mirror left to right and push it gently onto the sticky pads X

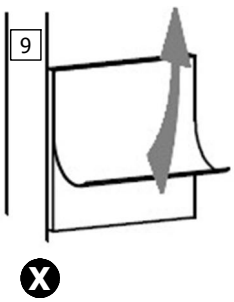


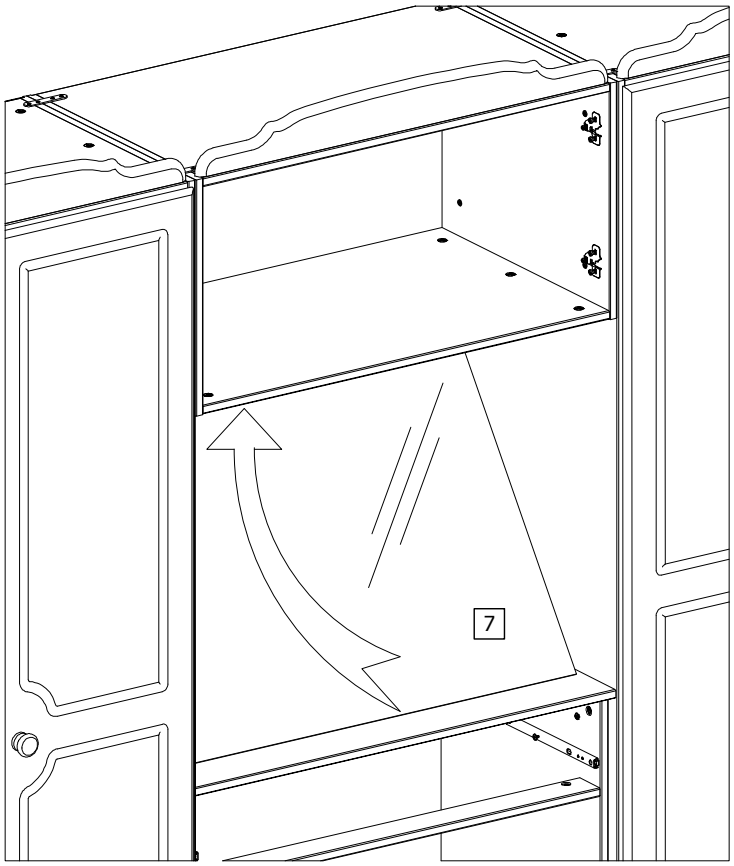



Step 23

Place the mirror fittings as shown.
See details.

Fix the mirror 7 to the mirror rails 9 using the mirror fitting J and the screws M.

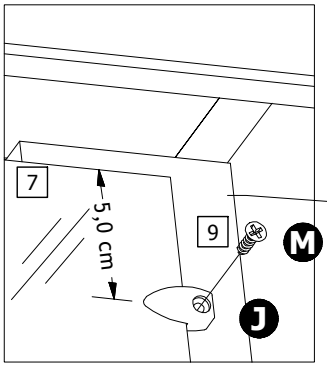

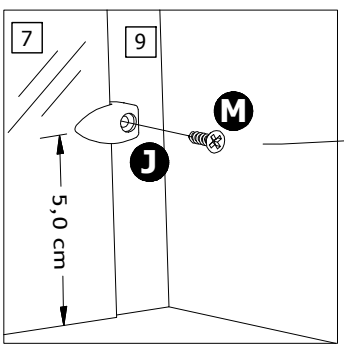

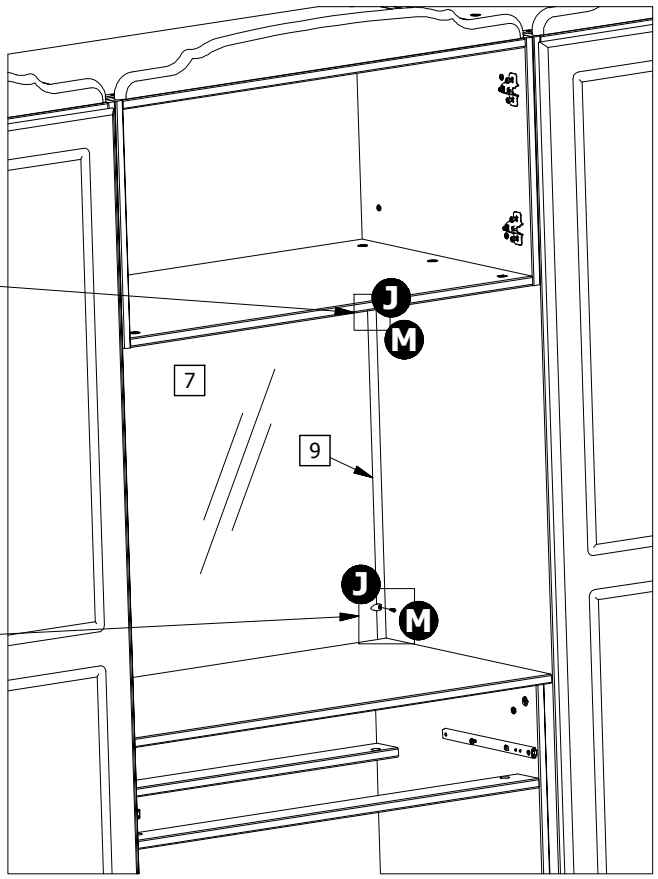


Assembly Instructions

Step 24


Place the cup hinges Q into the holes indicated on the doors 5 and 6.

Fix the hinges using screws T.

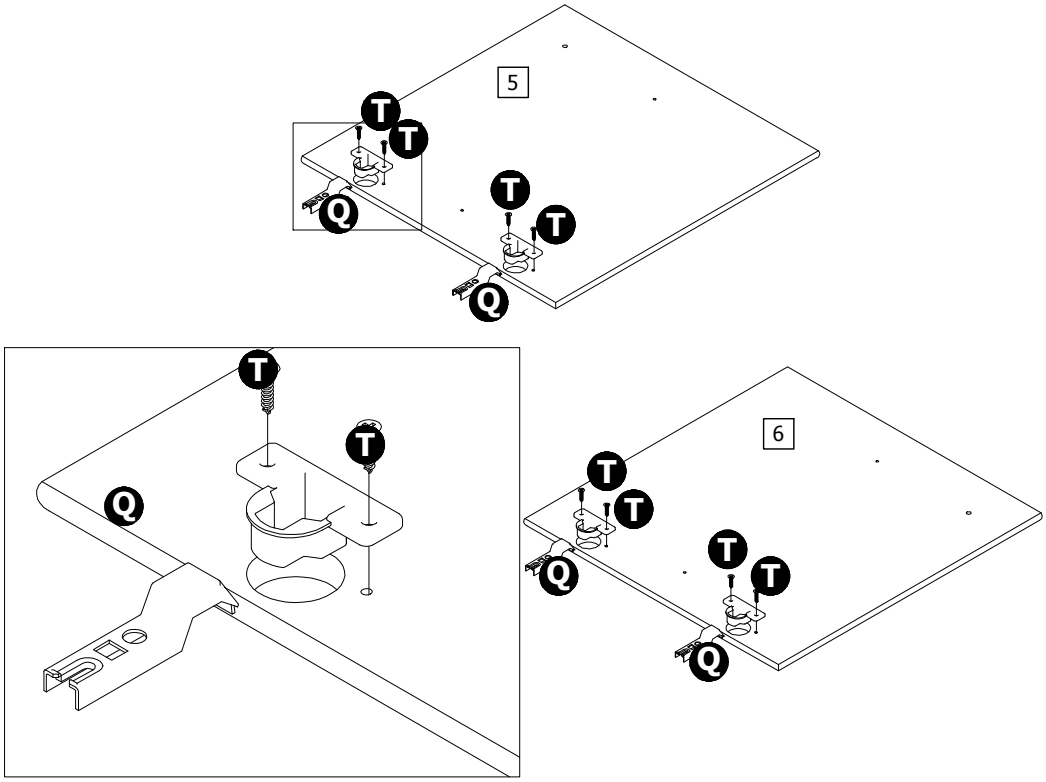

Step 25

Fix the door rails 18 to the doors 5 and 6 using screws O.

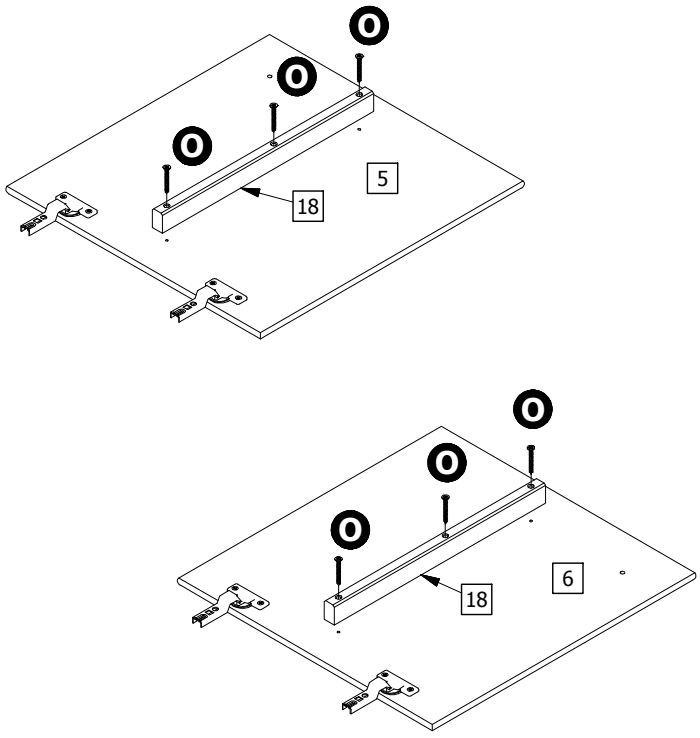

Assembly Instructions

Step 26


Pull out the drawer runners. Slide the drawer onto the runners.


Fix the drawer to the drawer runners using screws H.


Slide the cup hinges Q onto the crossplates P.


Fix the hinges using the premounted screws in the crossplates.
See details.


Fix the wooden knob G to the doors 5 and 6 using screws R.

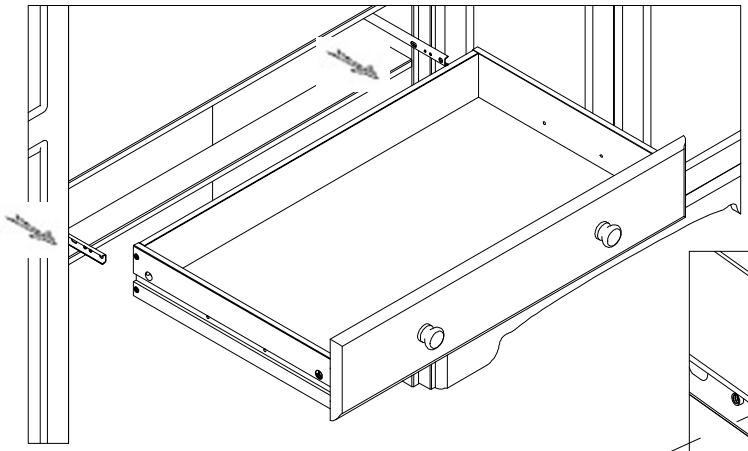


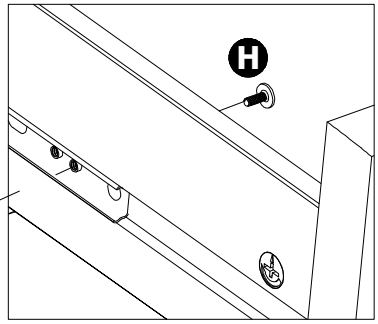

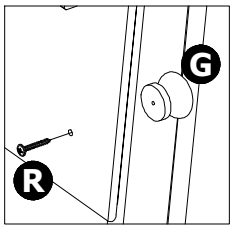


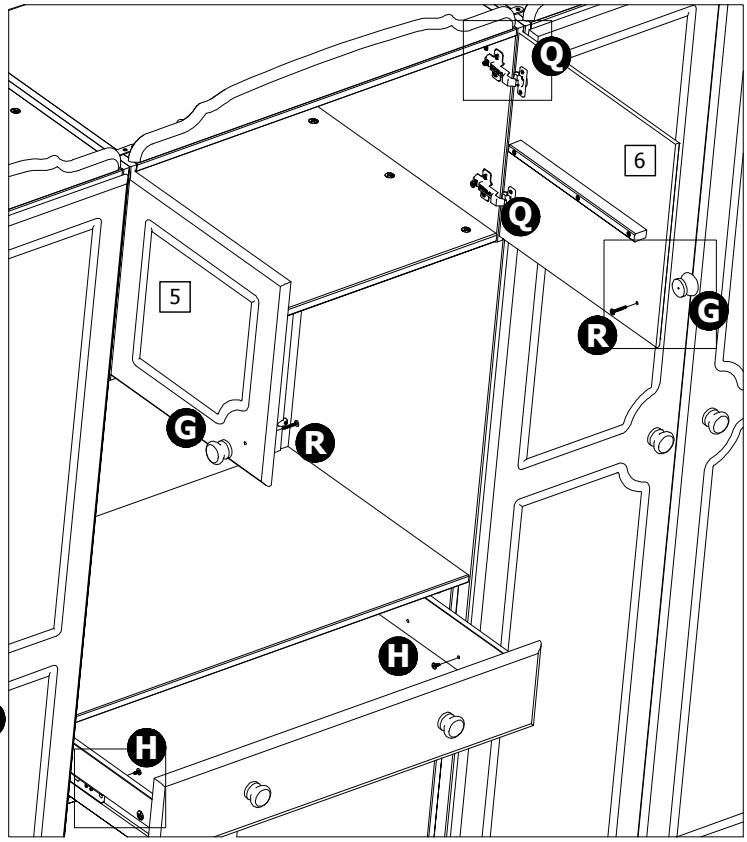


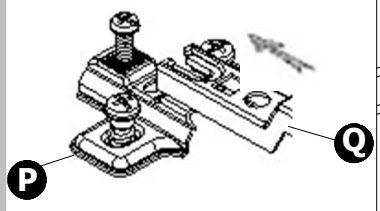

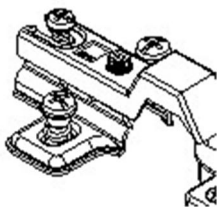

Tighten these screws

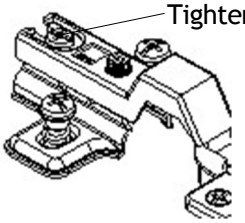

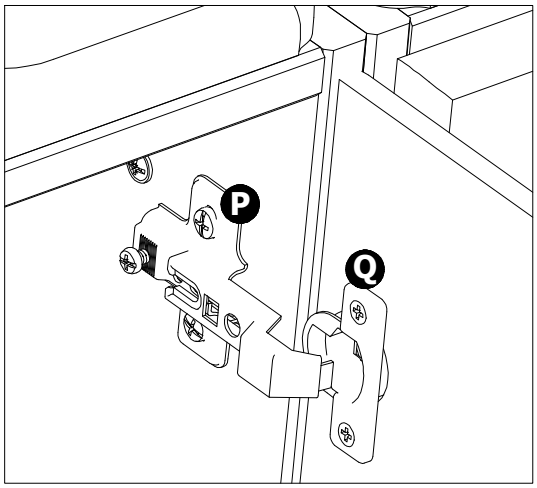

Assembly Instructions

Step 27

Adjusting the doors left/right.

a:
To adjust the door towards the left hand side - turn the adjusting screw to the right.

b:
To adjust the door towards the right hand side - turn the adjusting screw to the left.

Adjusting the doors forwards/backwards.

a:
Loosen the fixing screw.

b:
Push the cup hinge/the door forwards or backwards to adjust.

c:
Tighten the fixing screws of ALL the crossplates.

Adjusting the doors up/down.

a:
Loosen the two pre-mounted screws of each crossplates, BUT ONLY as much as it will allows the crossplates to move up and down.

b:
Push the door up or down to adjust.

c:
Tighten the pre-mounted screws of ALL crossplates.

