Nordic - 3 Drawer Chest

Assembly Instructions - Please keep for future reference | 1529810



Dimensions

Width : 43,7 cm

Depth : 39,7 cm

Height : 56,2 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 30 30

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.
• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you have damaged or missing components, call the **Argos Customer Helpline**: **0845 640 30 30**

Please check you have all the panels listed below


1 Top
437x397x15 mm
V155859

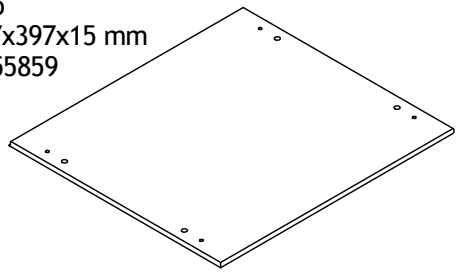


4 Plinth, back
383x60x15 mm
P155865

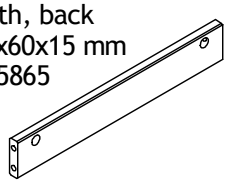


3 Side, right
547x379x15 mm
V155846

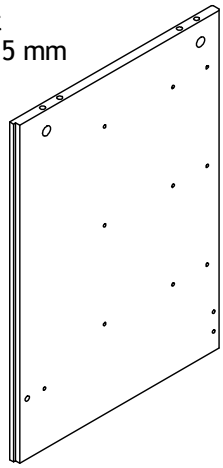


5 Plinth, front
395x96x15 mm
V155802

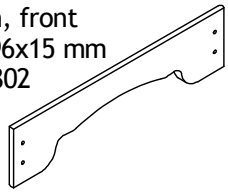


2 Side, left
547x379x15 mm
V155847

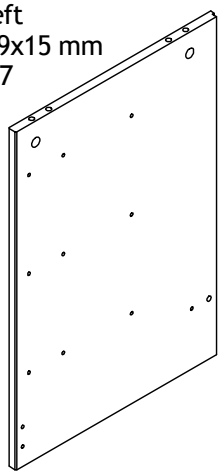


6 Back
464x397x3 mm
NM415851

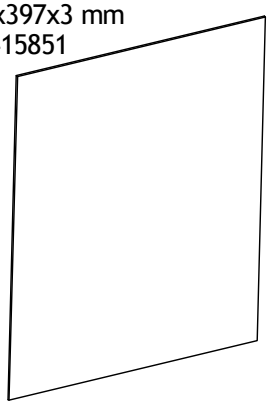


7 Drawerfront, small
395x125x15 mm
V155810

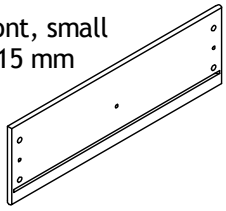


9 Drawer side, right/left x6
350x98x12 mm
S120653

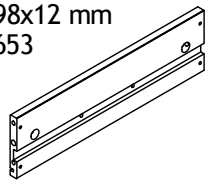


11 Drawer bottom x3
361x347x3 mm
NM415850

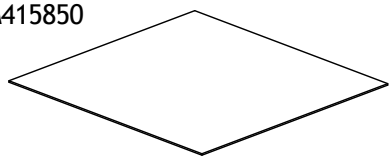

8 Drawerfront x2
395x157x15 mm
V155811

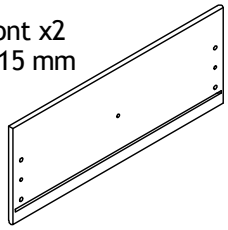

10 Drawer back x3
351x98x12 mm
S120650






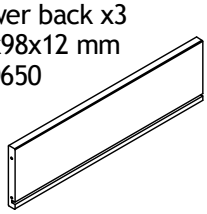


Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0845 640 30 30**

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

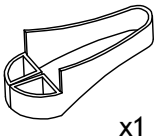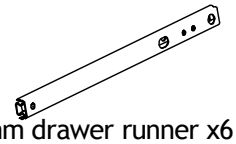A  BA10390 ø8x30 mm wooden dowel x6	**B**  BA10400 ø6x30 mm wooden dowel x12	**R**  BA10170 ø4,0x35 mm Screw x15
Y  Ba10688 Nail holder x1	**C**  BA10590 ø15x9,5 mm x12	**D**  BA10603 ø5/11x34 mm bolt x12
i  BA10025 ø1,2x20 mm x25	**F**  BA10833 15x15x10 mm x6	**G**  BA10468 ø40x30 mm wooden knob x3
H  BA10191 M4x9 mm screw x6	**K**  BA10270 ø5,8x8 mmscrew x18	**E**  BA10240 ø6,1x11,5 mmscrew x8
S  B14359 17x246 mm drawer runner x6	**V**  BA10801 Angle 20x20x2mm x4	

Tools required


Flatblade screwdriver (Medium)


Hammer


Phillips screwdriver (Medium & large)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

Fix the drawer sides 9 to the drawer back 10 as shown, using screws R

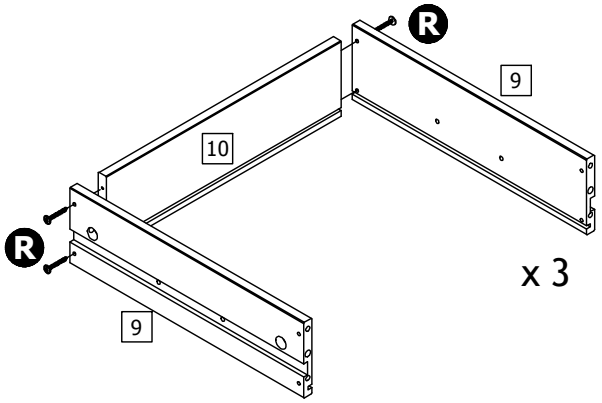


Step 2

Knock the dowels B into the holes indicated on the drawer sides 9 using a small hammer

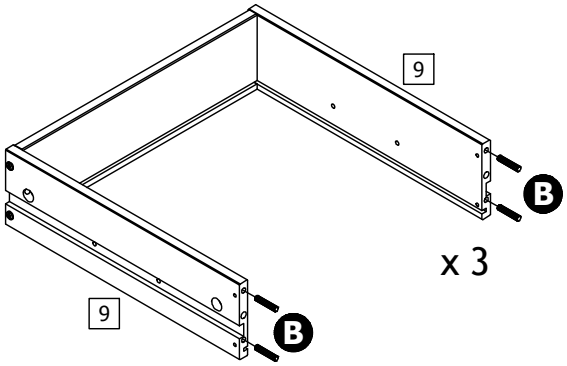


Step 3


Slide the drawer bottom 11 into the drawer sides 9

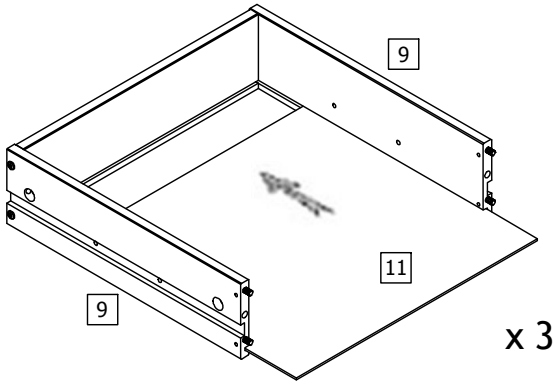

Step 4

Screw the bolts C into the holes indicated on the drawer fronts 7 and 8

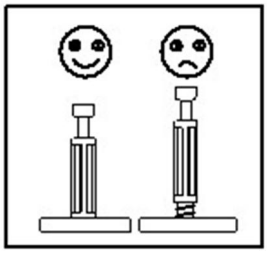

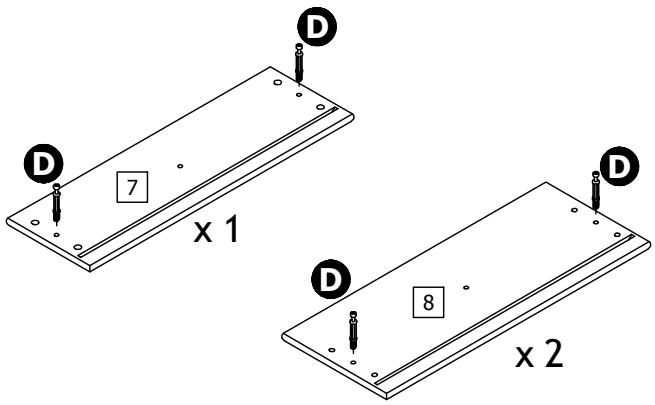


Assembly Instructions


Step 5

Push the drawer fronts 7 and 8 onto the drawer sides 9 as shown

Push cams C into the holes indicated. Arrow pointing toward the front.

Turn the cams C to the right to fix the fronts 7 and 8

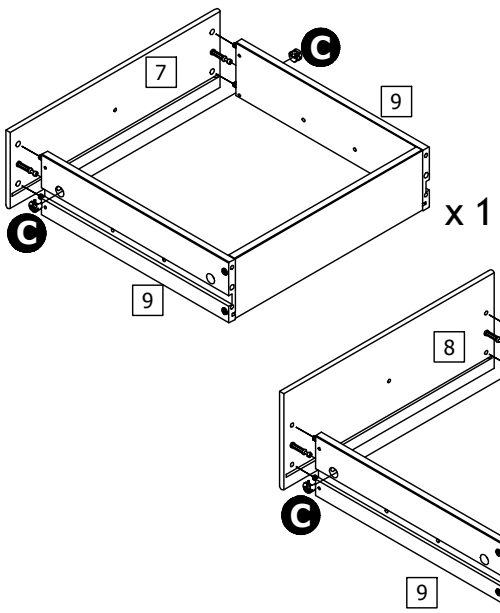

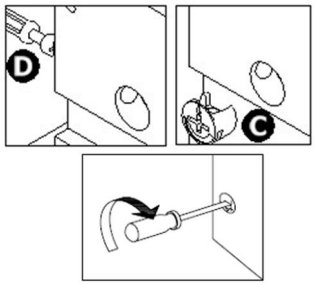



Step 6


Important! Make sure the angle between the drawer fronts 7 and 8 and the drawer sides 9 are 90° before the drawer bottom 11 are fixed.


Fix the drawer bottom 11 to the drawer backs 10 and the drawer fronts 7 and 8 using F.

To adjust the angle between the drawer sides and the drawer fronts push the fitting F sidewards. See details

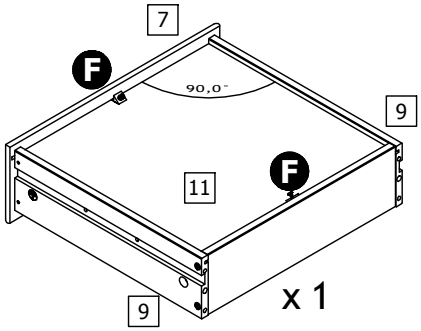

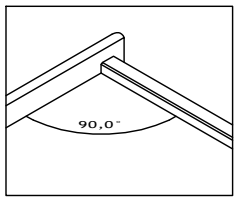


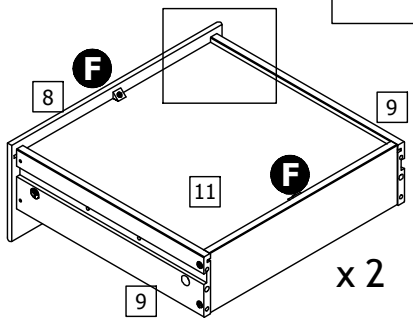


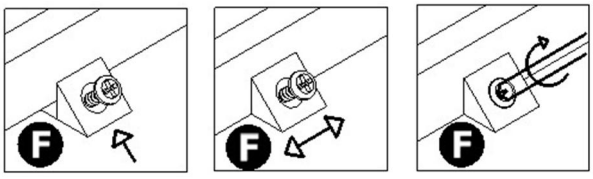

Step 7

Fix the wooden knobs G to the drawer fronts 7 and 8 using screws R.

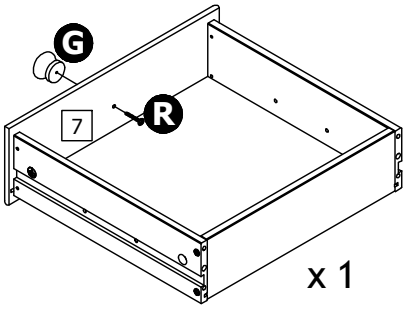


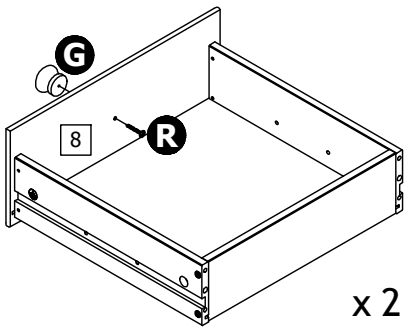


Assembly Instructions

Step 8

Screw the bolts C into the holes indicated on the top 1.

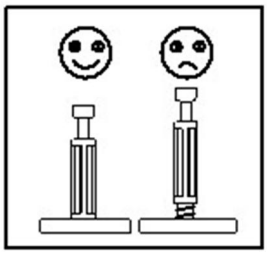

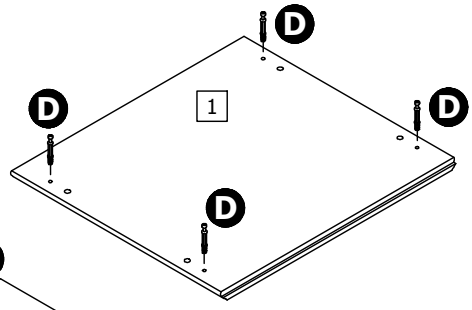



Step 9

Screw the bolts into the holes indicated on the sides 2 and 3.

Fix the angles V on to the sides 2 and 3 using screws E. Place the angles as shown.
See details.

Knock the dowels A into the holes indicated on 2 and 3 using a small hammer

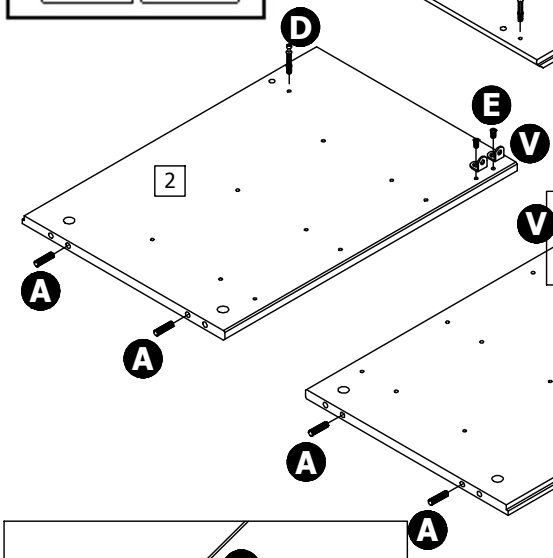


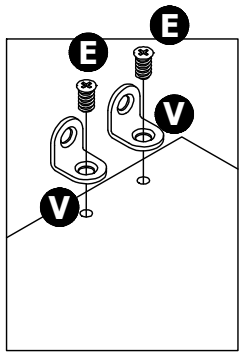

Step 10

Slide the top of the drawer runners S backwards.


Fix the front end of the drawer runners S to the sides 2 an 3 using screws K through the holes indicated.
See details.

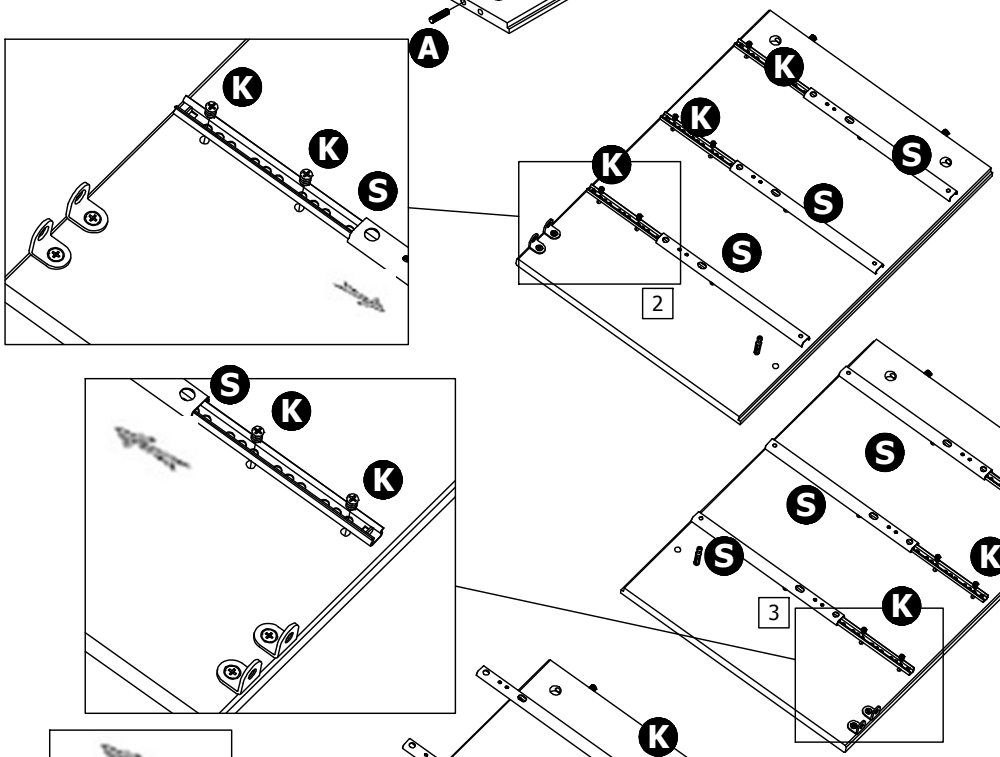

Step 11

Slide the top of the drawer runners S forwards.


Fix the backend of the drawer runners S to the sides 2 and 3 using screws K through the holes indicated.
See details

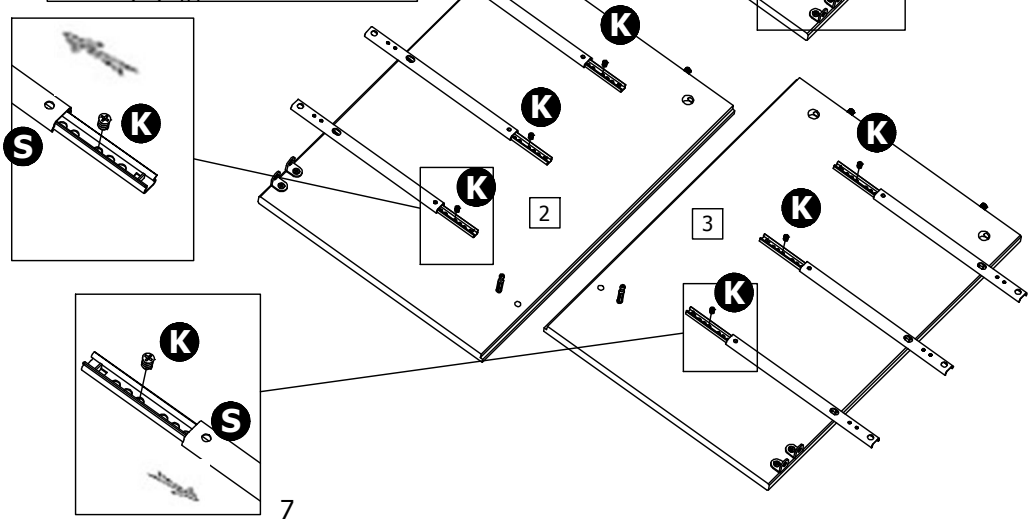

Assembly Instructions

Step 12

Knock down the dowels A into the holes indicated on the back plinth 4

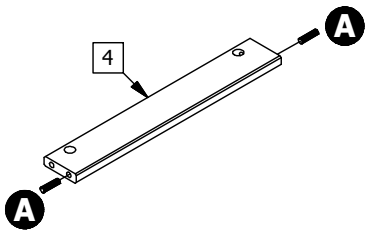



Step 13

Fix the back plinth 4 to sides 2 and 3.

Push the cams C into the holes indicated on the back plinth 4.
Arrow pointing towards the sides 2 and 3.

Turn the cams C to the right to fix the sides 2 and 3.

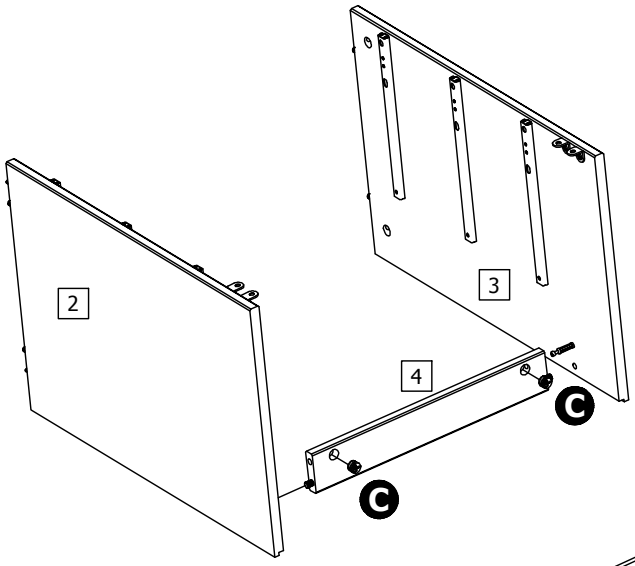

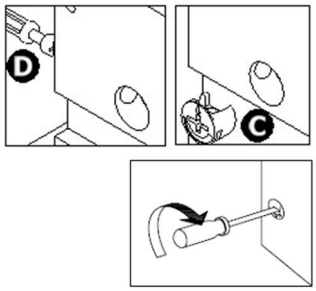


Step 14

Press the top 1 onto the sides 2 and 3.

Push the cams C into the holes indicated on the sides 2 and 3. Arrows pointing towards the top 1.

Turn the cams C to the right to fix the top 1.

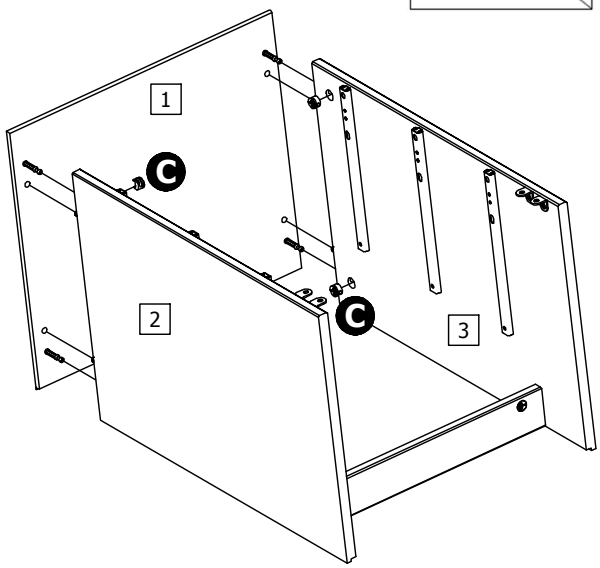



Step 15

Turn around the chest so that it lies on its front edge.

Place the front plinth 5 as shown.

Fix the front plinth 5 to the sides 2 and 3 using screws E into the angles V.

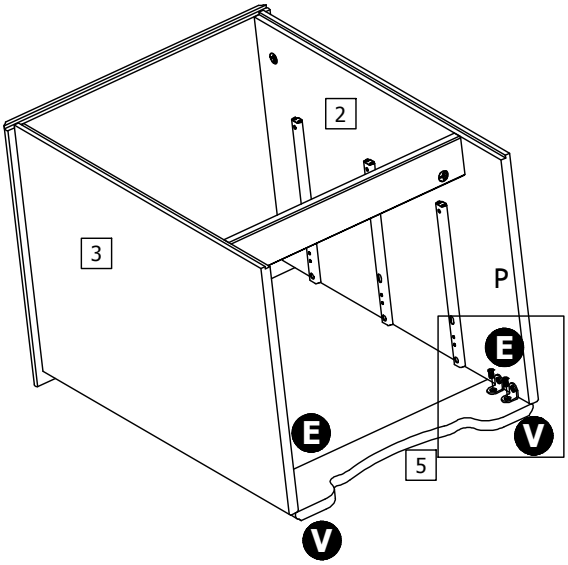

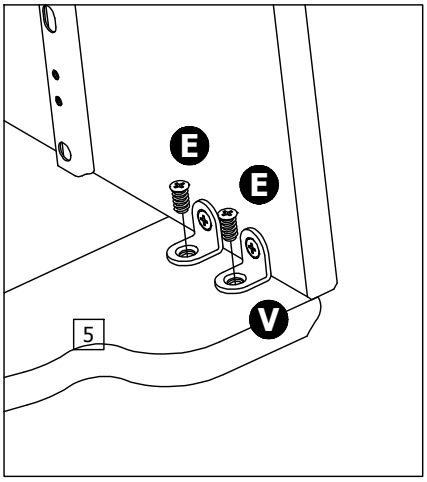

Assembly Instructions


Step 16


Place the back 6 into the rebates in the sides 2 and 3.

Important!
Make sure the angle between the top 1 and the sides 2 an 3 is 90° when this is attached

Fix the back 6 to the sides 2 and 3, the top 1 and the rail using nails i.

Use the nail holder Yd and a small hammer.

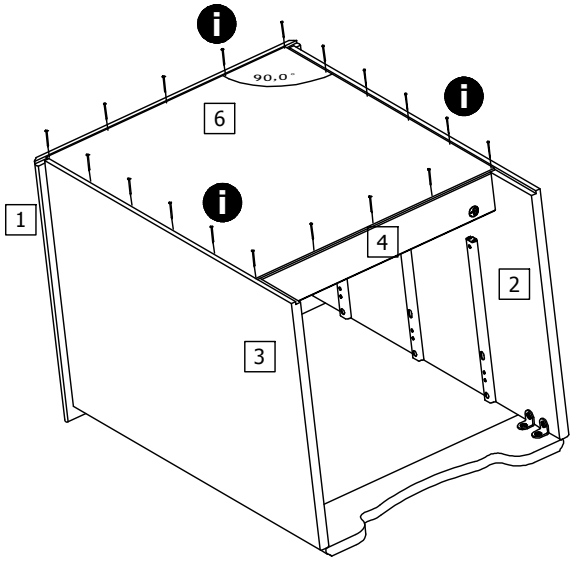

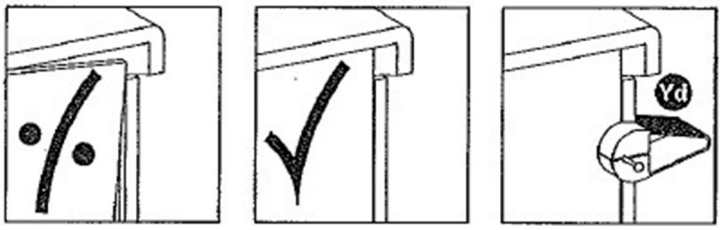



Step 17


Pull out the drawer runners. Slide the drawers onto the runners.

Fit and fix the lower drawer first and Work your way up.

Fix drawers to the drawer runners using the screws H.

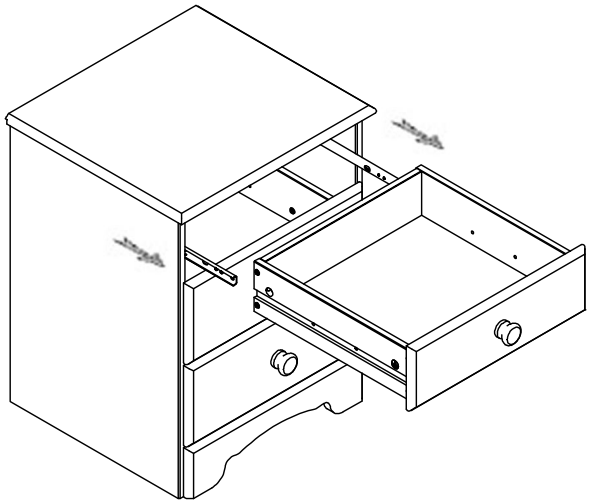

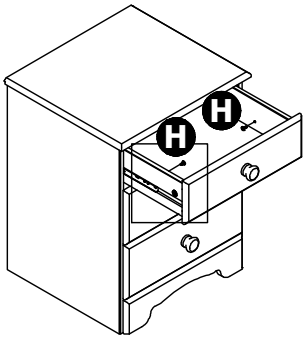

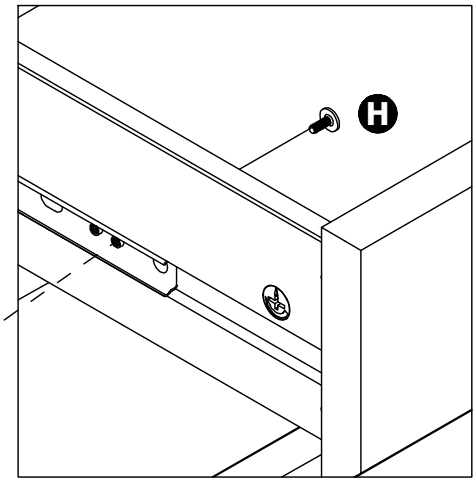

If you need help or have damaged or missing parts, **call the Customer Helpline: 0845 640 30 30**
Home Retail Group - 489-499 Avebury Boulevard - Saxon Gate West - Central Milton Keynes MK9 2NW

Nordic - 4x2 Drawer Chest

Assembly Instructions - Please keep for future reference | 1468751



Dimensions

Width : 83,5 cm

Depth : 39,7 cm

Height : 88,2 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 30 30

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.
• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you have damaged or missing components, call the **Argos Customer Helpline**: **0845 640 30 30**

Please check you have all the panels listed below


1 Top
V155861
835x397x15 mm

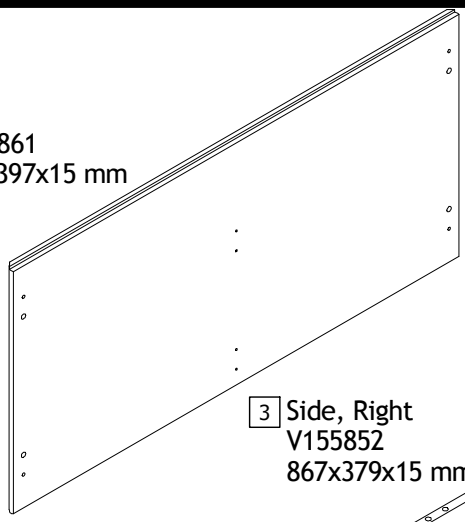


4 Plinth, Back
P155866
781x60x15 mm

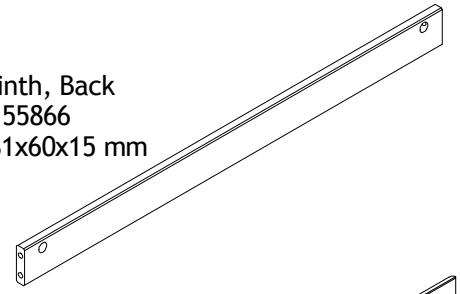


3 Side, Right
V155852
867x379x15 mm

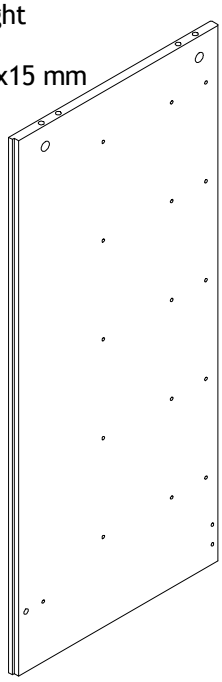


5 Plinth, Front
V155803
793x96x15 mm

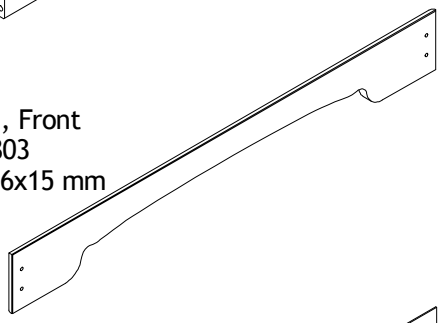


2 Side, Left
V155853
867x379x15 mm

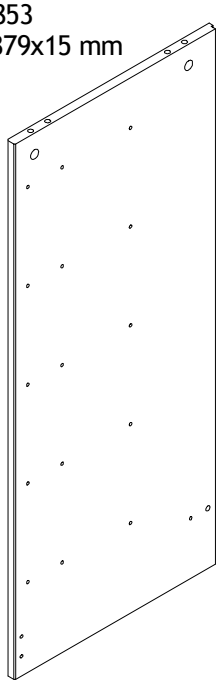


7 Back x2
NM415857
784x397x3 mm

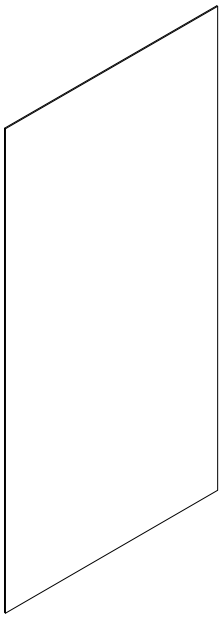


9 Drawer front x4
V155814
793x157x15 mm

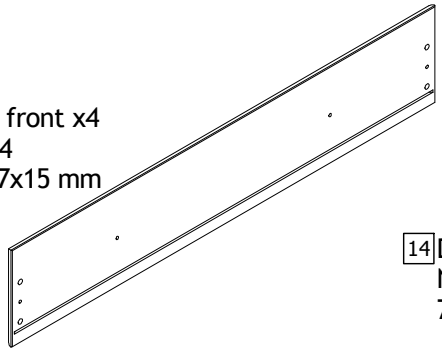


14 Drawer bottom x4
NM415856
759x347x3 mm

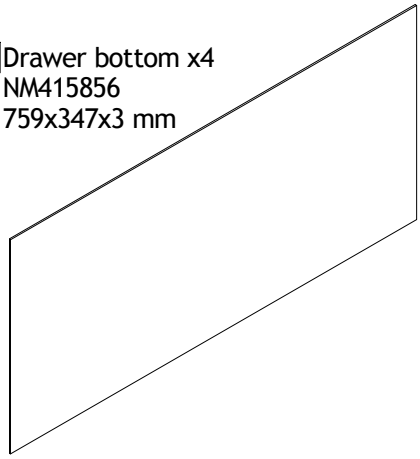


8 Drawer front, small x2
V155810
395x125x15 mm

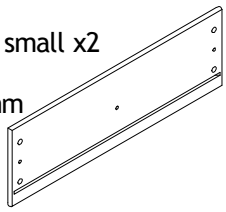


11 Drawer back x4
S120652
749x98x12 mm

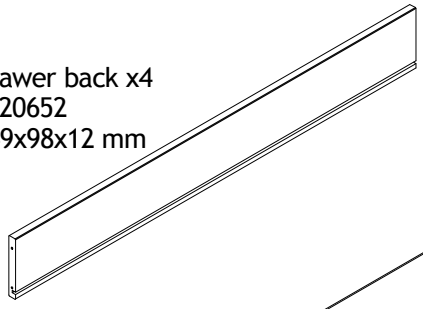


10 Drawer back, small x2
S120650
351x98x12 mm

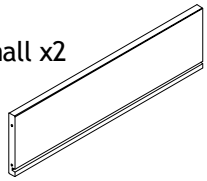


13 Drawer bottom x2
NM415850
361x347x3 mm

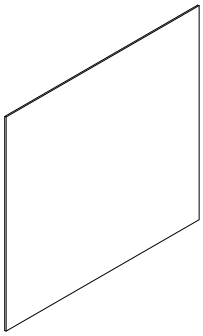

15 H-profile
B80750
4x750

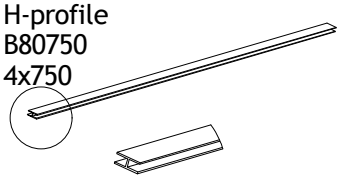

12 Drawer side, right/left x12
S120653
350x98x12 mm









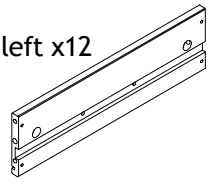


Components - Fittings

If you have damaged or missing components, call the **Argos Customer Helpline**: **0845 640 30 30**


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

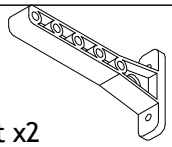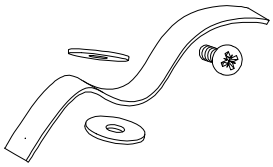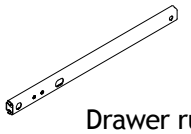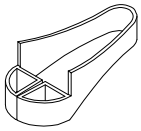A  BA10390 ø8x30 mm Wooden dowel x6	**B**  BA10400 ø6x30 mm Wooden dowel x24	**L**  B561300 Drawer support x2
R  BA10170 ø4,0x35 mm x34	**C**  BA10590 ø15x9,5 mm Cam x18	**D**  BA10603 ø5/11x34 mm Bolt x18
i  BA10025 ø1,2x20 mm Nail x50	**J**  BA182002 Wallstrap and instruction x1	**F**  BA10833 Back fitting W. 15x15x10 mm screw x12
G  BA10468 ø40x30 mm Wooden knob x10		**H**  BA10191 M4x9 mm screw x12
K  BA10270 ø5,8x8 mm screw x34	**E**  BA10240 ø6,1x11,5 mm screw x8	**S**  B14359 17x246 mm Drawer runner x12
V  BA10801 Angle20x20x2 x4	**Y**  Ba10688 Nail holder x1	**T**  BA10154 4,0x16 mm screw x4

Tools required


Flatblade screwdriver (Medium)


Hammer


Phillips screwdriver (Medium & large)


Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1


Fix the drawer sides 12 to the drawer backs 10 and 11 as shown, using screws R.

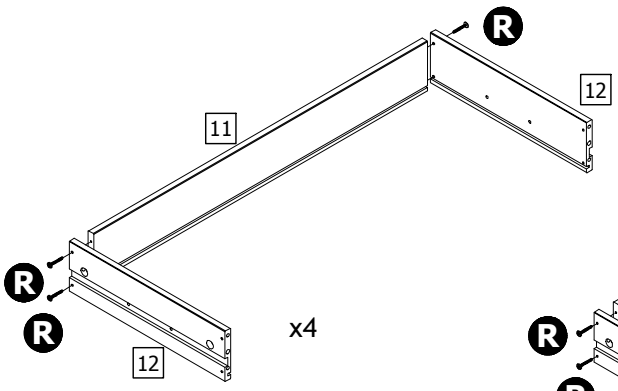


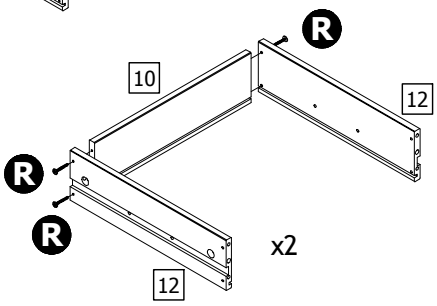

Step 2


Knock the dowels B into the holes indicated on the drawer sides 12 using a small hammer.

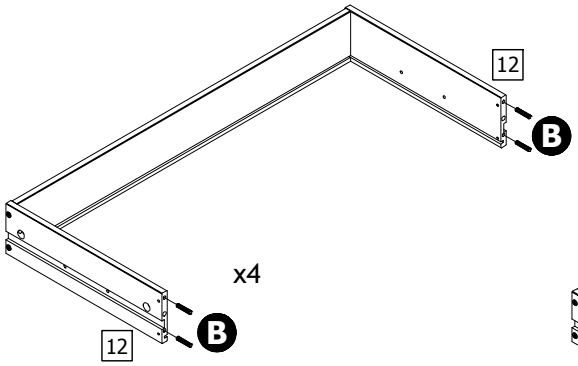


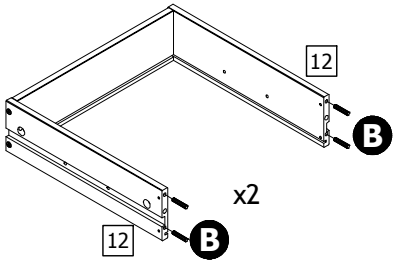

Step 3


Slide the drawer bottoms 13 and 14 into the drawer sides 12.

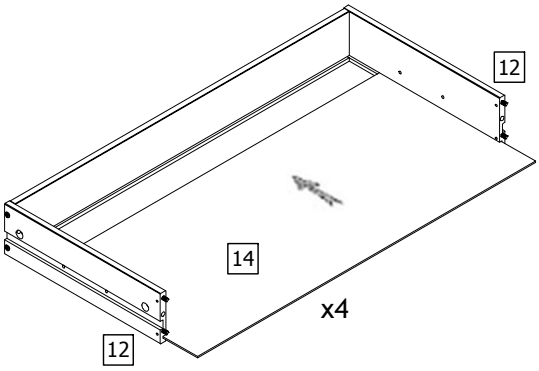


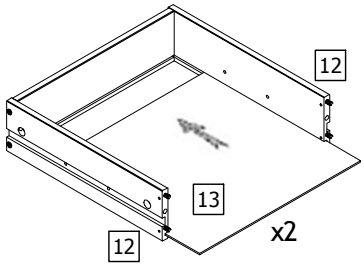


Step 4

screw the bolts D into the holes indicated on the drawer fronts 8 and 9.

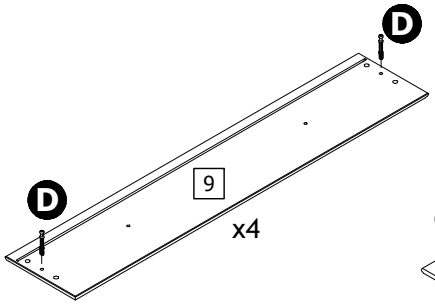

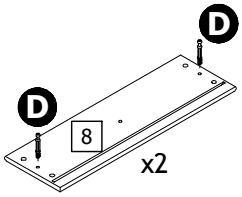

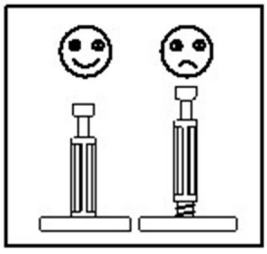


Assembly Instructions


Step 5


Push the drawer fronts 8 and 9 onto the drawer sides 12 as shown.


Push the cams C into the holes indicated. Arrow pointing towards the front.

Turn the cams C to the right to fix the fronts 8 and 9.

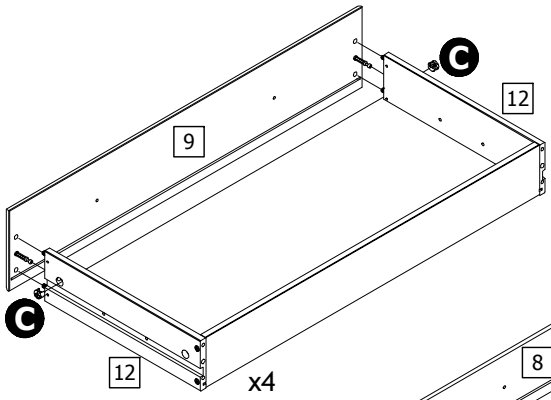

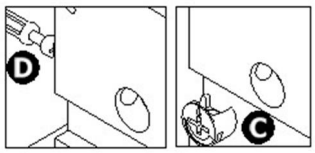

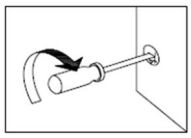

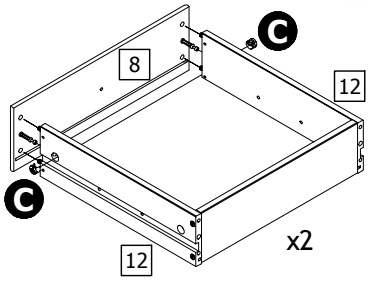



Step 6


Important! Make sure the angle between the drawer fronts 8 and 9 and the drawer sides 12 is 90° before the drawer bottoms 13 and 14 is fixed.


Fix the drawer bottoms 13 and 14 to the drawer backs 10 and 11 and the drawer fronts 8 and 9 using F.

To adjust the angle between the drawer sides and the drawer fronts push the fitting F sidewards. See details.

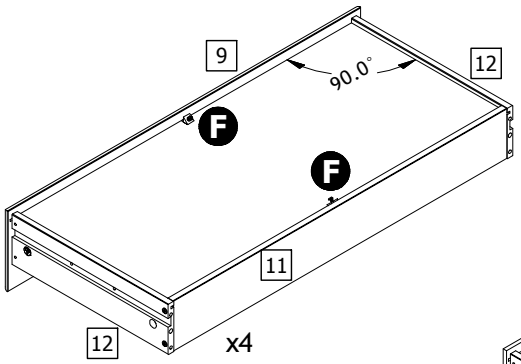

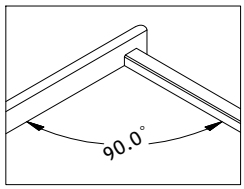


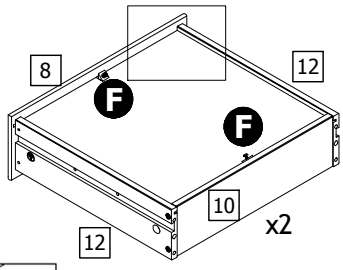


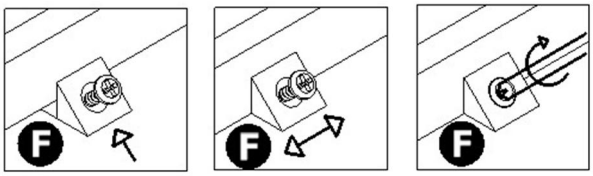

Step 7

Fix the Wooden knobs G to the drawer fronts 8 and 9 using screws R.

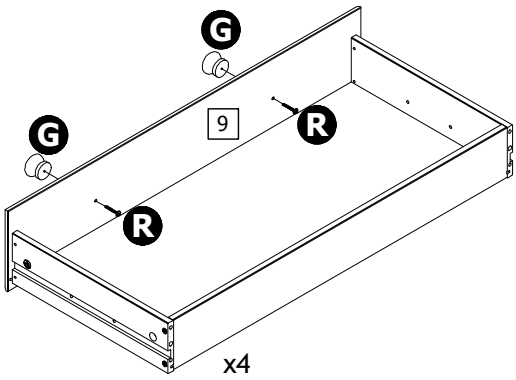

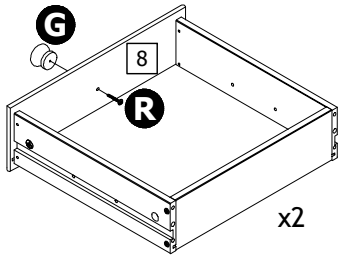


Assembly Instructions


Step 8


Knock down the dowels A into the holes indicated on the back plinth 4. using a small hammer.

Screw the bolts D into the holes indicated op top 1.

Fit the drawer support L to the top 1 using screws T through the holes indicated.
See details.

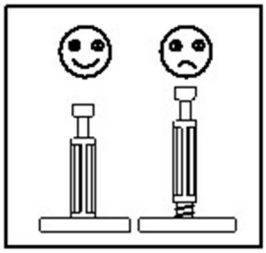

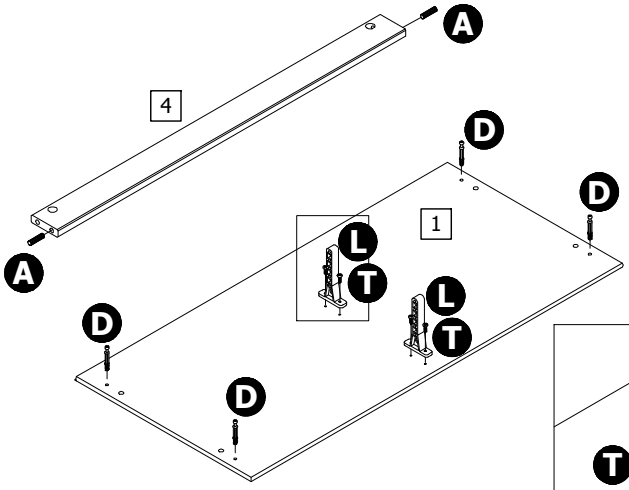


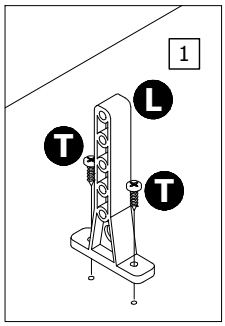


Step 9

Slide the top of the drawer runners S backwards.

Fix the front end of the drawer runners S (on both sides) to the drawer support L into the hole indicated, using screws K.
See details.

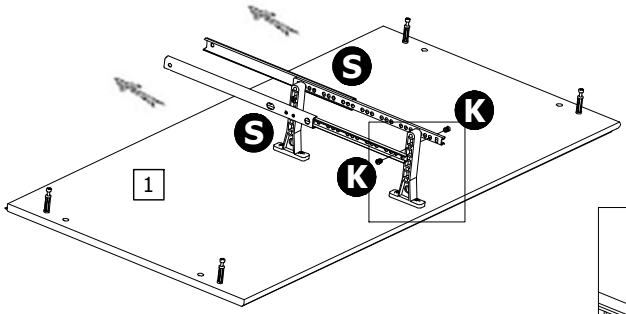


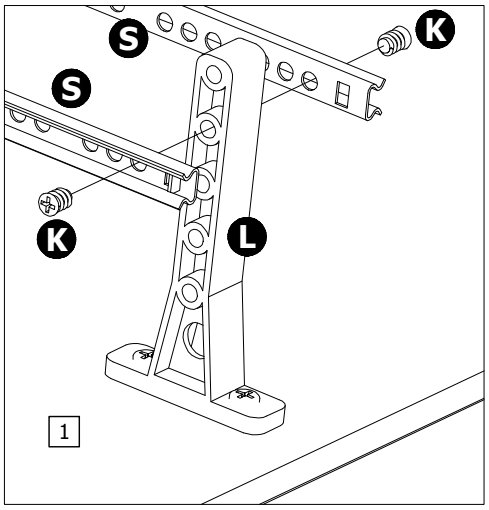


Step 10

Slide the drawer runners S forwards.

Fix the backend of the drawer runners S (on both sides) to the drawer support into the hole indicated, using screw K.
See details.

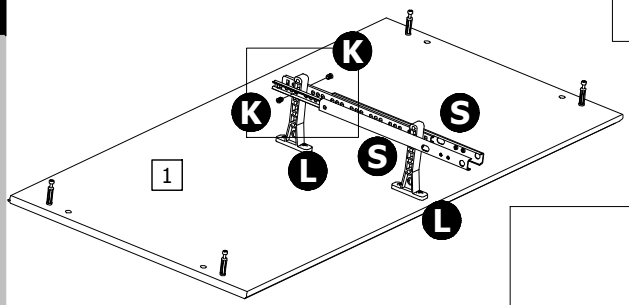

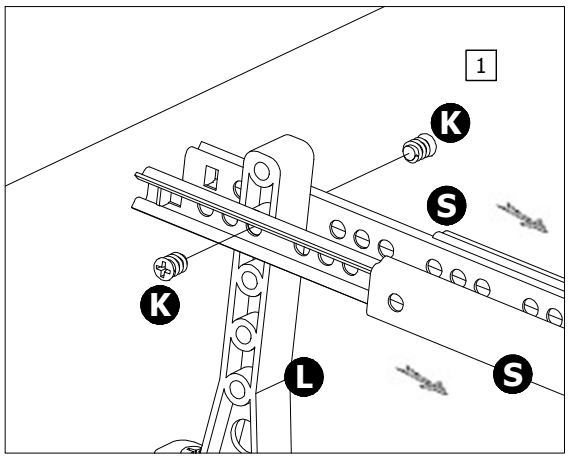


Assembly Instructions


Step 11


Screw the bolts D into the holes indicated on the sides 2 and 3.

Fix the angle V to the sides 2 and 3 using screws E. Place the angles as shown.
See details.

Knock down the dowels A into the holes indicated on the sides 2 and 3 using a small hammer.

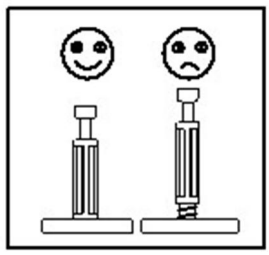

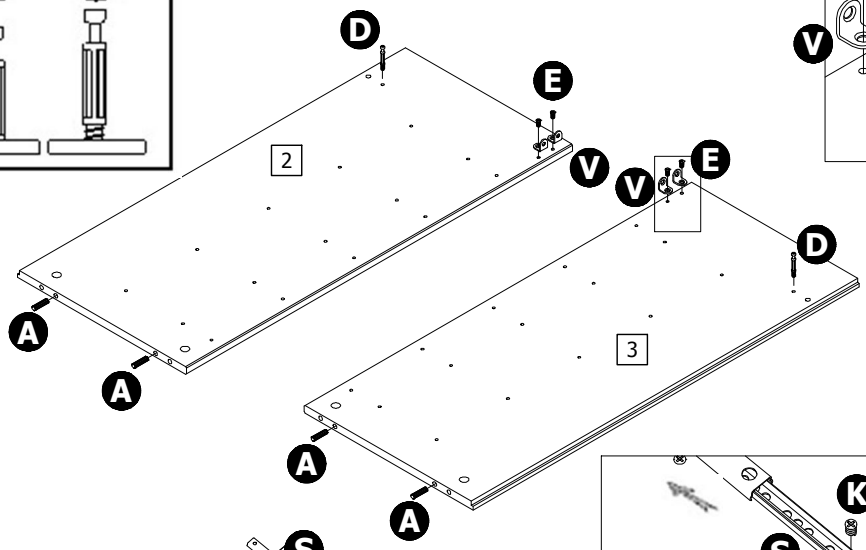


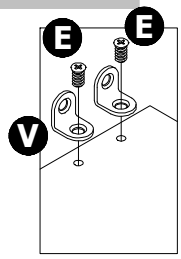



Step 12


Slide the top of the drawer runners S backwards.

Fix the front end of the drawer runners S to the sides 2 and 3 using screws K through the holes indicated.
See details.

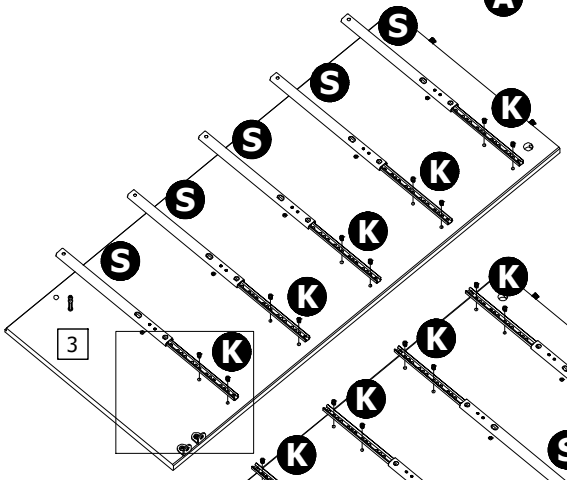

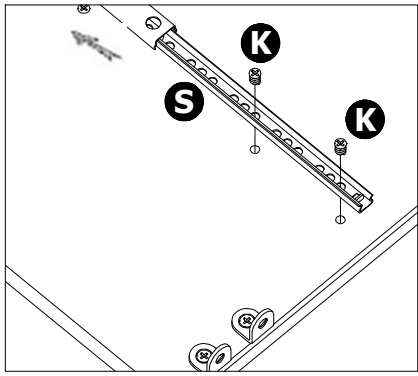

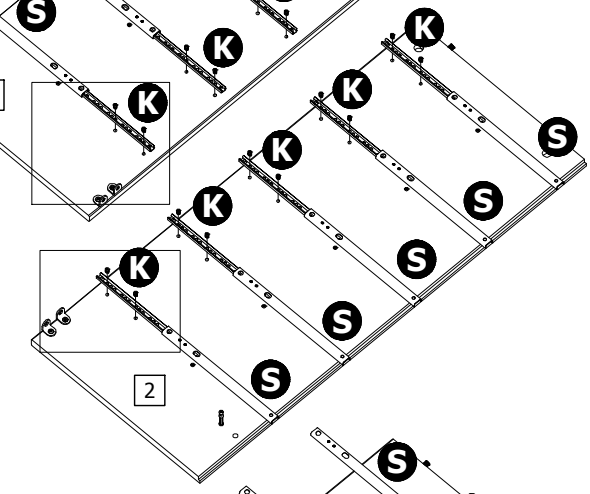


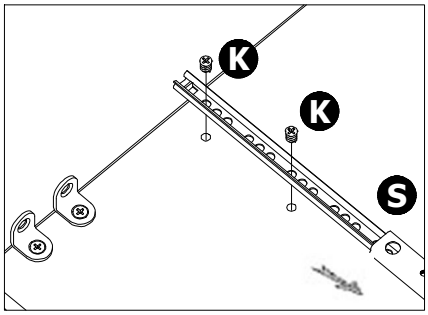



Step 13

Slide the top of the drawer runners S forwards.

Fix the backend of the drawer runners S to the sides 2 and 3 using screws K through the holes indicated.
See details.

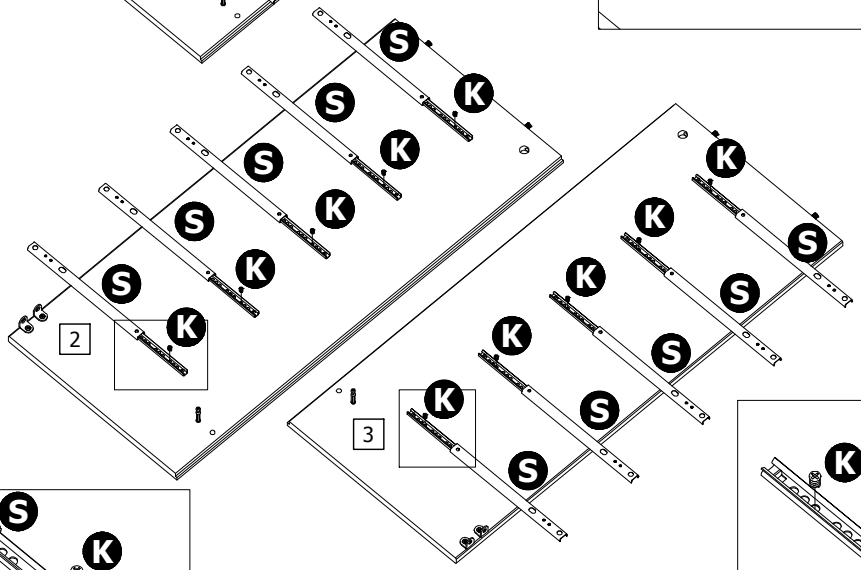

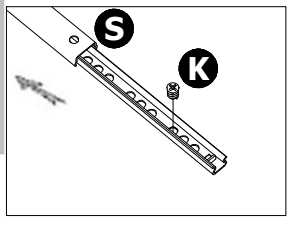

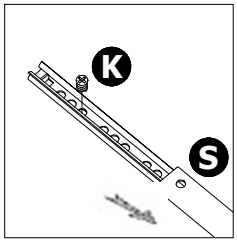


Assembly Instructions

Step 14

Fix the back plinth 4 to the sides 2 and 3.

Push cams C into the holes indicated on the back plinth 4.
Arrow pointing towards sides 2 and 3.

Turn the cams C to the right to fix the sides 2 and 3.

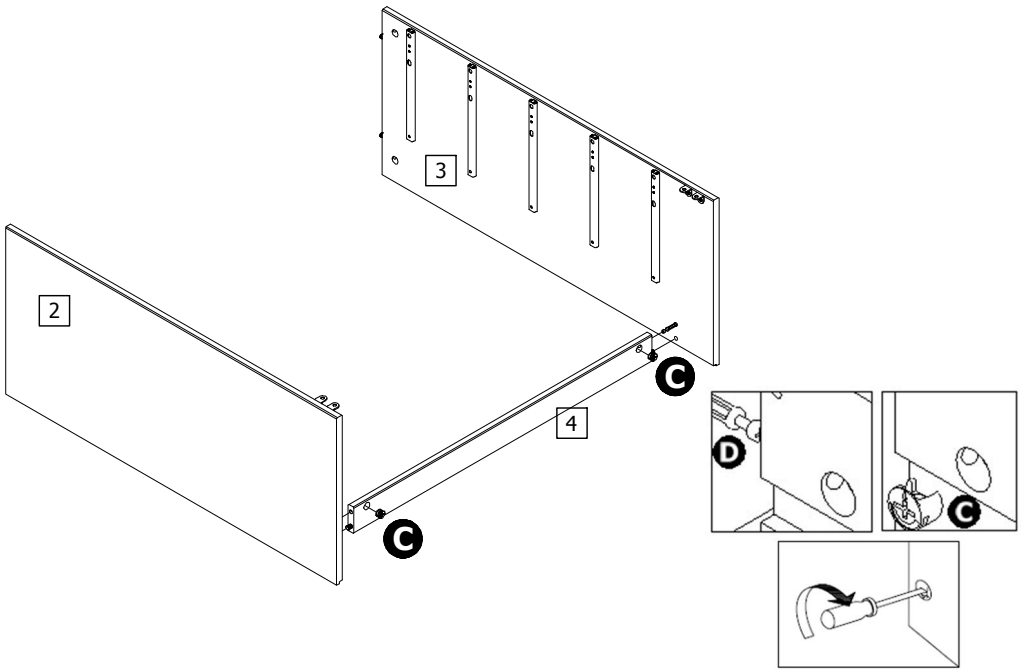


Step 15

Press the top 1 onto the sides 2 and 3.

Push cams C into the holes indicated on the sides 2 and 3.
Arrow pointing towards the top 1.

Turn the cams C to the right to fix the top 1.

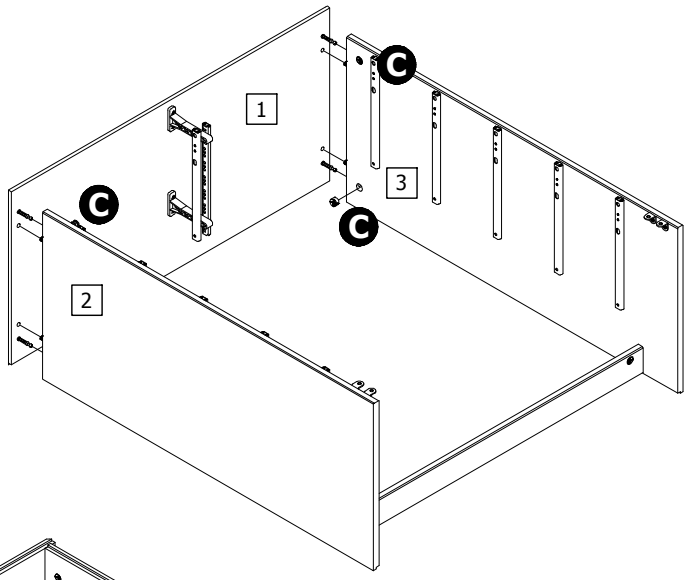



Step 16

Turn around the chest so that it lies its front edge.

Place the front plinth 5 as shown.

Fix the front plinth 5 to the sides 2 and 3 using screws E into the angles V.
See details.

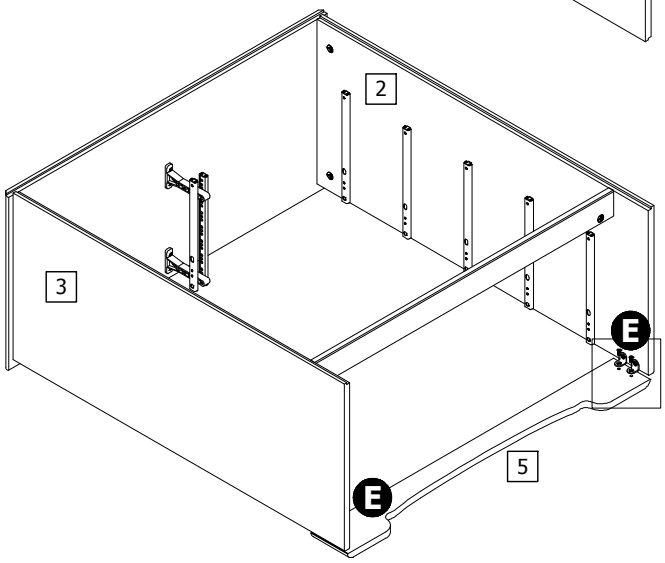

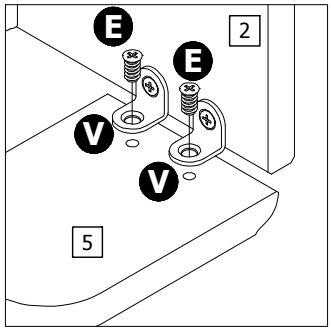

Assembly Instructions


Step 17


Place the backs 7 into the rebates in the top 1, the sides 2 and 3 and into the H profile 15.

Important! Make sure the angle between the top and the sides is 90° when the back is attached.

Fix the backs to the sides, top and bottom using nails i.

Use the nail holder Yd and a small hammer.

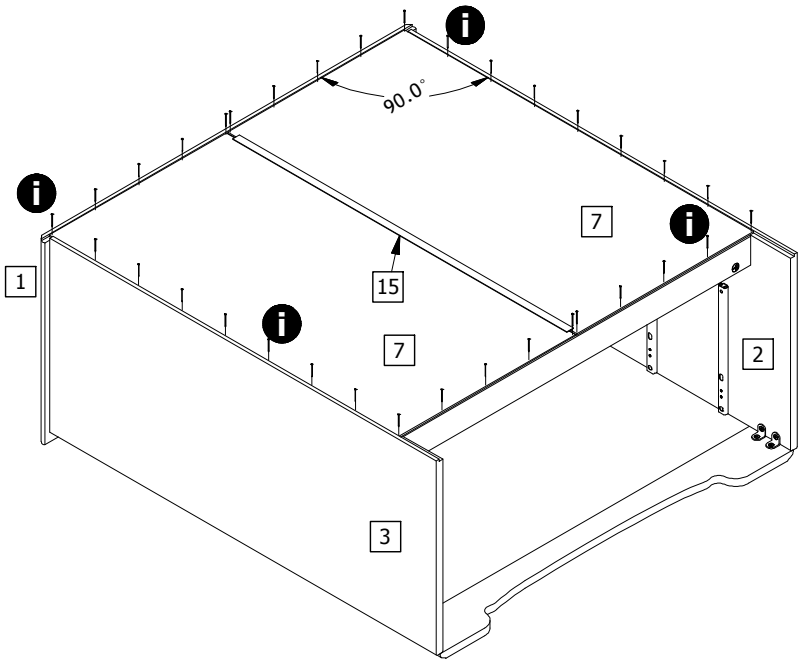

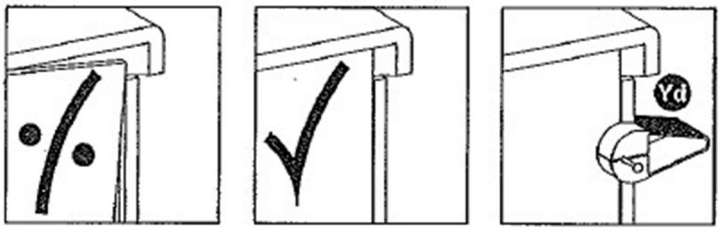


Step 18


Warning! The chest of drawer is heavy. Lift with care

It's recommended that the chest is fixed to the wall.

Use the fittings J. Follow the instructions included with the fittings.

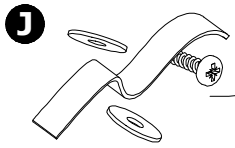

wallstrap and instruction

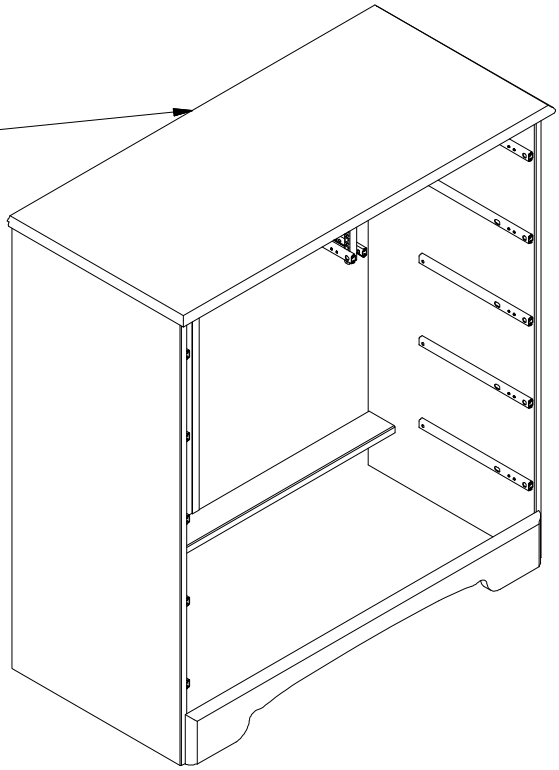


Assembly Instructions


Step 19

Pull out the drawer runners. Slide the drawers onto the drawer runners.

Fit and fix the lower drawer first and work your way up.


Fix drawers to drawer runners using screws H.

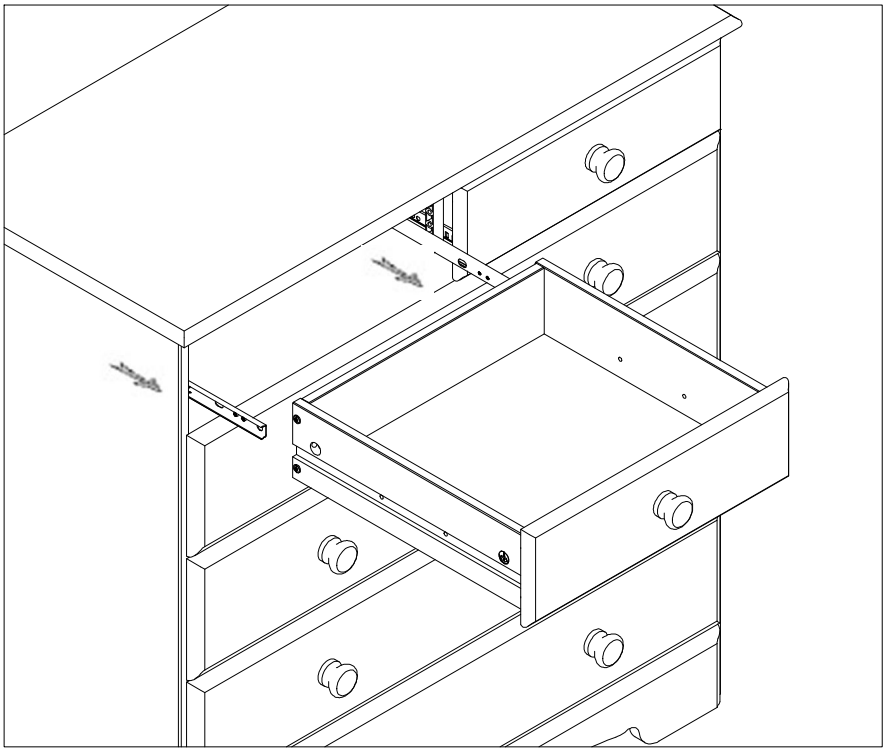

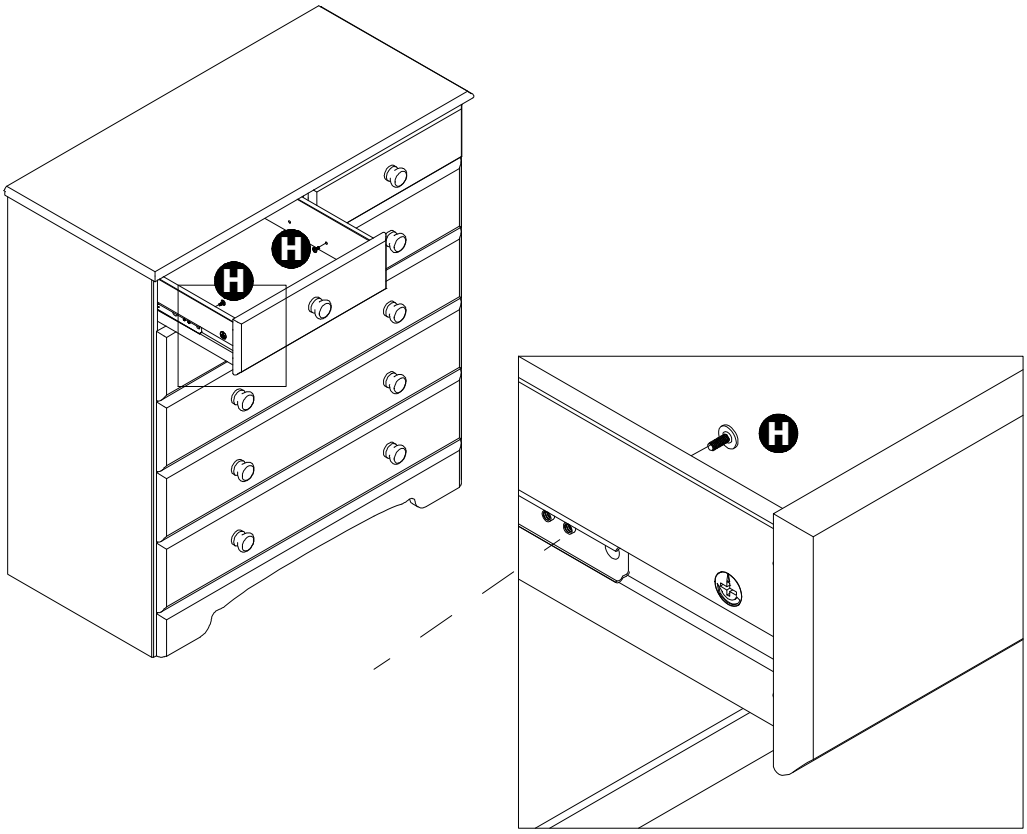

Nordic - 2 Door Wardrobe

Assembly Instructions - Please keep for future reference | **1441572**

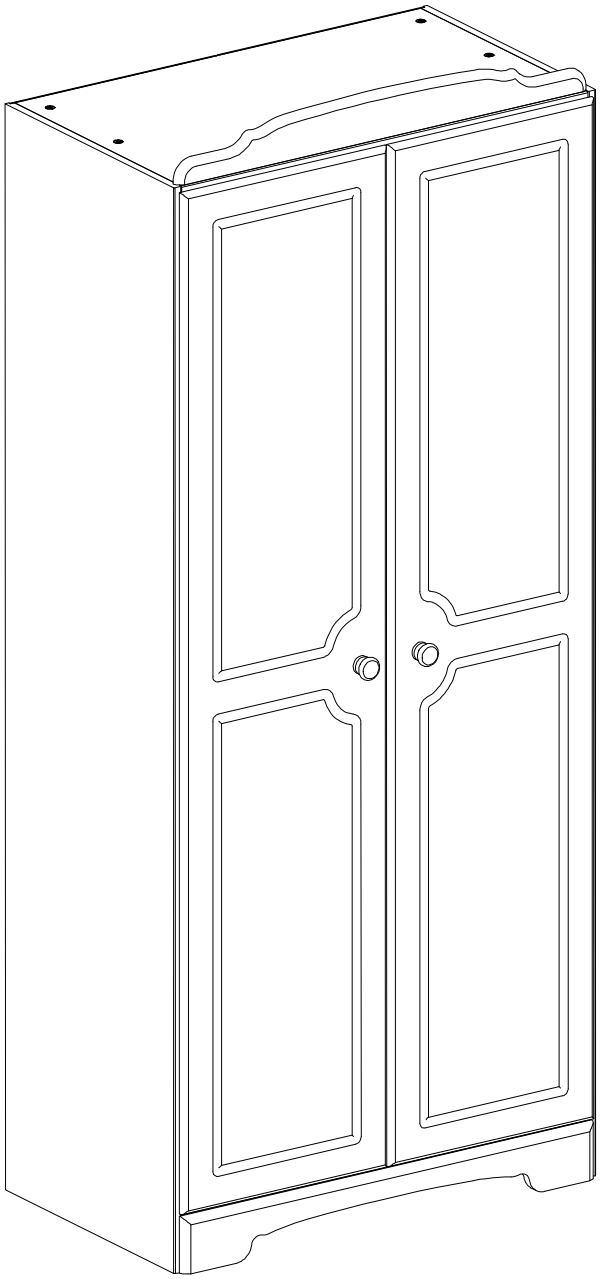

Dimensions

Width : 81.1 cm

Depth : 49,0 cm

Height : 191,3 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 30 30

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.
• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.˚

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you have damaged or missing components, call the **Argos Customer Helpline**: **0845 640 30 30**

Please check you have all the panels listed below


1 Side, Left
V155841
1833x475x15 mm

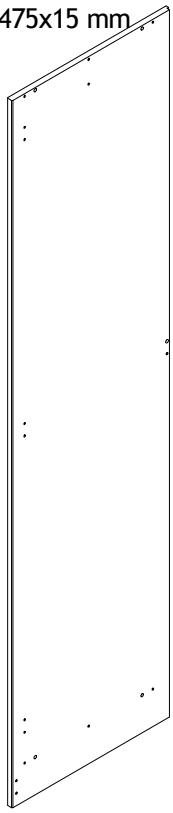


2 Side, Right
V155837
1833x475x15 mm

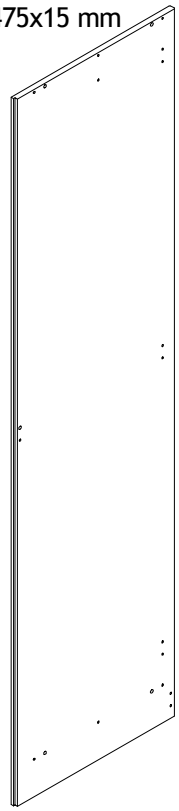


3 Top/Bottom x2
V155864
781x470x15 mm

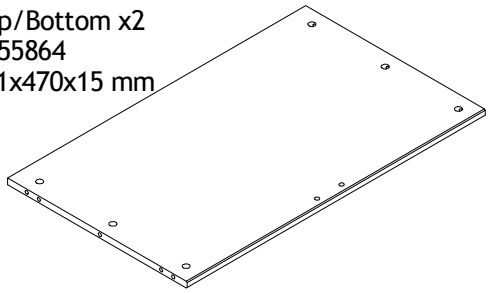


4 Plinth, back
P155866
781x60x15 mm

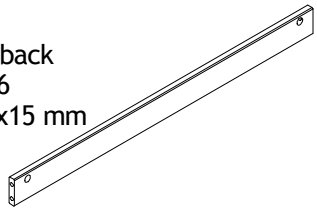


6 Top rail
V155806
792x80x15 mm

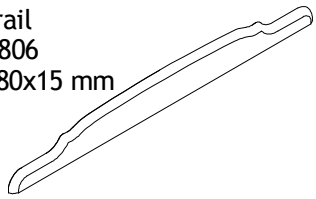


5 Plinth, front
V155803
793x96x15 mm

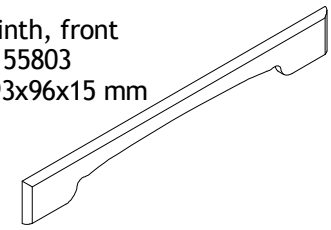


8 Door x2
V155822
1725x395x15 mm

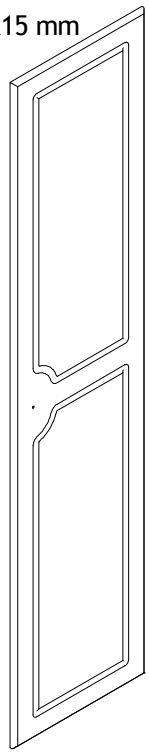


7 Back x2
NM415853
1741x397x3 mm

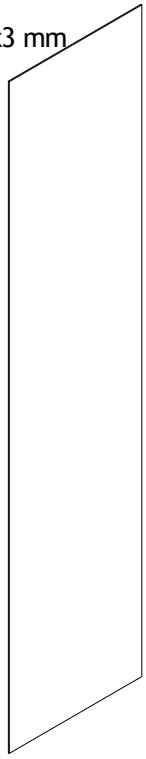


16 Door rail x4
V155827
316x25x15 mm



10 Hanging rail
L220053 - 771
771x22x15 mm

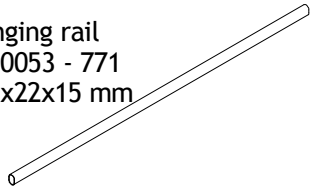

15 H-profile
B81700 - 1700
4x1700 mm

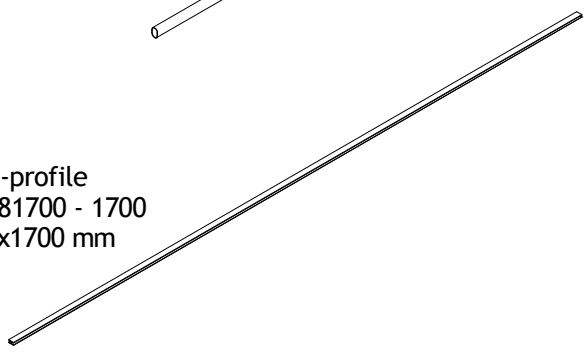


Components - Fittings

If you have damaged or missing components, call the **Argos Customer Helpline**: **0845 640 30 30**

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A



BA10390
ø8x30 mm wooden dowel x10

G




BA10468
ø40x30 mm Wooden knob x2

O



BA10130
ø4,0x35 mm screw x12

R




BA10170
ø4,0x35 mm screw x2

T



BA10050
ø3,5x15 mm screw x22

L

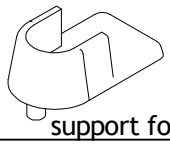


BA10731
15x22 mm support for hanger x2

C



BA10590
ø15x9,5 mm cam x14

M

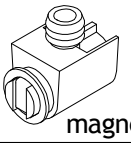


BA10715-1
ø10x8 mm magnet x4

N



BA10715-2
ø10x8 mm magnet catch x4

D




BA10603
ø5/11x34 mm bolt x14

i



BA10025
ø1,2x20 mm nail x50

J

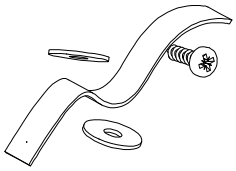

BA182002
wallstrap and instruction

V




BA10801
20x20x2 angle x4

E




BA10240
ø6,1x11,5 mm screw x8

P




BA10532
0 mm/37 mm crossplate x6

Q




BA10508
ø26 cup hinge x6

Y

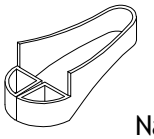

Ba10688
500x250x Nail holder x1

W




BA10815
50x50x2 mm angle x2

Tools required



Flatblade screwdriver
(Medium)




Hammer



Phillips screwdriver
(Medium & large)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Knock down the Dowels A into the holes indicated on top/bottom 3 and the back plinth 4 using a small hammer.

Press the magnets M into holes indicated.

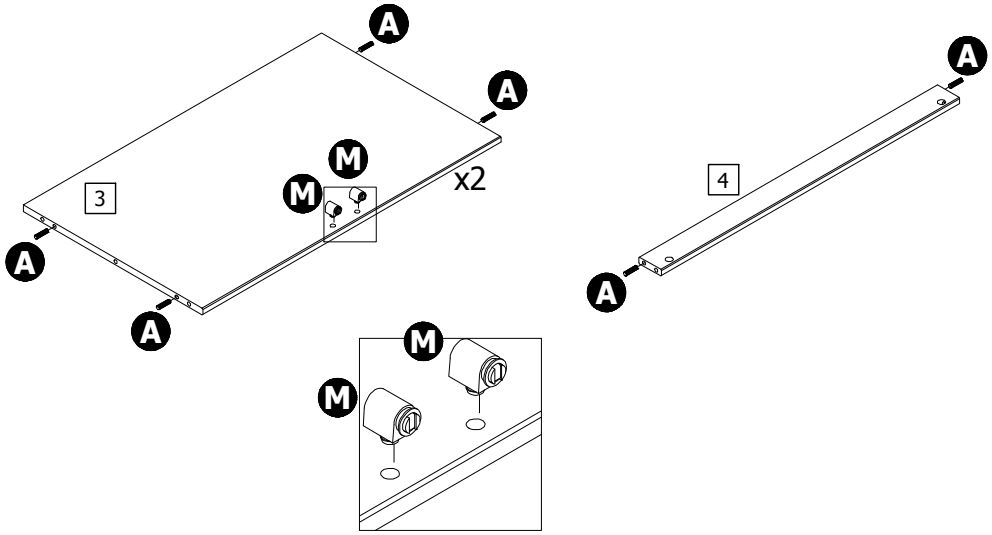


Step 2

Fix the support for hanger rail L to the sides 1 and 2 using screws T.

Fix the crossplates P to the sides 1 and 2 using the premounted screws. See details.
position the crossplate exactly as shown.

Screw the bolts D into the holes indicated.

Fix the angles V to the sides1 and 2 using screws E. Place the angles as shown.
See details.

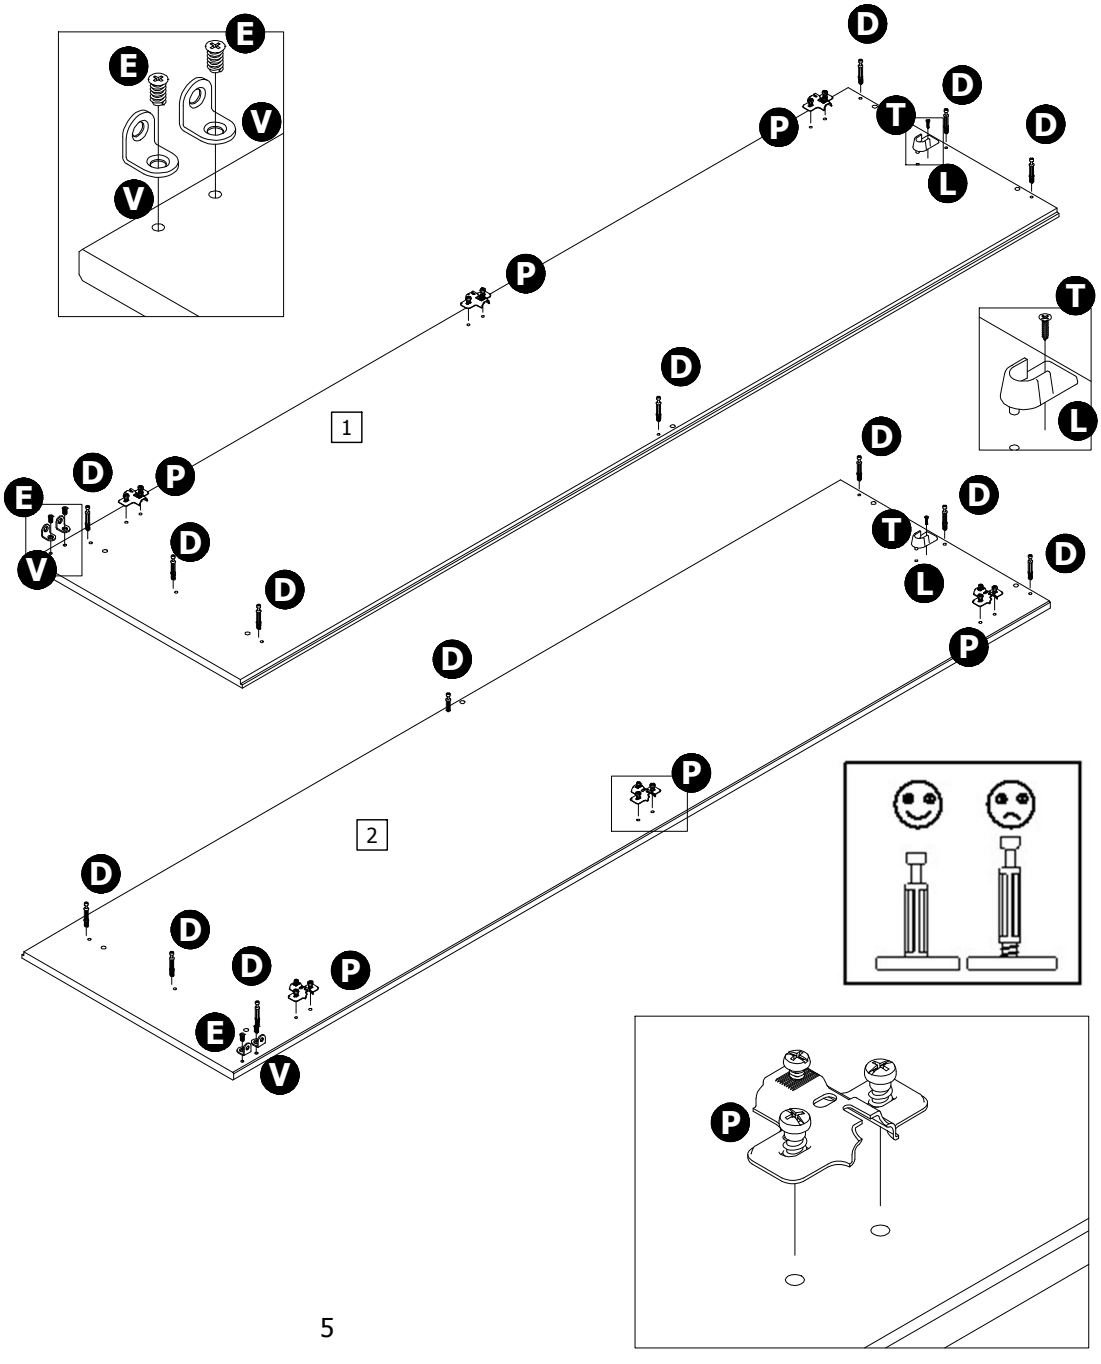


Assembly Instructions

Step 3

Place the sides 1 and 2 onto the top 3, the back plinth 4 and the bottom 3.


Push cams into holes indicated, arrows pointing towards sides.


Turn the cams C to the right to fix the top and bottom 3 and the back plinth 4.
See details.

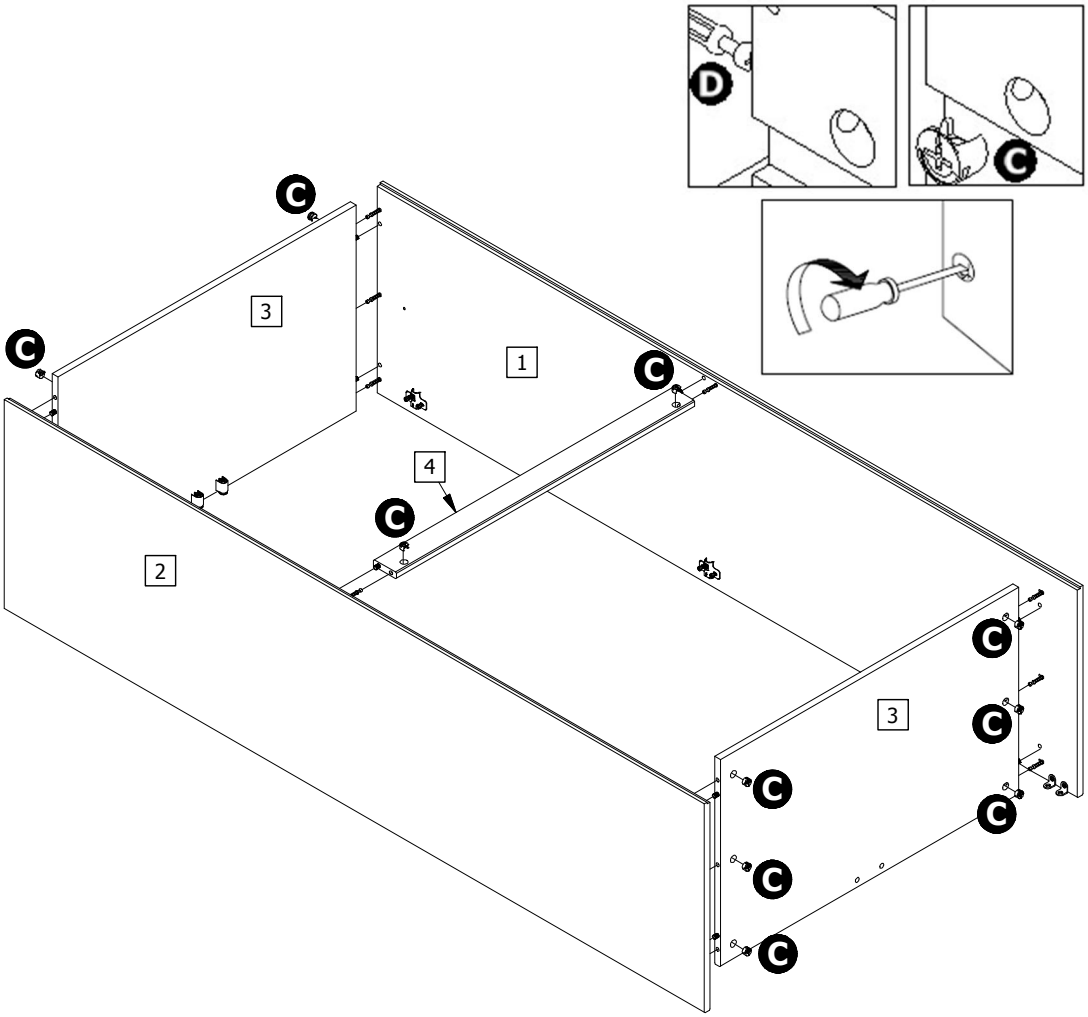

Step 4

Fix the front plinth 5 onto the angles V using screws E.

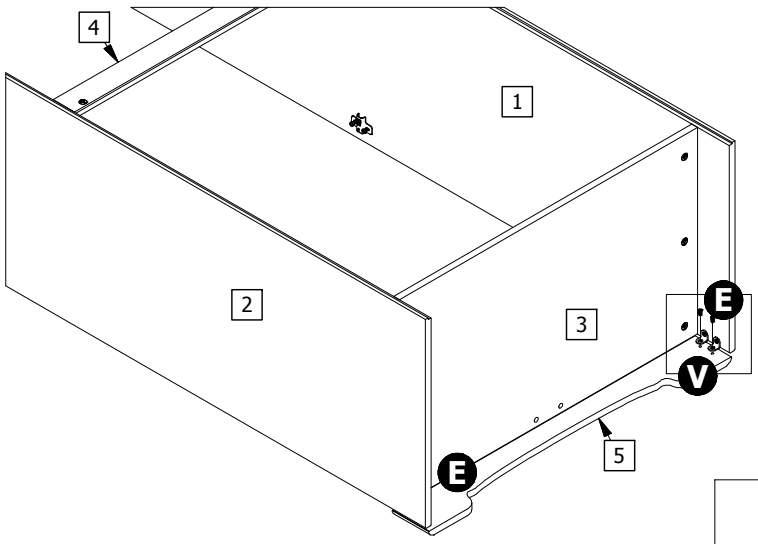

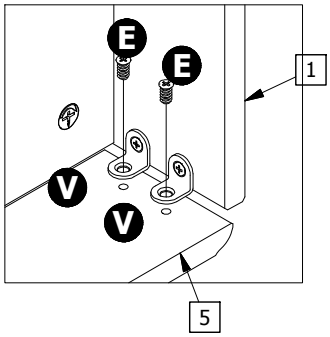

Assembly Instructions


Step 5


Place the backs 7 into rebates in the sides 1,2 and into the H-profile 15.

Important!
Make sure the angle between the top and the sides is 90° when the back is attached.

Fix the backs to the sides 1,2, the top 3 and the back plinth 4, using nails i.

Use the nail holder Yd and a small hammer.

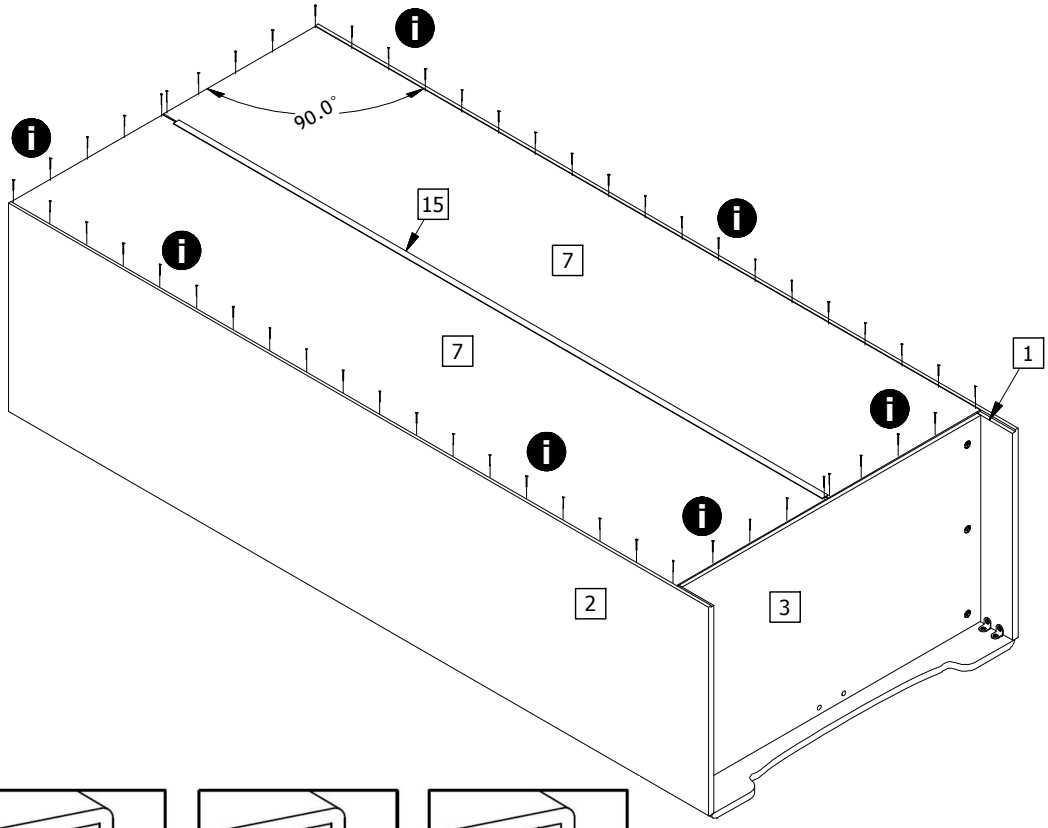

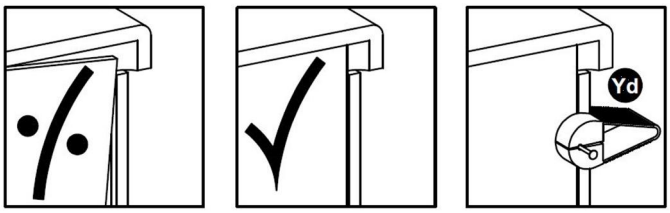


Step 6

Place the cup hinges Q into the holes indicated on the doors 8.


Fix the hinge Q using screws T.

Place the magnet catches N in the holes indicated on doors 8, using a small hammer.

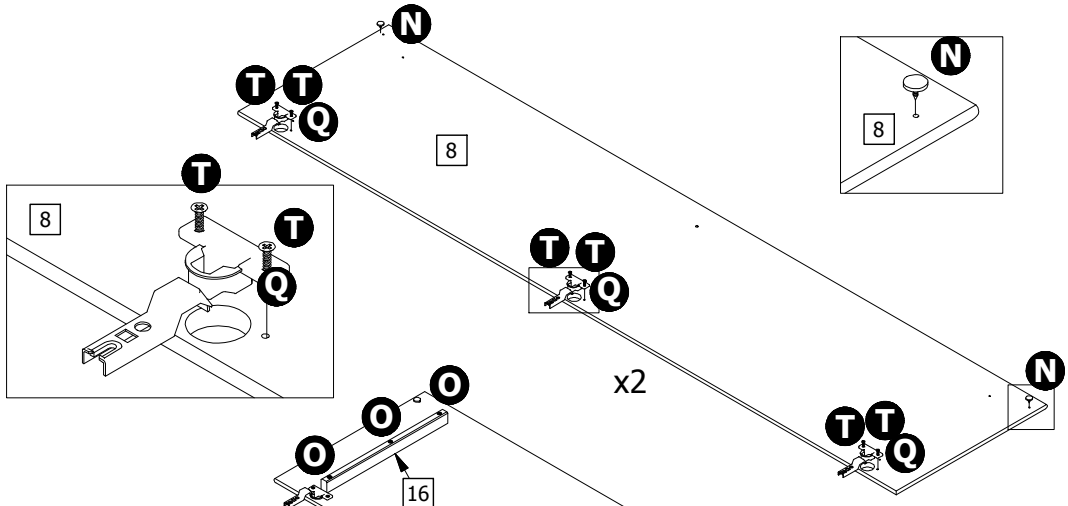

Step 7

Fix the door rails 16 to the doors 8 using screws O.

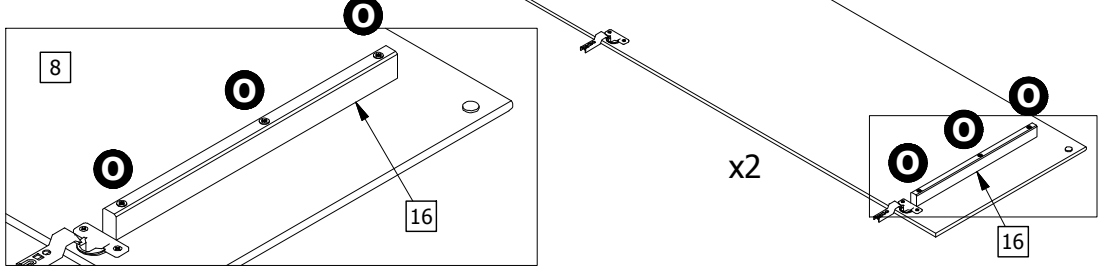



Assembly Instructions

Step 8

Place the top rail 6 onto the top 3.

Fix the top rail to the top using angles W and screws T

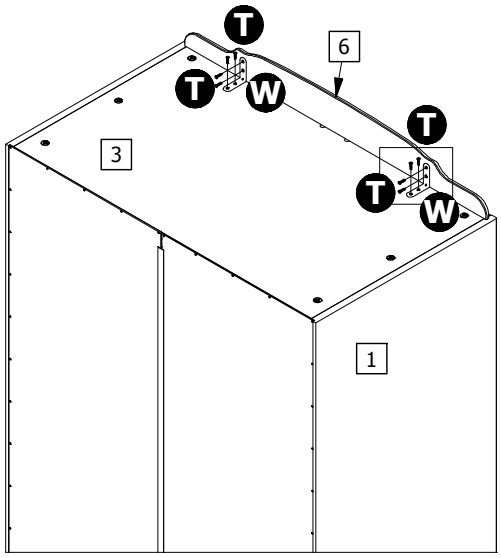

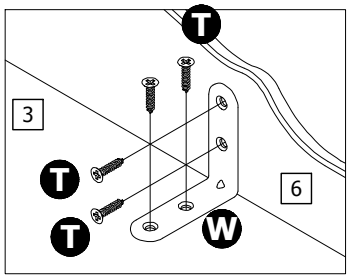



Step 9


Place the hanger rail 10 into the support L.


To fix the doors 8, slide the cup hinges Q onto the crossplates P.
Fix the hinges using the pre-mounted screw in the crossplates.
See details.


Fix the wooden knobs G to the doors using screws R.

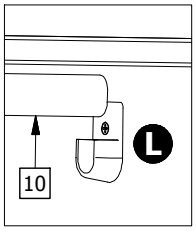


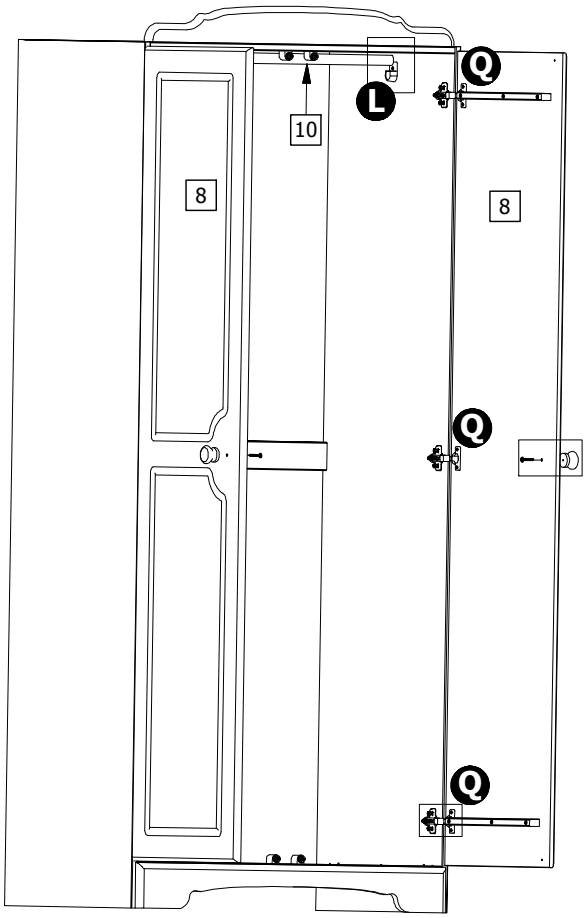


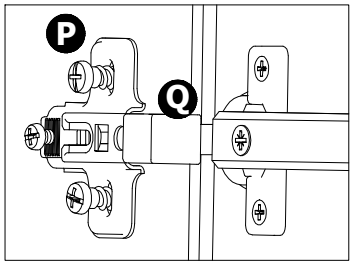

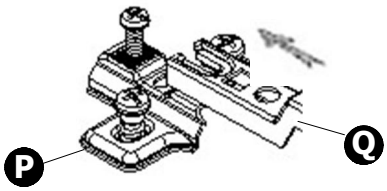

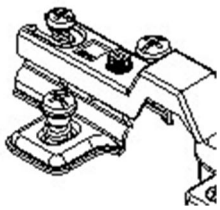

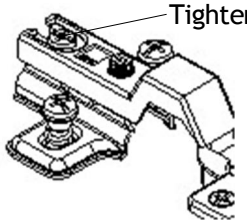

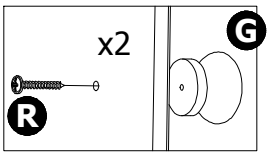

Assembly Instructions

Step 10


Warning!
The wardrobe is heavy. Lift with care.

Its recommended that the wardrobe is fixed to the wall.

Use the fittings J. Follow the instruction included with the fittings.



Wallstrap and instruction

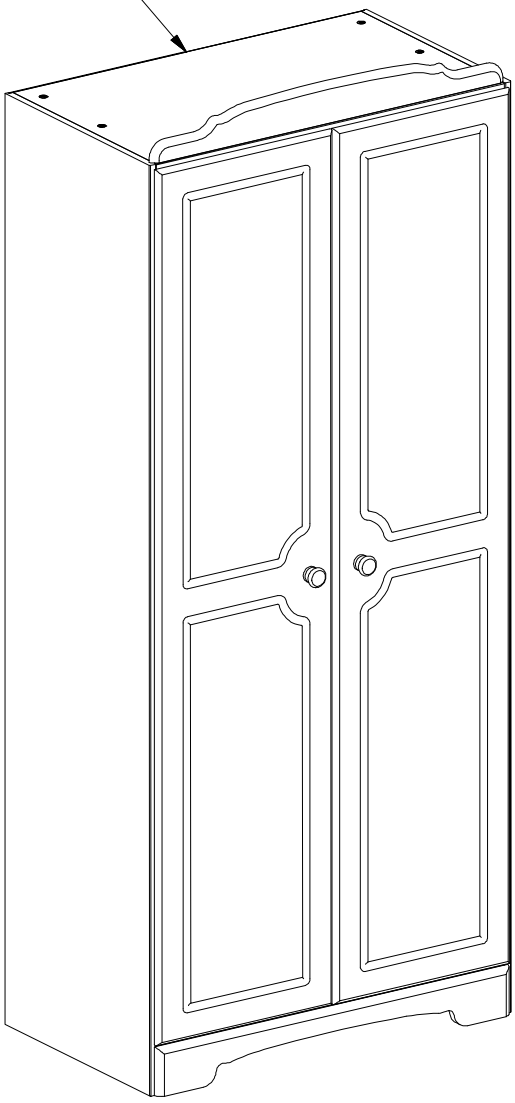

Assembly Instructions

Step 11

Adjusting the doors left/right.

a:
To adjust the door towards the left hand side - turn the adjusting screw to the right.

b:
To adjust the door towards the right hand side - turn the adjusting screw to the left.

Adjusting the doors forwards/backwards.

a:
Loosen the fixing screw.

b:
Push the cup hinge/the door forwards or backwards to adjust.

c:
Tighten the fixing screws of ALL the crossplates.

Adjusting the doors up/down.

a:
Loosen the two pre-mounted screws of each crossplates, BUT ONLY as much as it will allows the crossplates to move up and down.

b:
Push the door up or down to adjust.

c:
Tighten the pre-mounted screws of ALL crossplates.

