
Oxford - Extendable Dining Table

Assembly Instructions - Please keep for future reference

603/0438

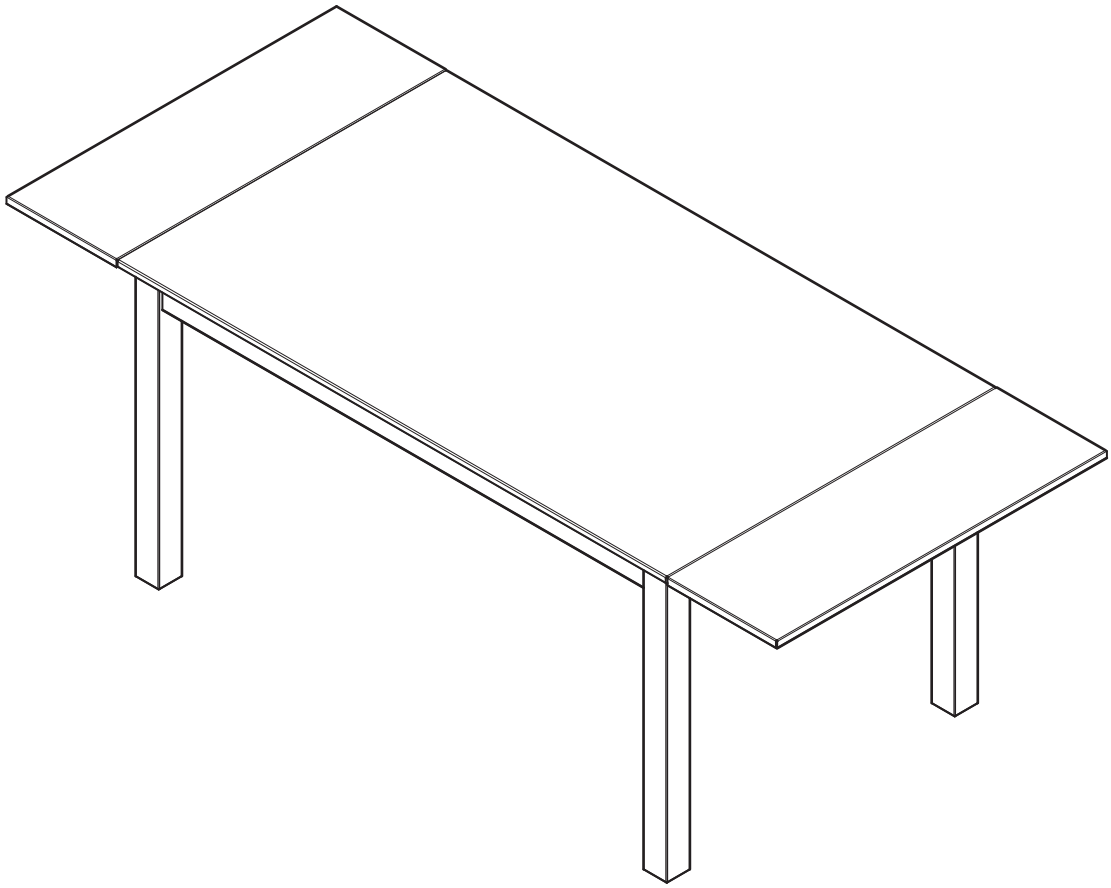

Dimensions

Length - 210cm

Width - 90cm

Height - 75cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**

Issue 1 - 9/12/09

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance


• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels


Please check you have all the panels listed below

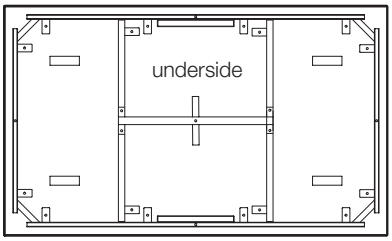

1 Top (150 x 90cm)



2 Leg x 4 (73 x 6.5cm)

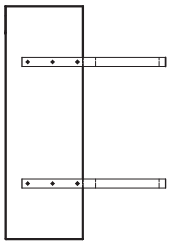

3 Extension panel x 2 (90 x 61.8cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A  80mm Bolt x 8	B  60mm Assembly bolt x 4	C  13mm Nut x 8
D  Washer x 8	E  Spring washer x 8	F  Spanner x 1
G  Cover block x 4		

Tools required



Ruler/tape measure

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Fitting bolts

Insert assembly bolt B into leg 2, screw bolts A into assembly bolt B.

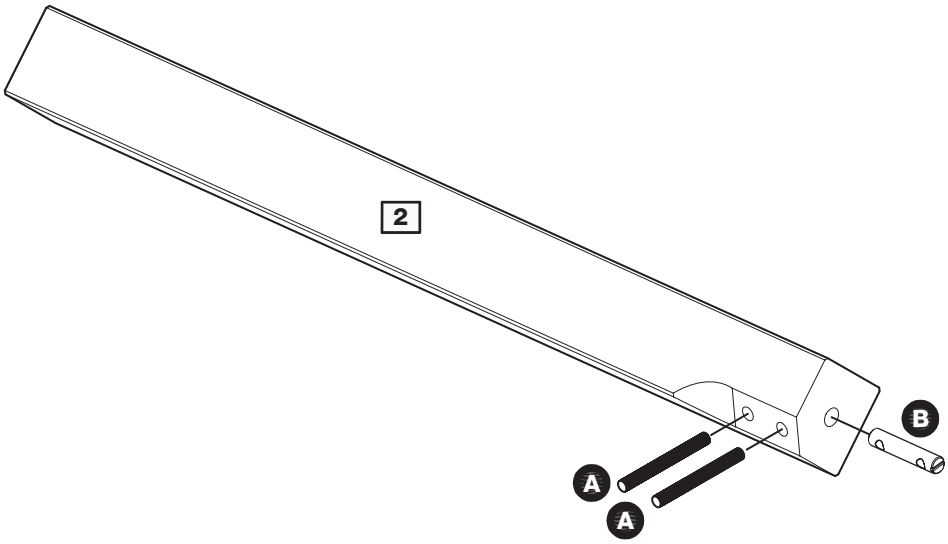


Repeat with remaining legs 2.

Step 2

Attaching legs

Attach four legs 2 to top 1 using washer D, nut C, and spring washer E. Tighten the bolts with spanner F.

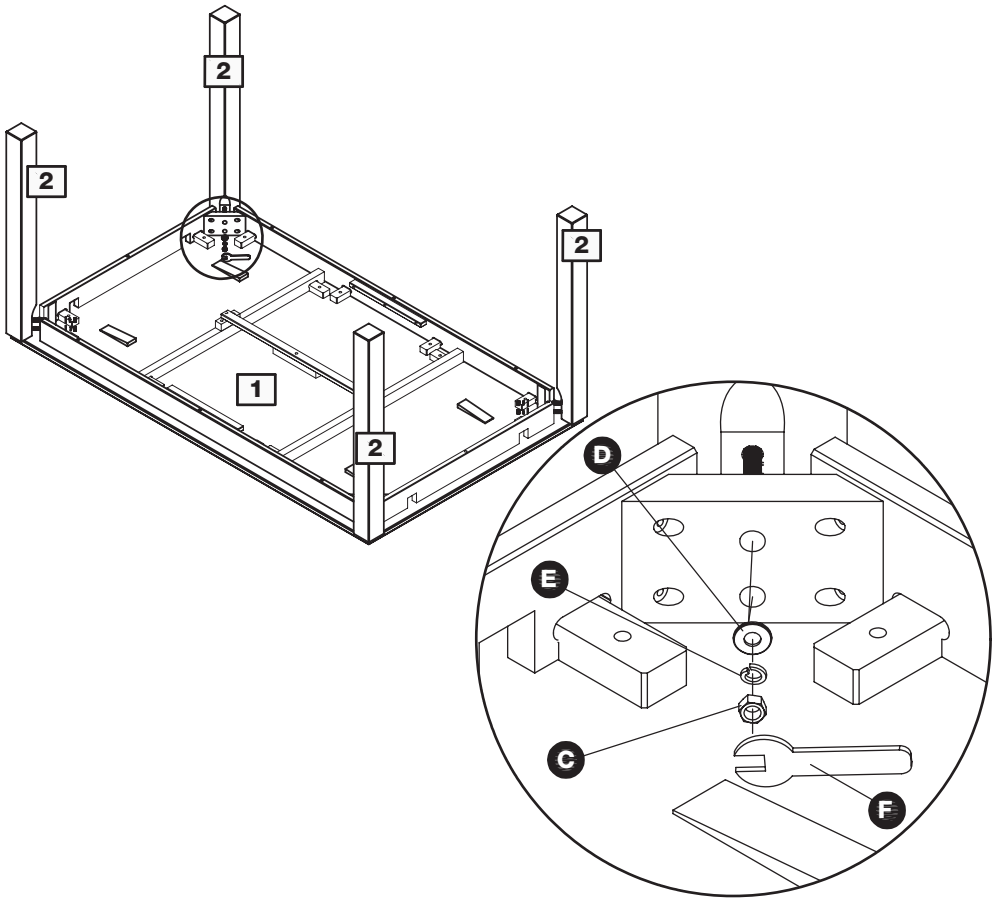


Assembly Instructions

Step 3

Attaching extension panels

a: Insert extension panel 3 into the holes of short rail(x2).

Make sure the rails of extension panels 3 are held securely by the wedge under the table.

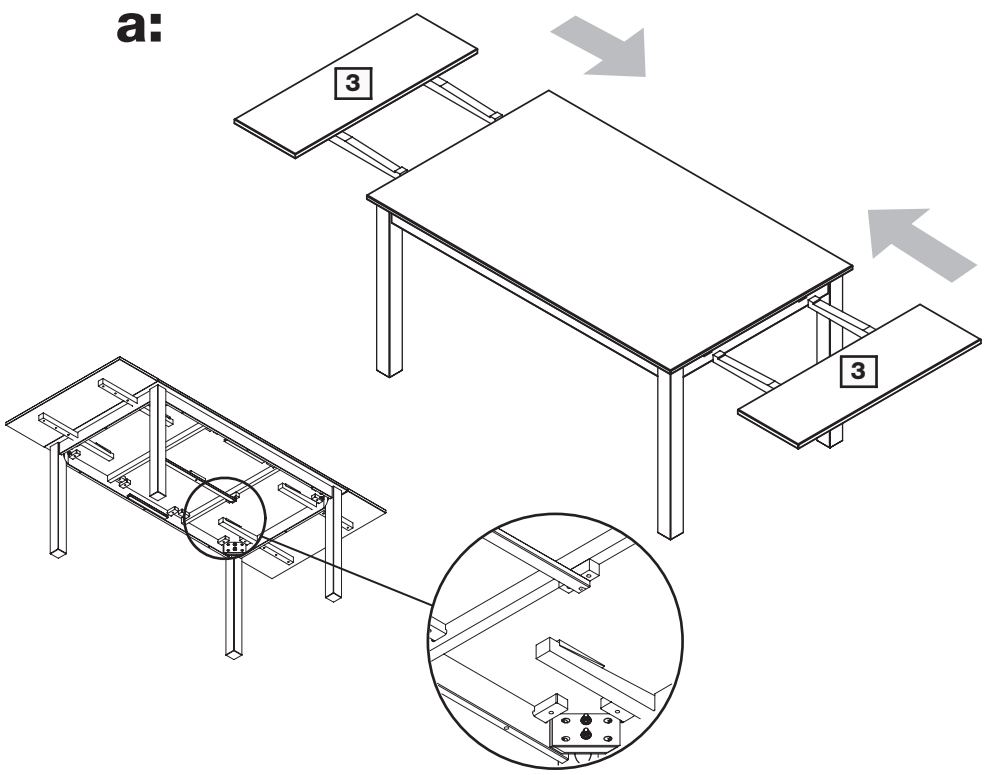


Attaching extension panels

b: To shorten the table, remove extension panels 3 from the sides. Turn them over, and insert them under the top 1, one on each side.

Turn the wood block between the extension panels under the table to hold them in place.

Fill in the holes of short rail with cover blocks(x4) G.

Assembly is complete.

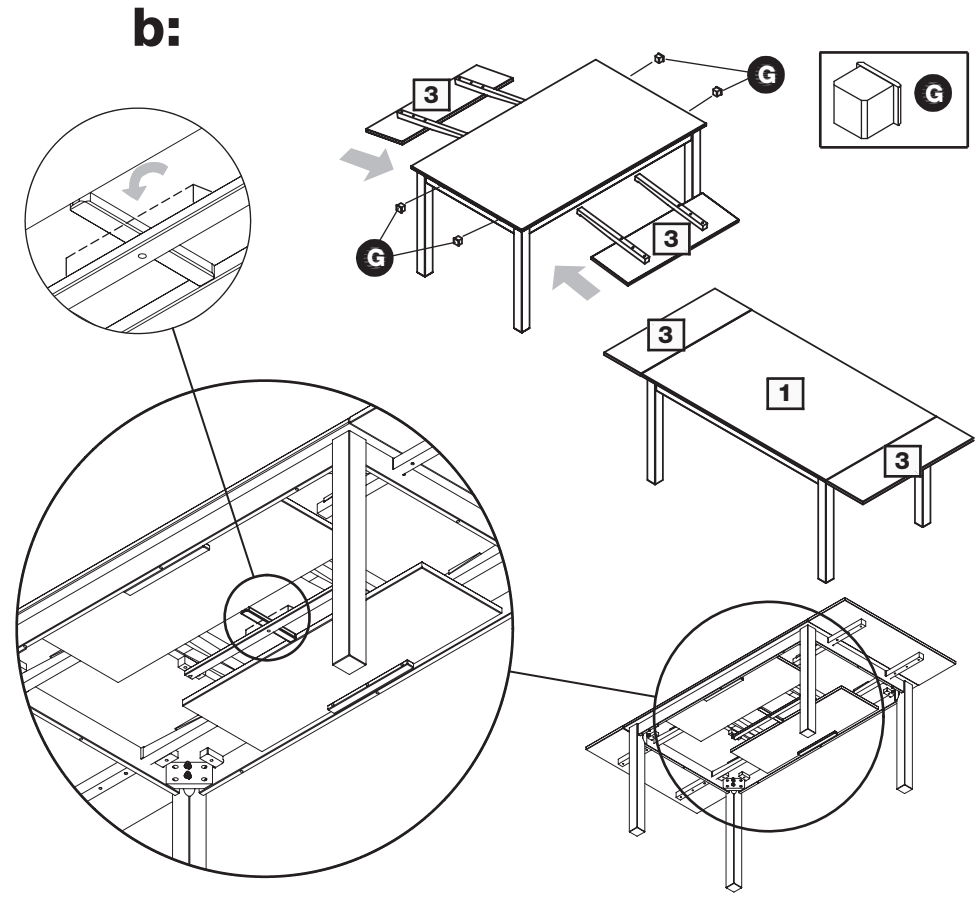


If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**
Argos Ltd MK9 2NW

Dining Chair

Assembly Instructions - Please keep for future reference

600/1584
603/2364
603/0452
600/3654
160/609
603/0830
603/2333

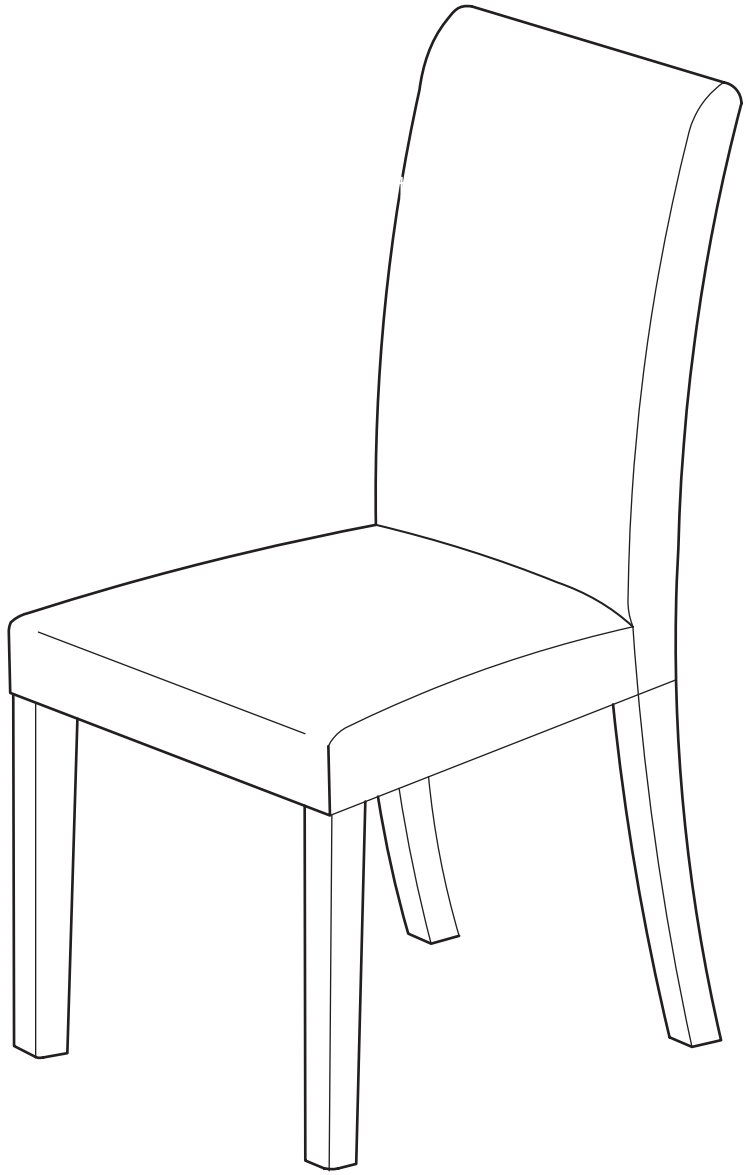

Dimensions

Width - 43.5cm

Deep - 52.5cm

Height - 92cm

Important Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**

Issue 1 - 1/03/10

afety and Care Advice

Important Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages and .

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room as possible.

• Assemble on a soft level surface to avoid damaging the unit or your oor.

• Parts of the assembly will be easier with people.



• We do not recommend the use of power drill drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.


Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

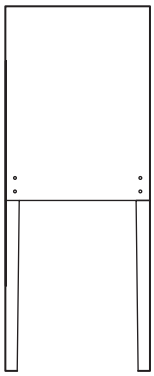


1 Back frame (36.5 x 92cm)



x cm

2 Leg x 2 (3.2 43)

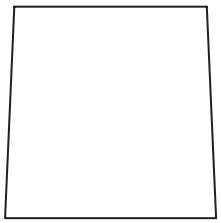


3 Box seat (43.5 x 41.5cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

Please check you have all the ttings listed below

ote: The quantities below are the correct amount to complete the assembly. In some cases more ttings may be supplied than are required.


A  M6x85mm Bolt x 8	B  M6x55mm Bolt x 10	C  ∅18x1mm Washer x 18
D  ∅11x1.5mm Spring washer x 16	E  4mm Hex Key x 1	

Tools required



Ruler/tape measure

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions


Step 1

Fitting legs

Locate the corners of the box seat opposite to the center hole.
Insert the legs 2 into the corners of the box seat 3.
Assemble bolts B, spring washers D and washers C through each corner block of the box seat 3 using hex key E.

Tighten the bolts.

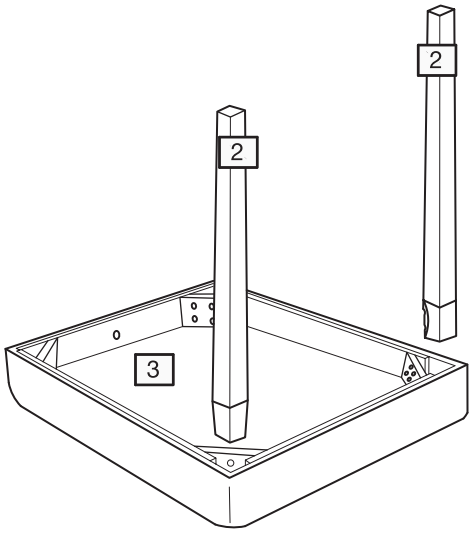

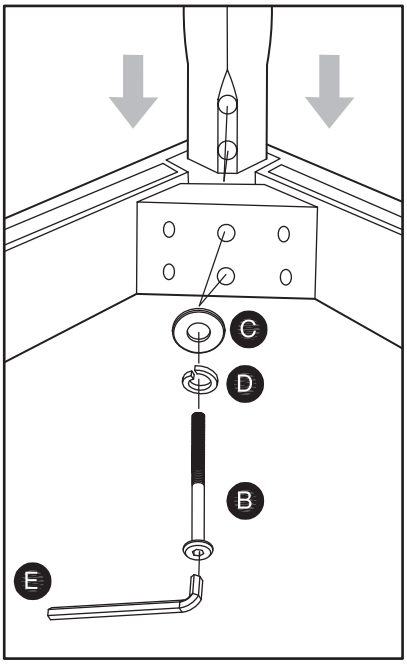



Step 2

Attaching back frame

Place the box seat 3 on the back frame 1.
Assemble the bolt B and washer C onto the back frame 1 using hex key E.

Do not tighten the bolts at this point.

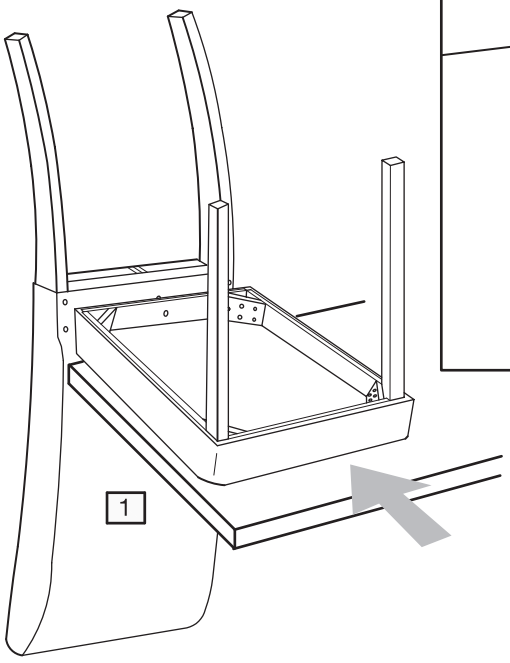

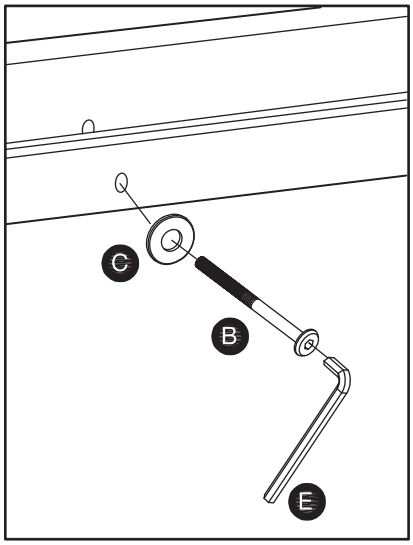


Assembly Instructions

Step 3

Fitting bolts


Assemble bolts A, spring washers D and washers C through each corner block of the box seat 3 to the back frame 1.

Do not tighten the bolts at this point in time.

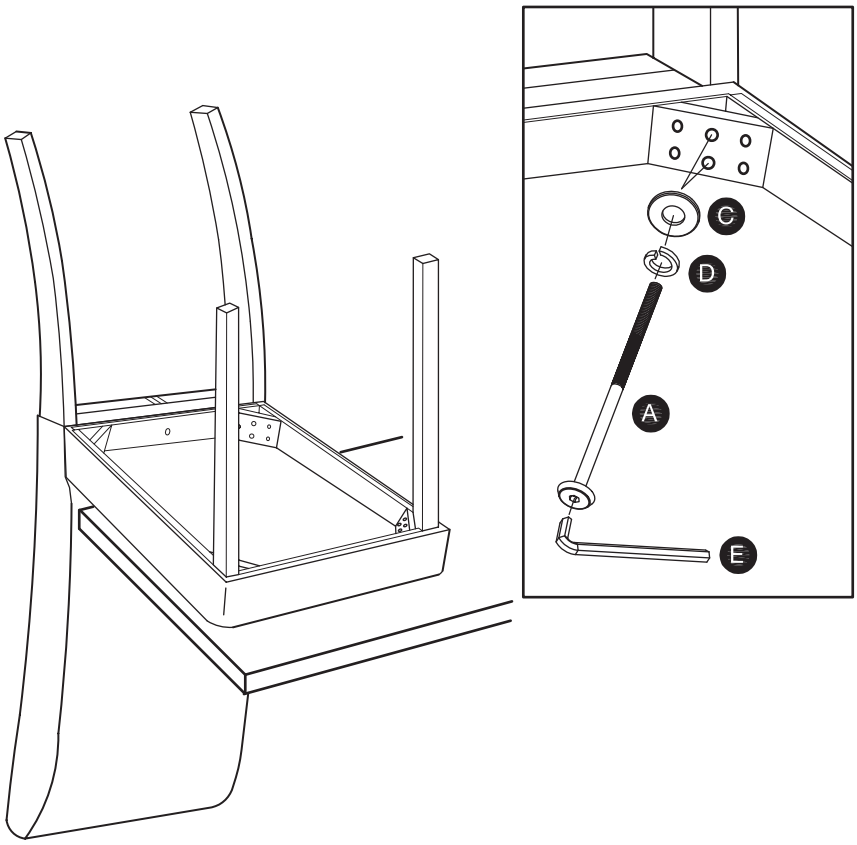

Step 4

Carefully turn the chair over, and put the chair on the oor.

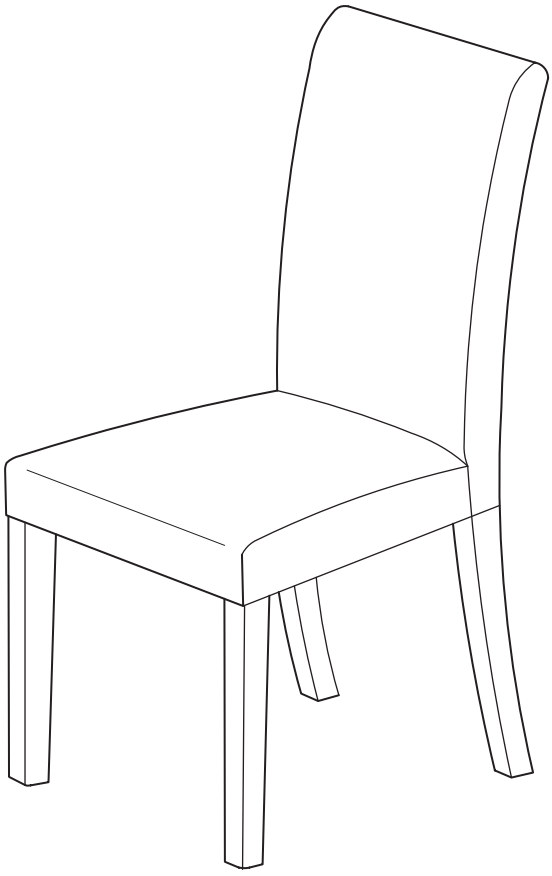

Step 5

Tighten each loose bolt a little at a time while making sure the chair remains level. Repeat until all loose bolts are tight.

Repeat with remaining chairs.