
Dining Chair

Assembly Instructions - Please keep for future reference

600/1584
603/2364
603/0452
600/3654
160/609
603/0830
603/2333

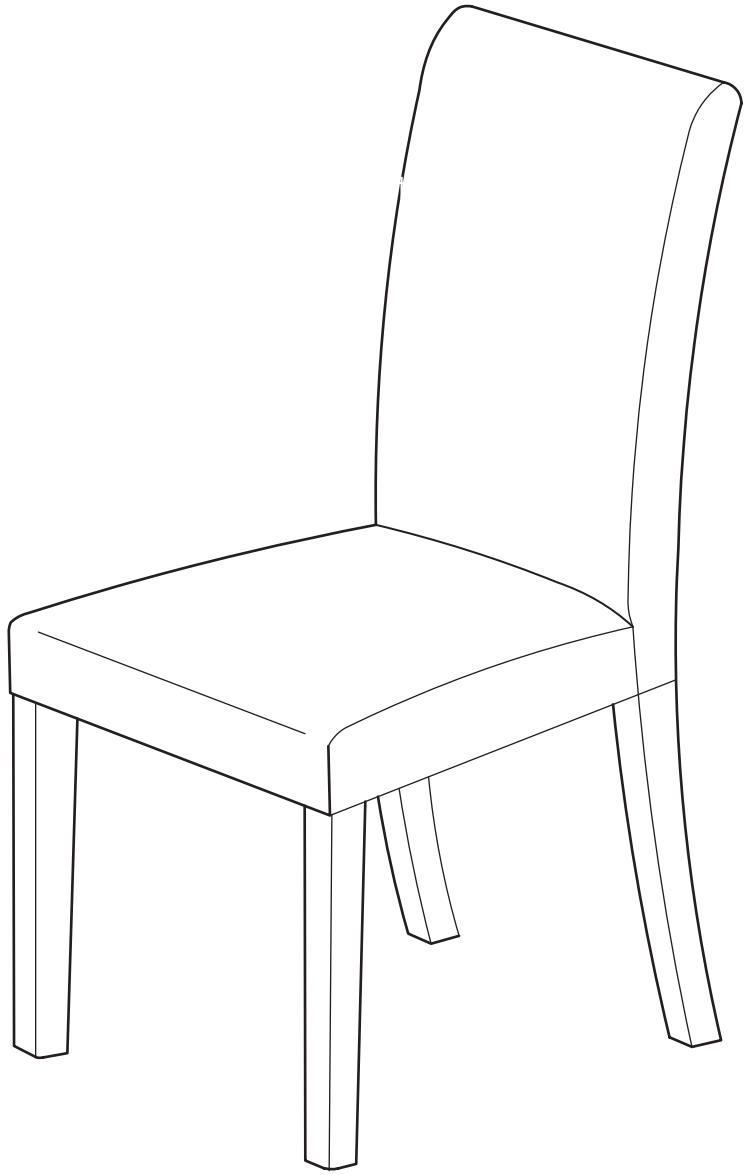

Dimensions

Width - 43.5cm

Deep - 52.5cm

Height - 92cm

Important Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**

Issue 1 - 1/03/10

afety and Care Advice

Important Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages and .

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room as possible.

• Assemble on a soft level surface to avoid damaging the unit or your oor.

• Parts of the assembly will be easier with people.



• We do not recommend the use of power drill drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.


Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

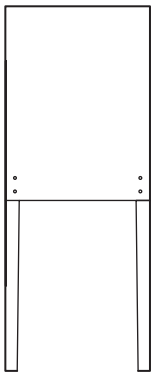


1 Back frame (36.5 x 92cm)



x cm

2 Leg x 2 (3.2 43)

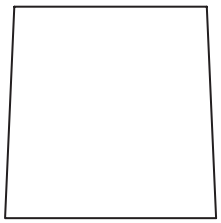


3 Box seat (43.5 x 41.5cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

Please check you have all the ttings listed below

ote: The quantities below are the correct amount to complete the assembly. In some cases more ttings may be supplied than are required.


A  M6x85mm Bolt x 8	B  M6x55mm Bolt x 10	C  ∅18x1mm Washer x 18
D  ∅11x1.5mm Spring washer x 16	E  4mm Hex Key x 1	

Tools required



Ruler/tape measure

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions


Step 1

Fitting legs

Locate the corners of the box seat opposite to the center hole.
Insert the legs 2 into the corners of the box seat 3.
Assemble bolts B, spring washers D and washers C through each corner block of the box seat 3 using hex key E.

Tighten the bolts.

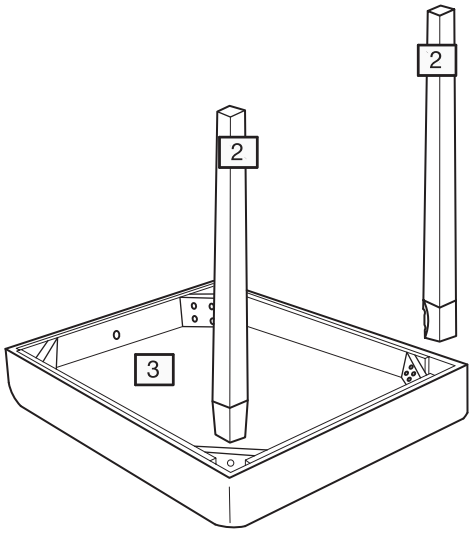

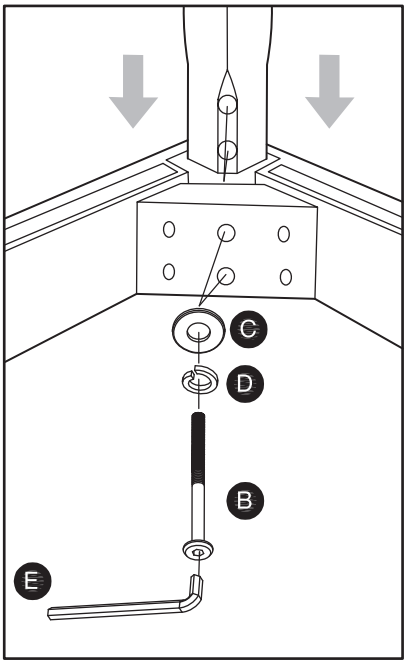



Step 2

Attaching back frame

Place the box seat 3 on the back frame 1.
Assemble the bolt B and washer C onto the back frame 1 using hex key E.

Do not tighten the bolts at this point.

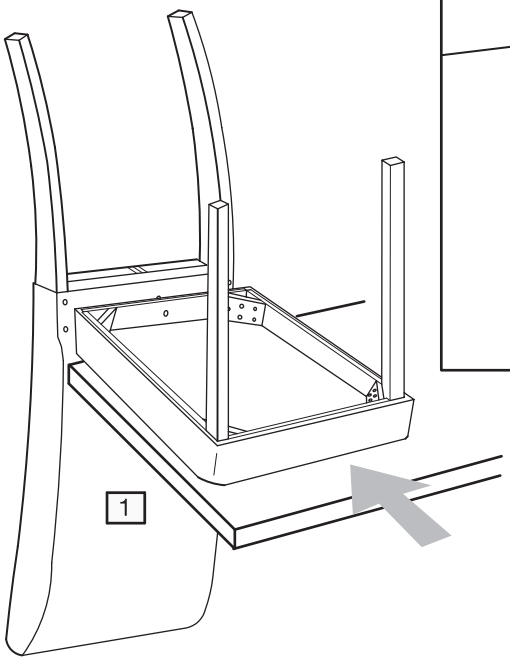

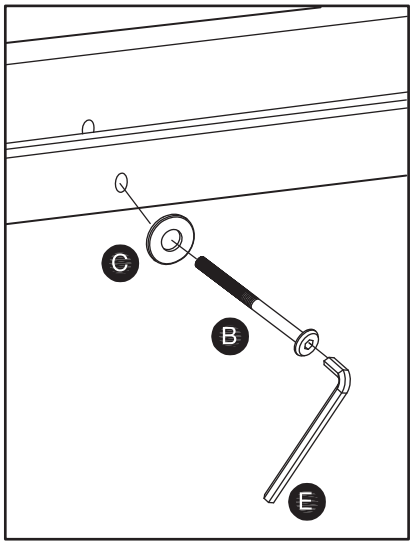


Assembly Instructions

Step 3

Fitting bolts


Assemble bolts A, spring washers D and washers C through each corner block of the box seat 3 to the back frame 1.

Do not tighten the bolts at this point in time.

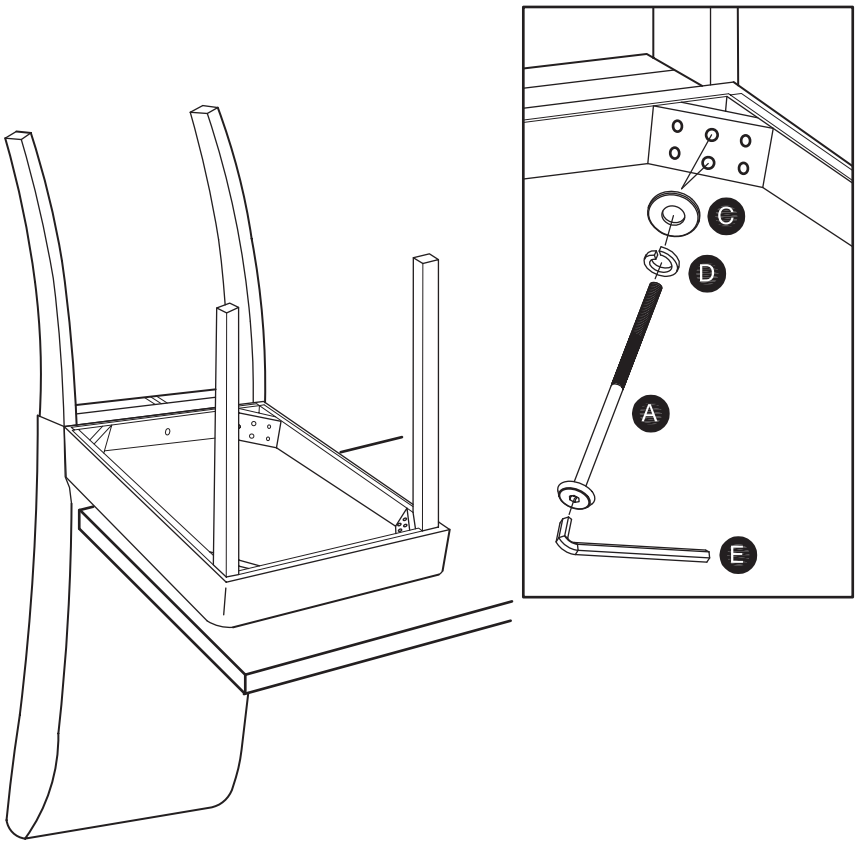

Step 4

Carefully turn the chair over, and put the chair on the oor.

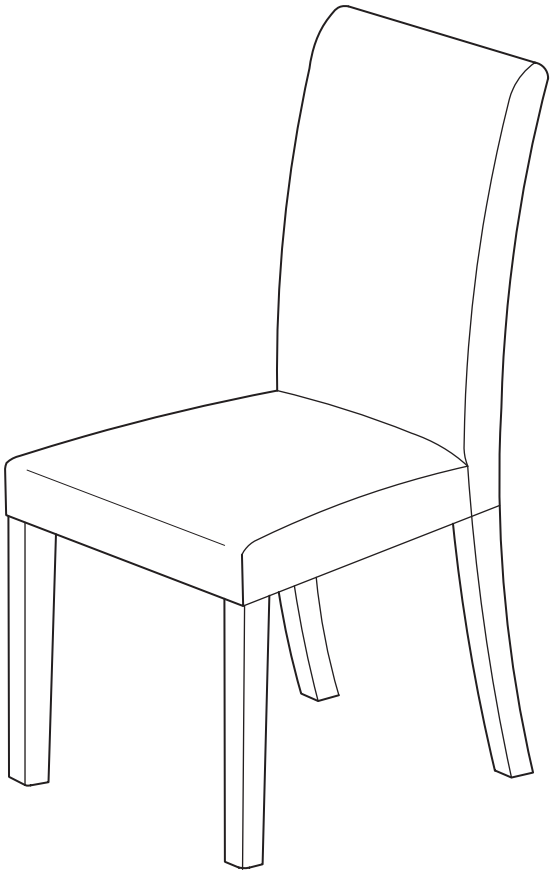

Step 5

Tighten each loose bolt a little at a time while making sure the chair remains level. Repeat until all loose bolts are tight.


Repeat with remaining chairs.

Wow Madison Table

Assembly Instructions - Please keep for future reference

633/2033

633/3362

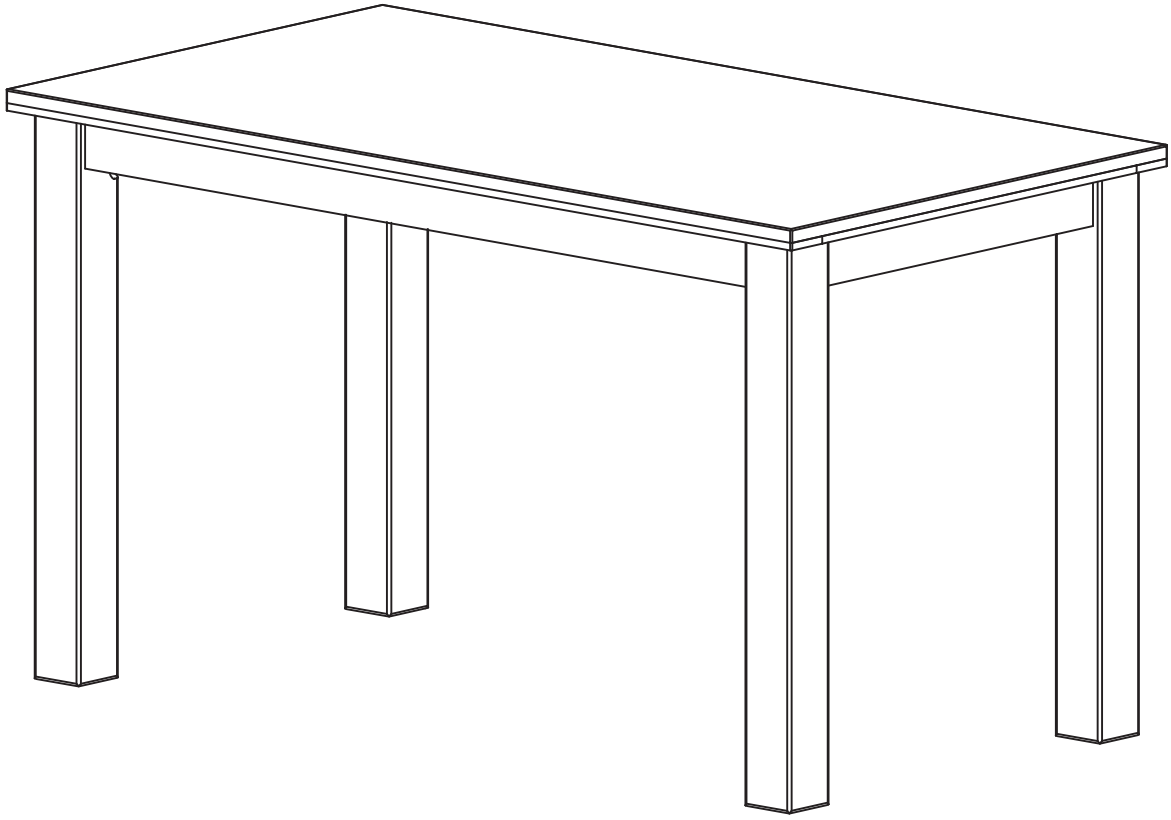

Dimensions

Length - 120cm

Width - 73cm

Height - 75cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**

Issue 1 - 12/09/12

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product during assembly, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

Please check you have all the panels listed below

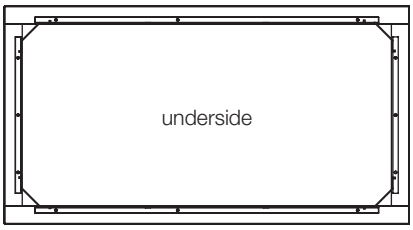

1 Top (120 x 73cm)




2 Leg x 4 (6.5 x 72.2cm)


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 	B 	C 
70mm Bolt x 8	Assembly bolt x 4	Washer x 8
D 	E 	F 
13mm Nut x 8	Spring washer x 8	13mm Spanner x 1

Tools required




Phillips screwdriver (medium)



Ruler/tape measure

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions


Step 1


Fitting bolts

Insert assembly bolt B into leg 2. Screw bolts A into assembly bolt B.

Repeat with remaining legs 2.

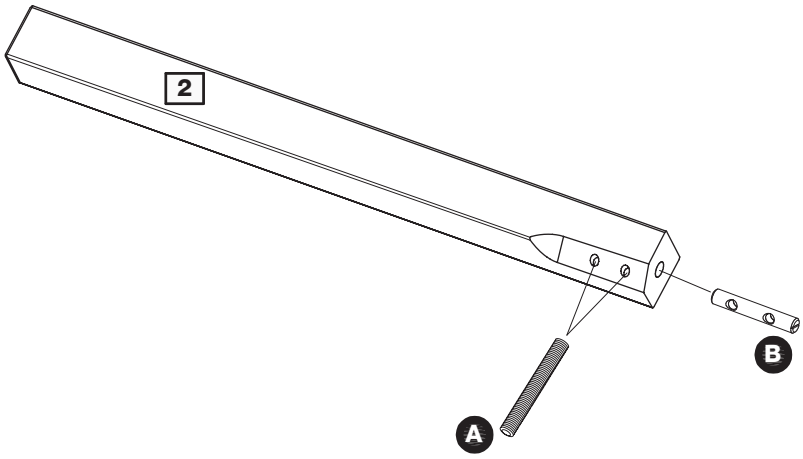

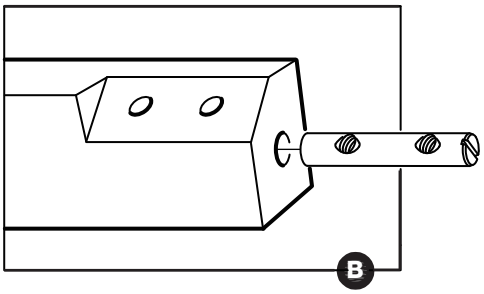


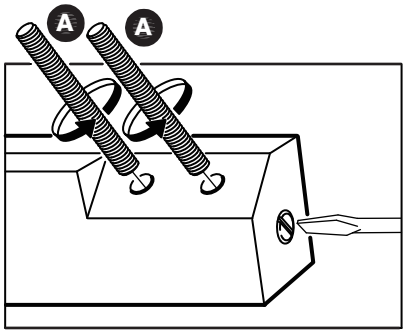

Step 2

Attaching legs

Attach the four pieces of legs 2 to top 1 using washer C, spring washer E and nut D.
Tighten the bolts with spanner F.

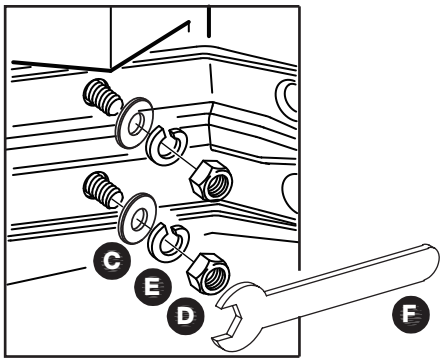

With help, turn the table over carefully.

Assembly is complete.

