
HOH Ellingham - bookcase

Assembly Instruction - Please keep for future reference 214/4902

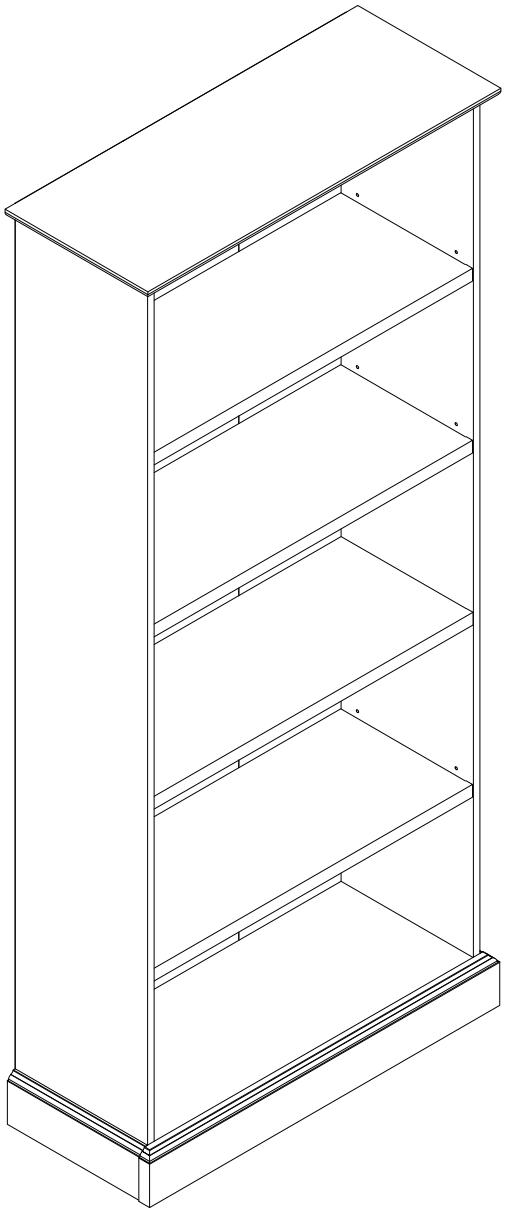

Dimensions

Length - 80cm
Width - 32.5cm
Height - 180cm

Important - Please read these instruction fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0845 6400800

Issue 1 - 04/15/2014

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

•Remove all fittings from the plastic bags and separate them into their groups.

•Keep children and animals away from the work area, small parts could choke if swallowed.

•Make sure you have enough space to layout the parts before starting.

•Retain these instructions for future reference

•Do not stand or put weight on the product during assembly, this could cause damage.

•Assemble the item as close to its final position (in the same room) as possible.

•Assemble on a soft level surface to avoid damaging the unit or your floor.

•Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

•Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

•From time to time check that there are no loose screws on this unit.

•This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


• Regularly check and ensure that all bolts and fittings are tightened properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0845 6400800**


Please check you have all the panels listed below

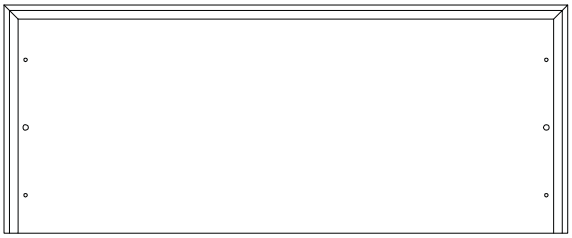


1 Top panel (80x32.4cm)

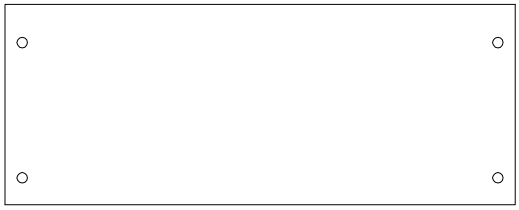


4 Fixed shelf panel (72.4x29.9cm)

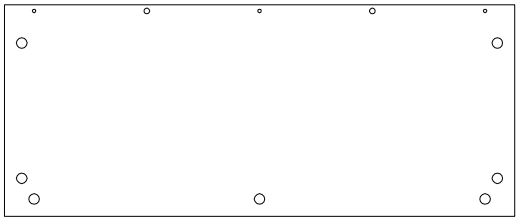


5 Bottom panel (72.4x30cm)




6 Adjustable shelf panel x3 (72.2x29.9cm)

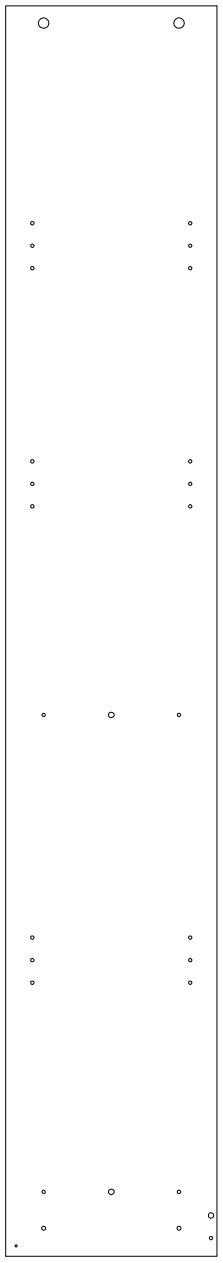


2 Left side panel (177.5x30cm)

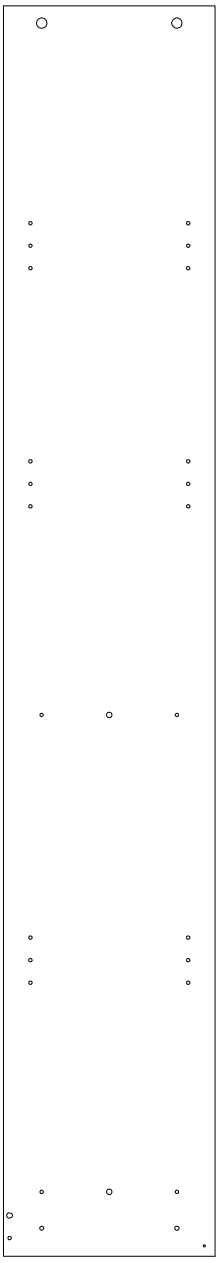


3 Right side panel (177.5x30cm)



7 Front base board (79.4x10cm)



8 Back base board (72.4x8.4cm)




9 Side base board x 2 (30x10cm)

Components - Panels

If you have damaged or missing components, call the
Customer Helpline: Argos = 0845 6400800

Please check you have all the panels listed below





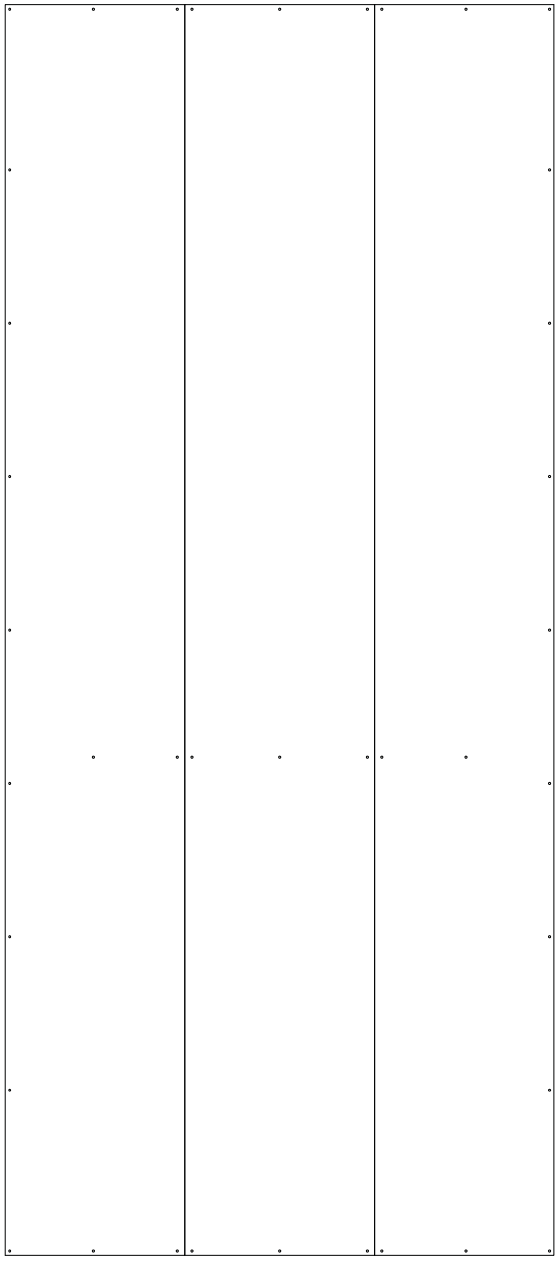


10 Back panel
(171.2x75.1cm)

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A  Ø7x33mm Connecting bolt x 20	B  Ø15x12mm Locking cam x 20	C  Ø8x30mm Wooden dowel x 12
D  Ø8x20mm Short wooden dowel x 2	E  Ø4x28mm Screw x 6	F  Ø3.5x12mm Screw x 4
G  Ø3x19mm Screw x 39	H  Shelf pin x 12	I  Plastic bracket x 2
J  Ø20mm Felt feet x 4	K  Ø16x3mm Cap x 8	L  Ø6x29mm Wall plug (for solid wall only) x 2
M  Wall strap x 2	N  Ø5x12mm Screw x 2	

Tools required


Phillips screwdriver (medium & large)



Flatblade screwdriver (medium)

7mm Suitable drill bit (for use with wall plug)

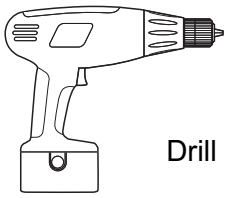

Drill



Small hammer


Ruler/tape measure

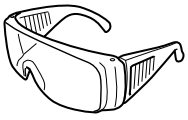
Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws





The screws length is measured from the head to the point (30mm screw shown).

Assembly Instructions


Step 1

Attaching panels
Insert short wooden dowel Ⓓ into side base board 9 .
Attach side base board 9 onto Left side panel 2 with screws Ⓔ.

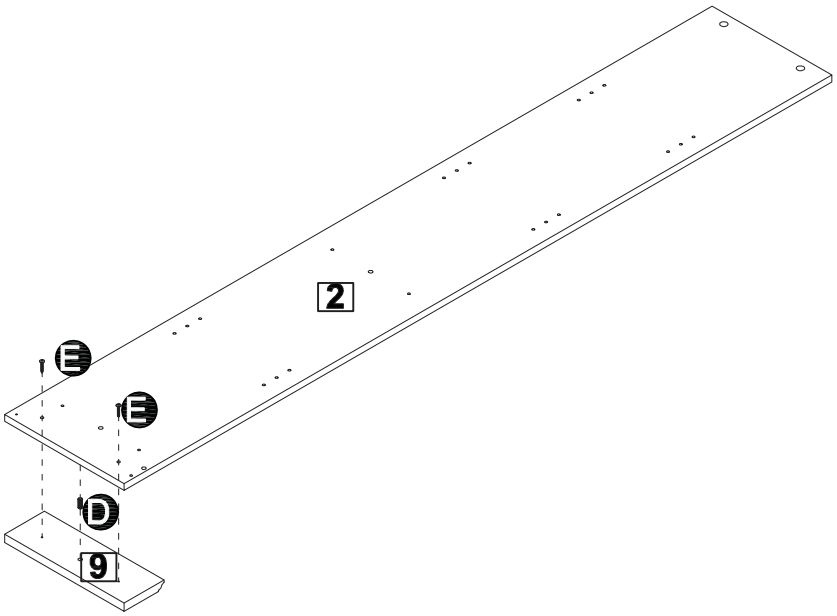

Step 2

Fixing fittings
a:Fix connecting bolts Ⓐ into Left side panel 2 .
Note:Insert bolt Ⓐ as far as shown.
Do not over tighten.
b:Insert wooden dowel Ⓒ and locking cams Ⓑ as shown.
Note:The slot position of locking cams Ⓑ should be as shown.
c:Fix plastic bracket Ⓘ with screw Ⓕ.

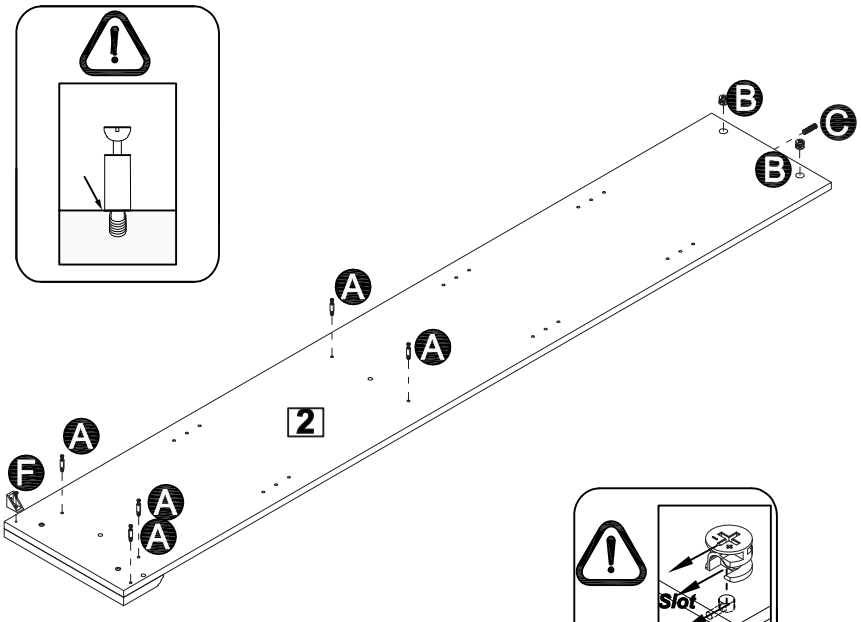




When inserting locking cams on the boards, the slot always point to the outlet of holes.

Assembly Instructions


Step 3

Attaching panels
Insert short wooden dowel Ⓓ into side base board 9 .
Attach side base board 9 onto right side panel 3 with screws Ⓔ.

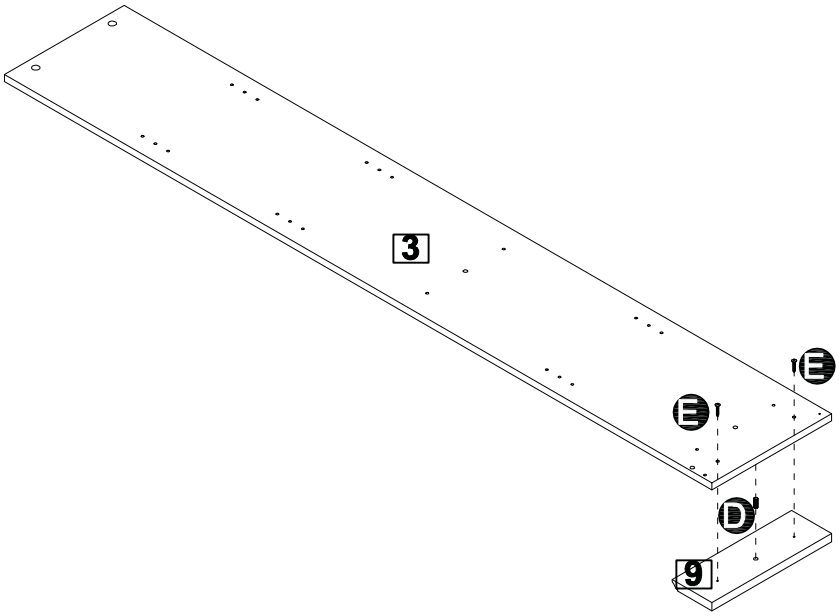

Step 4

Fixing fittings
a: Fix connecting bolts Ⓐ into right side panel 3 .
Note:Insert bolt Ⓐ as far as shown. Do not over tighten.
b: Insert wooden dowel Ⓒ and locking cams Ⓑ as shown.
Note:The slot position of locking cams Ⓑ should be as shown.
c: Fix plastic bracket Ⓘ with screw Ⓕ.

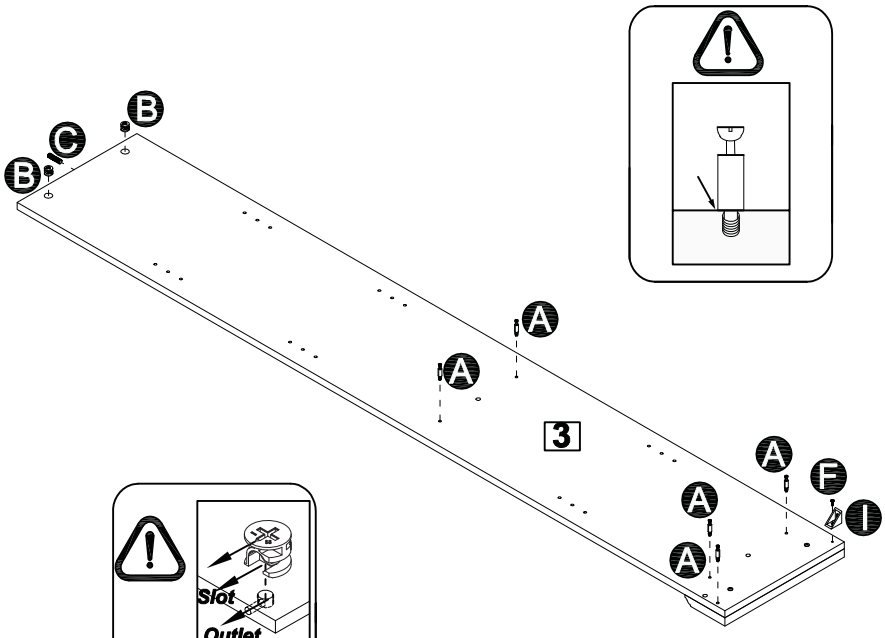

When inserting locking cams on the boards, the slot always point to the outlet of holes.

Assembly Instructions

Step 5


Fixing fittings


a: Fix connecting bolts Ⓐ into bottom panel 5 .


Note:Insert bolt Ⓐ as far as shown. Do not over tighten.


b:Insert wooden dowels Ⓒ and locking cams Ⓑ into bottom panel 5 .

Note:The slot position of locking cams Ⓑ should be as shown.

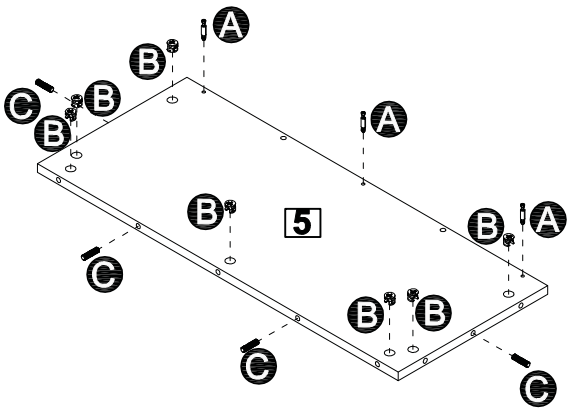

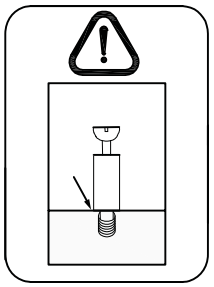

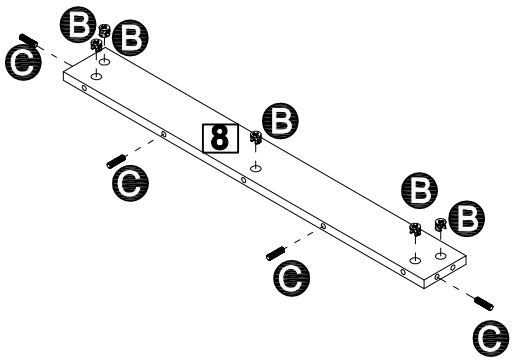

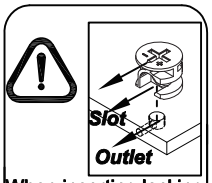

When inserting locking cams on the boards, the slot always point to the outlet of holes.

Step 6

Fitting dowels and cams

Insert wooden dowels Ⓒ and locking cams Ⓑ back base board 8 as shown.


Note:The slot position of locking cams Ⓑ should be as shown.


Step 7

Attaching panels

Position back base board 8 onto bottom panel 5 as shown.

Use screw driver to turn locking cams Ⓑ clockwise to lock.

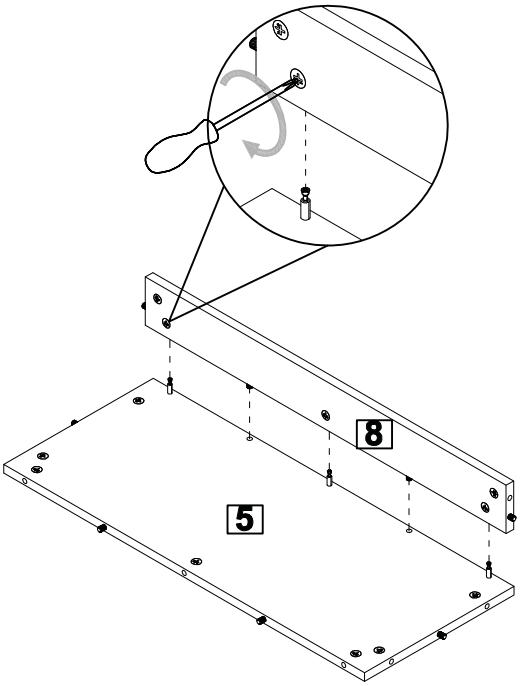

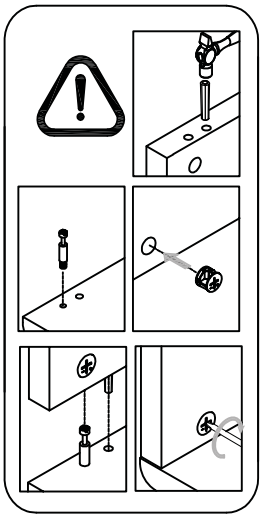


Assembly Instructions

Step 8


Fitting dowels and bolts

Insert wooden dowels Ⓒ and locking cams Ⓑ into fixed shelf panel 4.

Note:The slot position of locking cams Ⓑ should be as shown.

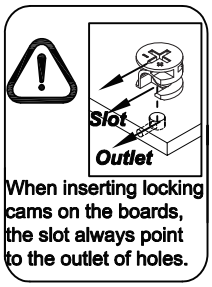

When inserting locking cams on the boards, the slot always point to the outlet of holes.

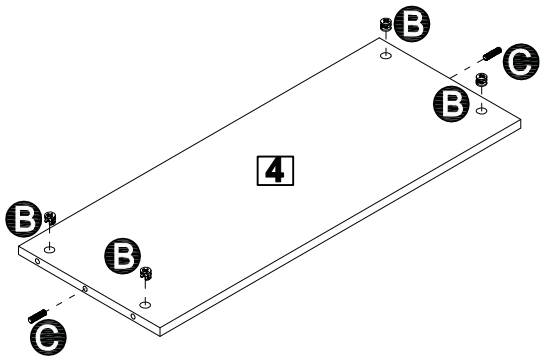


Step 9


Attaching panels

a. Position fixed shelf panel 4 and bottom panel 5 & back base board 8 onto right side panel 3 as shown.

Use screw driver to turn locking cams Ⓑ clockwise to lock.

b. Use caps Ⓚ to cover cams Ⓑ as shown.

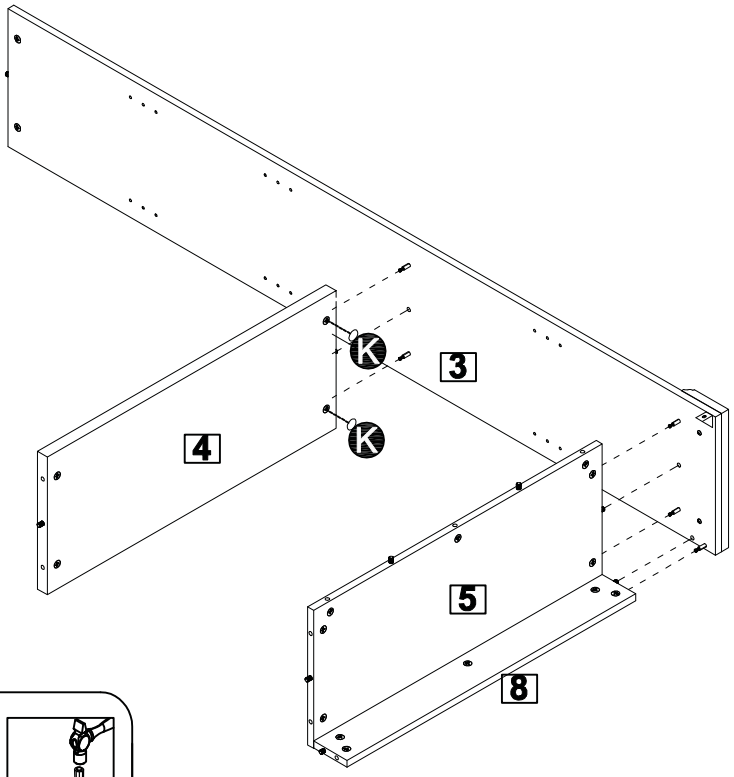

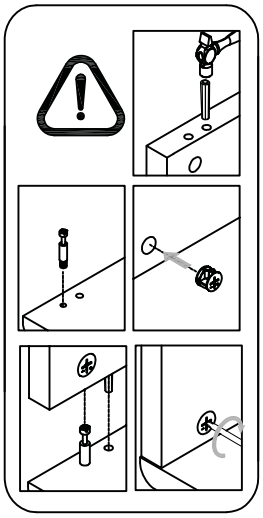


Assembly Instructions


Step 10

Attaching front rail

a. Position fixed shelf panel 4 and bottom panel 5 & back base board 8 onto left side panel 2 as shown.
Use screw driver to turn locking cams Ⓑ clockwise to lock.

b. Use caps Ⓚ to cover cams Ⓑ as shown.

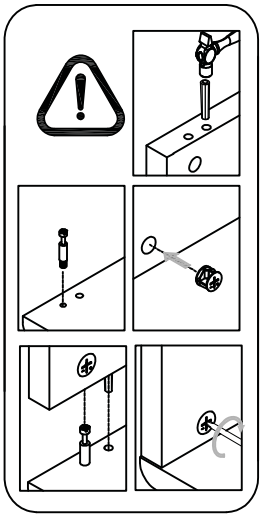


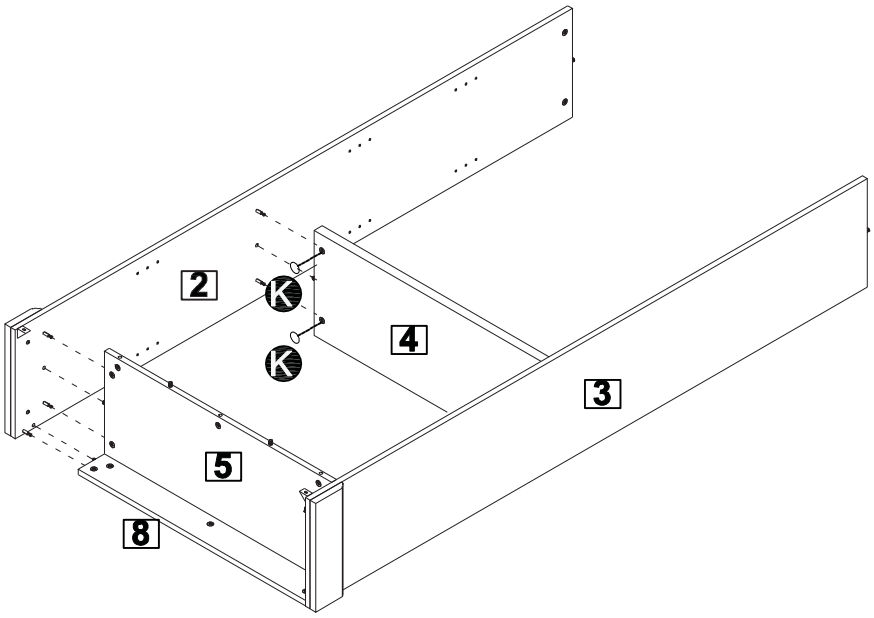



Assembly Instructions

Step 11

Fitting bolts
Fix connecting bolts Ⓐ into front base board 7 .
Note:Insert bolt Ⓐ as far as shown.
Do not over tighten.

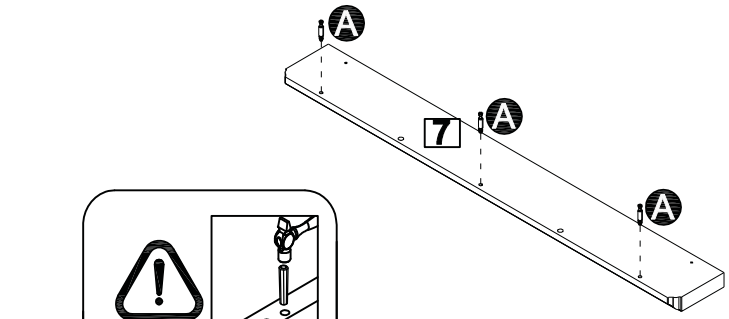

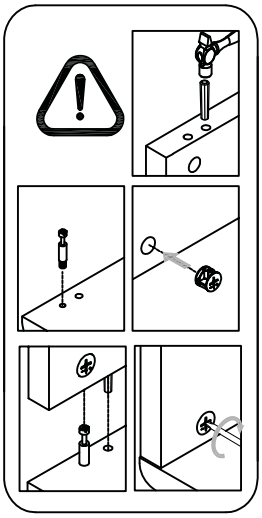


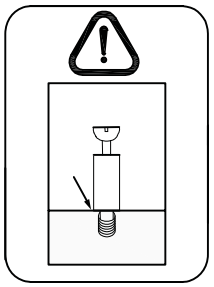

Step 12


Attaching panels
a. Position front base board 7 onto bottom panel 5 as shown.
Use screw driver to turn locking cams Ⓑ clockwise to lock.


b. Use screws Ⓕ to fix plastic brackets Ⓘ onto front base board 7 .

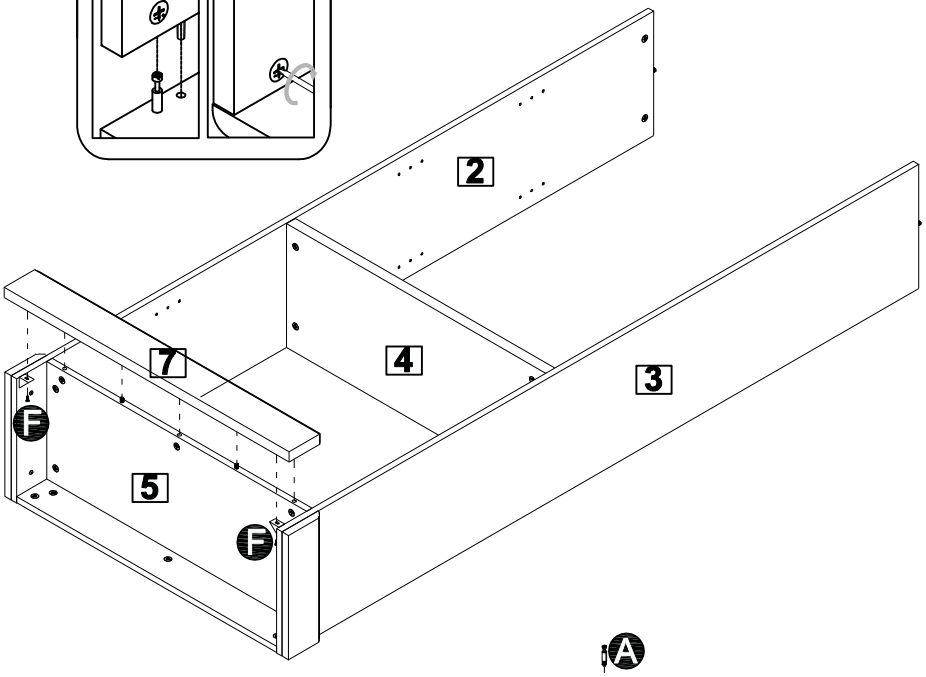

Step 13

Fitting bolts
Fix connecting bolts Ⓐ into top panel 1.
Note:Insert bolt Ⓐ as far as shown.
Do not over tighten.

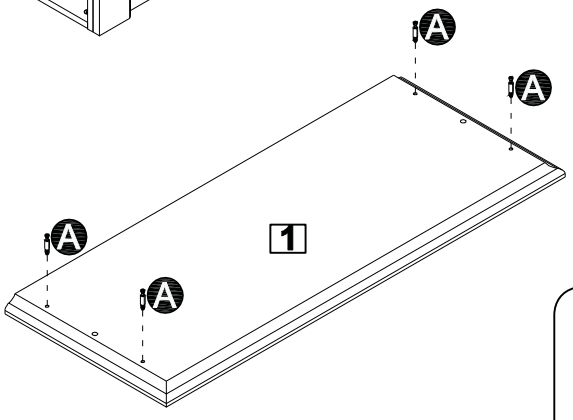

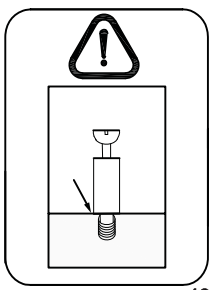


Assembly Instructions

Step 14

Attaching panels

a. Position top panel 1 onto side panels 2 & 3 as shown. Use screw driver to turn locking cams Ⓑ clockwise to lock.

b. Use caps Ⓚ to cover cams Ⓑ as shown.

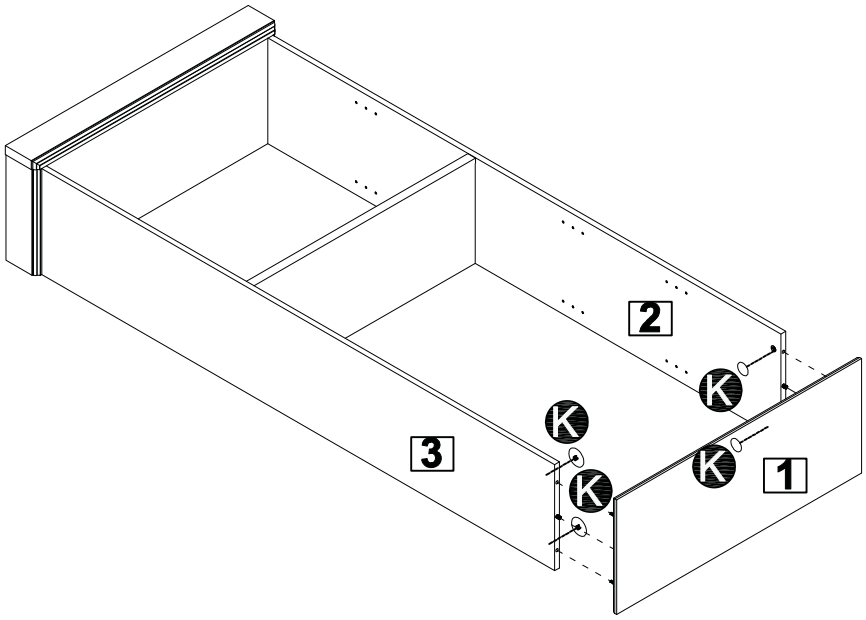

Step 15


Attaching panels

Two people are needed for this assembly.

a. Carefully turn the bookcase frame front side down as shown.

Attach back panel 10 onto the back of bookcase frame with screws Ⓖ as shown.

b. Paste felt feet Ⓙ on the bottom edges of side panels 2 & 3 .

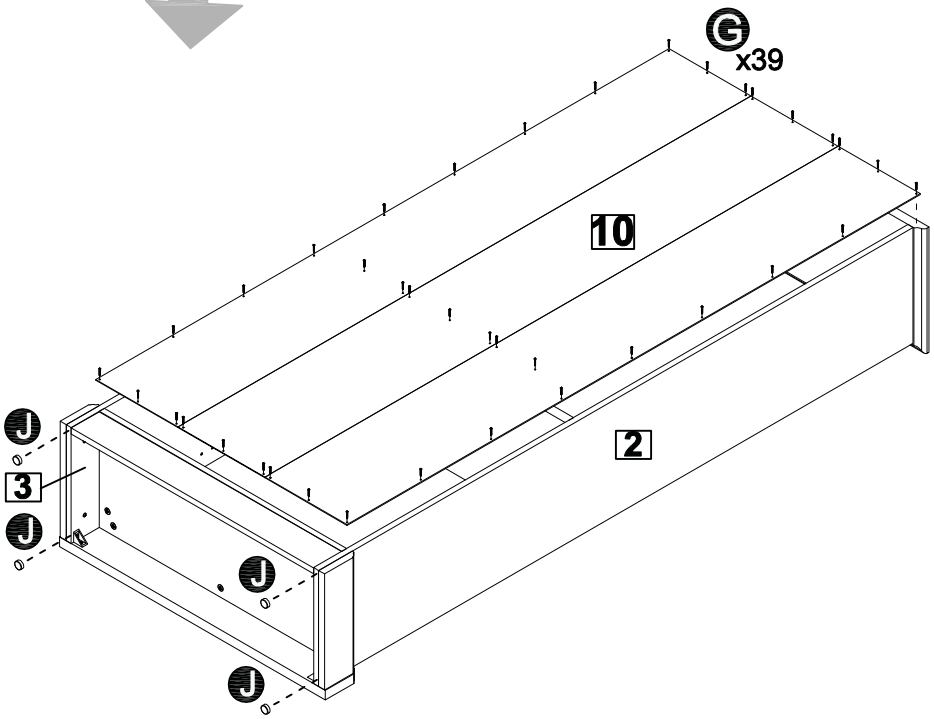


Assembly Instructions

Step 16

Attaching panels

a. Insert shelf pins (H) into side panels 2 & 3 as shown.

b. Insert adjustable shelf panels 6 into bookcase, letting them rest on shelf pins (H).

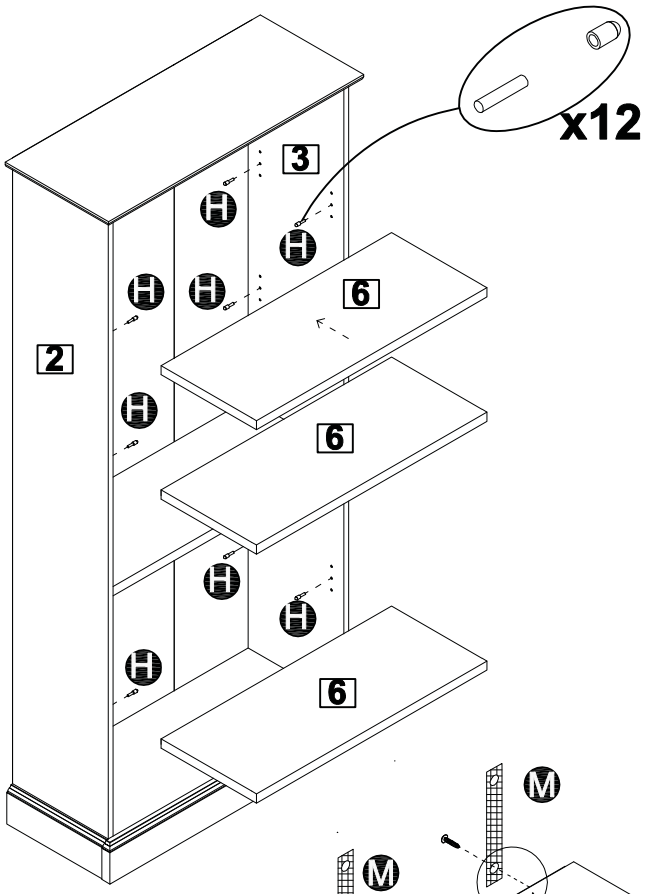


Step 17

Fixing bookcase to the wall

It is a **MUST** that the bookcase is fixed to a wall.

a. Fix wall straps (M) with screws (N) at the back edge of top panel 1 .

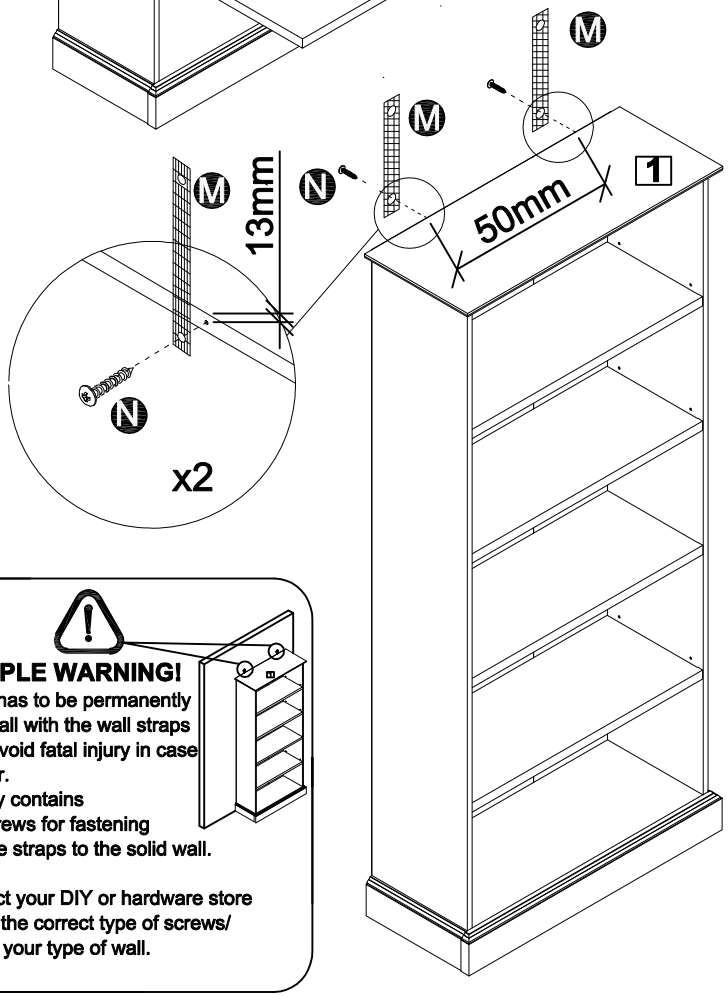

ANTI-TOPPLE WARNING!

This product has to be permanently fixed to the wall with the wall straps included, to avoid fatal injury in case it topples over.
The pack only contains wall plugs/screws for fastening the anti-topple straps to the solid wall.

Please contact your DIY or hardware store for advice on the correct type of screws/ wall plugs for your type of wall.

Assembly Instructions

Step 18

b. With help, move bookcase into position.


Warning:
The bookcase is heavy.
Lift with care.

Mark fixing holes on wall and remove bookcase.

Drill 6mm holes and insert wall plug (L).

Warning:
Before drilling, check wall for hidden pipes and cables.

Reposition bookcase and fix wall strap (M) using screws (E).

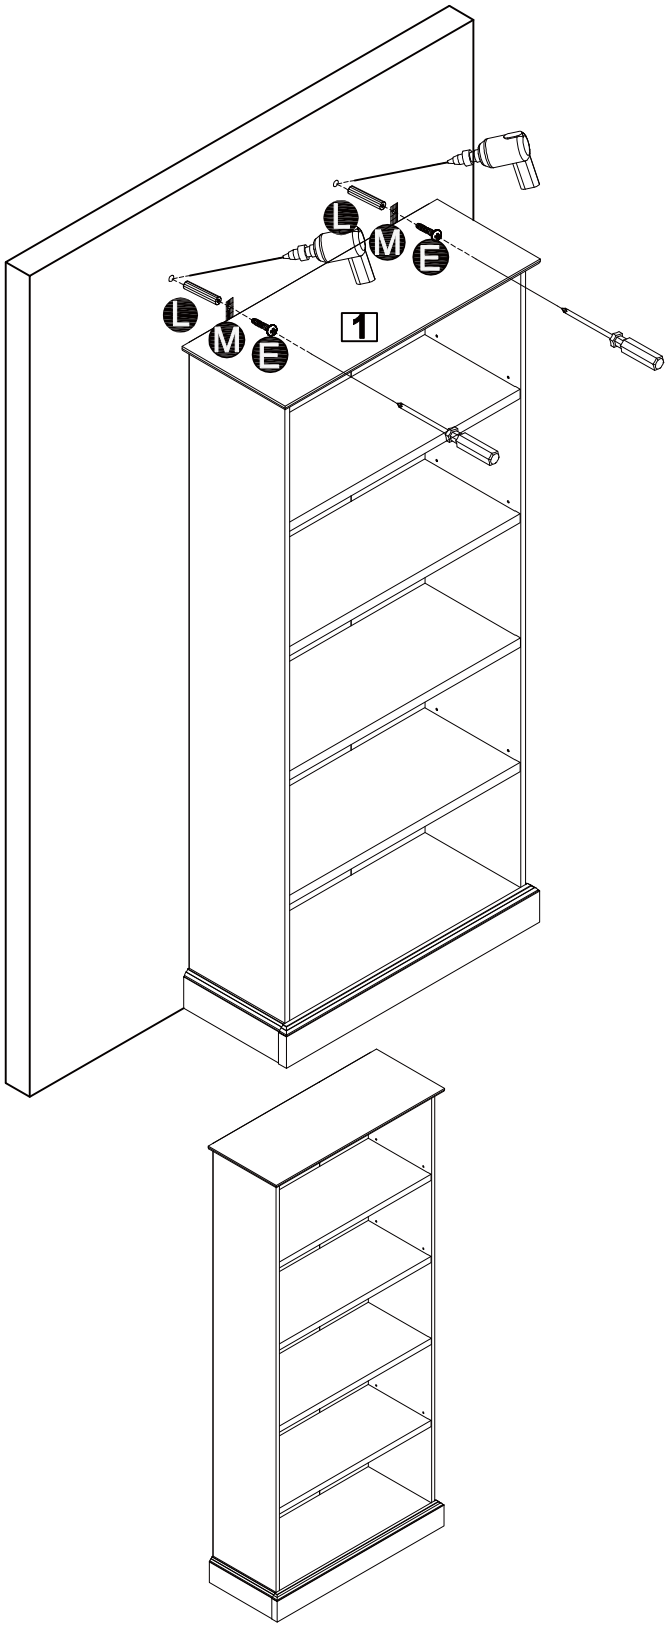

Step 19

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0845 6400800

Care Instruction

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage your furniture's finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.

Further advice about wood furniture care

It is best to keep your furniture in a climate controlled environment. Extreme temperature and humidity changes can cause warping, shrinking and splitting of wood. Please keep furniture away from direct sunlight as this may damage the finish. Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.