
avignon 6 drawer chest

Assembly Instructions - Please keep for future reference

247/5035

227/4195

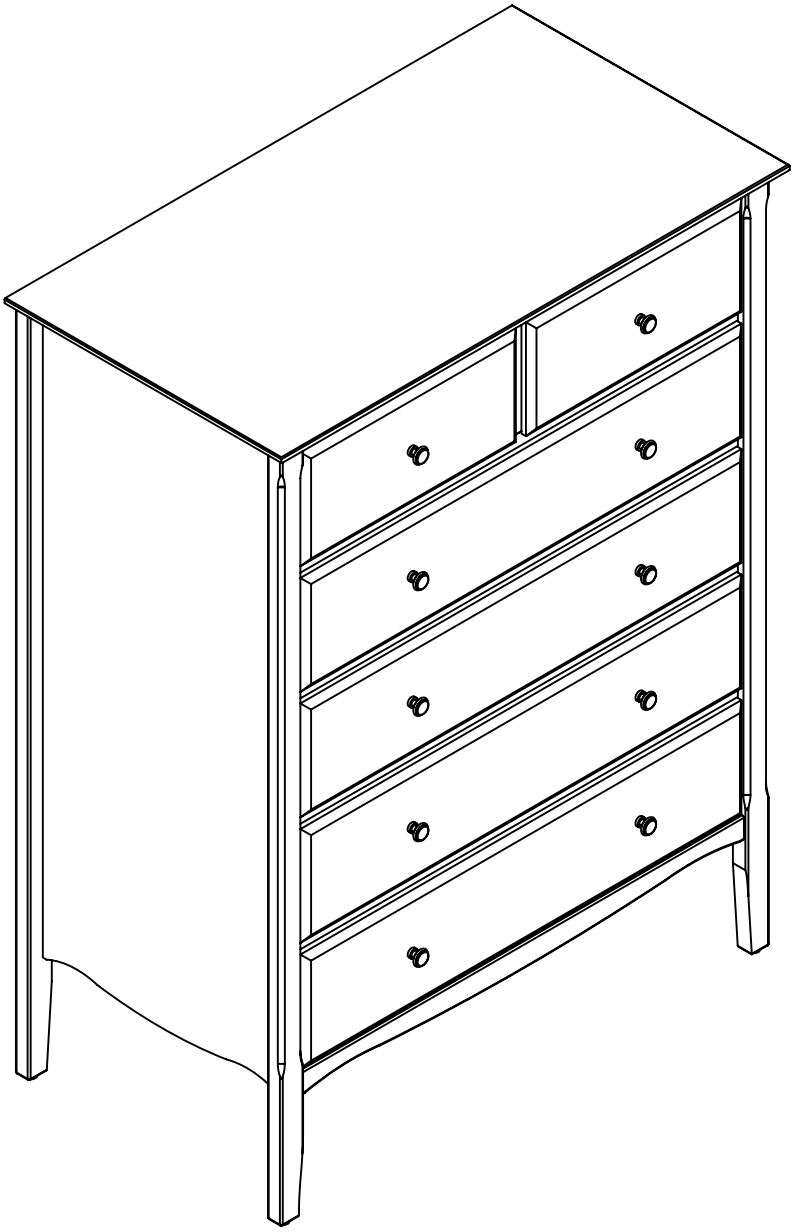

Dimensions

Width - 101cm
Depth - 55cm
Height -134.3cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts,call the
Customer Helpline: Argos = 0345 6400 800

Issue 1 - 06/06/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2,3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torgue setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


• Regularly check and ensure that all bolts and fittings are tightened properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**


Please check you have all the panels listed below

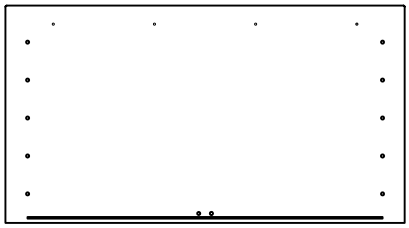

1 Top ×1 (101 × 55cm)

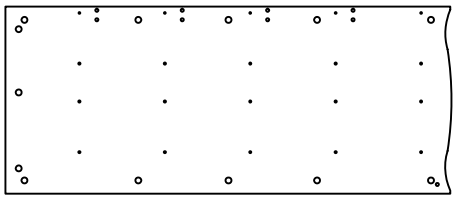

2 Side panel,right ×1 (112.8 × 47.3cm)

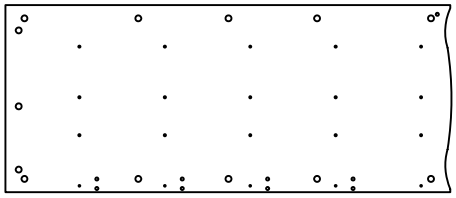


3 Side panel, left ×1 (112.8 × 47.3cm)

4 Back leg, left ×1 (132.5 × 4.5cm)


5 Front leg, left ×1 (132.5 × 4.5cm)

6 Back leg, right ×1 (132.5 × 4.5cm)

7 Front leg, right ×1 (132.5 × 4.5cm)




8 Front vertical bar ×1 (18.8 × 2.8cm)




9 Rail for glides ×1 (45.7 × 5.7cm)




10 Cross bar,back ×1 (88 × 6.8cm)



11 Back vertical bar ×1 (108.3 × 5.7cm)




12 Middle bar up ×1 (88 × 5.7cm)




13 Middle bar down ×3 (88 × 5.7cm)

14 Cross bar, up ×1 (88 × 1.8cm)




15 Cross bar, down, front ×1 (88 ×4.5cm)



16 Small drawer front, left ×1 (42.8 × 19.6cm)



17 Small drawer side, left ×6 (45 × 16cm)



18 Small drawer side, right ×6 (45 × 16cm)




19 Small drawer back ×2 (37.7 × 15.7cm)


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**

Please check you have all the panels listed below




20 Small drawer bottom ×2 (38.8 × 44.9cm)




21 Big drawer frontal ×4 (87.6 × 19.6cm)




22 Big drawer back ×4 (83.1 × 15.7cm)



26 Small drawer front, right ×1 (42.8 × 19.6cm)



23 Big drawer bottom ×4 (84.2 × 44.9cm)



24 Big drawer bottom rail ×8 (43.8 × 5.7cm)

















25 Back panel ×2 (109.4 × 44.5cm)


Components - Fittings


Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

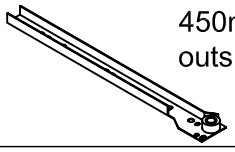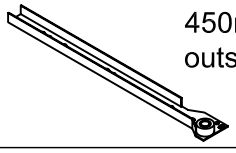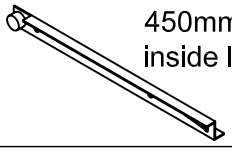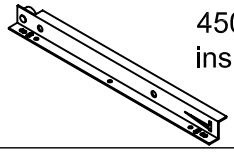A  Large locking pin × 43	**B** Large locking nut × 43 	**C**  Wooden dowel × 28
D  Φ3.5 × 15mm Screw for Runner × 96	**E**  ⌀3.5×25mm Screw × 40	**F**  ⌀3.5×35mm Screw × 6
G  450mm Runner outside left × 6	**H**  450mm Runner outside right × 6	**I**  450mm Runner inside left × 6
J  450mm Runner inside right × 6	**K**  Small locking pin × 32	**L**  Small locking nut × 32
M  ⌀3.0×15mm Screw for Back panel × 5	**N**  Wall strap × 1	**O**  Small washer × 5
P  Handle × 10	**Q**  Screw for handle × 10	**R**  ⌀3.0×15mm Support for Back panel × 4
S  Rubber bumper × 12	**T**  Ø3.0×20mm Screw × 4	


Tools required


Phillips screwdriver (medium & large)


Rubber mallet


Flatblade screwdriver (medium)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Screw Large Locking pins (A) into the components [1] [4] [5] [6] [7] [8] [10] [11] [14] as shown in the picture.

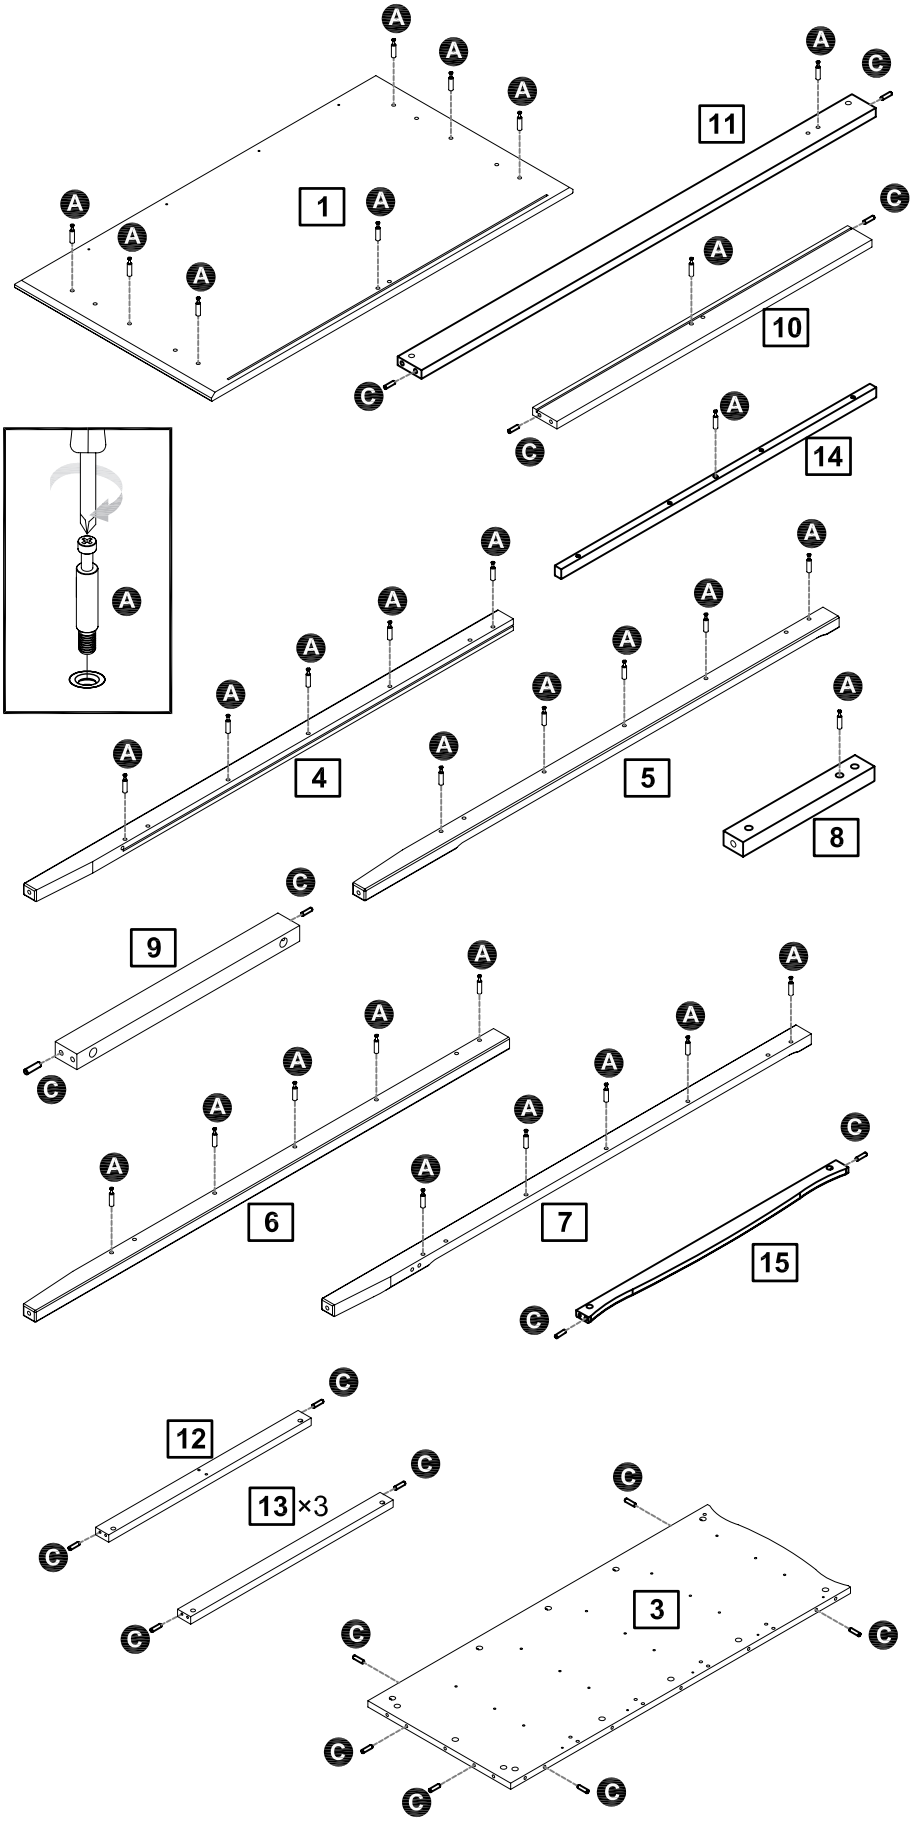


Step 2

Insert the Wooden dowels (C) to the components [3] [9] [10] [11] [12] [13] [15] as shown in the picture.

Assembly Instructions


Step 3

Insert 6 Wooden dowels C into the Side panel, right 2.

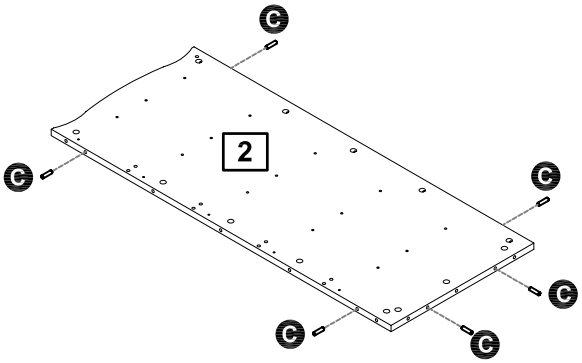


Step 4


Insert the Large locking nuts B into the holes pre-drilled in the side panel 2.

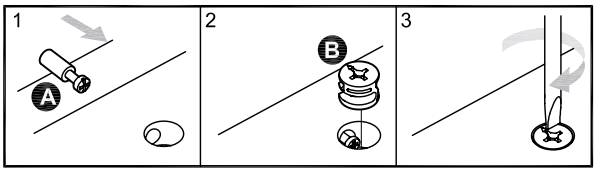

Attach the legs 6 and 7 to the side panel 2 , fix it by screwdriver.

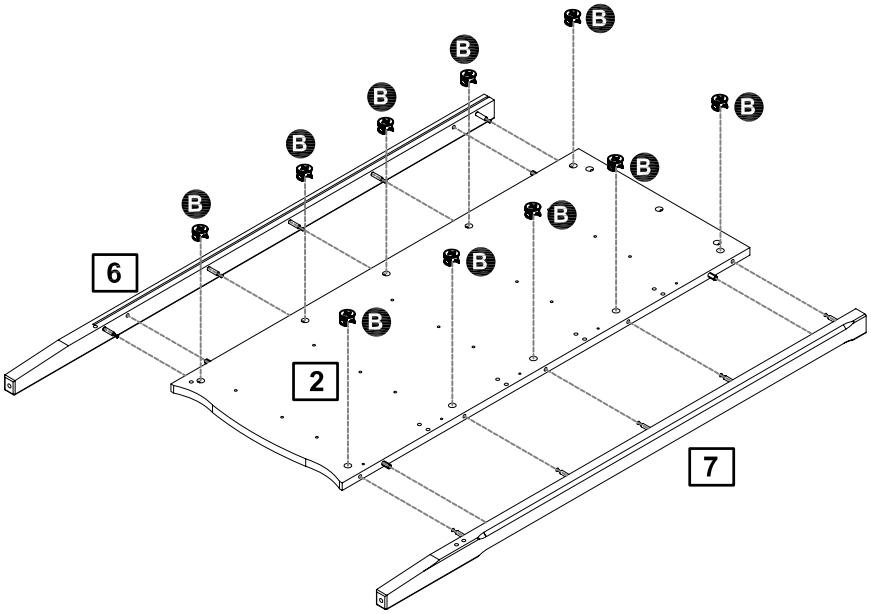


Repeat above steps with the other panel 3 .

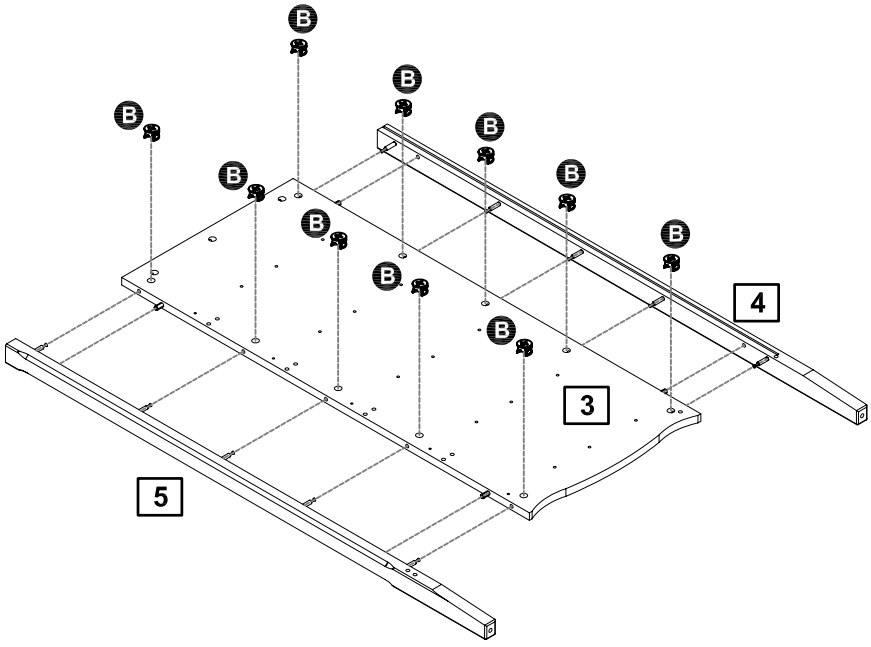

Assembly Instructions


Step 5

Screw 6 Large locking pins (A) into the Side panel [2] and [3].

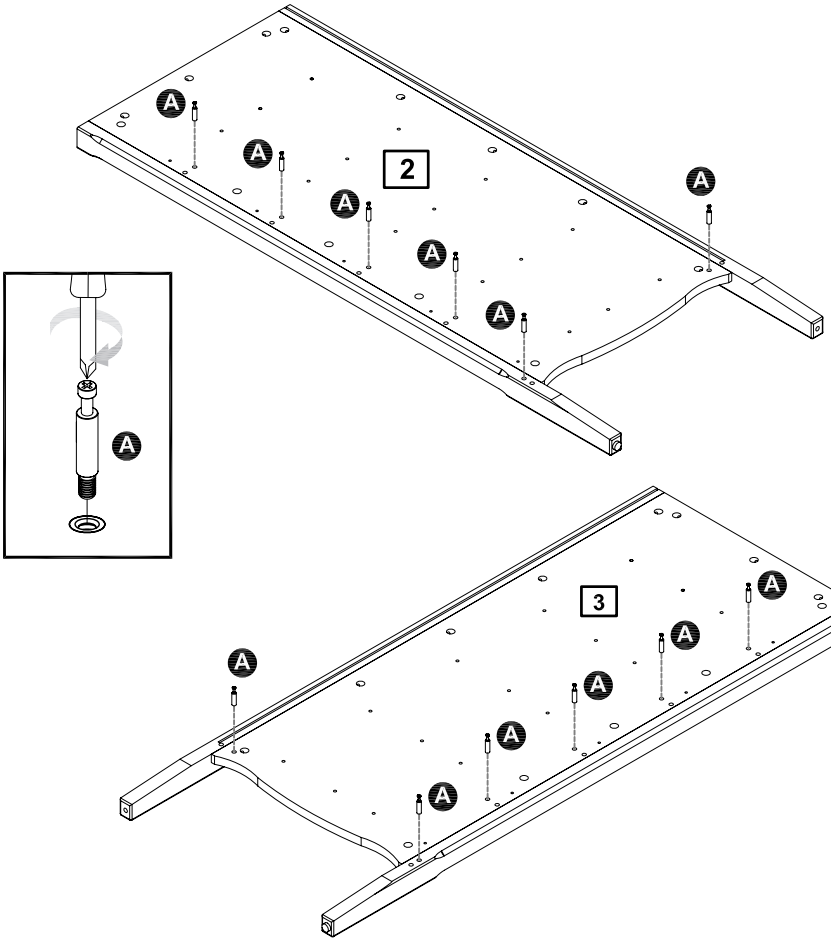

Step 6


Attach the Runner outside, left (G) to the side panel [3], fix it by using Screw (D) and screwdriver.

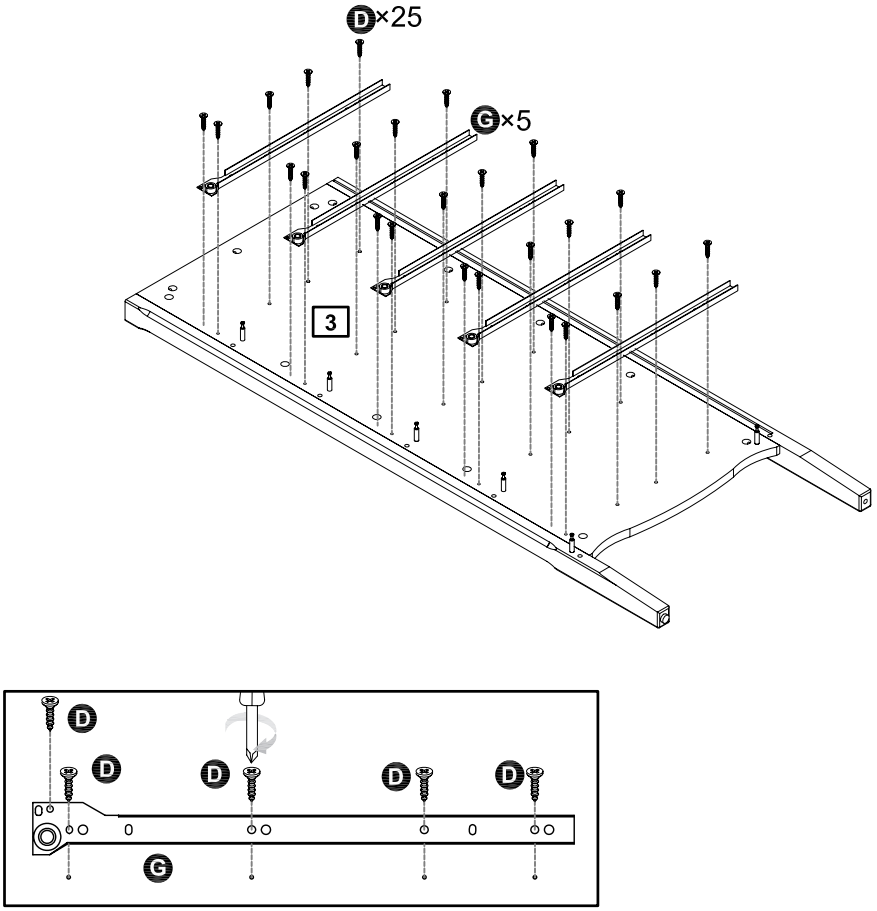

Assembly Instructions

Step 7

Repeat Step 4 to the Side panel, right [2].

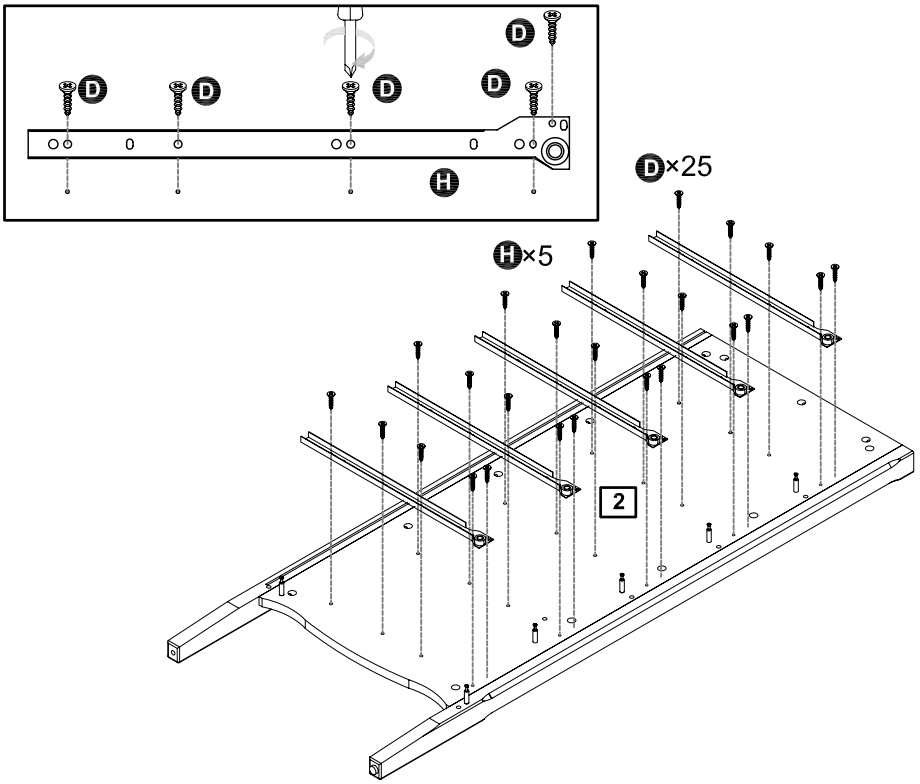


Step 8

Insert the Large locking nuts B to the Cross bars [12] [13] [15] and [10].

Attach the side panels to these cross bars, fix them by screwdriver.


Attach the Vertical bars [11] and [8] to the Rail [9]. Fix them by using Locking pin A and Locking nut B and screwdriver.

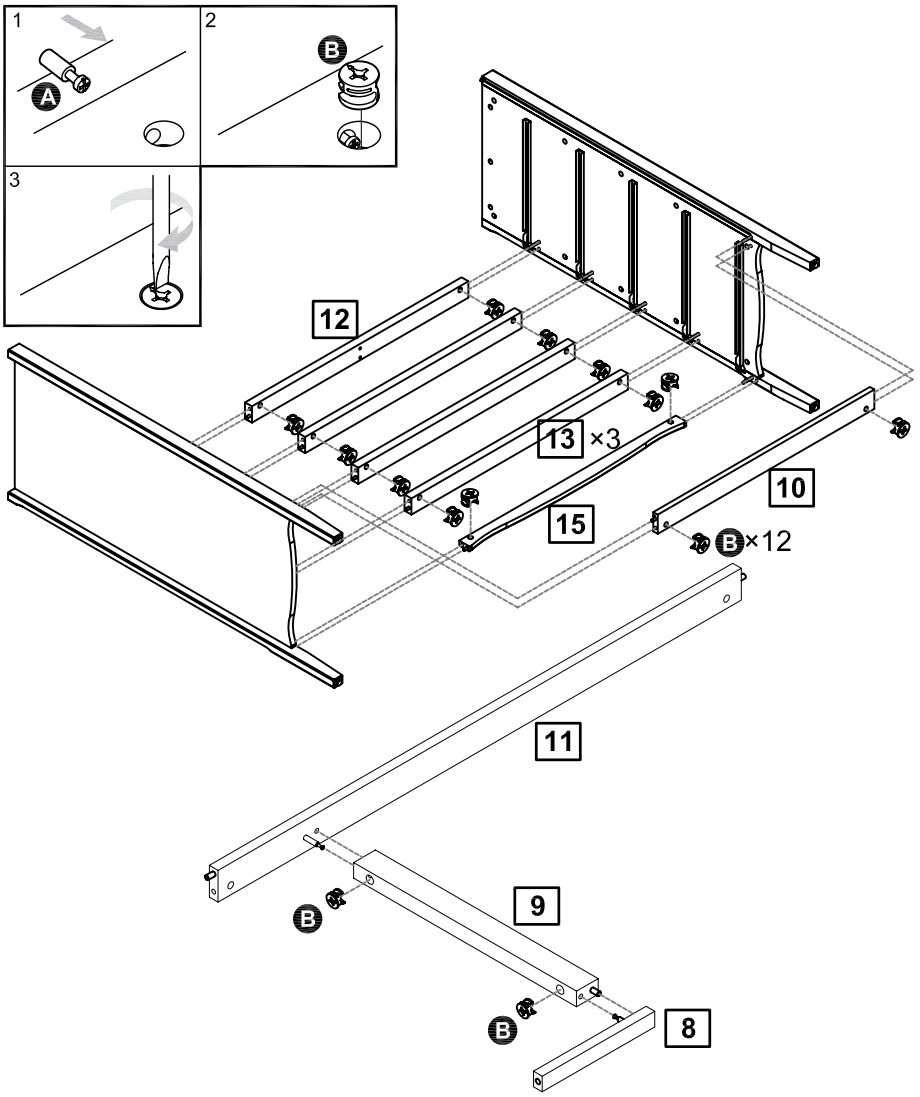


Assembly Instructions

Step 9

Fix the Runner G and H to the Rail 9.

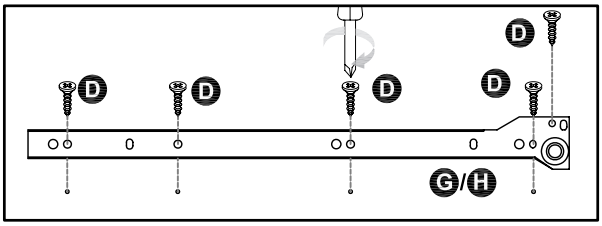

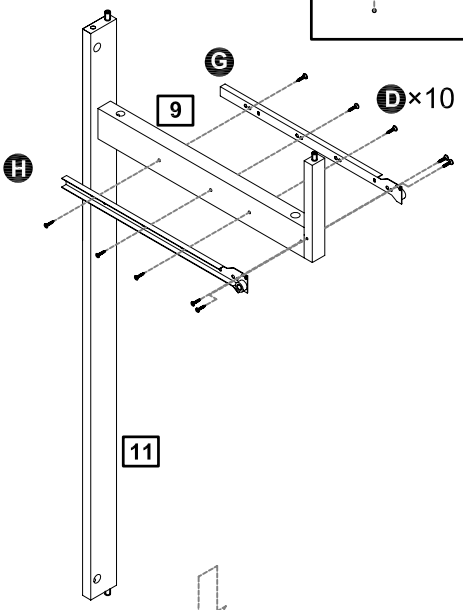



Step 10


Fix the Back vertical bar 11 to Cross bar, back 10 by using Large Locking pin A and Large Locking nut B and screwdriver.

Attach the Vertical bar 14 to the Cross bar 8 as shown on the picture, fix them by using Large Locking pin A and Large Locking nut B and screwdriver.

Slip the Back panel 25 into the groove in the legs 4 and 6 .

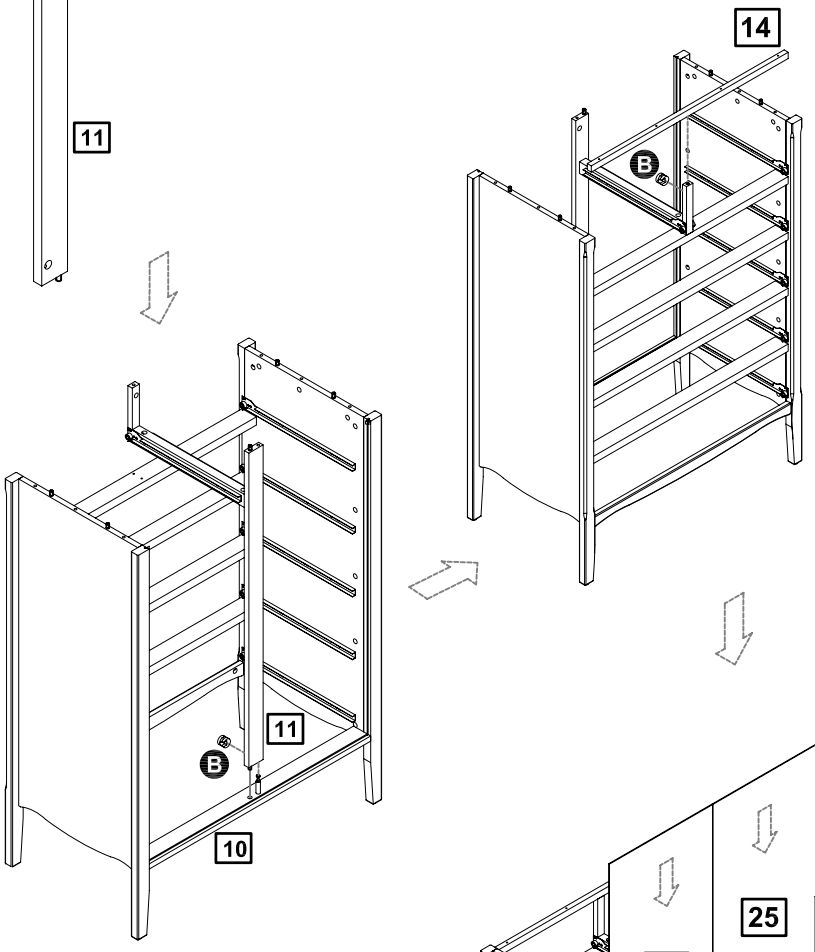


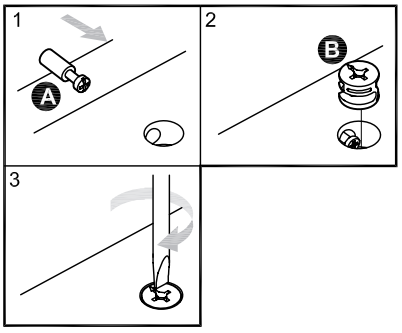


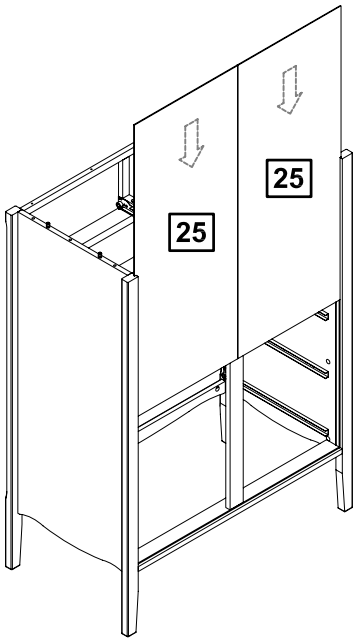

Step 11


Cover the Top to the unit, insert the Locking nut B to the side panel 2 and 3, fix them by using screwdriver.

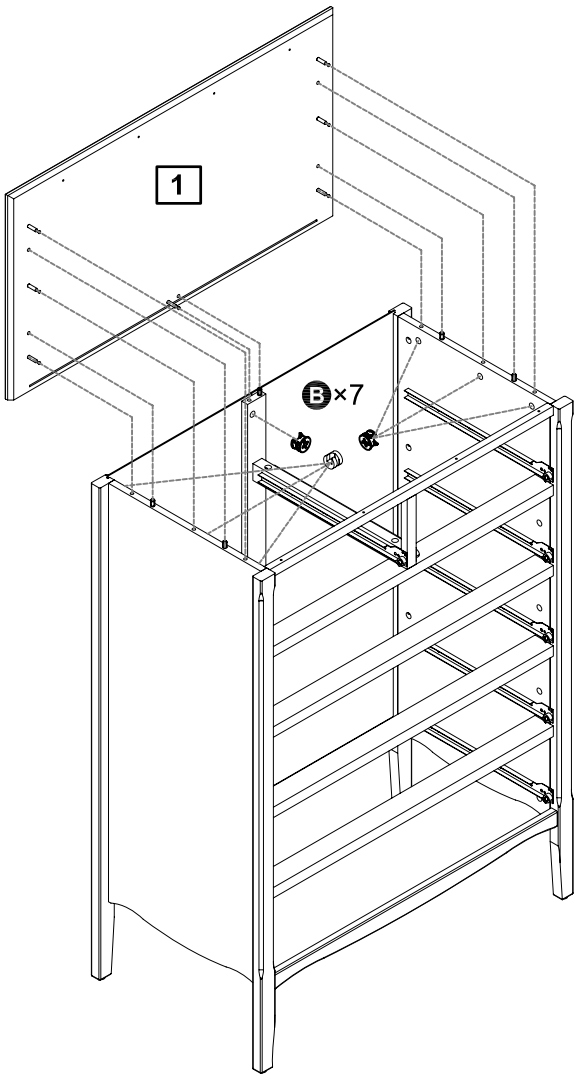

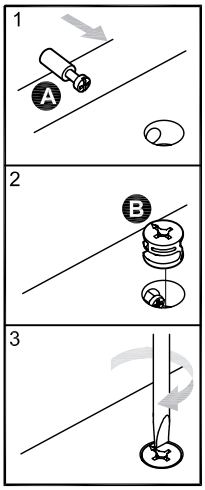

Step 12

Fix the Cross bar 14 to the Top by Screw F and screwdriver.

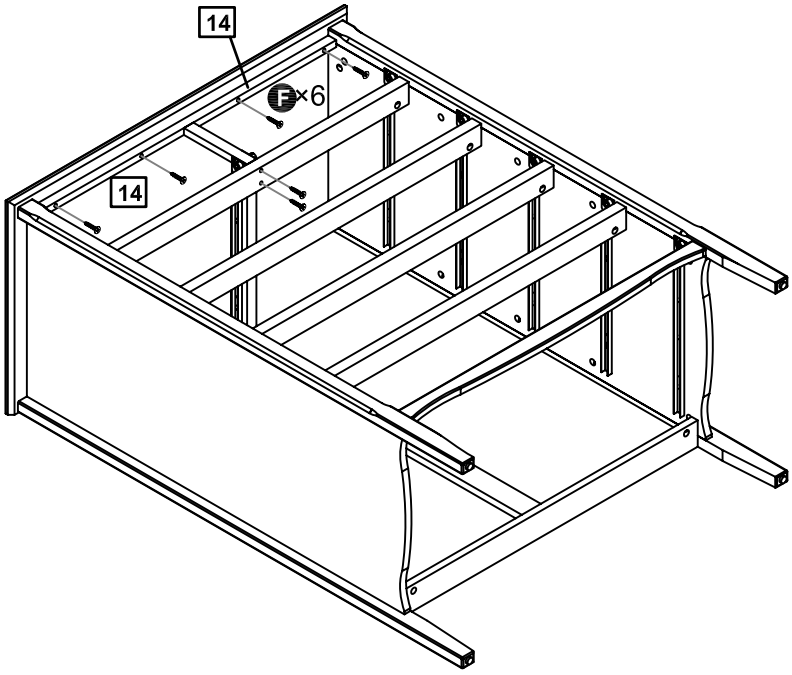


Assembly Instructions


Step 13


Screw 4 Locking pins K to the Drawer front 16 and 26 by using screwdriver.

Attach Drawer side 17 and 18 to the Drawer front 16 and 26. Fix them by small Locking nuts L and screwdriver.

Attach the Rubber bumper S to the Drawer front 16 and 26.

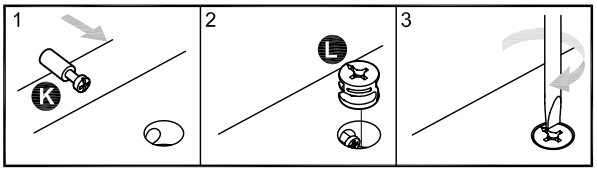

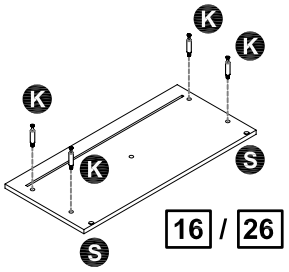


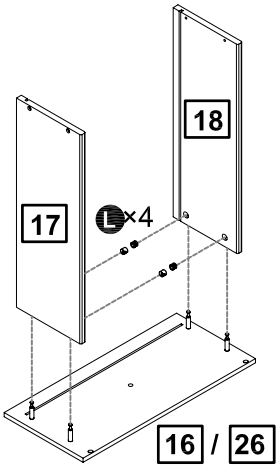



Step 14


Slip the Drawer bottom 20 into the groove in the drawer side 17 and 18 , cover the Drawer back 19 , fix it by Screw E . Fix the Handle P to the Drawer front 16 by Screw Q by using screwdriver.

Fix the Runner I and J to the Drawer side using Screw D by using screwdriver.

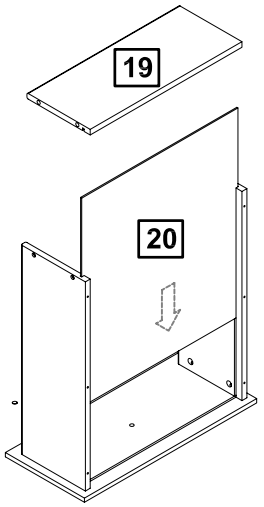

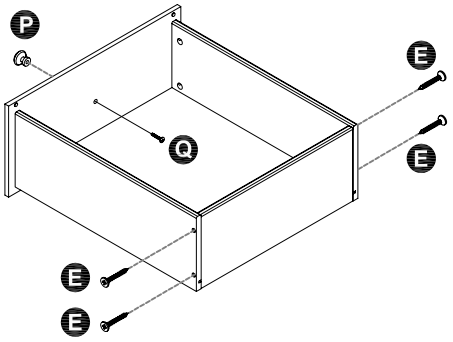

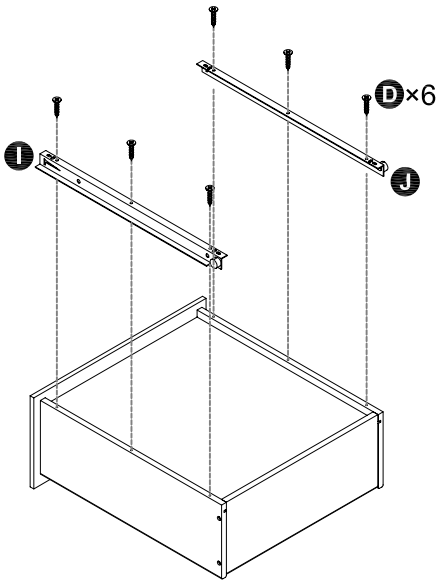

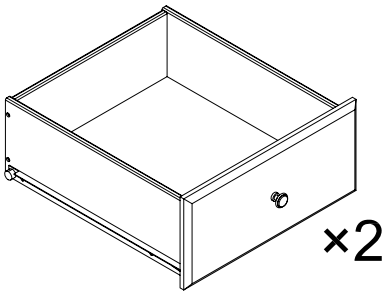


Assembly Instructions


Step 15


Screw 6 Locking pins (K) to the Drawer front [21] by using screwdriver.


Attach Drawer side [17] and [18] to the Drawer front [21] . Fix them by small Locking nuts (L) and screwdriver.


Attach the Rubber bumper (S) to the Drawer front [21].

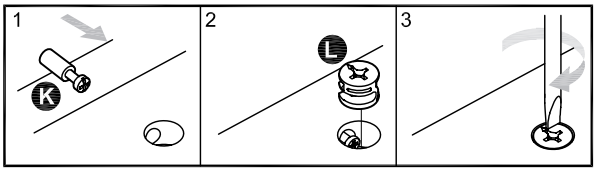

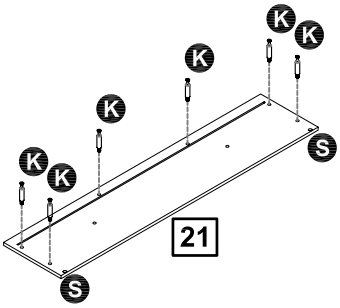

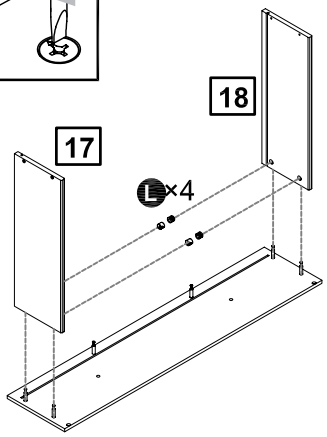

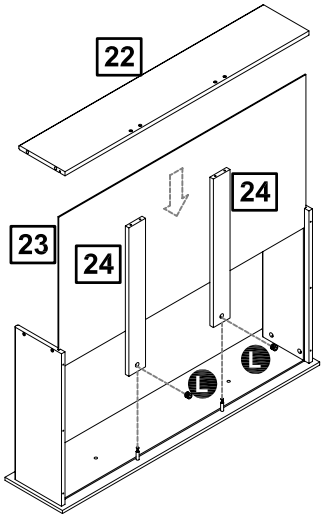


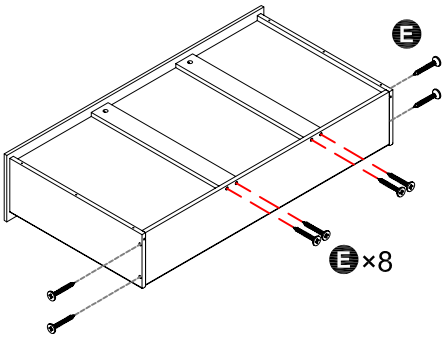



Step 16

Slip the Drawer bottom into the groove in the drawer side [17] and [18] , attach the Drawer bottom rail [24] to the drawer front [21], fix it by Locking nut (L) .Cover the Drawer back [22] , fix it by Screw (E) by using screwdriver. Fix the Handle (P) to the Drawer front [21] by Screw (Q) by using screwdriver.

Fix the Runner (I) and (J) to the Drawer side using Screw (D) by using screwdriver.

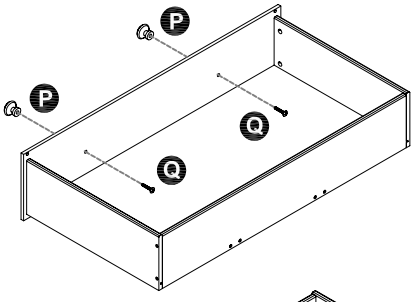

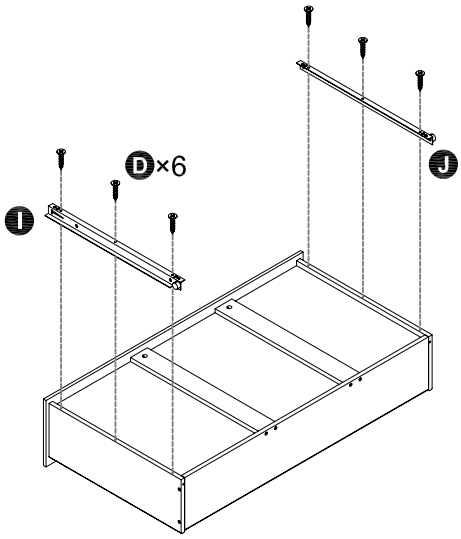


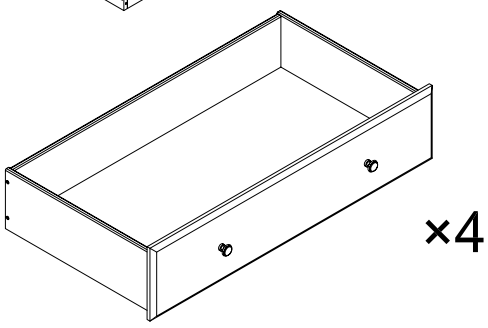


Assembly Instructions


Step 17

Fix the Wall strap (N) to the Vertical bar [11] using Washer (O) and Screw (M) by using screwdriver.

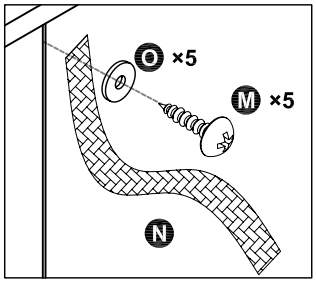


Fix the Support (R) to the back panel [25] by Screw (T) by using screwdriver.

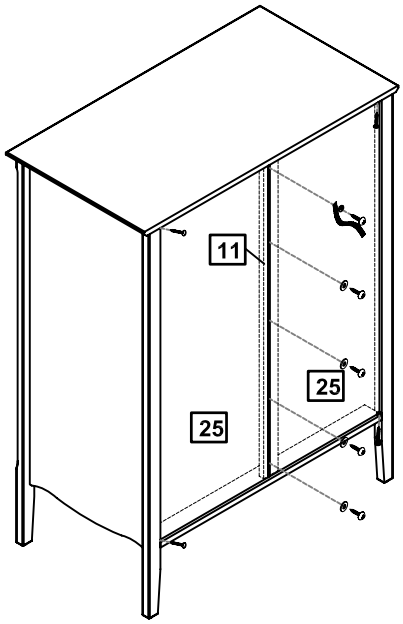

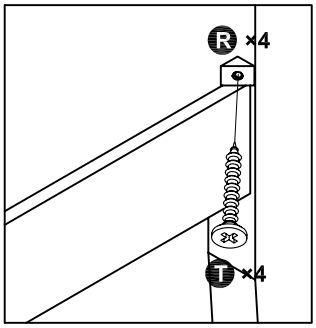

Slip the drawers to the unit.

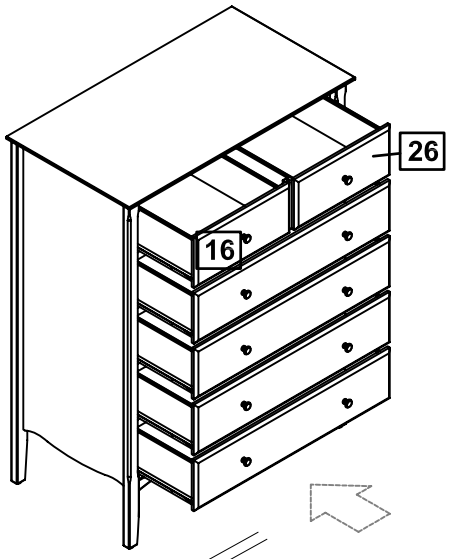


Step 18

Fixing to wall

It is recommended that the chest is fixed to a wall.


With help, move the chest into position.

Mark fixing hole on wall and remove chest.

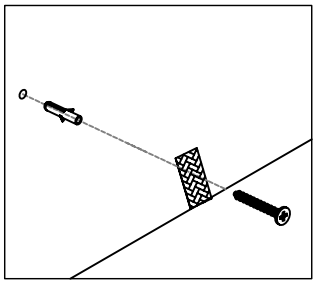

Drill hole and insert wall plug.

Warning:
Before drilling, check wall for hidden pipes and cables.

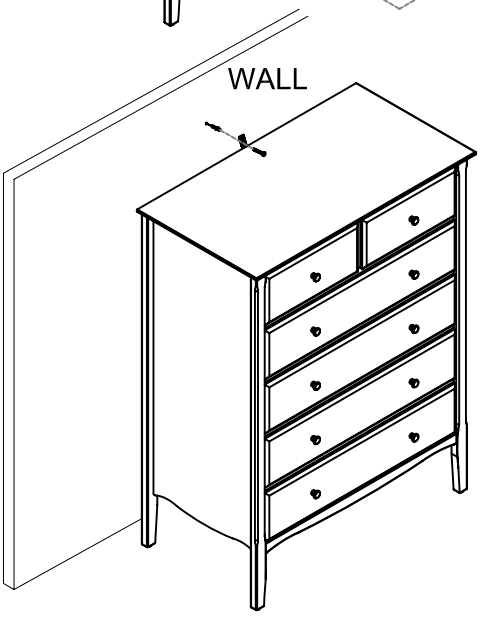

Reposition chest and fix wall strap using screw.

Assembly is complete.

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: **When drilling into walls always check that there are no hidden wires or pipes etc.**

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

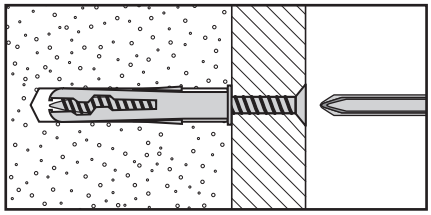


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

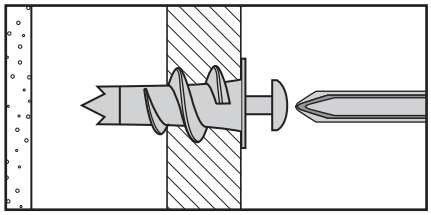


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

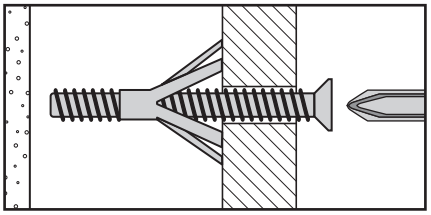


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

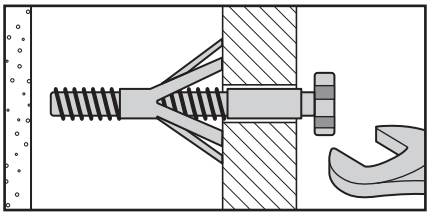


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

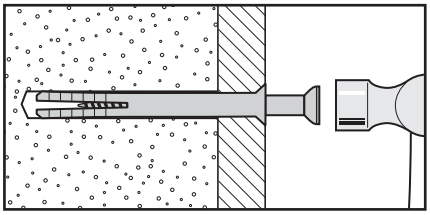

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

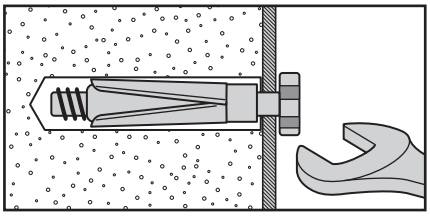

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.


Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

avignon 1 drawer bedside chest

Assembly Instructions - Please keep for future reference

254/9710

257/8925

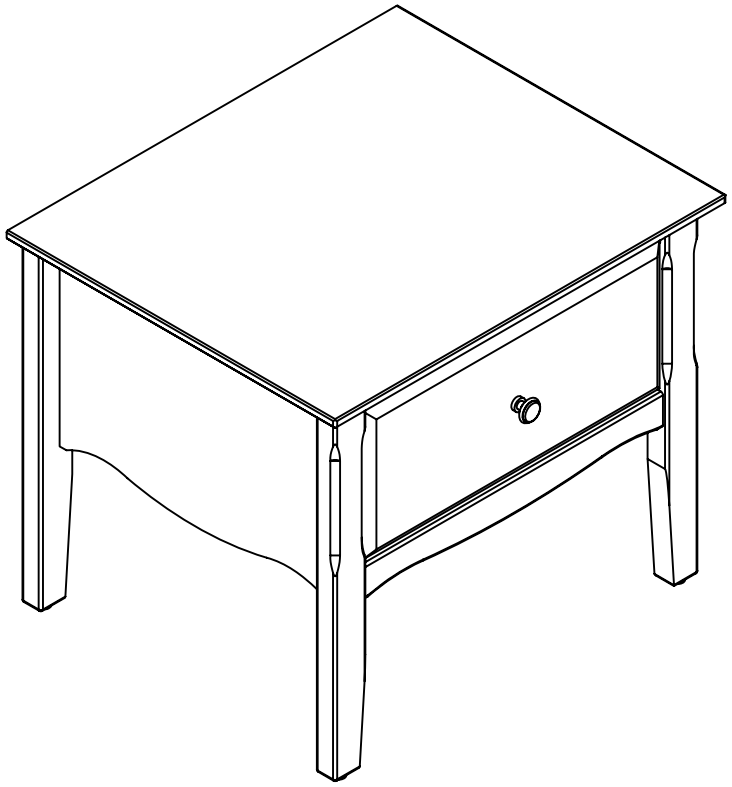

Dimensions

Width - 56cm
Depth - 47cm
Height - 46.9cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts,call the
Customer Helpline: Argos = 0345 6400 800

Issue 1 - 06/06/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torgue setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


• Regularly check and ensure that all bolts and fittings are tightened properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**


Please check you have all the panels listed below

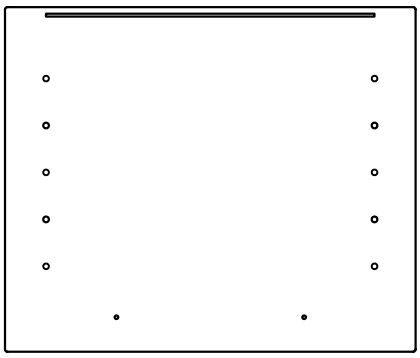

1 Top ×1 (56 × 47cm)

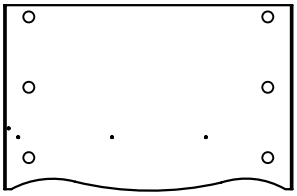


2 Side panel, Left ×1
(39.3 × 25.3cm)

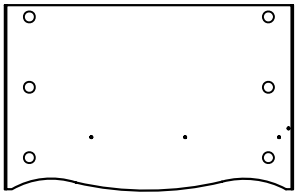


3 Side panel, Right×1
(39.3 × 25.3cm)



4 Back leg, left ×1 (45.1 × 4.5cm)




5 Front leg, left ×1 (45.1 × 4.5cm)




6 Back leg, Right ×1 (45.1 × 4.5cm)




7 Front leg, Right ×1 (45.1 × 4.5cm)



8 Cross bar, front x1 (43 × 2.4cm)




9 Cross bar, back x1 (43 × 5.7cm)




10 Cross bar, front ×1 (43 × 4.5cm)




11 Back panel ×1 (44.1 × 21.2cm)

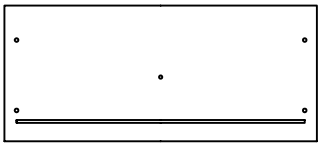

12 Drawer frontal ×1 (42.6 × 18.5cm)

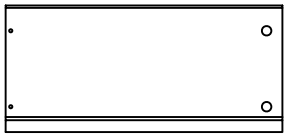


13 Drawer side, right ×1 (35 × 16cm)

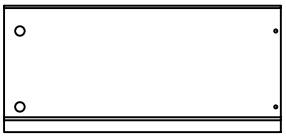

14 Drawer side, left ×1
(35 × 16cm)



15 Drawer back×1 (38.1 × 15.7cm)















16 Drawer bottom ×1 (39.2 × 34.9cm)


Components - Fittings


Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

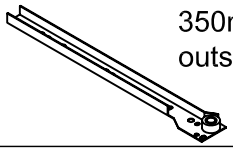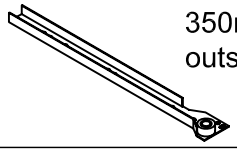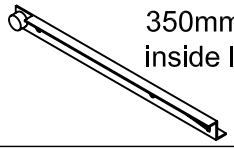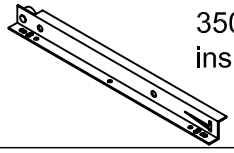A  Large locking pin × 22	**B** Large locking nut × 22 	**C**  Wooden dowel × 16
D  Φ3.5 × 15mm Screw for Runner × 14	**E**  Ø3.5×25mm Screw × 4	**F**  Ø3.5×30mm Screw × 2
G  350mm Runner outside left × 1	**H**  350mm Runner outside right × 1	**I**  350mm Runner inside left × 1
J  350mm Runner inside right × 1	**K**  Small locking pin × 4	**L**  Small locking nut × 4
M  Handle × 1	**N**  Screw for handle × 1	**O**  Ø3.0×15mm Support for Back panel × 4
P  Ø3.0×20mm Screw × 4	**Q**  Rubber bumper × 2	


Tools required


Phillips screwdriver (medium & large)


Rubber mallet


Flatblade screwdriver (medium)


Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1


Screw Large locking pins A into the Top 1 ,and legs 4 5 6 7 .

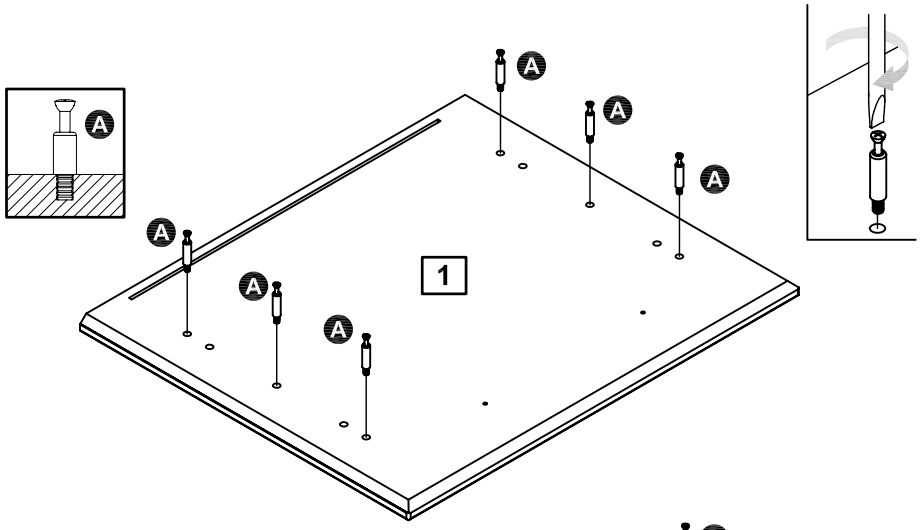


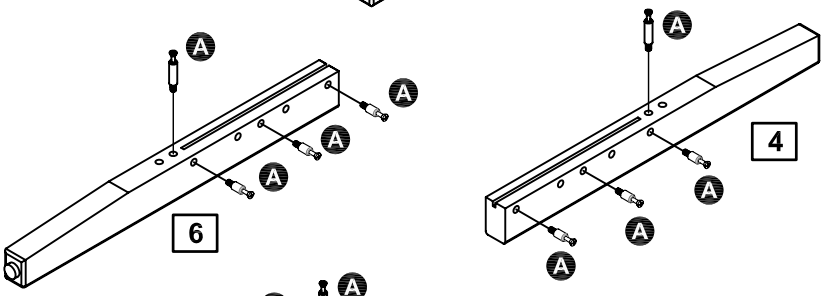

Step 2

Insert the Wooden dowels C to the Cross bar 9 and 10, the Side panel 2 and 3 .

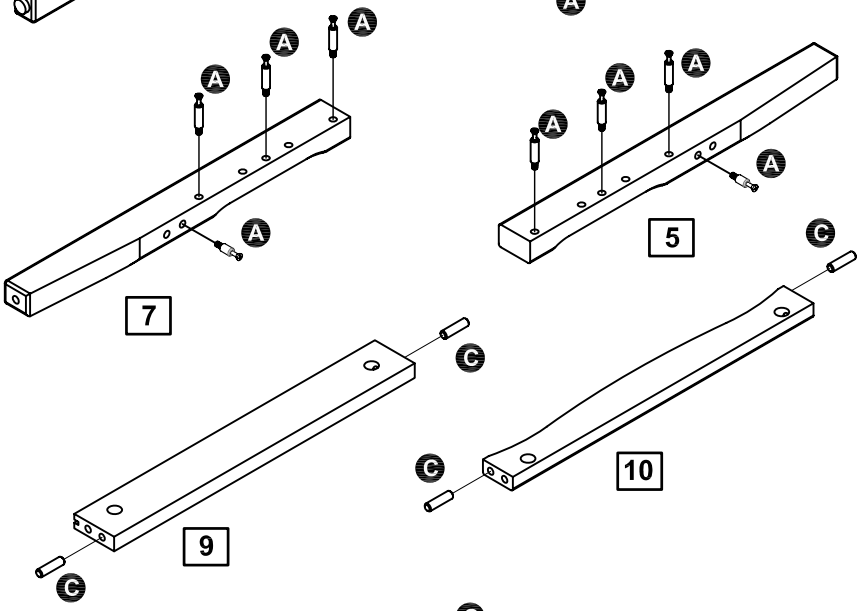

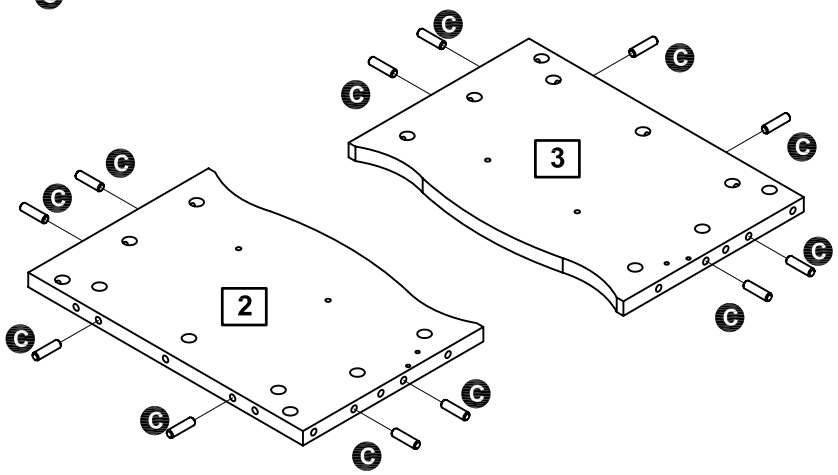



Assembly Instructions

Step 3

Attach the two leg [6] and [7] to the Side panel [3], fix them using Locking nut (B) and screwdriver.


Repeat above steps with the other Side panel [2] .

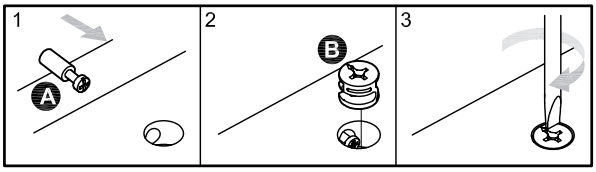

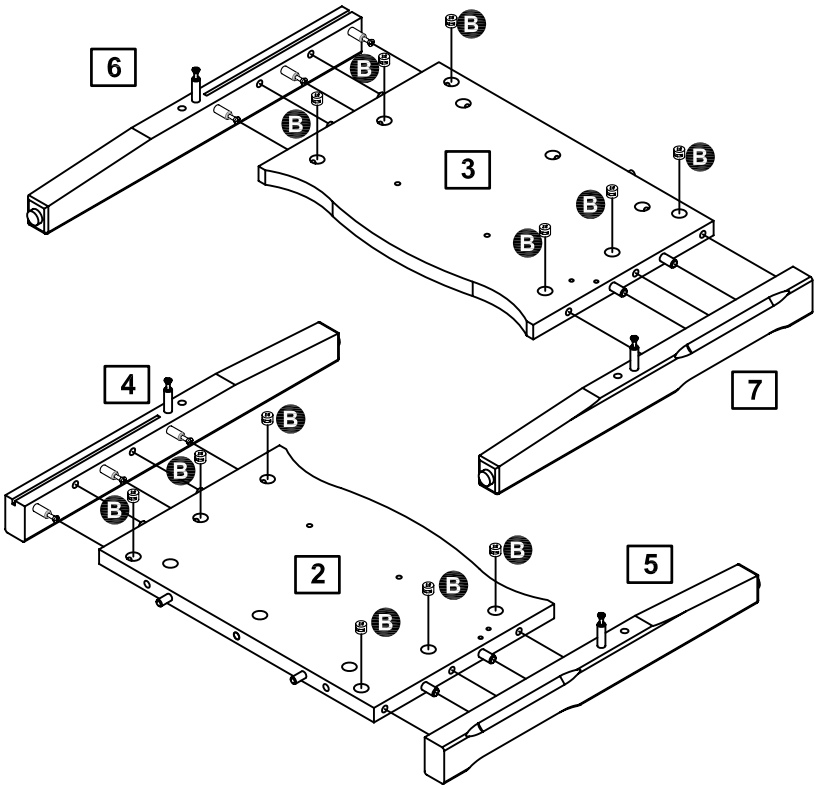

Step 4

Attach the Runner (G) to the Side panel [2], and Runner (H) to the side panel [3], fix them using Screw (D).

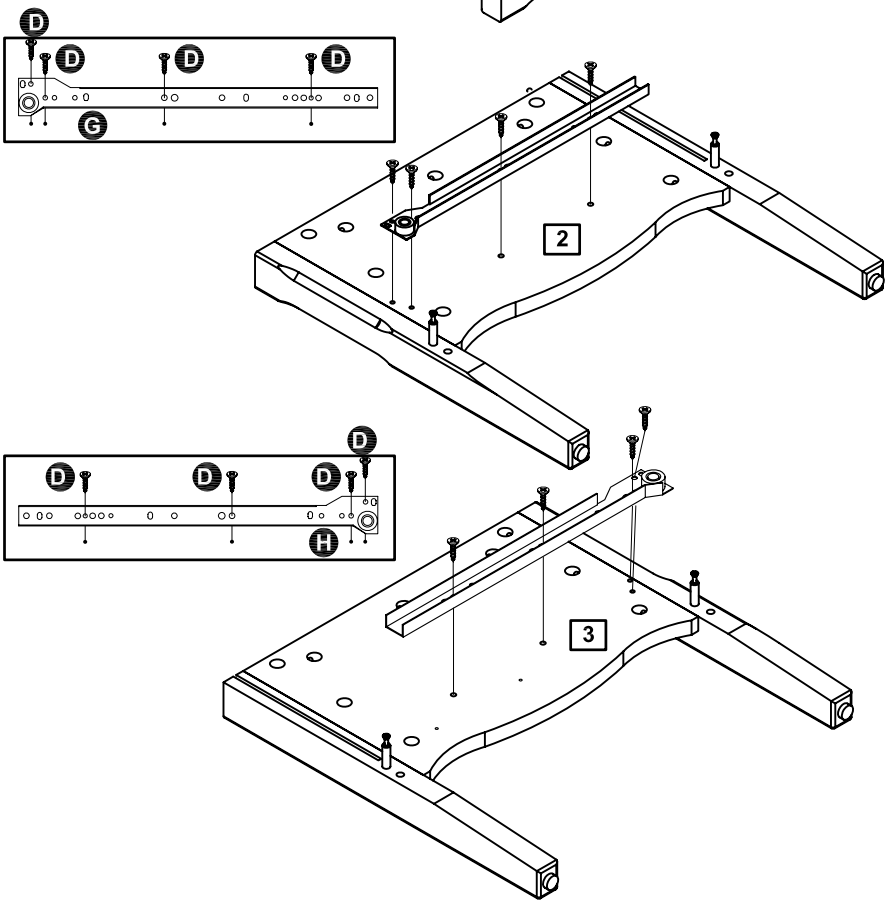


Assembly Instructions

Step 5

Screw 4 Locking pins (K) to the Drawer front [12].


Fix the Cross bar [8] to the Top [1] using Screw (F) .


Attach the Rubber bumper (Q) to the Drawer front [12].

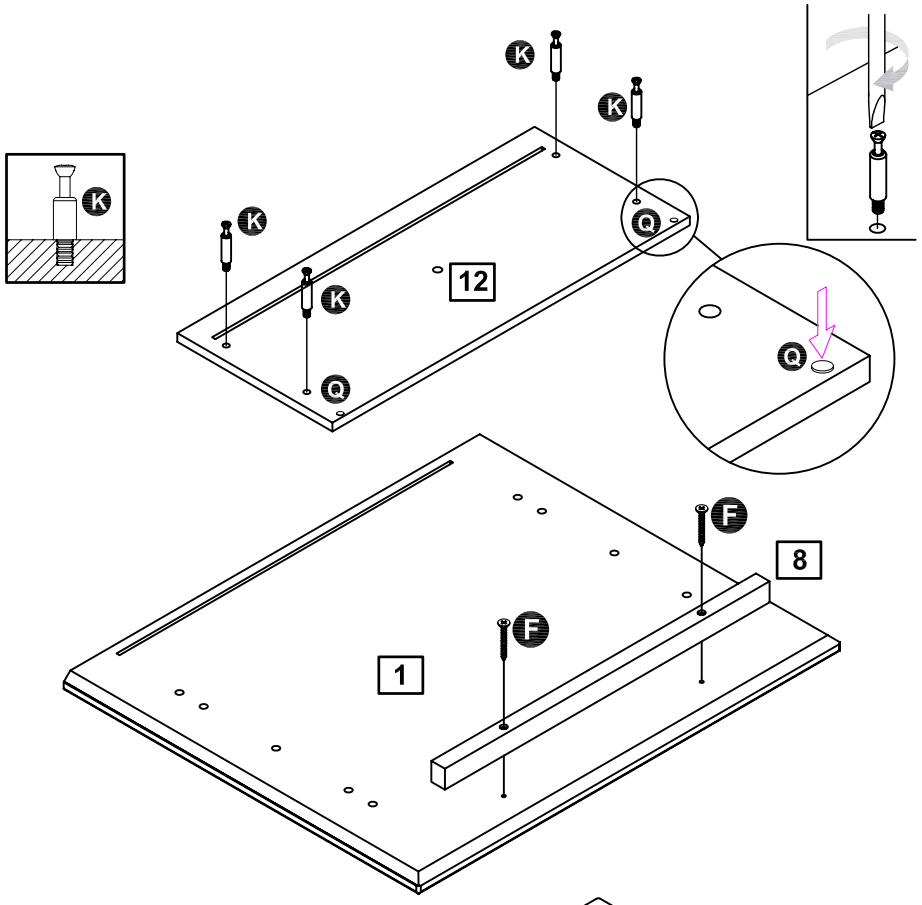

Step 6


Attach the Side frames to the Cross bars [9] and [10] fix them using Screw (B) and screwdriver.

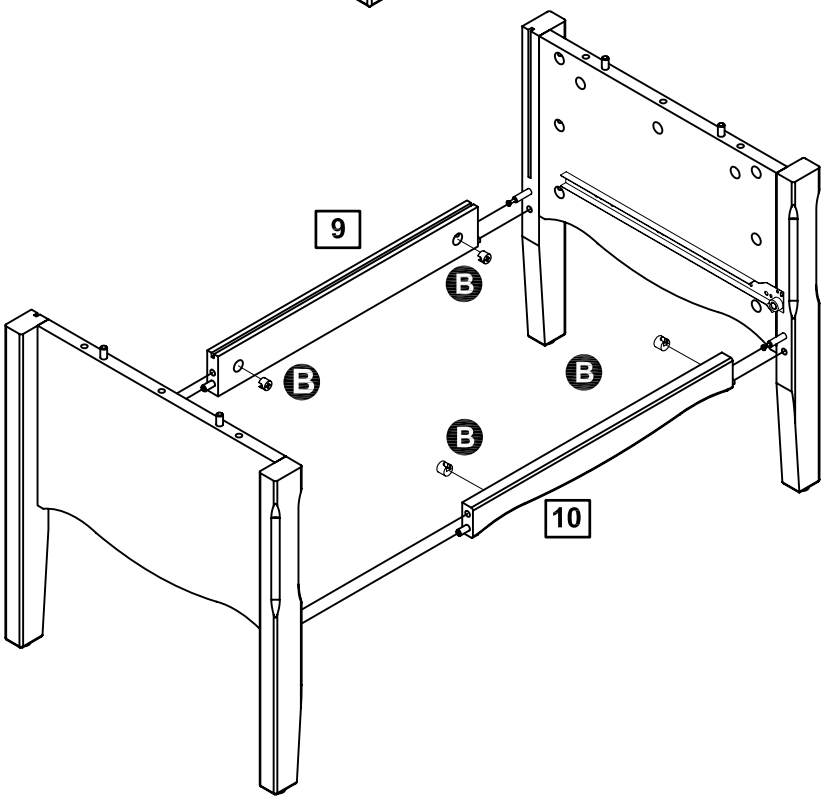

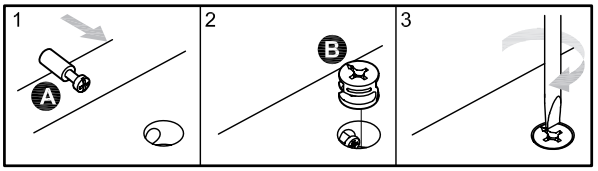


Step 7


Slip the Back panel [11] to the groove in the back legs [4] and [6] .

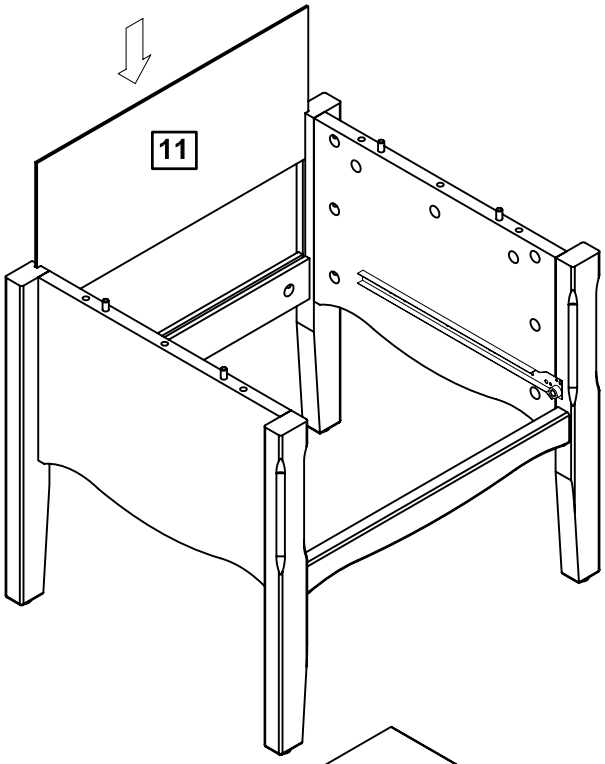

Step 8

Cover the Top [1] to the frame, fix it using Locking nut (B) and screwdriver.

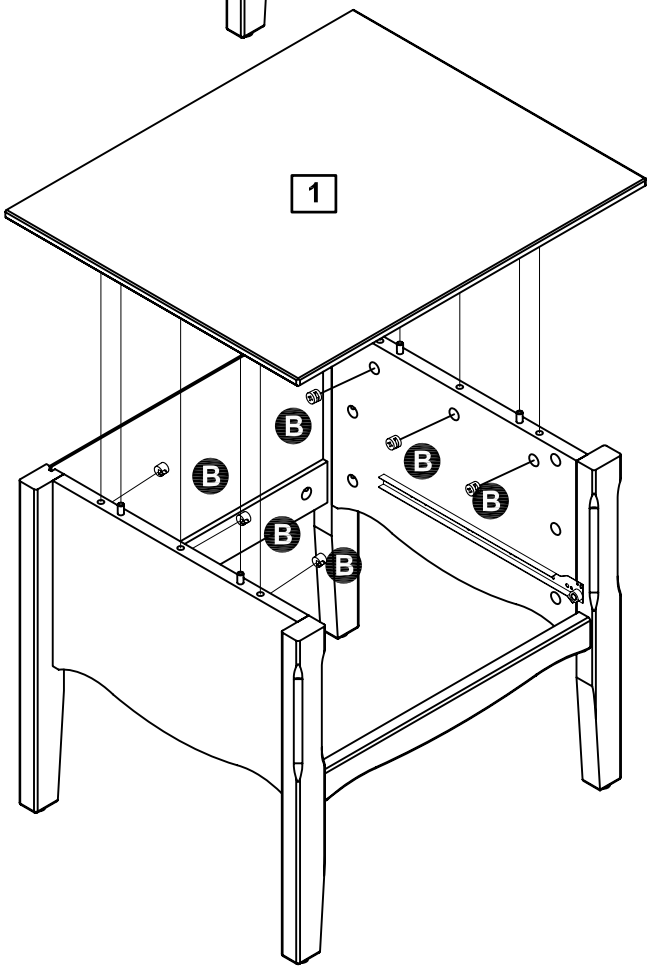

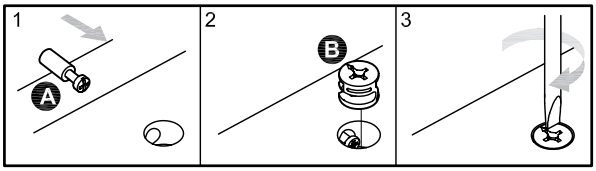


Assembly Instructions

Step 9

Attach Drawer side 13 and 14 to the Drawer front 12 . Fix them by Locking nuts L and screwdriver.


Slip the Drawer bottom 16 into the groove in the Drawer side 13 and 14, cover the Drawer back 15, fix it by Screw E.

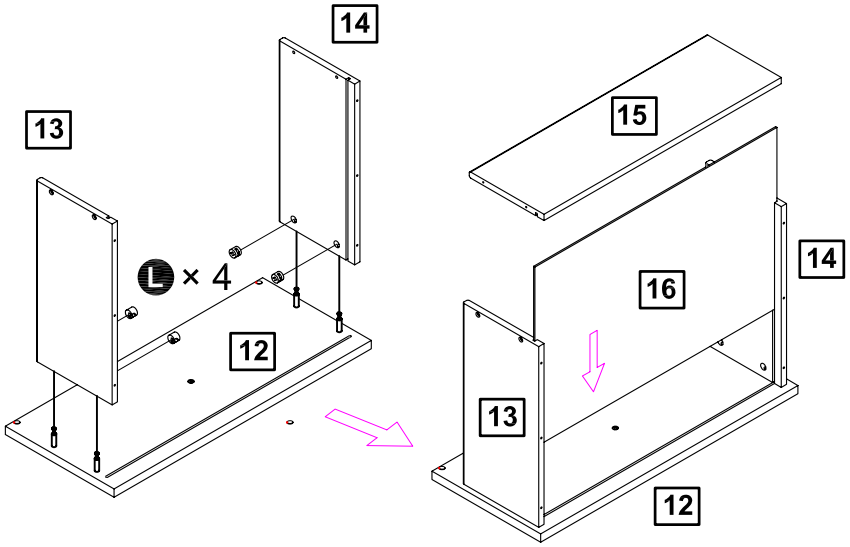

Step 10

Fix the Runner I and J to the Drawer side 13 14 using Screw D.


Fix the Handle M to the drawer front 12 using Screw N .

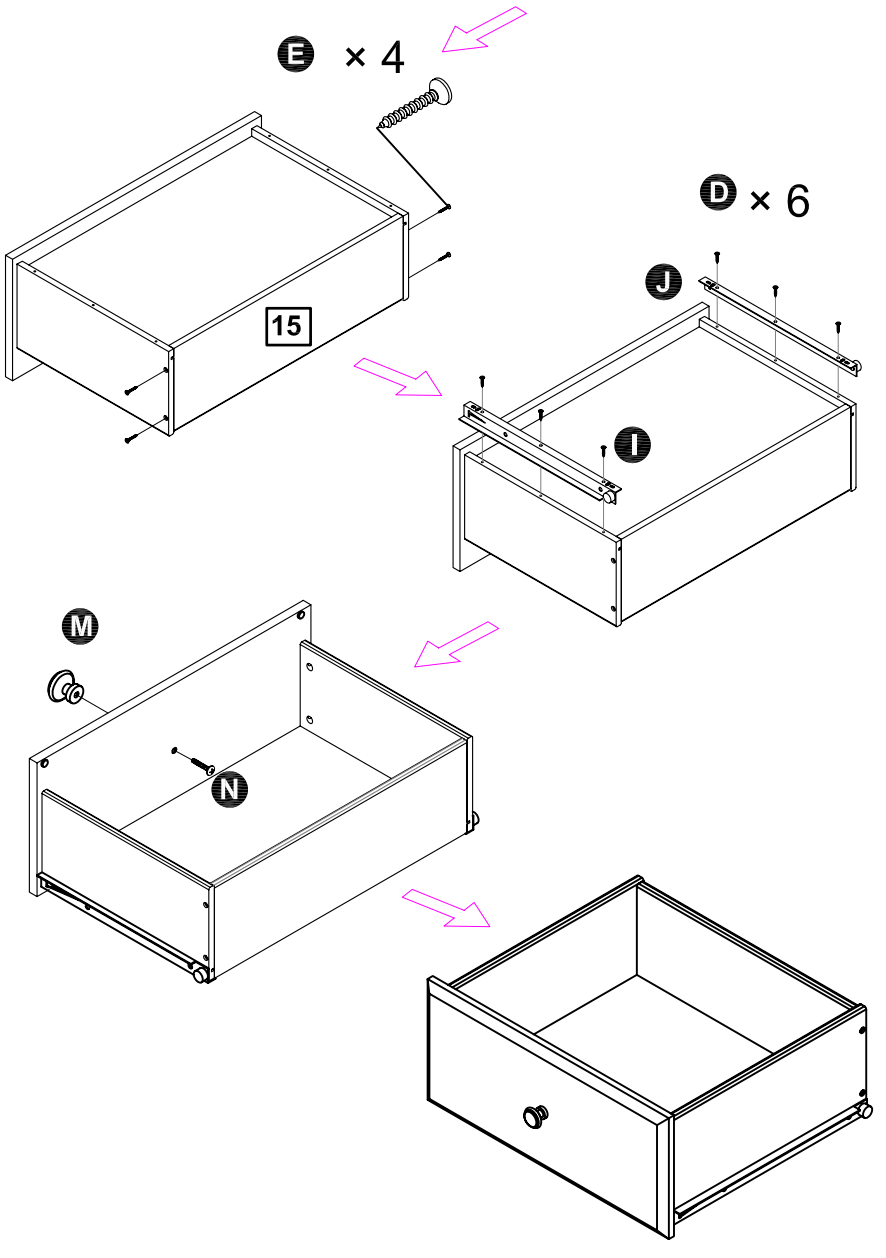

Assembly Instructions


Step 11

Fix the Support O to the back panel 11 using Screw P .

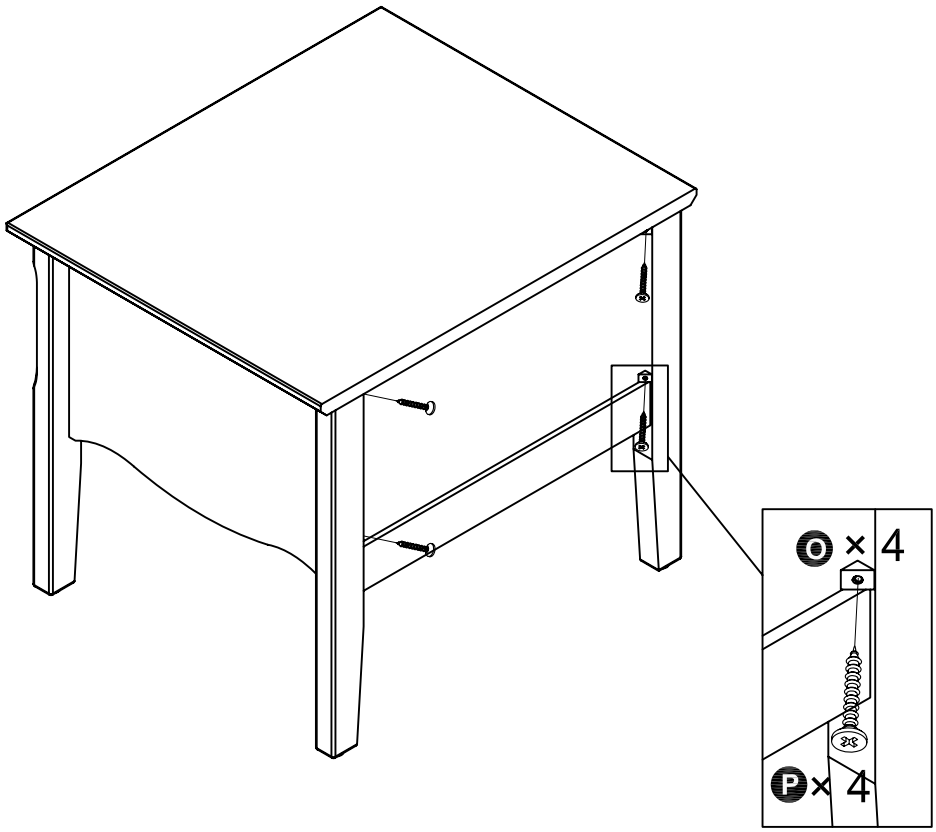

Step 12

Slip the drawer to the chest.

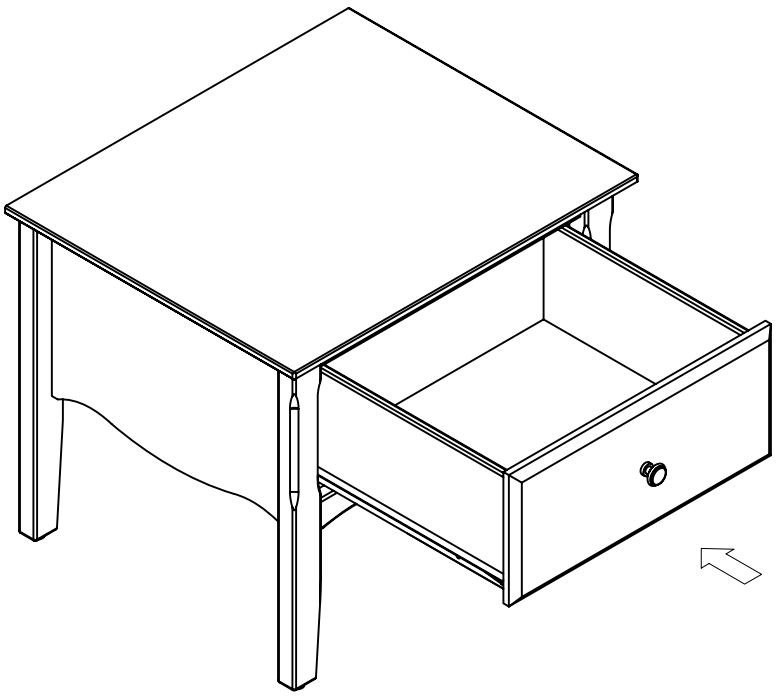

Assembly is complete.


If you need help or have damaged or missing parts,call the
Customer Helpline: Argos = 0345 6400 800

avignon 2 door wardrobe

Assembly Instructions - Please keep for future reference

259/1672

259/2561

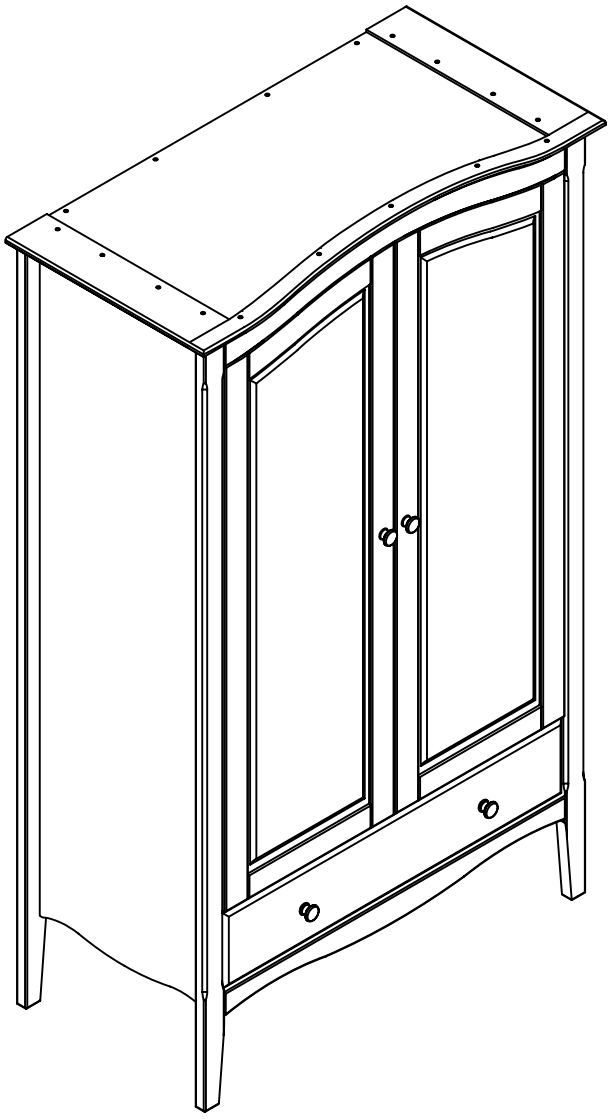

Dimensions

Width - 115cm
Depth - 56.7cm
Height -198cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts,call the
Customer Helpline: Argos = 0345 6400 800

Issue 1 - 11/06/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torgue setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


• Regularly check and ensure that all bolts and fittings are tightened properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**


Please check you have all the panels listed below

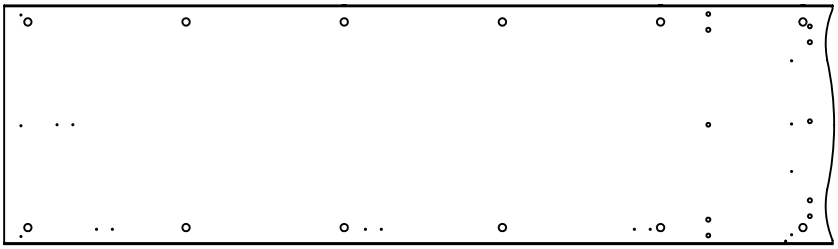

1 Side Panel, Left ×1(167.9x48.3 cm)

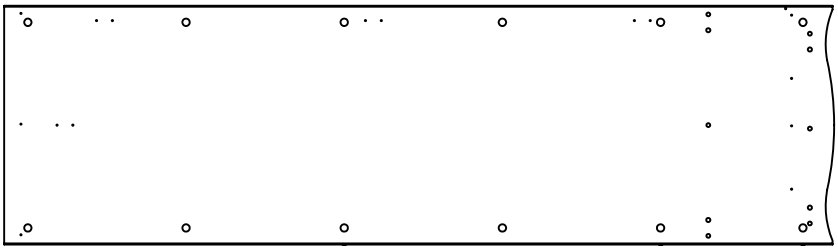


2 Side Panel, Right ×1 (167.9x48.3 cm)



3 Rear Left leg ×1 (188.9×5.7 cm)



4 Front left leg ×1 (188.9×5.7 cm)



5 Rear right leg ×1 (188.9×5.7 cm)




6 Front right leg ×1 (188.9×5.7 cm)


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**

Please check you have all the panels listed below




7 Shelf ×1 (97.6×51.5 cm)




8 Plinth bar ×1 (97.6×6.8 cm)




9 Drawer front x1 (97.2x19 cm)




10 Drawer side left ×1 (45×16 cm)




11 Drawer side right ×1 (45×16 cm)




12 Drawer back ×1 (92.7×15.7 cm)




13 Drawer bottom ×1 (93.8×44.9 cm)



14 Support rail ×2 (43.8×5.7 cm)

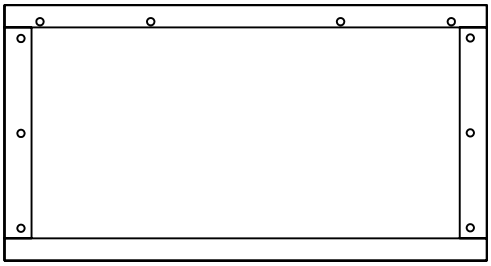

15 Bottom frame ×1 (97.6×51.7 cm)

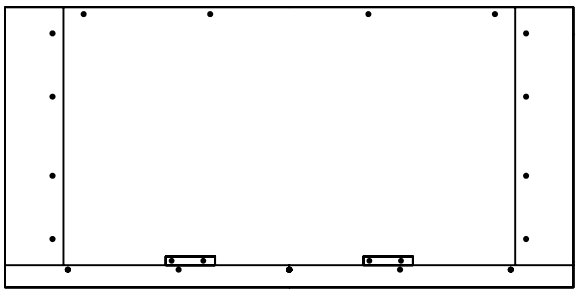


16 Top panel ×1 (115×56.7 cm)


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**


Please check you have all the panels listed below

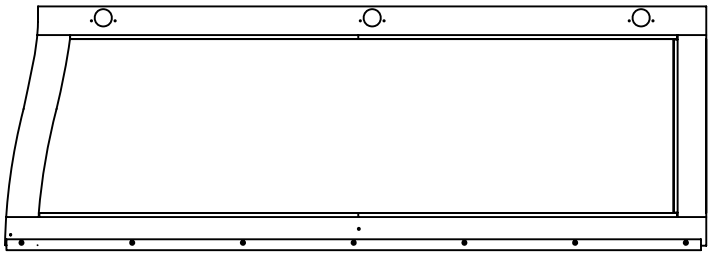


17 Door, right panel ×1 (141.9×49.3 cm)

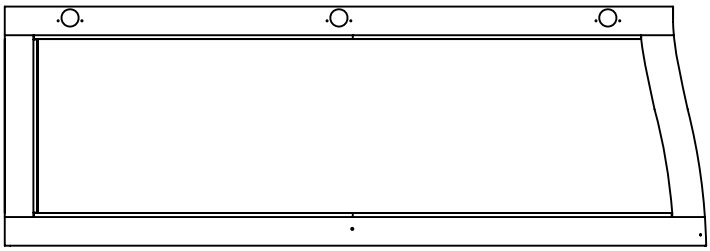

18 Door, Left panel ×1 (141.9×48.4cm)

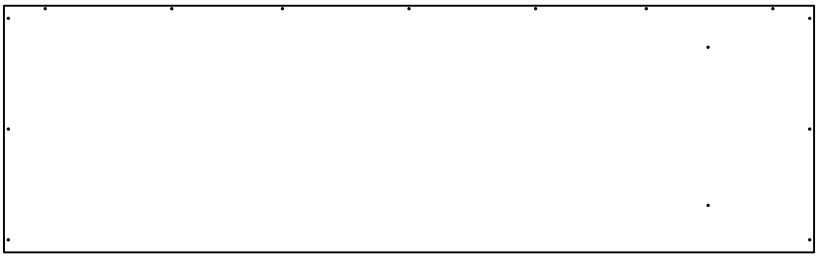

19 Back panel ×2 (163.9 × 49.9cm)














20 Horizontal bar ×1 (134.75× 5.7cm)


Components - Fittings


Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

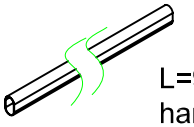A  Large locking pin x 42	B  Large locking nut x 42	C  D8*30 wooden dowel x 33
D  caps x 16	E  Ø3.5*15 screw x 56	F  Ø3.0*12 screw for Magnet x 2
G  Magnet part 2 x 2	H  hanger rail support x 2	I  L=967mm hanging rail x 1
J  D12 locking pin x 6	K  D35 cross plate x 6	L  D35 door hinge x 6
M  Rubber bumper x 2	N  Ø3.0*12 screw x 2	O  magnet part 1 x 1
P  M3.0*15 screw x 38	Q  D4*9 washer x 8	R  wall strap x 1
S  Ø3.5*25 screw x 8	T  Ø3.5*30 screw x 6	U  D12 locking nut x 6
V  screw for handle x 4	W  handle x 4	X  Runner outside left x 1
Y  Runner outside right x 1	Z  Runner Inside left x 1	AA  Runner Inside right x 1


Tools required


Phillips screwdriver (medium & large)


Flatblade screwdriver (medium)


Small hammer

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1


a.Insert 6 Locking pins (A) into rear left leg [3]

b.Repeat all the steps to the other legs [4] [5] and [6]

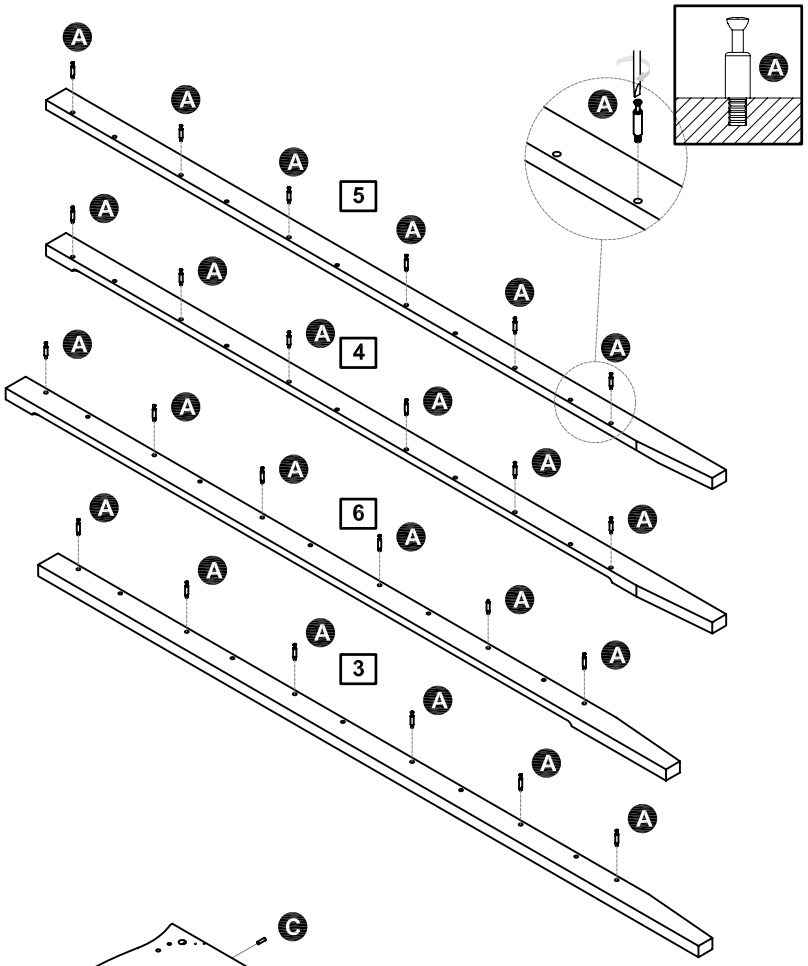

Step 2

a. Insert 10 wooden dowel (C) into Side panel, Left [1].
b. repeat to Side panel, Right [2].

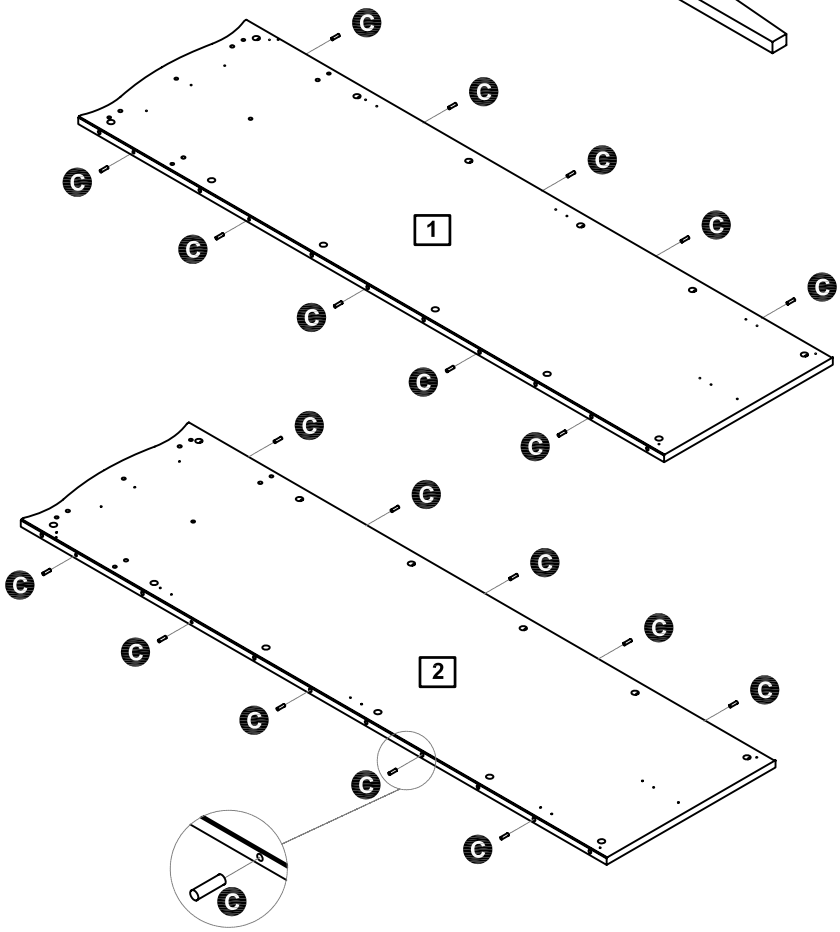

Assembly Instructions


Step 3

a.Attach legs 4 and 3 to Side panel 1 by 12 Locking nuts B, then add 8 Cap D on 8 locking nuts which are visible after assembly is complete.
b. Repeat above steps to attach legs 6 and 5 to Side panel 2.

Step 4

a. Insert 6 Large locking pin A into Side panel 1
b. Fix 1 runner X onto Side panel 1 by 5 Screw E
c. Fix 3 Cross plate K onto Side panel 1 by 12 Screw E
d. Fix hanger rail support H onto Side panel 1 by 2 Screw E


e. Repeat all steps to Side panel 2 .

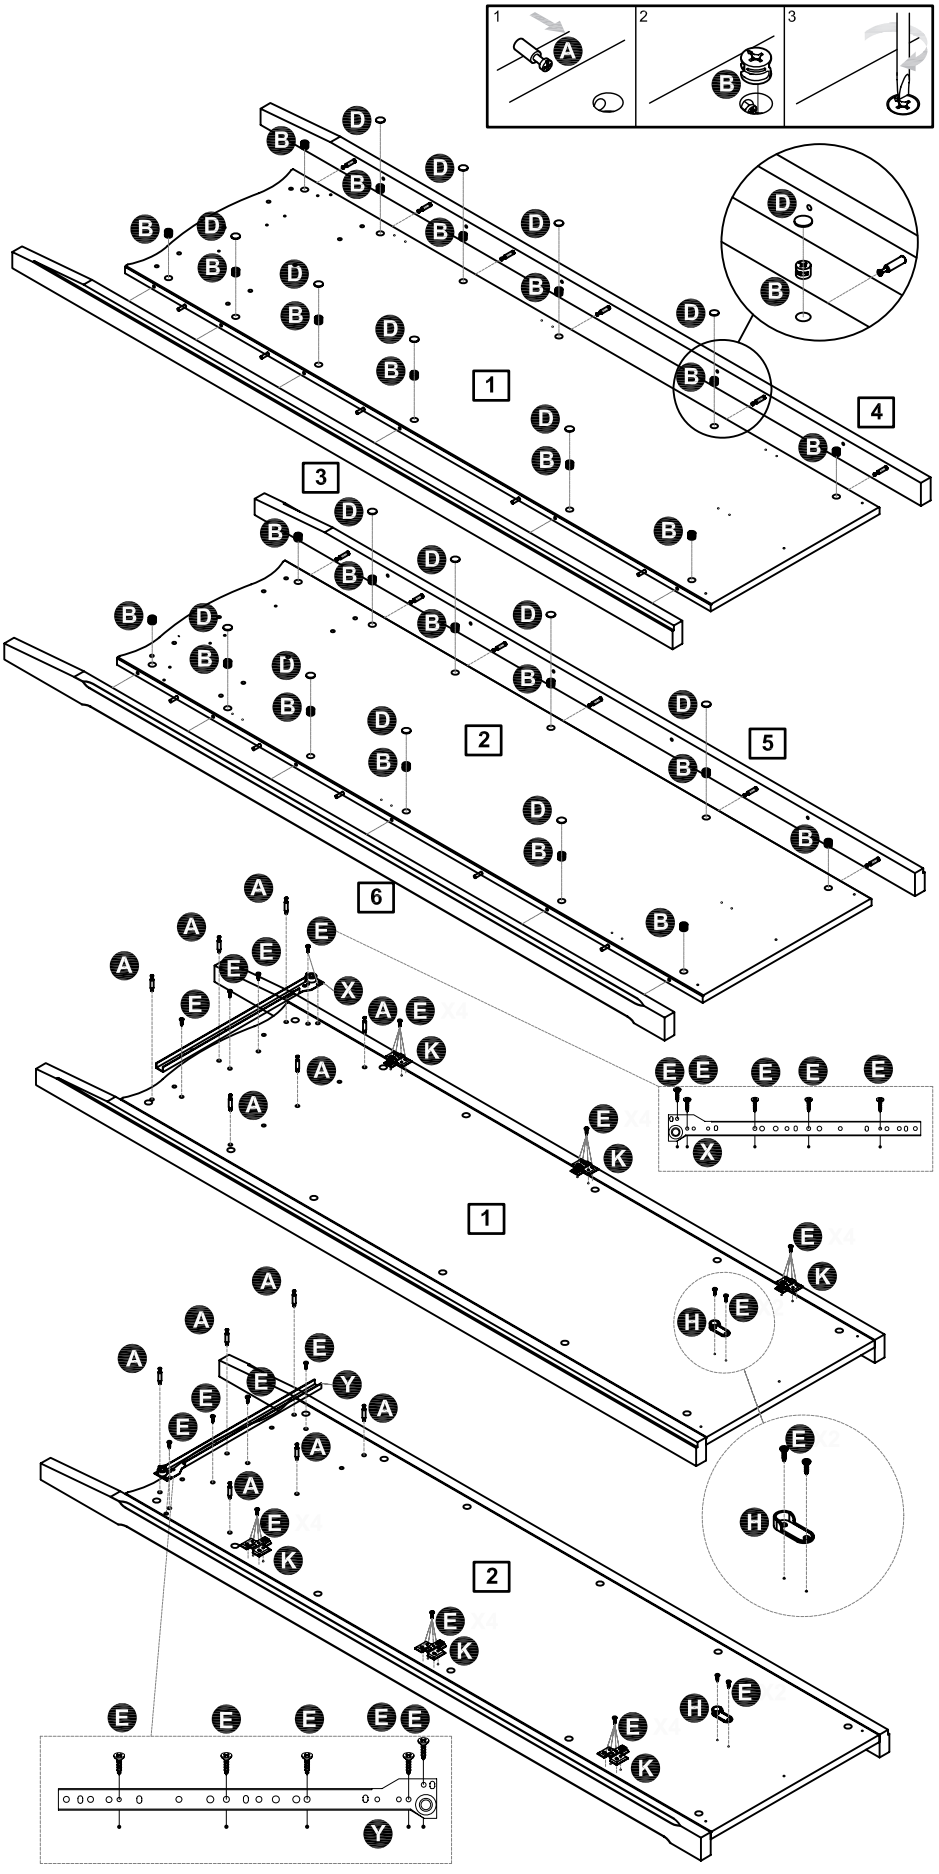

Assembly Instructions


Step 5


a. Fix Magnet part 1 O onto Top panel 16 by 2 Screw N
b.Insert 1 Large locking pin A into Top panel 16

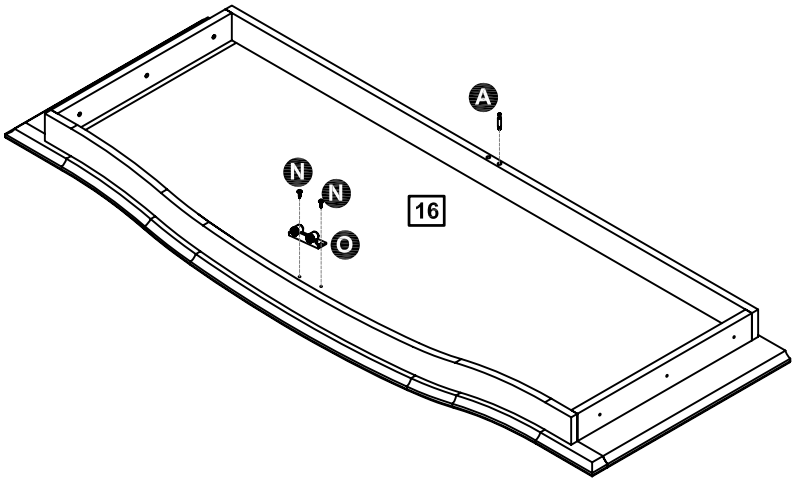


Step 6

a. Insert 7 Wooden dowels C into Bottom frame 15
b. Insert 4 Large locking pin A into Plinth bar 8
c. Insert 1 Large locking pin A into Shelf 7
d. Insert 4 Wooden dowel C into Shelf 7

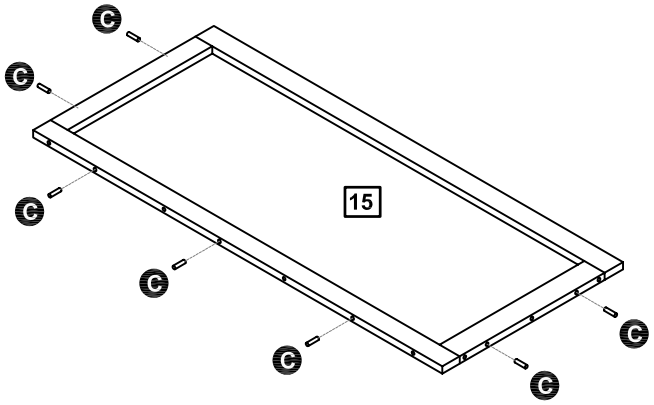

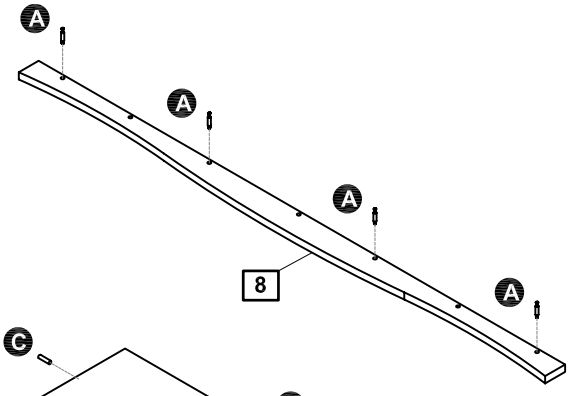

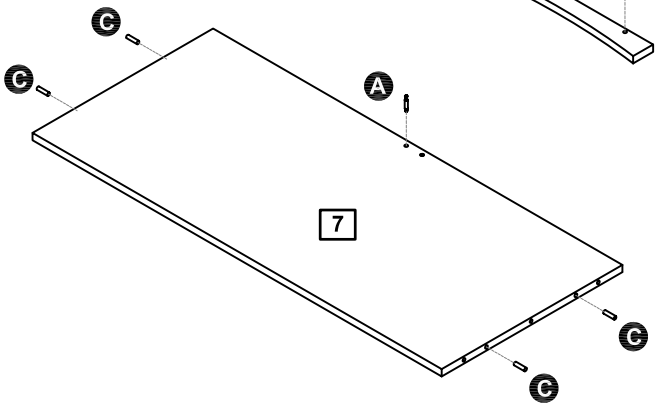

Assembly Instructions


Step 7

a.Fix 1 magnet part G onto Door left panel 18 by 1 Screw F
b. Fix 3 door hinge L onto Door left panel 18 by 6 Screw E
c. Repeat all steps to Door right panel 17

Step 8

a. Insert 2 Wooden dowel C into Horizontal bar 20.


b. Insert 6 Screw J into Drawer front 9
c. Fix runner Z onto Drawer side left 10 by Screw E
d. Fix runner AA onto Drawer side right 11 by Screw E

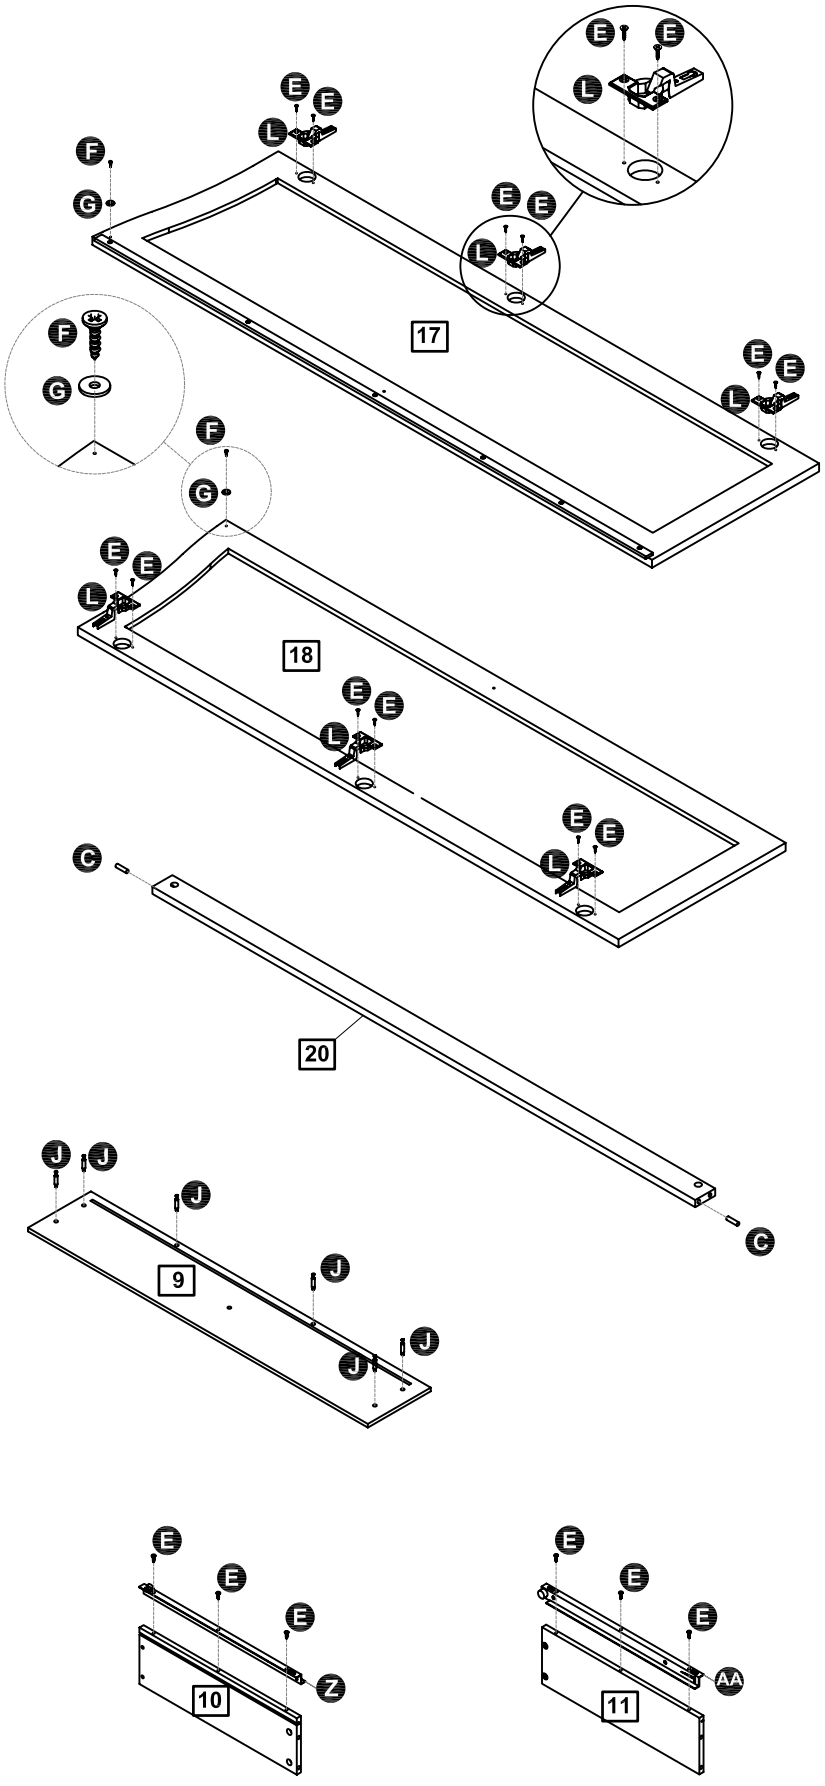

Assembly Instructions


Step 9


a.Attach Drawer side 11 & 10 to Drawer front 9 by 4 Locking nut U
b.Attach 2 Support rail 14 to Drawer front 9 by 2 locking nut U

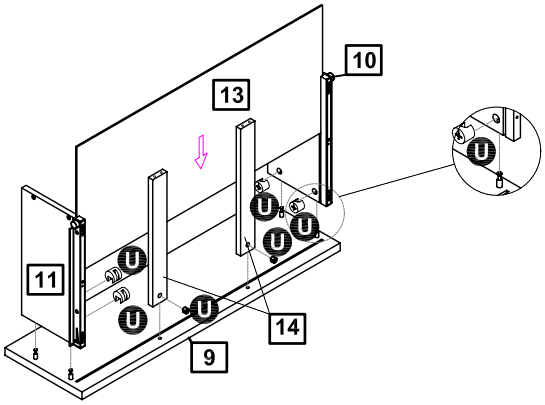

Step 10

a. Attach Drawer back 12 by 8 Screw S
b. Fix 2 handle W onto drawer front by 2 Screw V

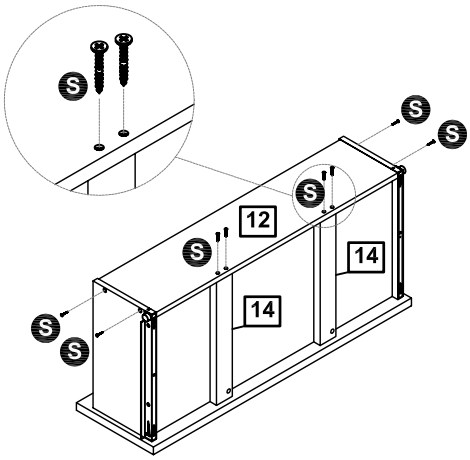


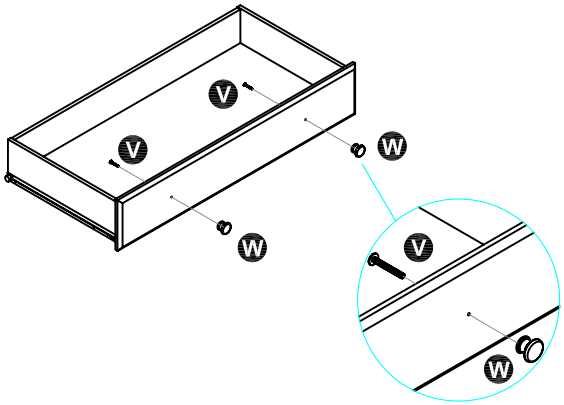


Assembly Instructions

Step 11


a.Attach Plinth bar 8 to panel 15 by 4 locking nut B
b.Attach Shelf 7 and Bottom frame 15 onto Side panel 2 by 6 Large locking nut B

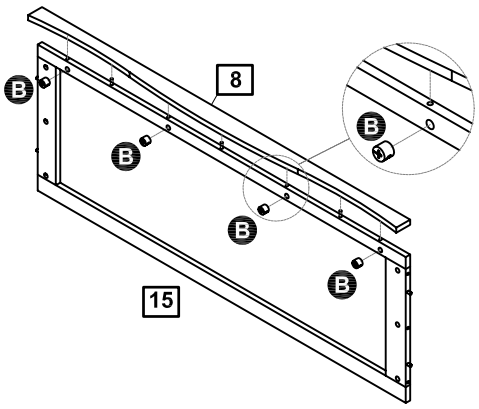

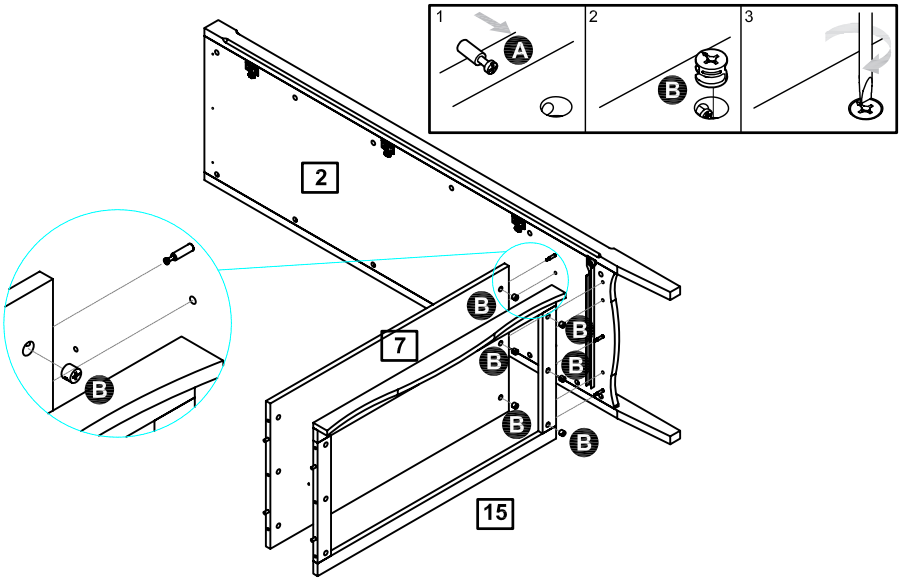

Step 12


Attach Shelf 7 and Bottom frame 15 onto Side panel 1 by 6 Large locking nut B

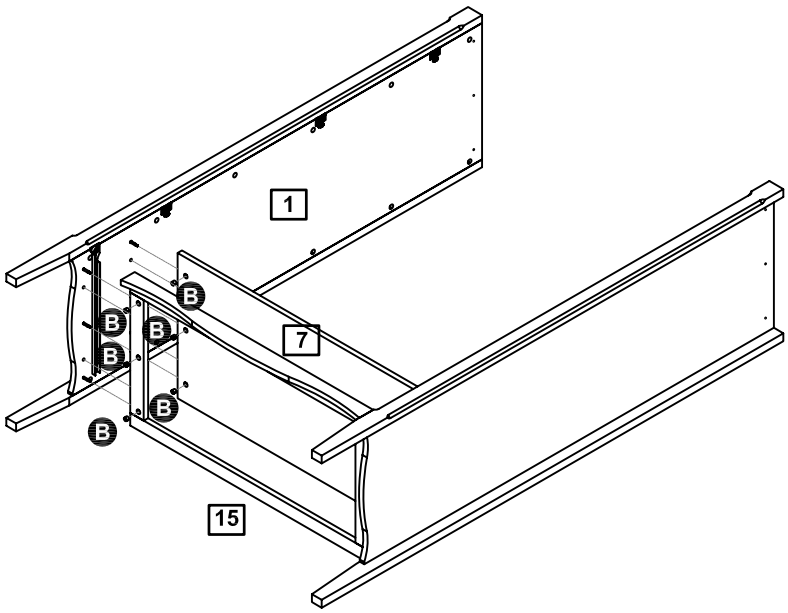

Assembly Instructions


Step 13

a.Attach Horizontal bar 20 onto Shelf 7 and fix by Large locking nut B
b.Attach Top panel 16 to the unit
c. Fix Top panel 16 and Horizontal bar 20 by 1 Large locking nut B

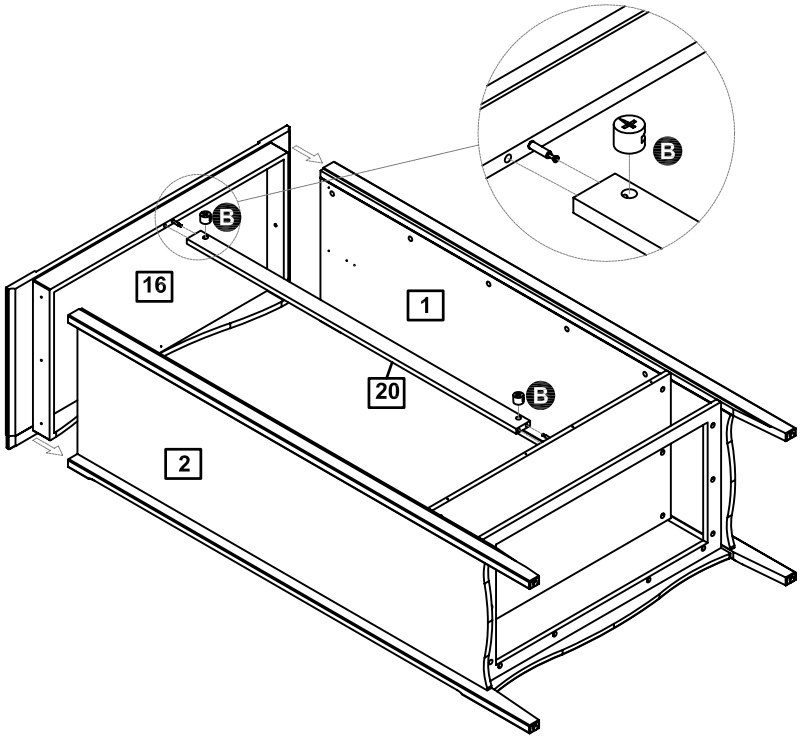

Step 14


Screw 6 Screw T to Top panel 16

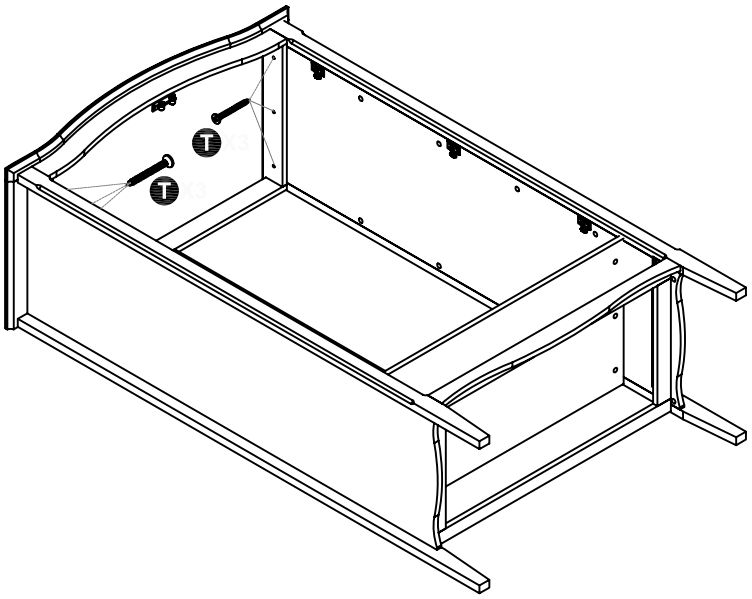

Assembly Instructions


Step 15

a.Fix 2 Back panel 19 to the unit by 37 Screw P, the connection part of 2 Back panel need add 7 Washer Q
b. Fix wall strap R by 1 washer Q and 1 screw P

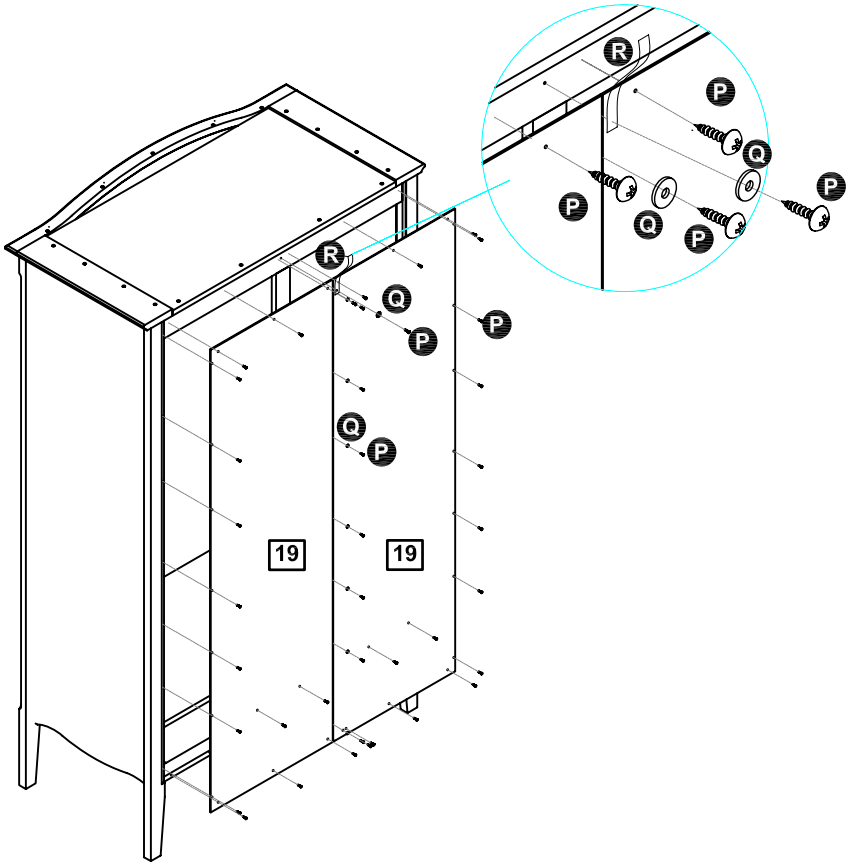

Step 16


Install hanging rail I to the unit.

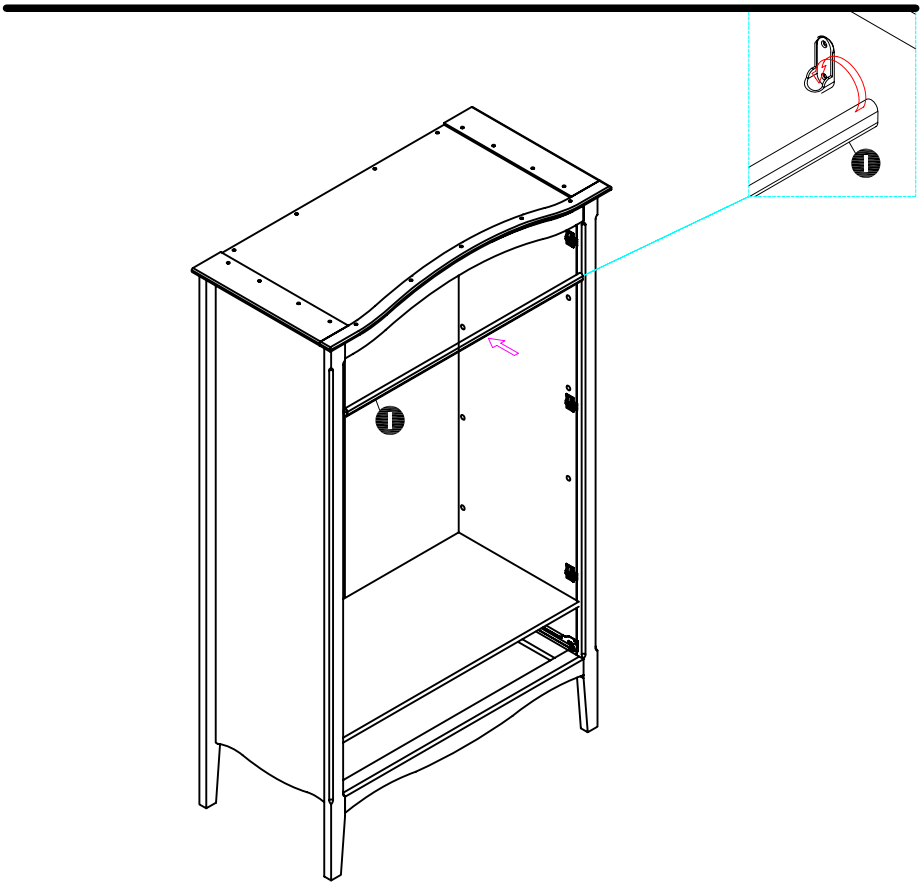

Assembly Instructions


Step 17

a. With help, slot Door hinges (L) onto Cross Plate (K)
b. Tighten screw shown to lock hinges in position
c. repeat a.b for opposite door.
d. fix 2 Handles (W) onto the Doors by 2 Screw (V)

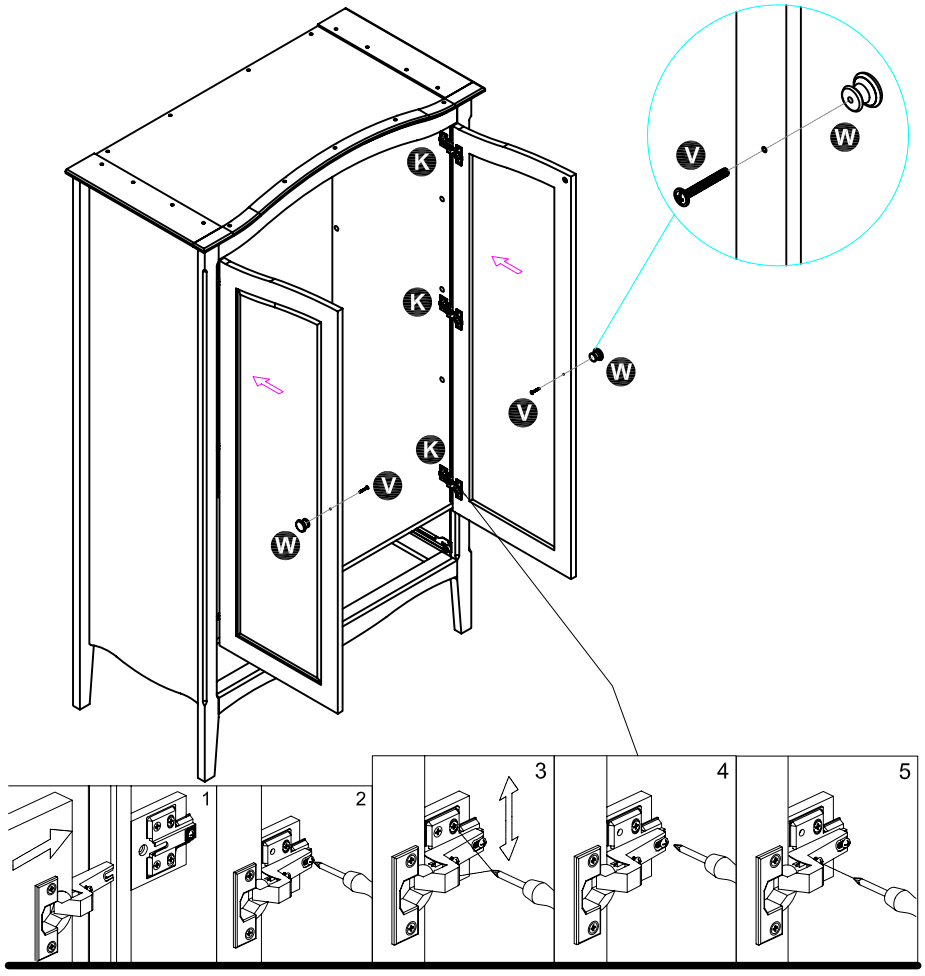

Step 18

a. Attaching Rubber bumper (M) to the inner side of the Drawer front as show on the picture
b. Insert drawer by carefully put in the drawer

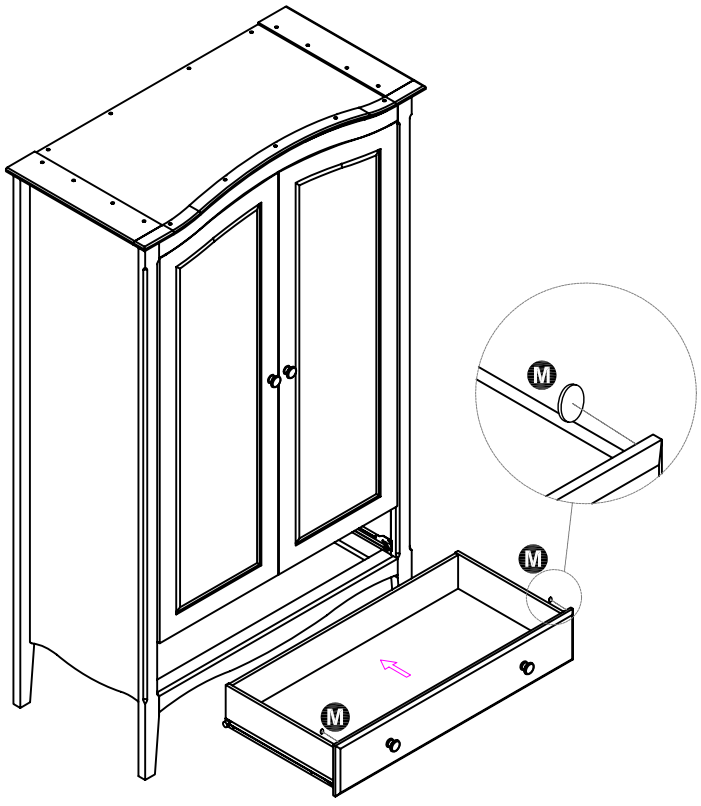

Step 19

Fixing to wall

It is recommended that the wardrobe is fixed to a wall.

With help, move the Bookcase into position.

Warning:
The wardrobe is heavy. Lift with care.


Mark fixing hole on wall and remove Wardrobe.

Drill hole and insert wall plug.

Warning:
Before drilling, check wall for hidden pipes and cables.

Reposition Bookcase and fix wall strap using screw.


Assembly is complete.

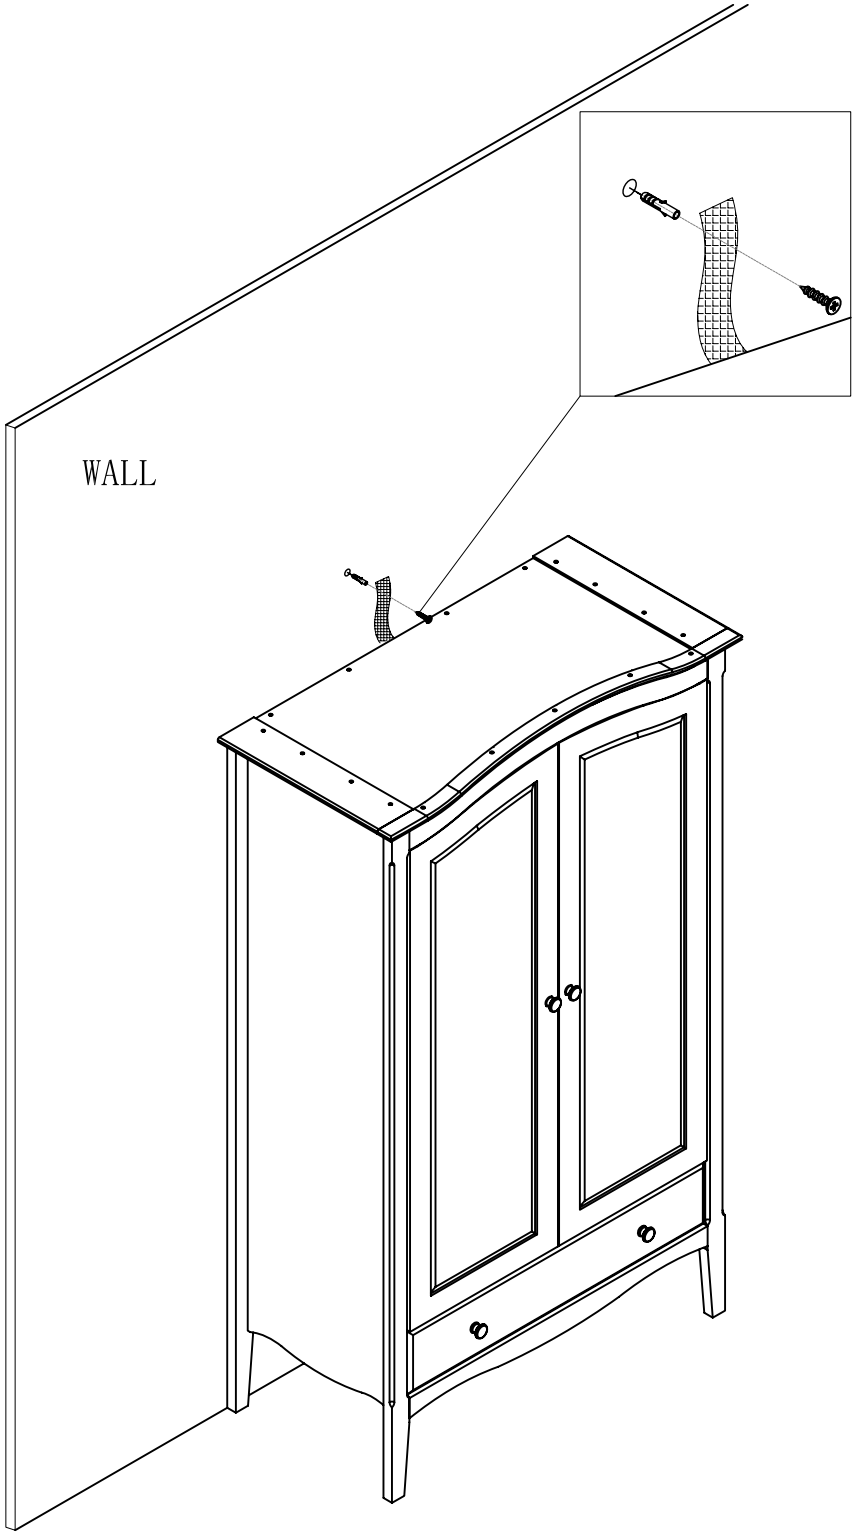

If you need help or have damaged or missing parts,call the
Customer Helpline: Argos = 0345 6400 800

A Guide to

Wall Mounting & Fixings

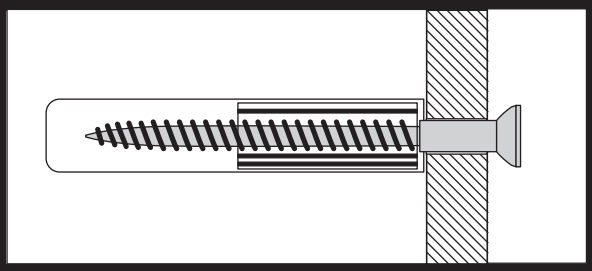

IMPORTANT:
When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


HINTS:

1) General Rule ⚠ Always use a larger screw and wall plug if you are not sure.
2) Ensure you use the recommended drill bit to match the wall plug and hole size.
3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug
General Wall Materials

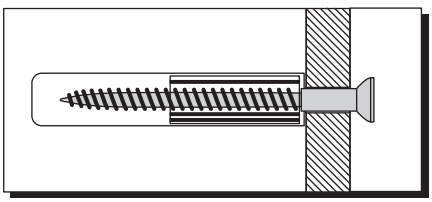


These come in various sizes and are made from plastic or sometimes wood fiber.

No.2 "General Purpose" Wall Plug
Aerated / Breeze Block

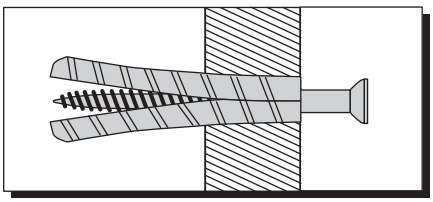


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.
For light loads, a General Purpose Plug can be used.

No.3 "Shield Anchor" Wall Plug
Heavy Loads

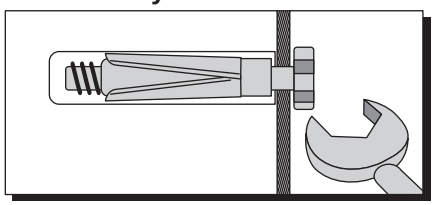


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No.4 "Cavity Fixing" Wall Plug

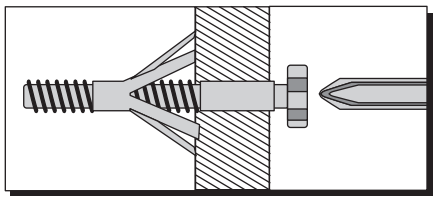


For use with plaster board partitions or hollow wooden doors.

No.5 "Cavity Fixing - Heavy Duty" Wall Plug

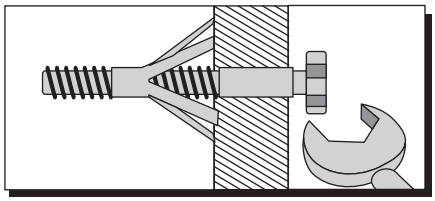

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No.6 "Hammer Fixing" Wall Plug

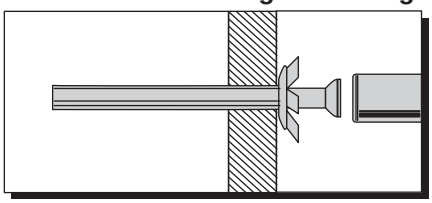

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE

⚠ **SAFETY**
Always check the fitting and location to ensure your safety in and around the home.

⚠ **FITTING**
From time to time check the fitting to ensure the wall plugs or screws do not become loose.