
Ellingham - display unit

Assembly Instructions - Please keep for future reference | 305/6824

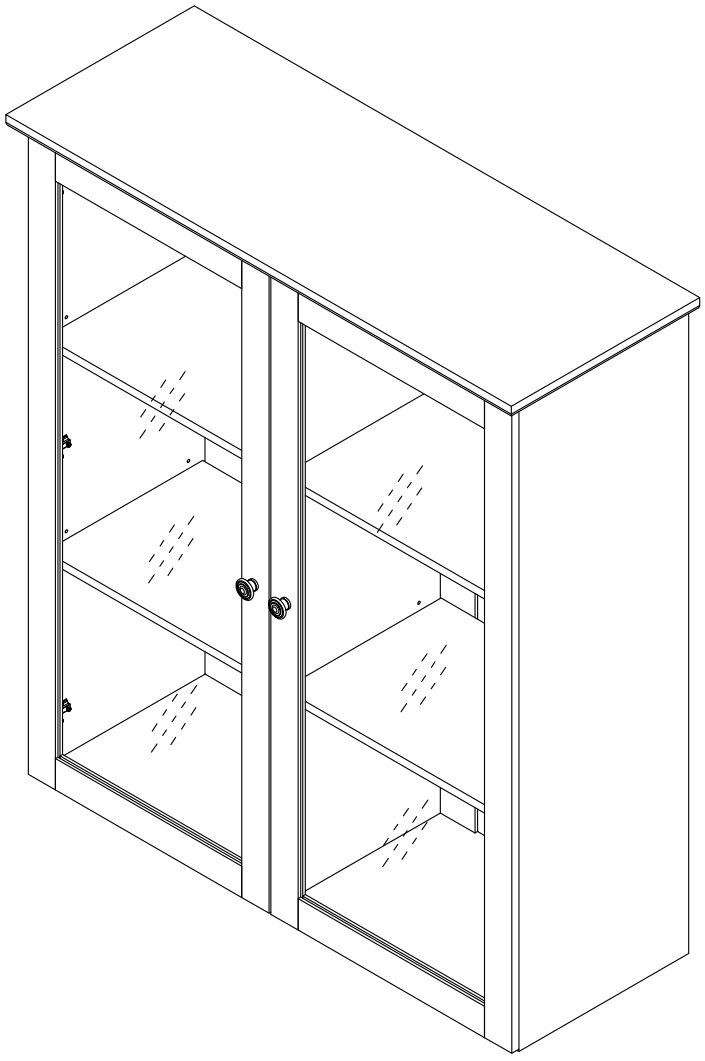

Dimensions

Length - 106cm
Width - 39cm
Height - 120.5cm

Important - Please read these instruction fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 6400800**

Issue 1 - 03/30/2015

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

•Remove all fittings from the plastic bags and separate them into their groups.

•Keep children and animals away from the work area, small parts could choke if swallowed.

•Make sure you have enough space to layout the parts before starting.

•Retain these instructions for future reference

•Do not stand or put weight on the product during assembly, this could cause damage.

•Assemble the item as close to its final position (in the same room) as possible.

•Assemble on a soft level surface to avoid damaging the unit or your floor.

•Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

•Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

•From time to time check that there are no loose screws on this unit.

•This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


• Regularly check and ensure that all bolts and fittings are tightened properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0845 6400800**


Please check you have all the panels listed below

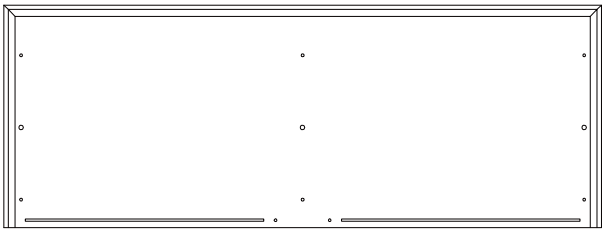

1 Top panel (106x39.5cm)

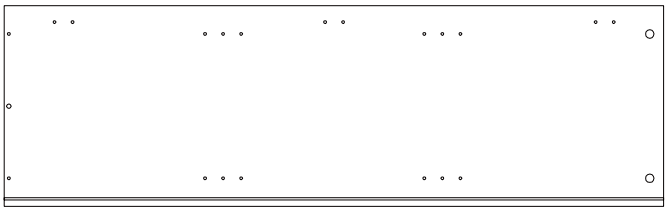


2 Left side panel (117x35.6cm)

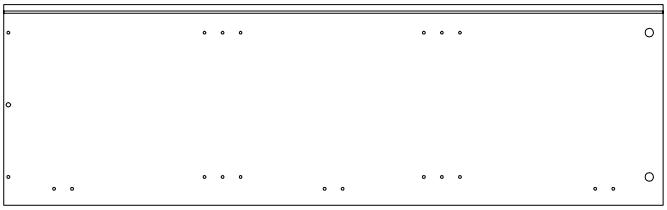


3 Right side panel (117x35.6cm)




5 Shelf panel x 4 (48.2x33cm)

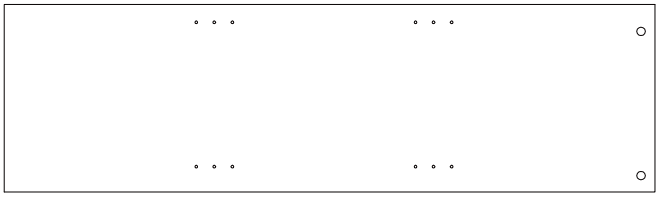


4 Divider panel (115.4x33.3cm)

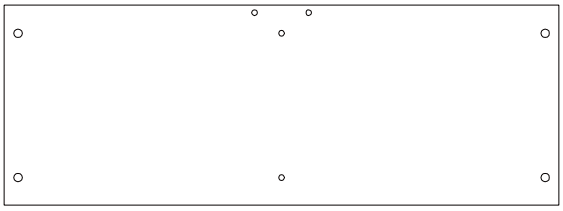


6 Bottom panel (98.4x35.5cm)



7 Middle back panel (115.4x16cm)

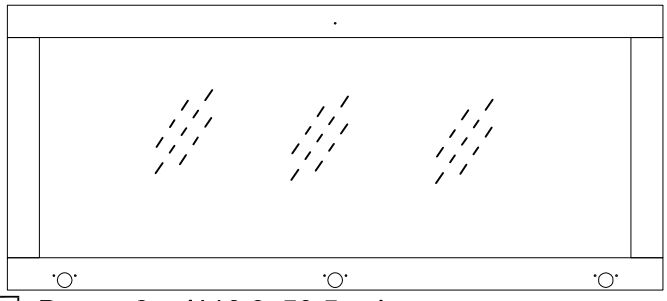

8 Door x2 (116.3x50.5cm)









9 Back panel x 2 (116.5x42.3)

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A  Ø7x33mm Connecting bolt x 12	B  Ø15x22mm Locking cam x 12	C  Ø8x30mm Wooden dowel x 8
D  Ø5x50mm Screw x 7	E  Ø3.5x12mm Screw x 12	F  Ø4x28mm Screw x 10
G  Ø3.5x16mm Screw x 8	H  M4x22 Screw x 2	I  Ø33mm Knob x 2
J  Hinge base x 6	K  Hinge x 6	L  Shelf pin x 16
M  Rear panel connector x 8	N  90x90mm Bracket x 2	O  Ø16x3mm Cap x 6
P  Ø6x29mm Wall plug (for solid wall only) x 2	Q  Wall strap x 2	R  Ø5x12mm Screw x 2
S  Ø8x1mm Pad x4		

Tools required


Phillips screwdriver (medium & large)



Flatblade screwdriver (medium)

7mm Suitable drill bit (for use with wall plug)

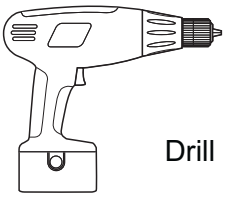

Drill


Small hammer


Ruler/tape measure


Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws





The screws length is measured from the head to the point (30mm screw shown).

Assembly Instructions

Step 1


Fitting dowels and cams
Insert wooden dowels Ⓒ and locking cams Ⓑ into divider panel 4 .
Note: The slot position of locking cams Ⓑ should be as shown.

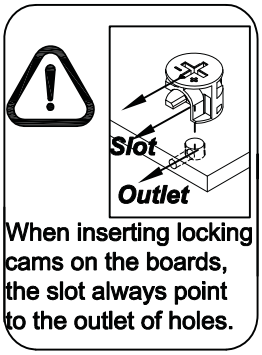

When inserting locking cams on the boards, the slot always point to the outlet of holes.

Step 2


Fitting cams
Insert locking cams Ⓑ into middle back panel 7 .
Note: The slot position of locking cams Ⓑ should be as shown.

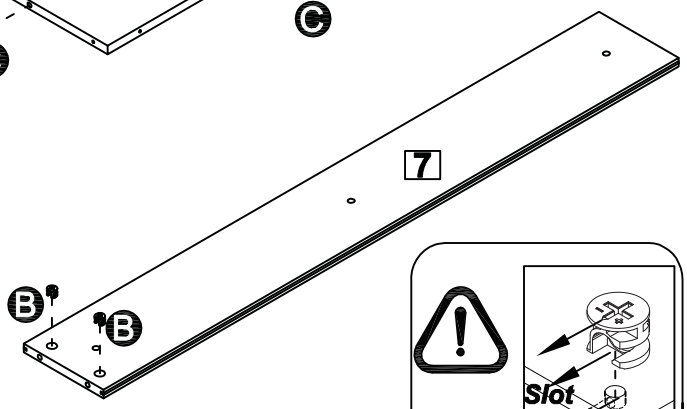

When inserting locking cams on the boards, the slot always point to the outlet of holes.

Step 3

Attaching panels
Attach middle back panel 7 onto divider panel 4 with screw Ⓓ using screw driver.

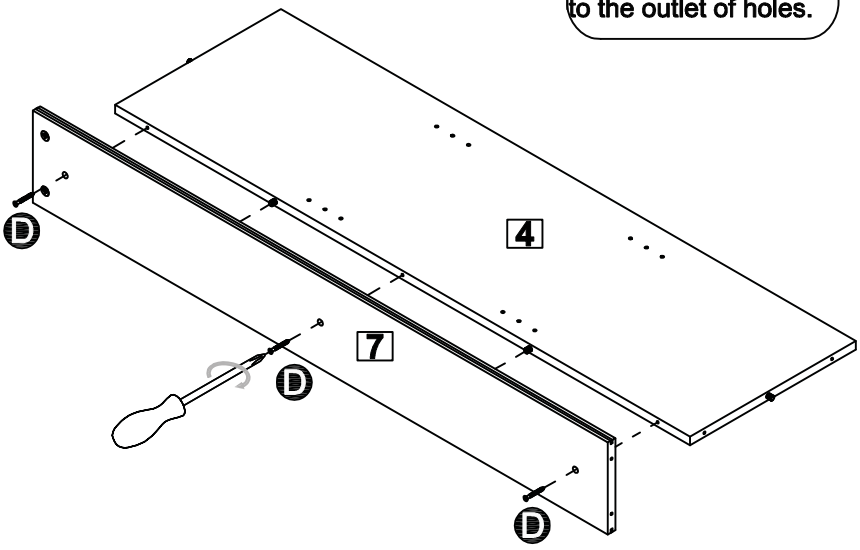


Assembly Instructions

Step 4

Fitting dowels and cams


Insert wooden dowels Ⓒ and locking cams Ⓑ into bottom panel 6 .
Note: The slot position of locking cams Ⓑ should be as shown.

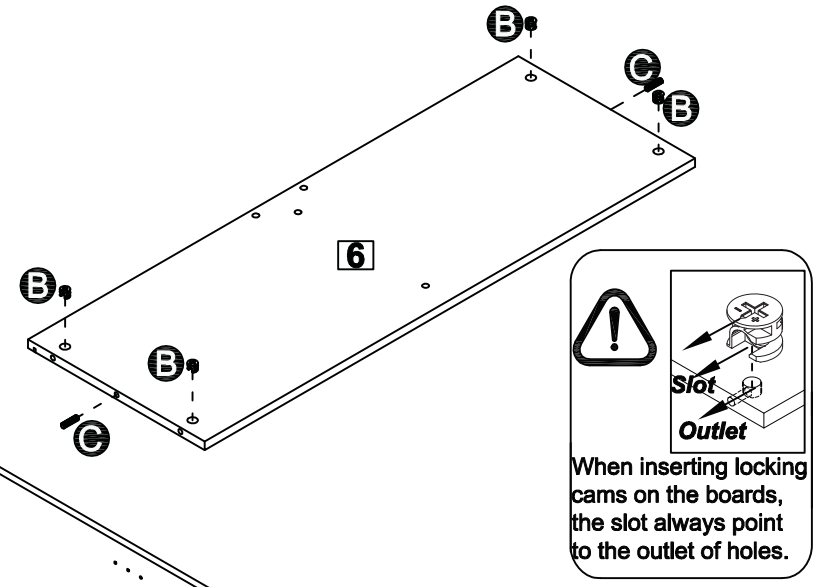

Step 5

Attaching panels


Attach middle back panel 7 & divider panel 4 onto bottom panel 6 with screws Ⓓ using screw driver.

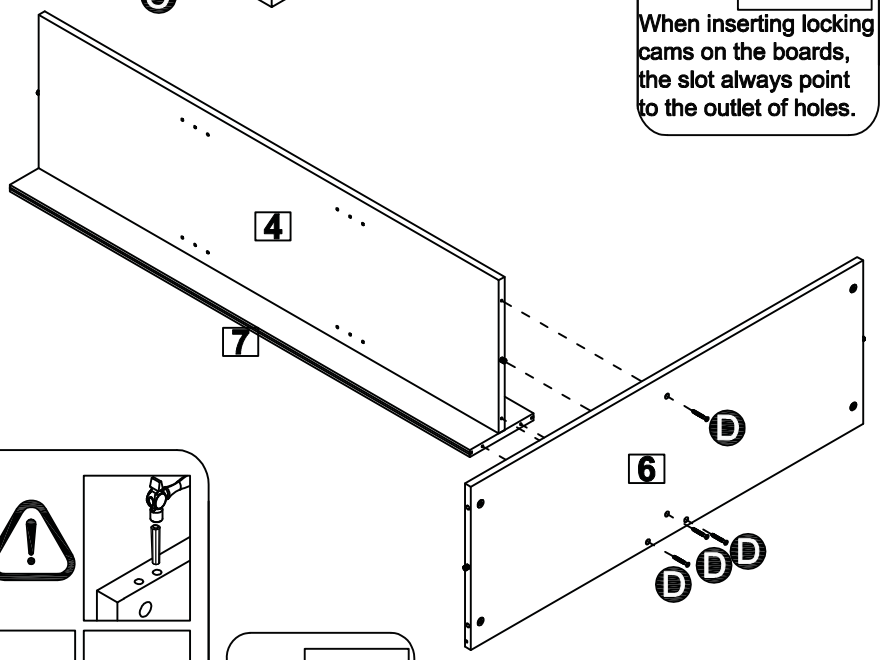

Step 6

Fix fittings

a: Fix hinge bases Ⓙ on left side panel 2 with slot pointing outward.
b: Fix connecting bolts Ⓐ on left side panel.
Note: Insert bolt Ⓐ as far as shown. Do not over tighten.
c: Insert wooden dowels Ⓒ and locking cams Ⓑ into left side panel 2 .
Note: The slot position of locking cams Ⓑ should be as shown.

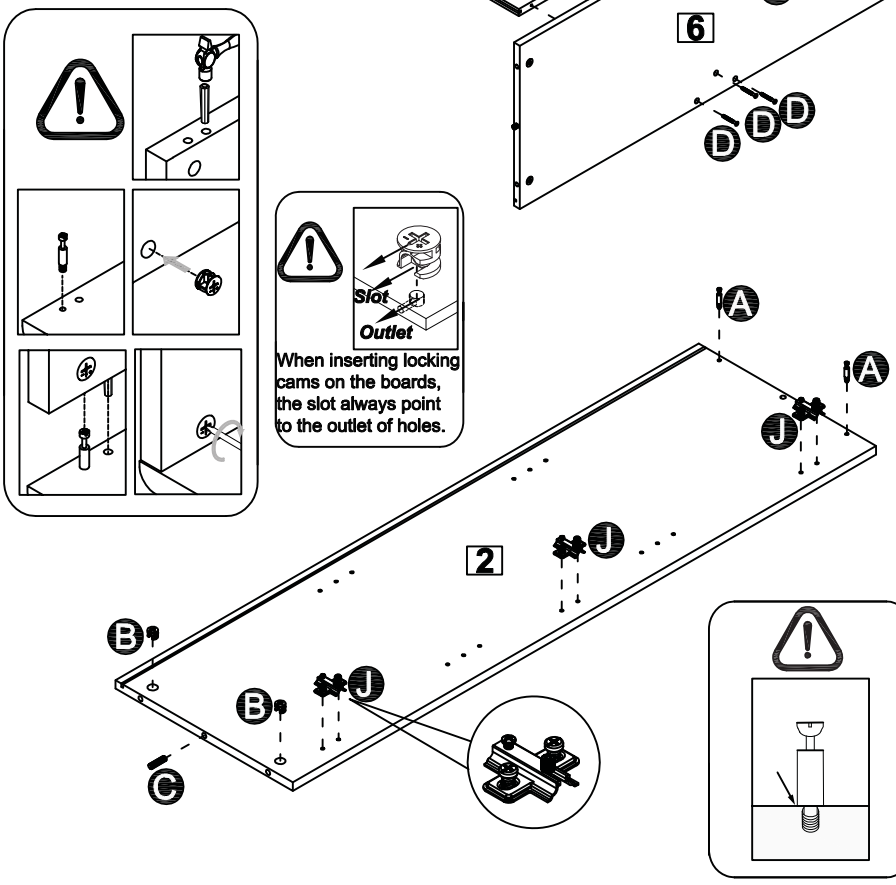

Assembly Instructions

Step 7

Fix fittings


a: Fix hinge base Ⓙ on right side panel 3 with slot pointing outward.

b: Fix connecting bolts Ⓐ on right side panel 3 .

Note:Insert bolt Ⓐ as far as shown. Do not over tighten.

c: Insert wooden dowels Ⓒ and locking cams Ⓑ into right side panel 3 .

Note: The slot position of locking cams Ⓑ should be as shown.

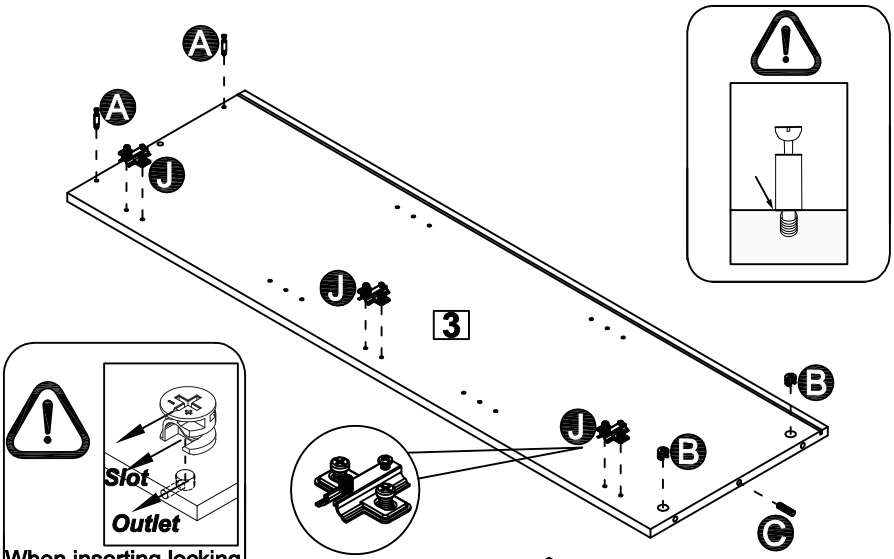


When inserting locking cams on the boards, the slot always point to the outlet of holes.

Step 8

Attaching panels

Position left side panel 2 and right side panel 3 onto bottom 6 as shown.

Use screw driver to turn locking cams Ⓑ clockwise to lock.

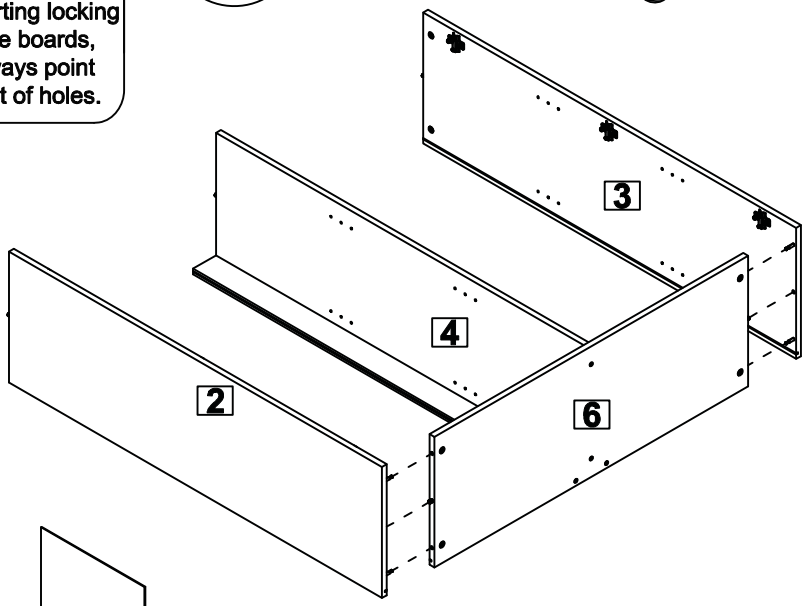


Step 9

Attaching panels

Two people are needed for this assembly.

Carefully turn the cabinet frame up as shown.


Insert back panels 9 into grooves as shown.

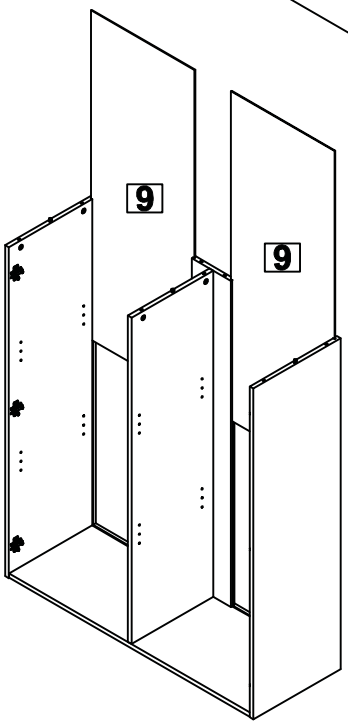

Assembly Instructions


Step 10

Fitting bolts
Fix connecting bolts Ⓐ on top panel 1 .
Note: Insert bolt Ⓐ as far as shown.
Do not over tighten.

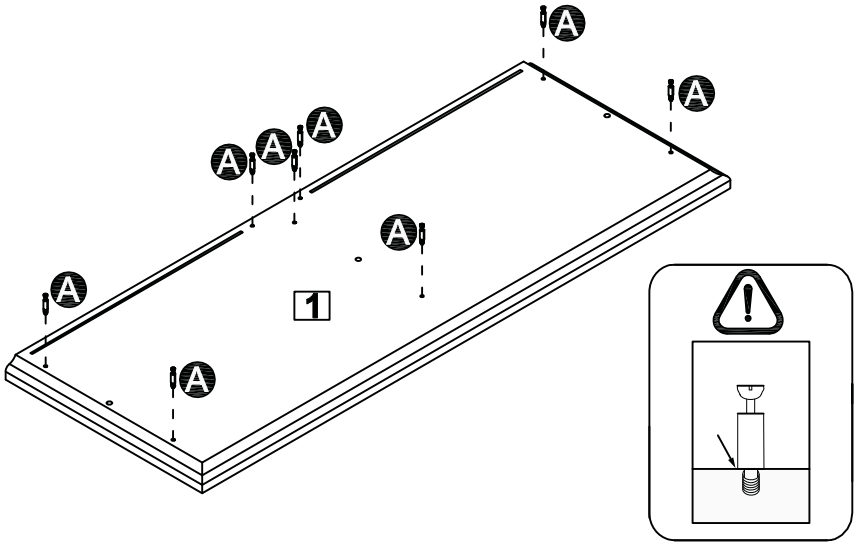

Step 11


Attach panels
Two people are needed for this assembly.
Position top panel 1 onto side panels 2 & 3 and divider panel 4 .
Use screw driver to turn locking cams Ⓑ clockwise to lock.
Use caps Ⓞ to cover cams Ⓑ.
Insert shelf pins Ⓛ into side panels 2 & 3 and divider panel 4 as shown.

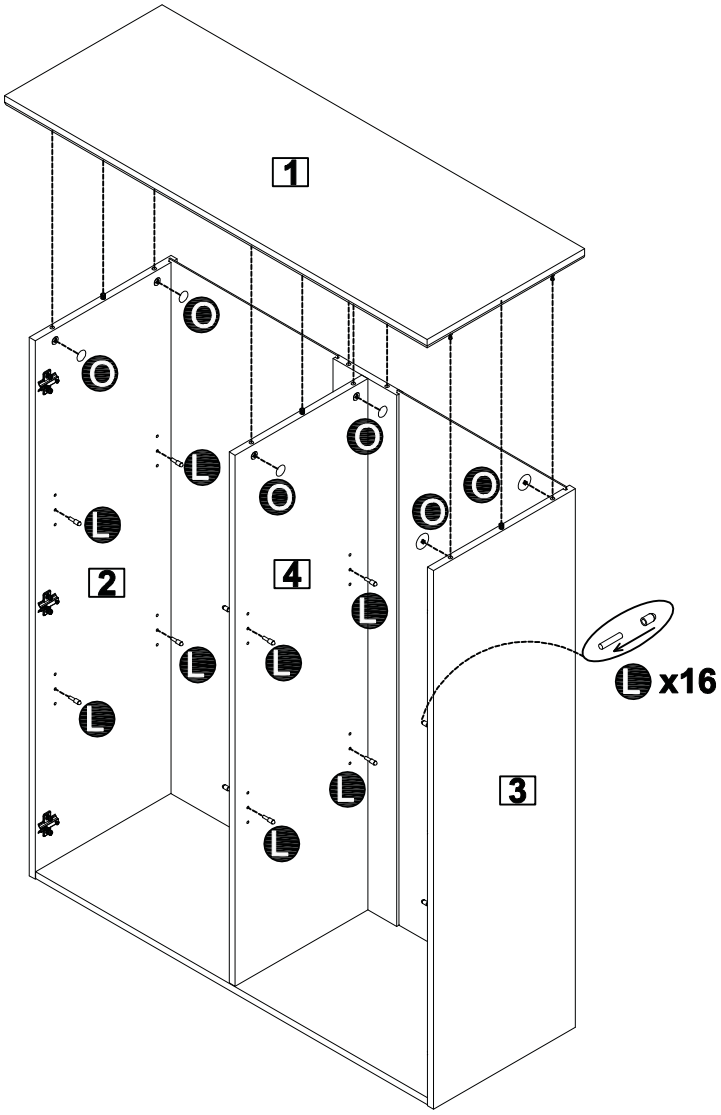

Assembly Instructions


Step 12

Attaching panels
Insert shelves [5] into cabinet, letting them rest on shelf pins(L).

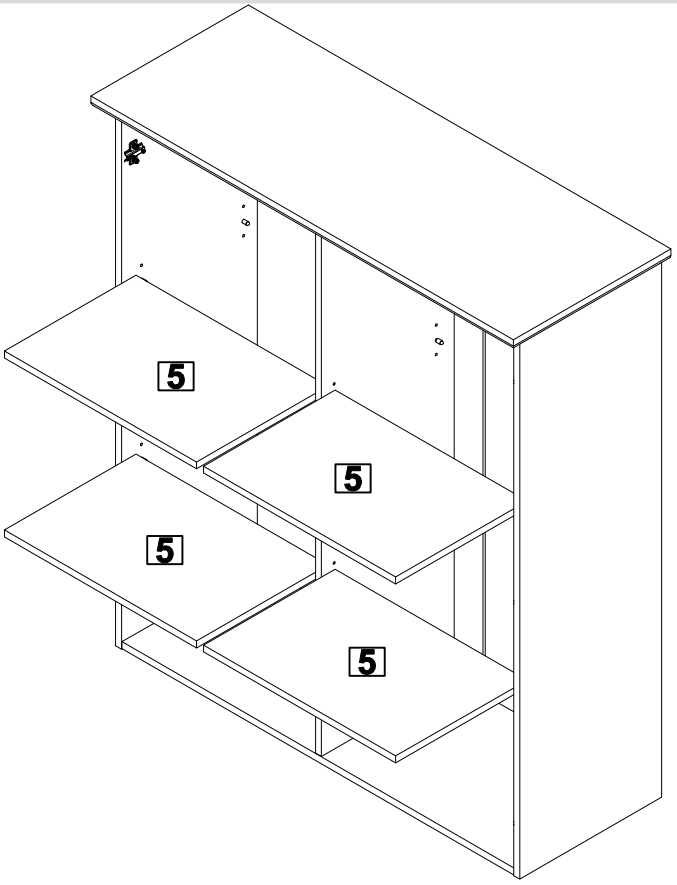

Step 13

Fixing hinges & knobs
Fix hinges(K) onto doors [8] with screws (E).
Fix knobs (I) onto doors [8] with screws (H) as shown.

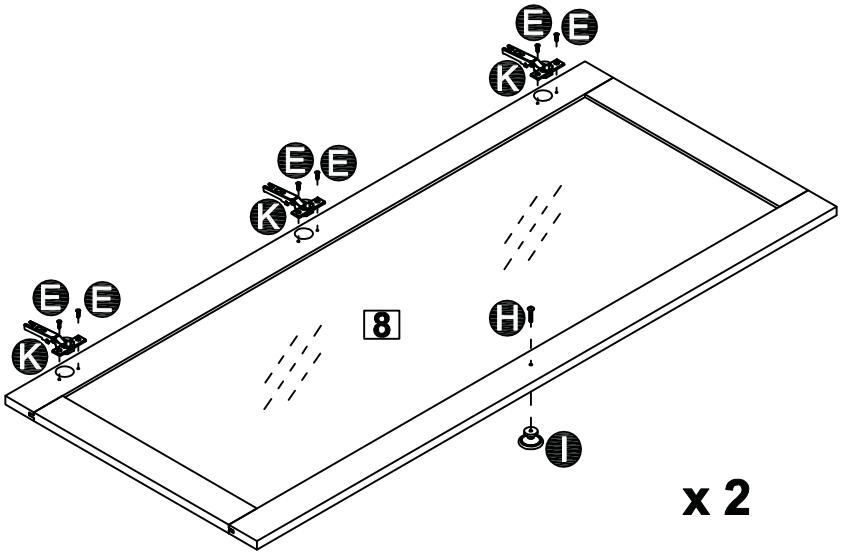


Assembly Instructions


Step 14

Attach doors

Attach doors 8 into cabinet as shown. Slide hinges K into hinge bases J, until each adjustable screw is in slot 1 and the lock screw is in the slot 2, then tighten lock screw.

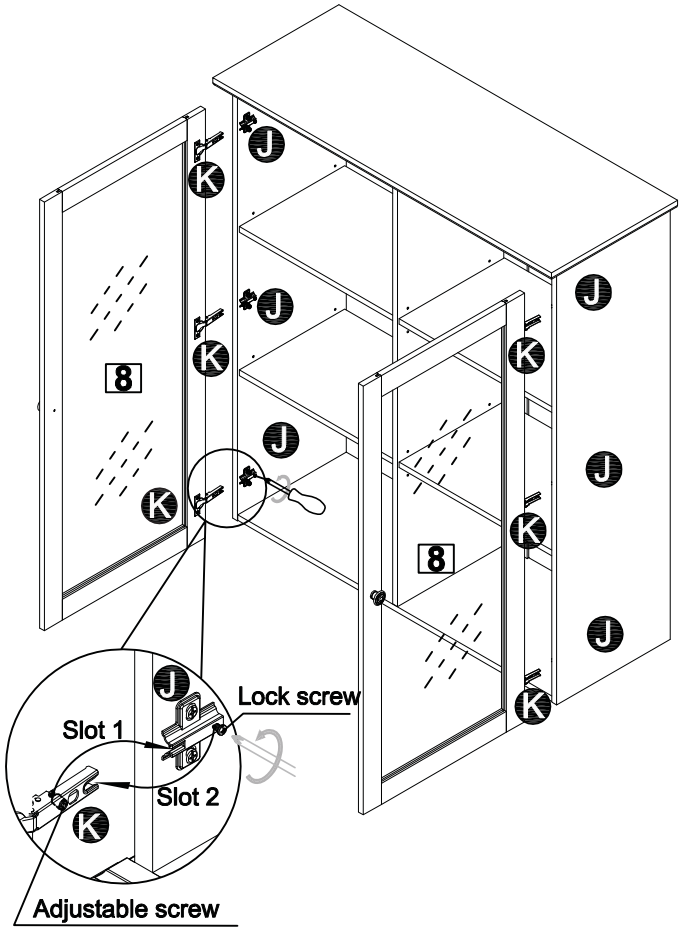


Adjust the doors alignment as shown.

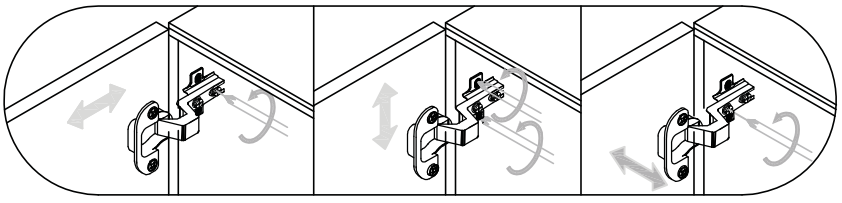

Assembly Instructions

Step 15

Attaching pads
a. Attach Pad (S) to door back.

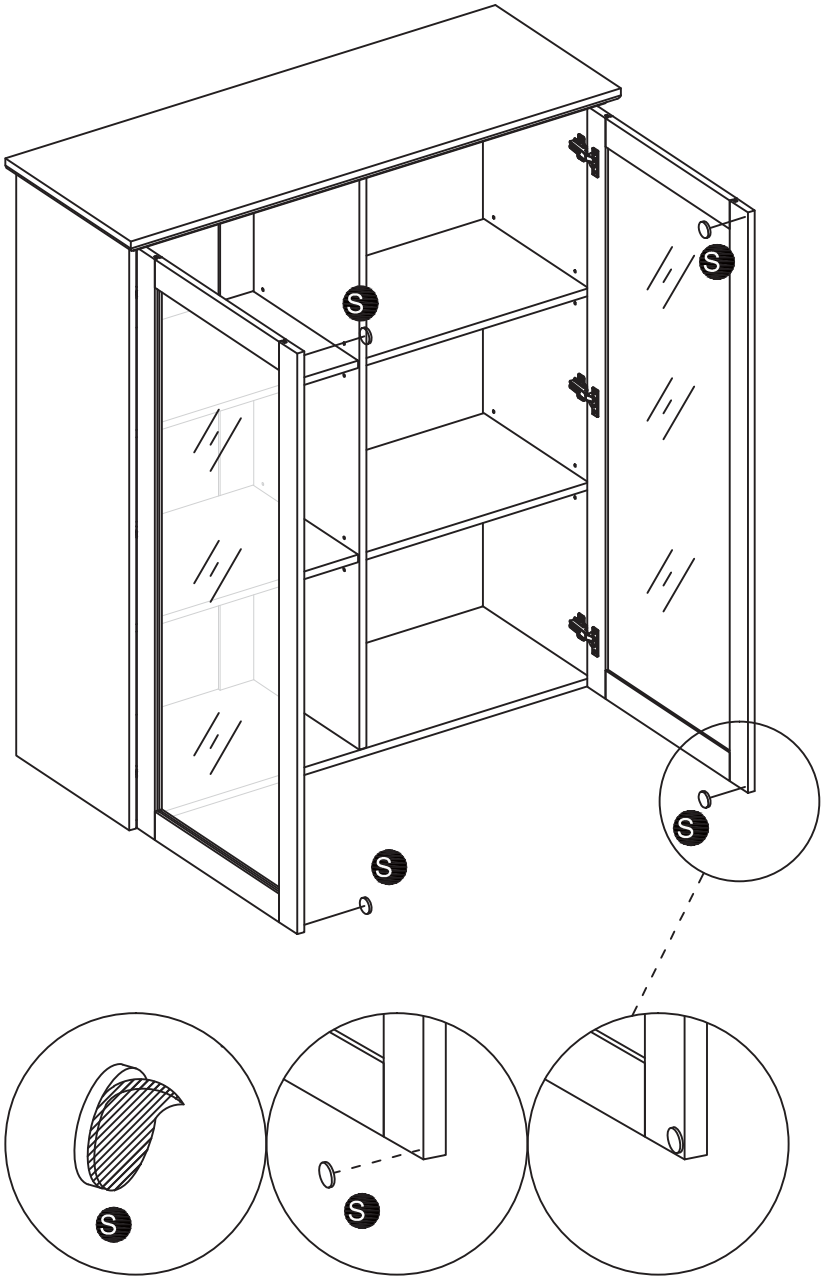

Assembly Instructions

Step 16


Fixing rear panel connectors and brackets

a: Place this unit on 305/8626 Ellingham 2 door sideboard which is sold separately.

b: Fix rear panel connectors Ⓜ with screws Ⓖ as shown.

Note:Maintain the cabinet alignment when fixing Ⓜ.

c:use bracket Ⓝ to connect 2 door sideboard 214/9512 with screws Ⓕ.

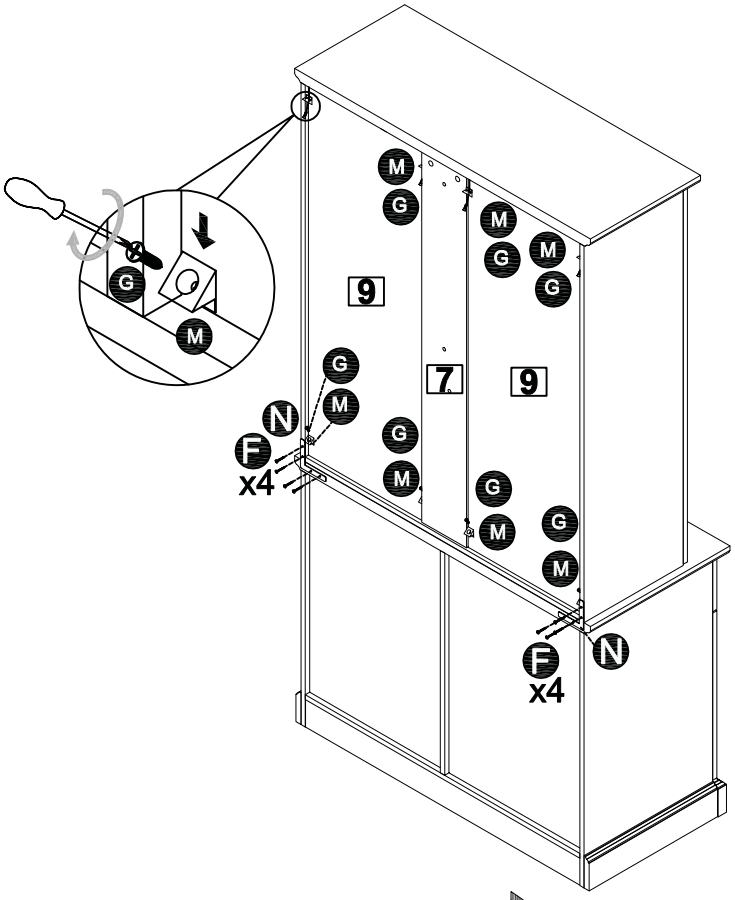


Step 17

Fixing unit to the wall

It is recommended that the sideboard is fixed to a wall.

Fix wall straps Ⓠ with screws Ⓡ at the back edge of top panel 1 .

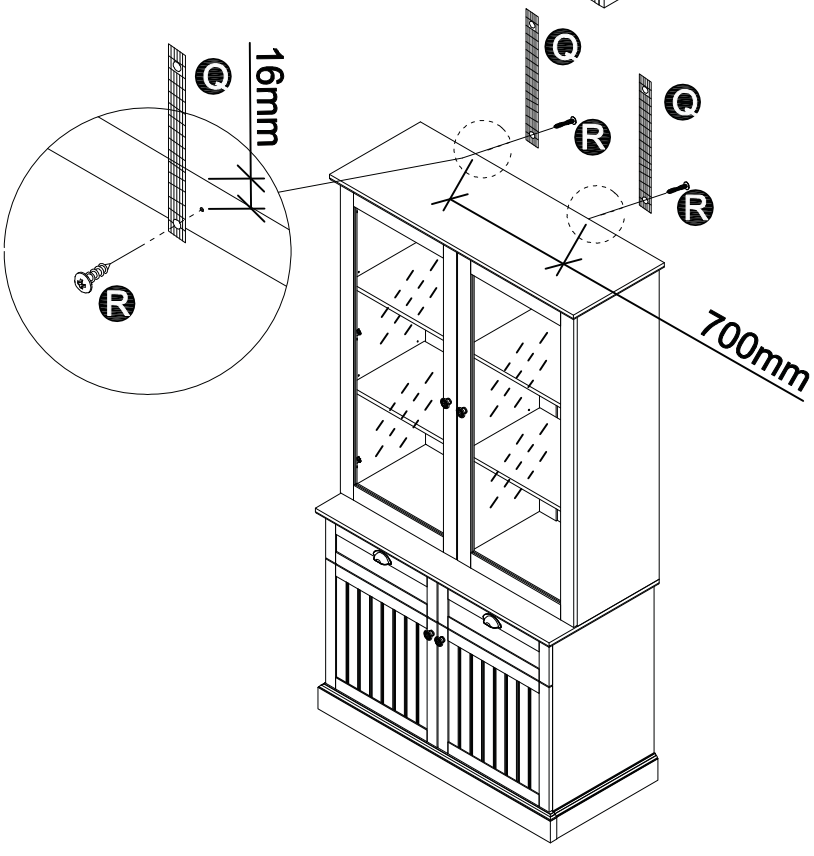

Assembly Instructions

Step 18

With help, move sideboard into position.


Warning:
The sideboard is heavy.
Lift with care.

Mark fixing holes on wall and remove sideboard.

Drill 8mm holes and insert wall plug (P).

Warning:
Before drilling, check wall for hidden pipes and cables.

Reposition sideboard and fix wall strap (Q) using screw (F) .

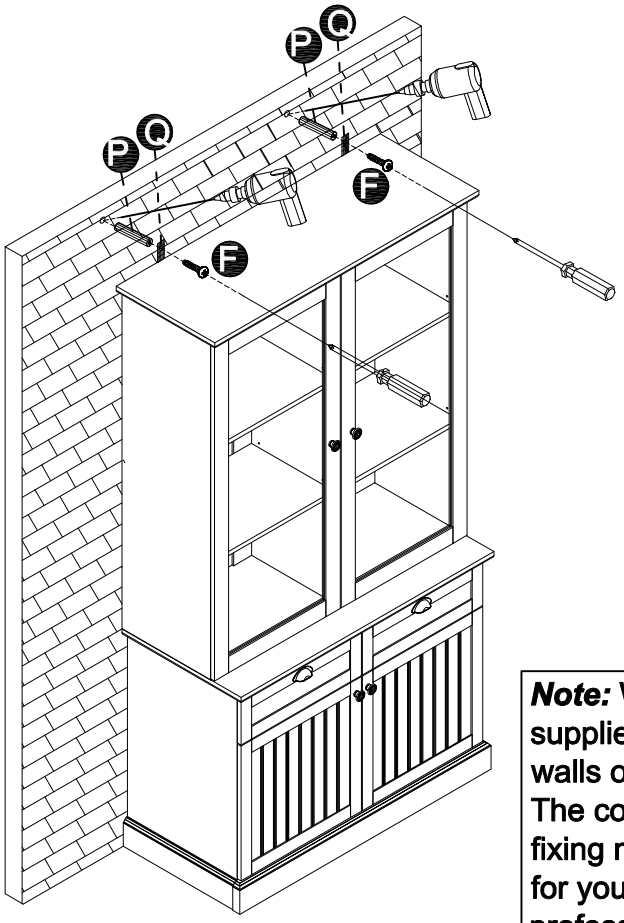

Note: Wall plugs supplied are for solid walls only.
The correct type of fixing must be used for your wall, seek professional advice if in doubt.

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0845 6400800

Care Instruction

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage your furniture's finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.

Further advice about wood furniture care

It is best to keep your furniture in a climate controlled environment. Extreme temperature and humidity changes can cause warping, shrinking and splitting of wood. Please keep furniture away from direct sunlight as this may damage the finish. Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.