Mendoza - 3+3 Drawer Chest

Assembly Instructions - Please keep for future reference

241/9132

245/8746

248/8589



Dimensions

Width - 140.2cm
Depth - 39.4cm
Height - 78.5cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 12/09/12

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

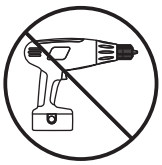

• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below




1 Top panel (140.2 x 39.4cm)

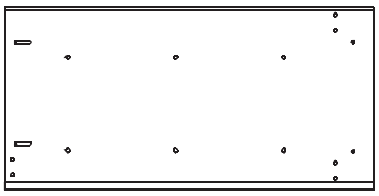


2 Left side panel (76 x 36.7cm)

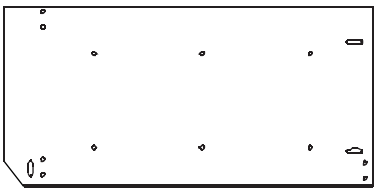


3 Division (76 x 37.2cm)

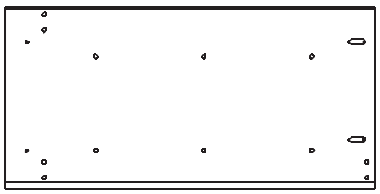


4 Right side panel (76 x 36.7cm)




5 Front plinth (140.1 x 9cm)




6 Side plinth x 2
(37.7 x 8.8cm)



7 Bottom front rail x 2
(65.9 x 6.4cm)



8 Back rail x 2 (65.9 x 5cm)



9 Large drawer runner x 6
(32 x 5.1cm)


10 Small drawer runner x 6
(32 x 2cm)




11 Back panel x 4
(69.8 x 33.6cm)



12 Drawer front x 6
(62.4 x 21.9cm)




13 Drawer right side x 6
(32 x 19.4cm)



14 Drawer left side x 6
(32 x 19.4cm)



15 Drawer back x 6
(57.4 x 18.9cm)



16 Drawer bottom x 6
(58.6 x 31.8cm)













17 Top front rail x 2
(65.9 x 5cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

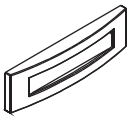A  Ø8x25mm Wooden dowel x 62	**B**  30mm Screw x 61	**C**  50mm Screw x 18
D  Ø8x35mm Large wooden dowel x 16	**E**  Handle x 12	**F**  22mm Bolt x 24
G  H profile 670mm x 02	**H**  Nails x 50	**I**  25mm Screw x 26
J  35mm Screw x 06	**K**  16mm Screw x 1	**L**  Wall strap x 1
M  Washer x 2	**N**  Ø6x25mm Thin wooden dowel x 08	


Tools required




Phillips screwdriver (medium & large)

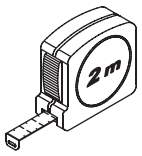

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

Fitting wooden dowels:

a: Insert dowels Ⓐ into the indicated parts.

b: Insert large dowels Ⓓ through division panel 3 as shown.
Make sure dowels are equally divided in both sides of the panel as shown in the diagram.

c: Insert thin wooden dowels Ⓝ on top front rail 17 only.

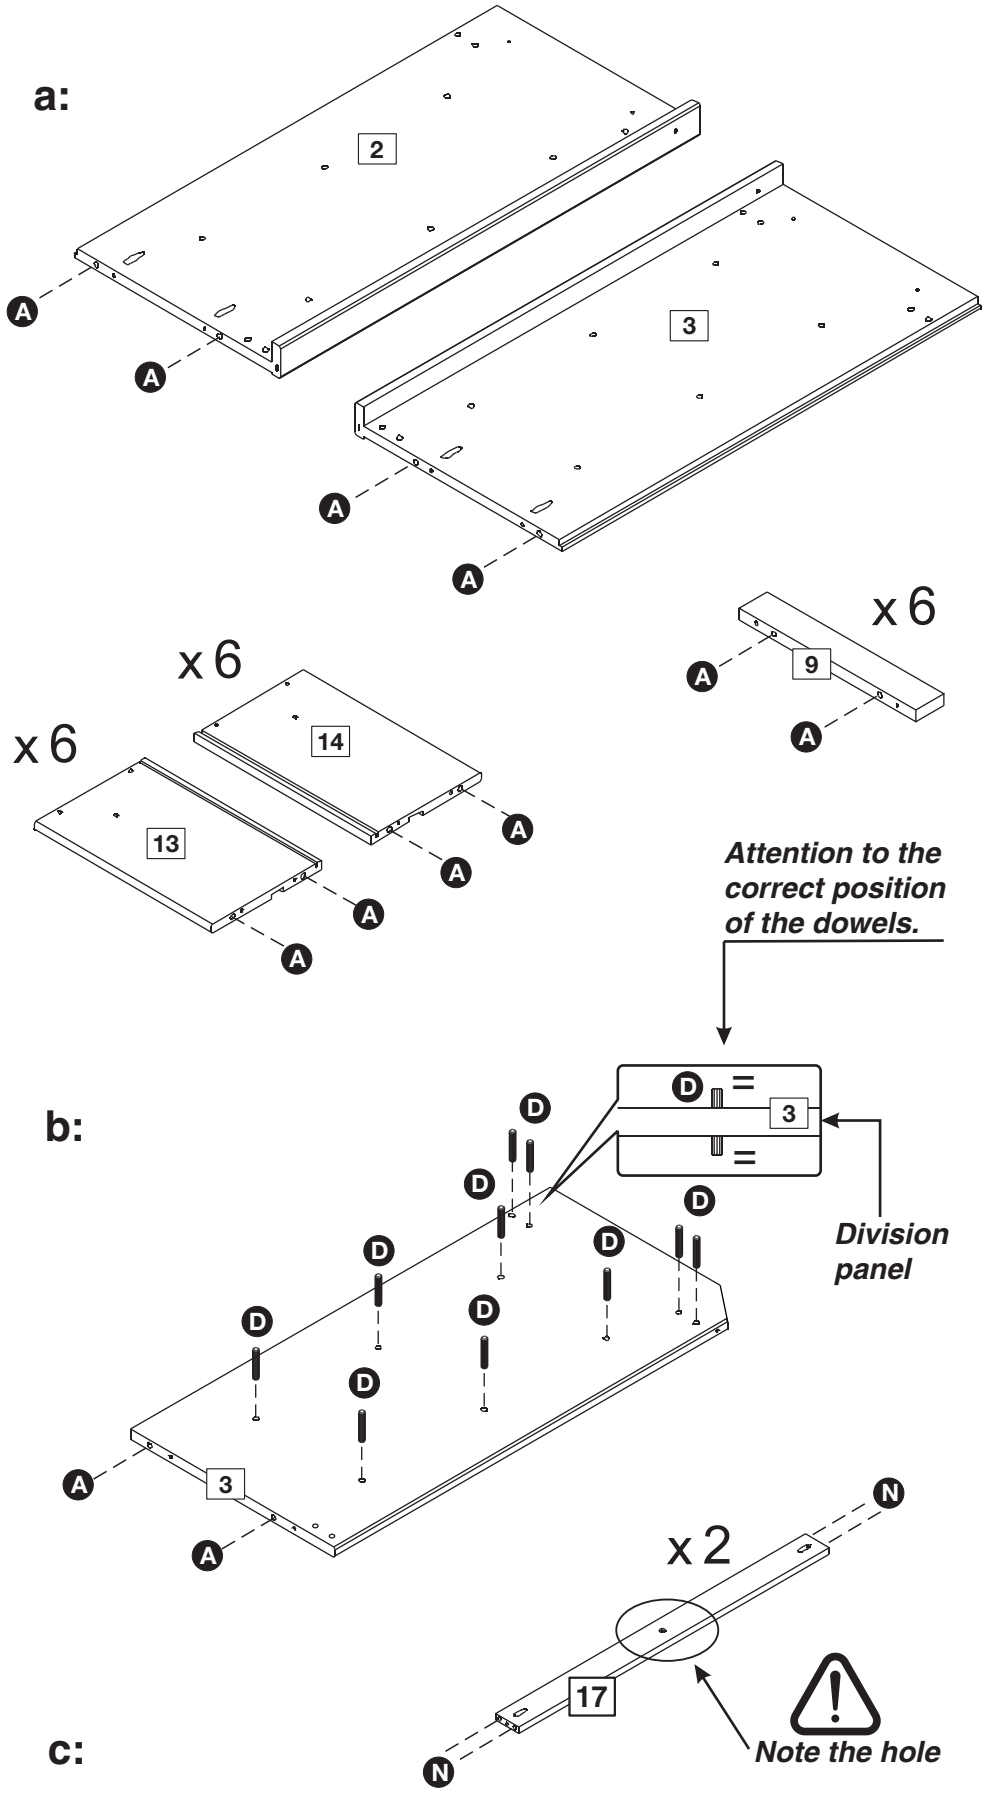

Assembly Instructions

Step 2


Assembling the cabinet:

a: Insert dowels Ⓐ in the bottom front rail 7 and back rail 8 as shown.

Note: Holes on top front rail must be facing up as shown in the diagram.

b: Fix bottom front rail 7 back rail 8 and top front rail 17 to the division panel 3 and left side panel 2 using screws Ⓑ.

Note: Note correct position of the parts.

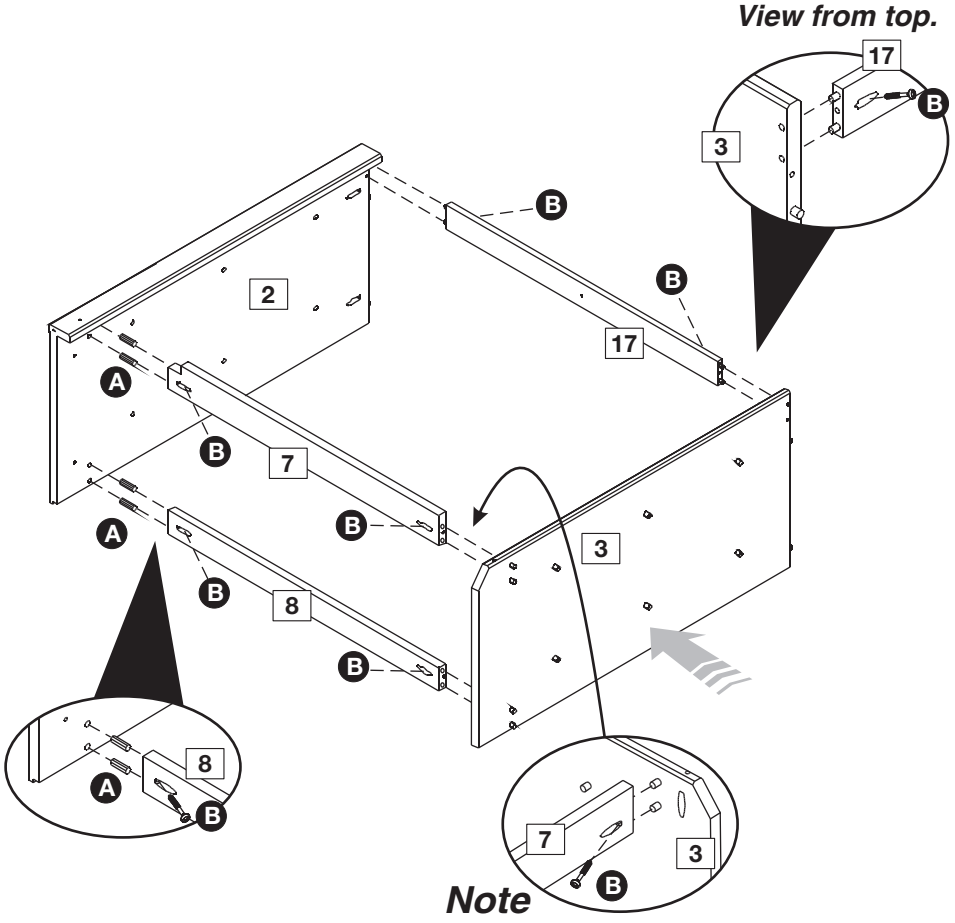

Step 3


Assembling the cabinet:

a: Insert dowels Ⓐ in the bottom front rail 7 and back rail 8 as shown.

Note: Holes on top front rail must be facing up as shown in the diagram.

b: Fix bottom front rail 7 back rail 8 and top front rail 17 to the division panel 3 and right side panel 4 using screws Ⓑ.

Note: Note correct position of the parts.

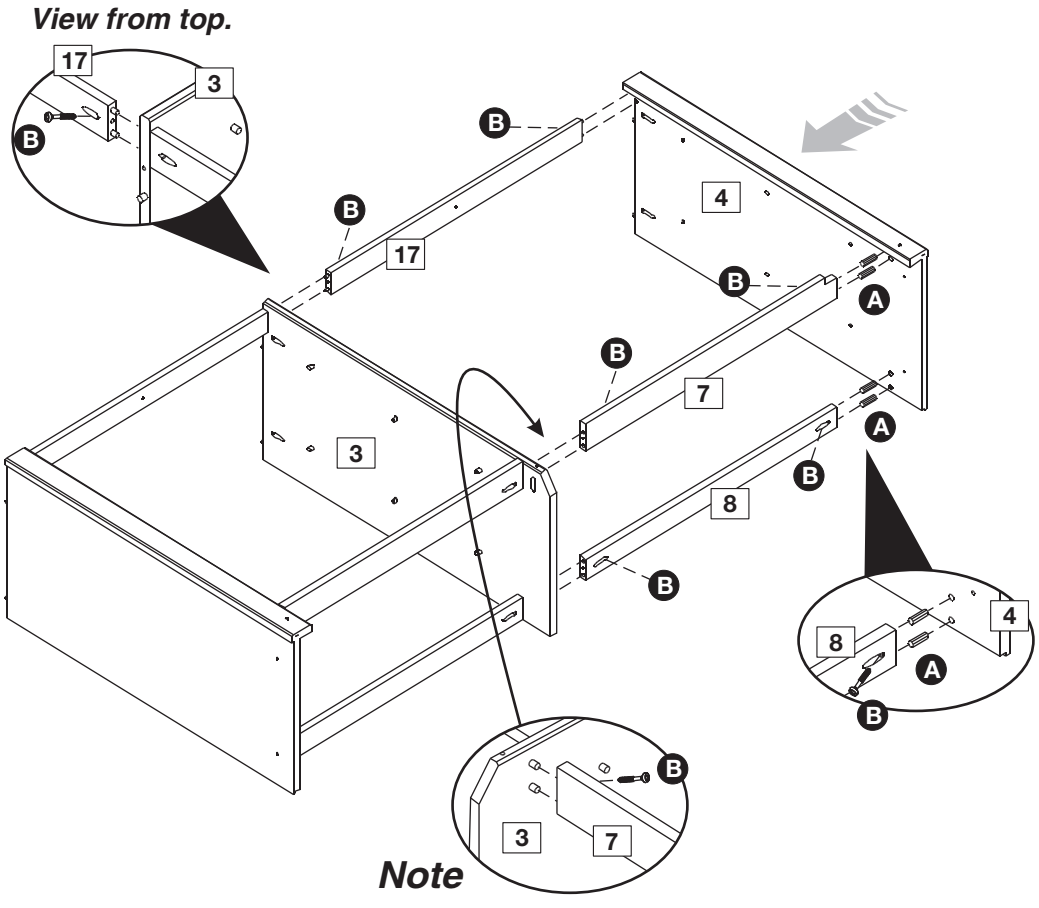


Assembly Instructions

Step 4

Assembling cabinet;

a: Fix the top panel 1 to the sides 2 , 4 and division panel 3 using screws J.

b: Fix top front rail 17 to the top panel 1 using screws I.

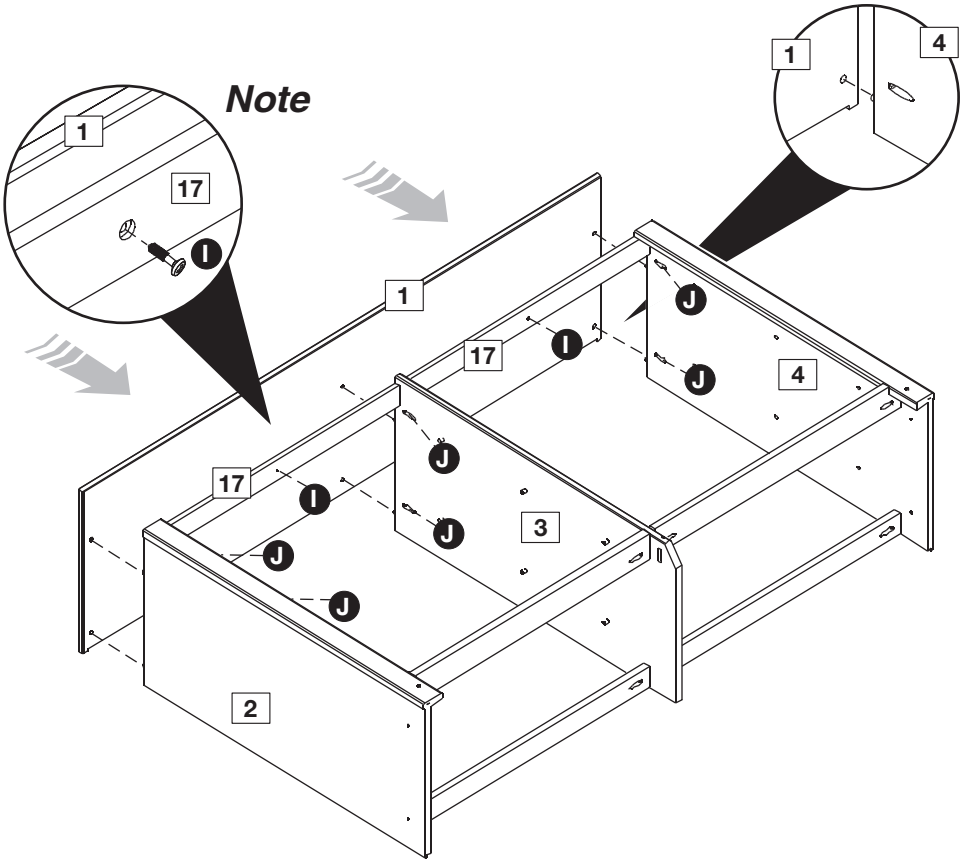

Step 5


Assembling cabinet:

a: Fix side plinths 6 to the side panels using screws I.

Note: Make sure side plinths are aligned to the bottom and front edges of the side panels.

b: Fix front plinth 5 to the sides using screws I and to the division panel using screw B .

Note: Make sure front plinth 5 is aligned to the bottom edges of the side panels and in line to the side plinths.

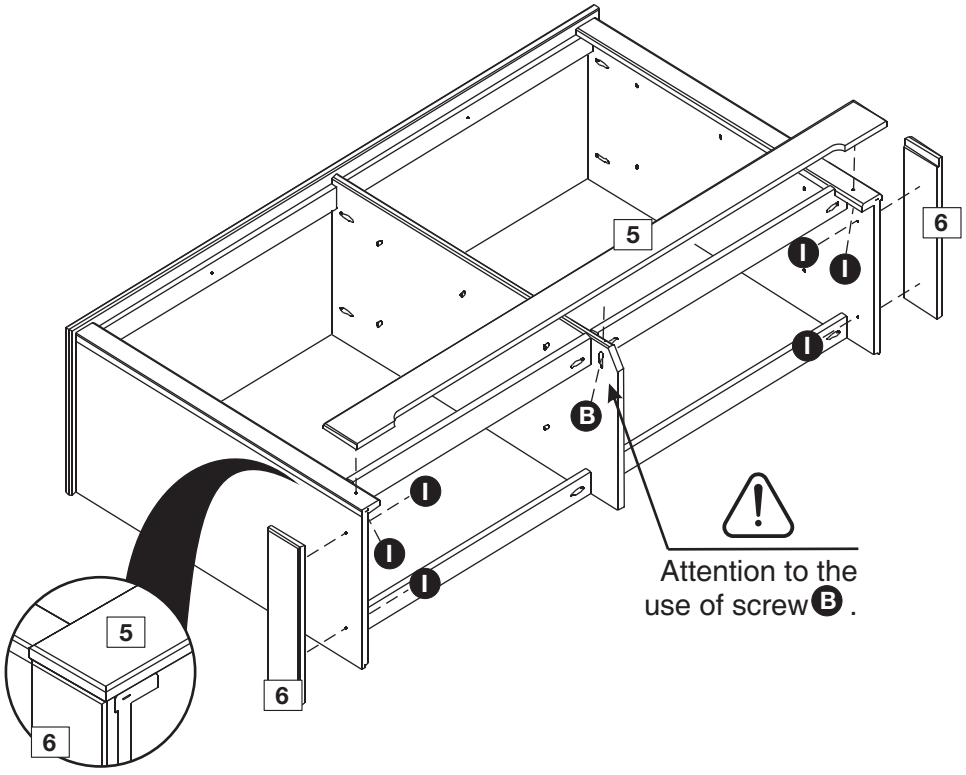


Step 6

Fixing large drawer runners.

Carefully stand the product upright.


Fix large drawer runners 9 to the side panels 2 and 4 using screws C.

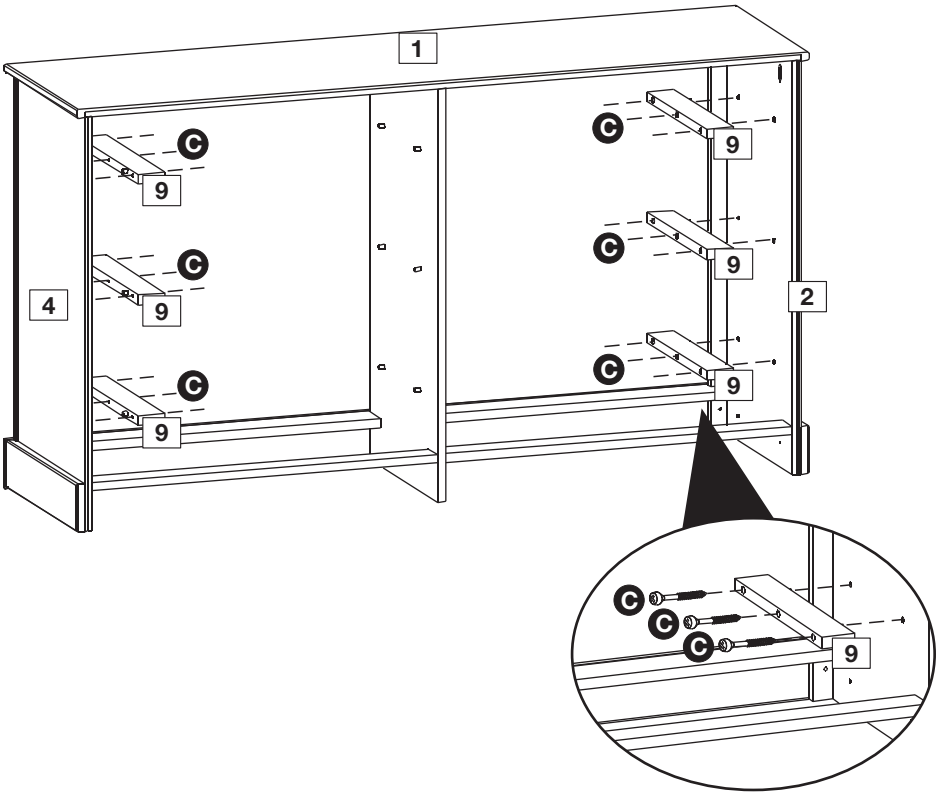

Step 7

Fixing small drawer runners.

Fix small drawer runners 10 to the division panel 3 using screws I. Make sure holes on runners are facing up before fixing.

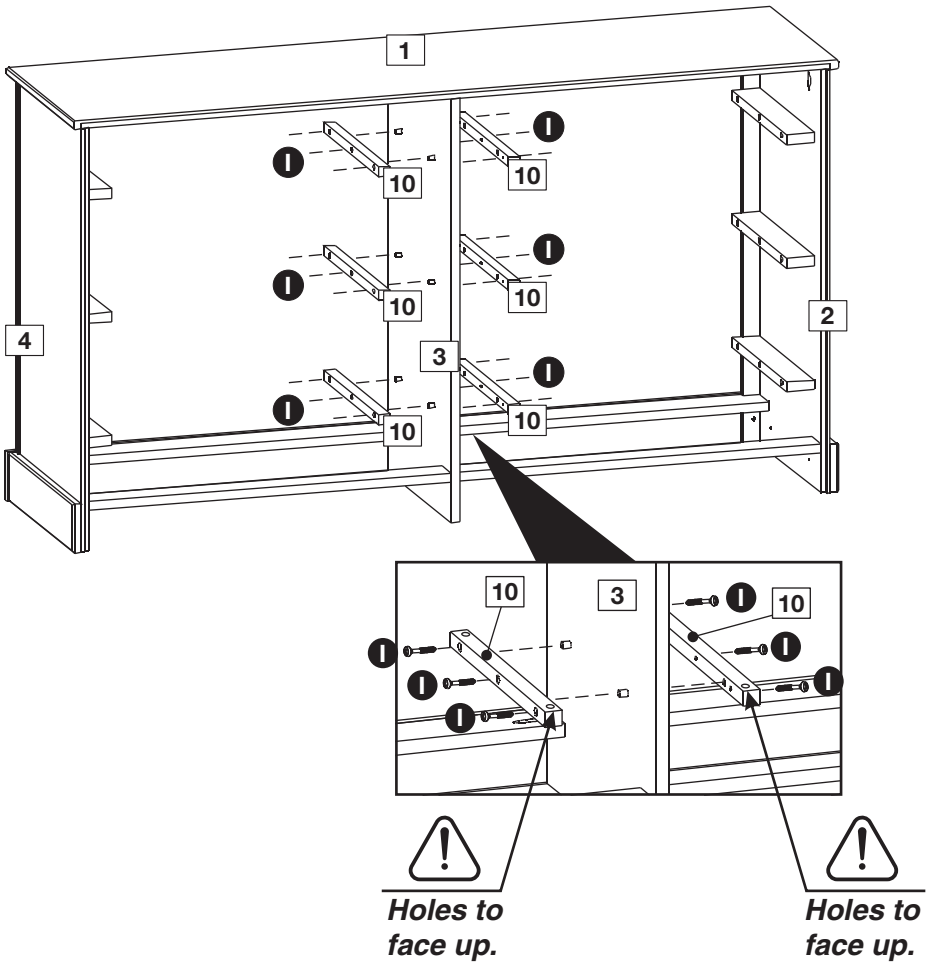

Assembly Instructions

Step 8


Fixing back panels:


Important: Cabinet MUST be "square" when back is attached.

a: Attach the right and left back panels 11 first using nails H.

b: Position profiles G onto back panels (just attach).

c: Carefully slot the middle back panels 11 into the profiles and fix them to the cabinet using nails H.

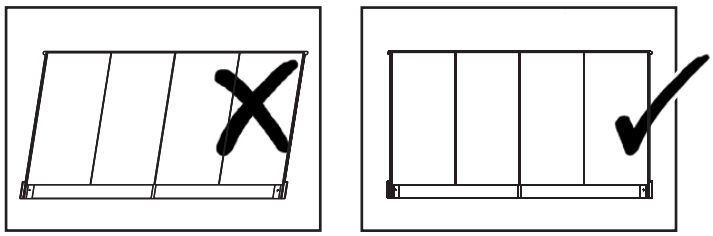

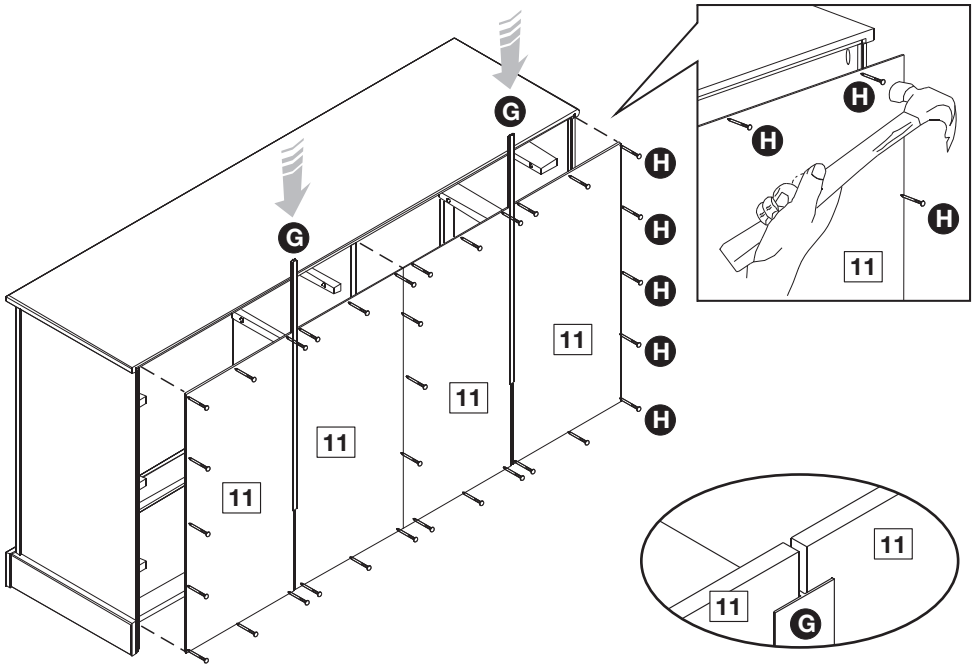

Step 9

Assembling the drawers:


a: Attach drawer sides 13 and 14 to the drawer front 12 using screws B.

b: Slide drawer bottom 16 into slots on drawer sides.

c: Holding the drawer back 15 in place and flush to the edge of drawer side, fix them to the drawer back using screws B.

d: Using bolt F attach the drawer handles E to the drawer front.


Repeat step 9 for the other drawers.

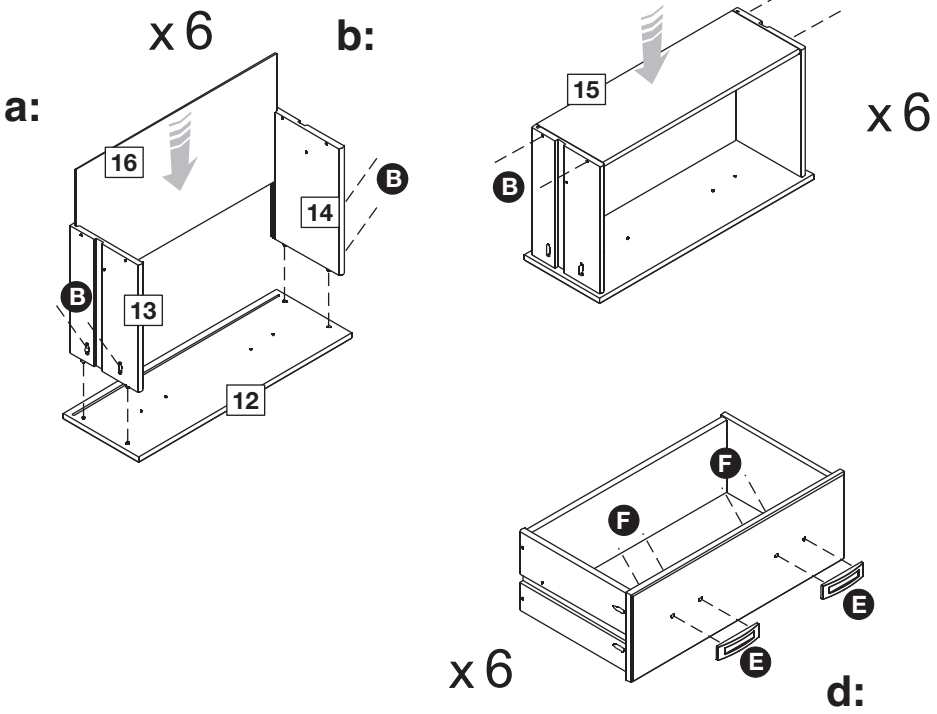

Step **10**


Insert wooden dowels:


Carefully insert wooden dowels (A) fully into the holes on the small drawer runners as shown in the diagram.

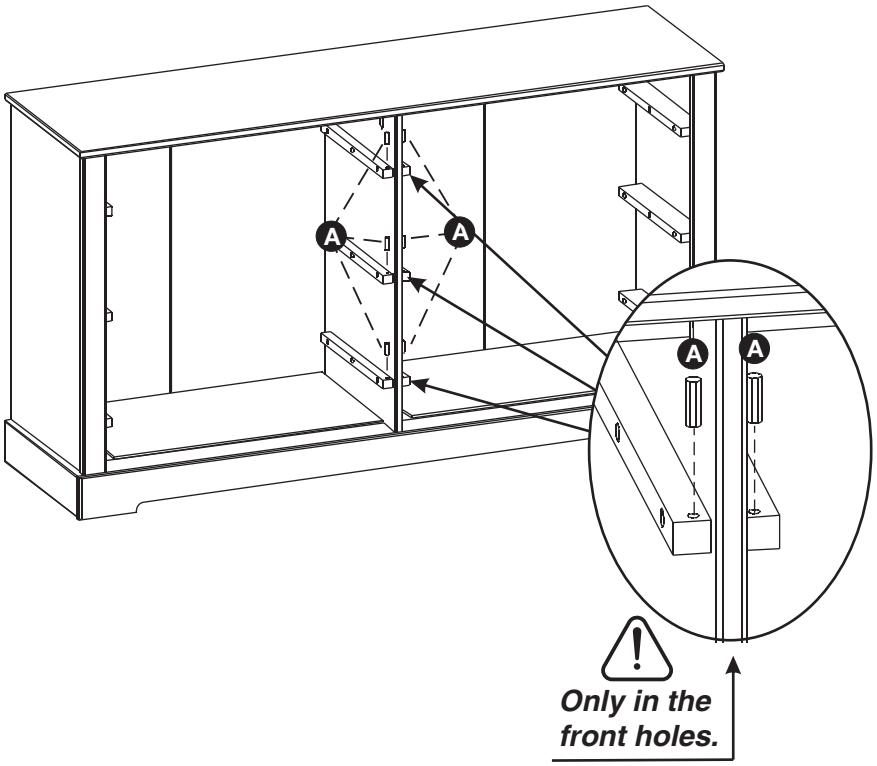

Step **11**

Insert drawers into unit. With the back of the drawers past the front frames, use a hammer to tap the dowels (D) and (A) in flush to the drawer sides as shown in the diagram. This is a safety catch to stop drawers falling out.

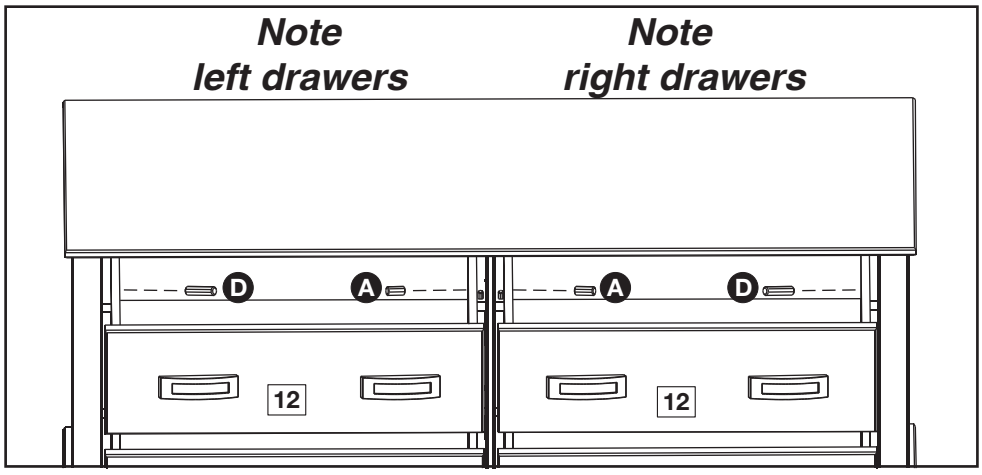


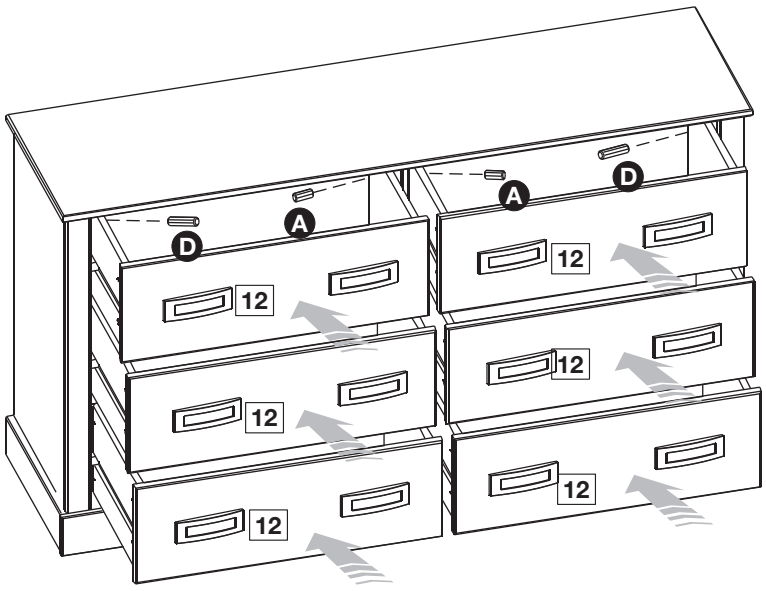

Step **12**

Fixing to wall.

Furniture must be fixed to a wall. Fix wall strap Ⓛ to top of furniture using washer Ⓜ and screw Ⓚ. With help, move furniture into position.

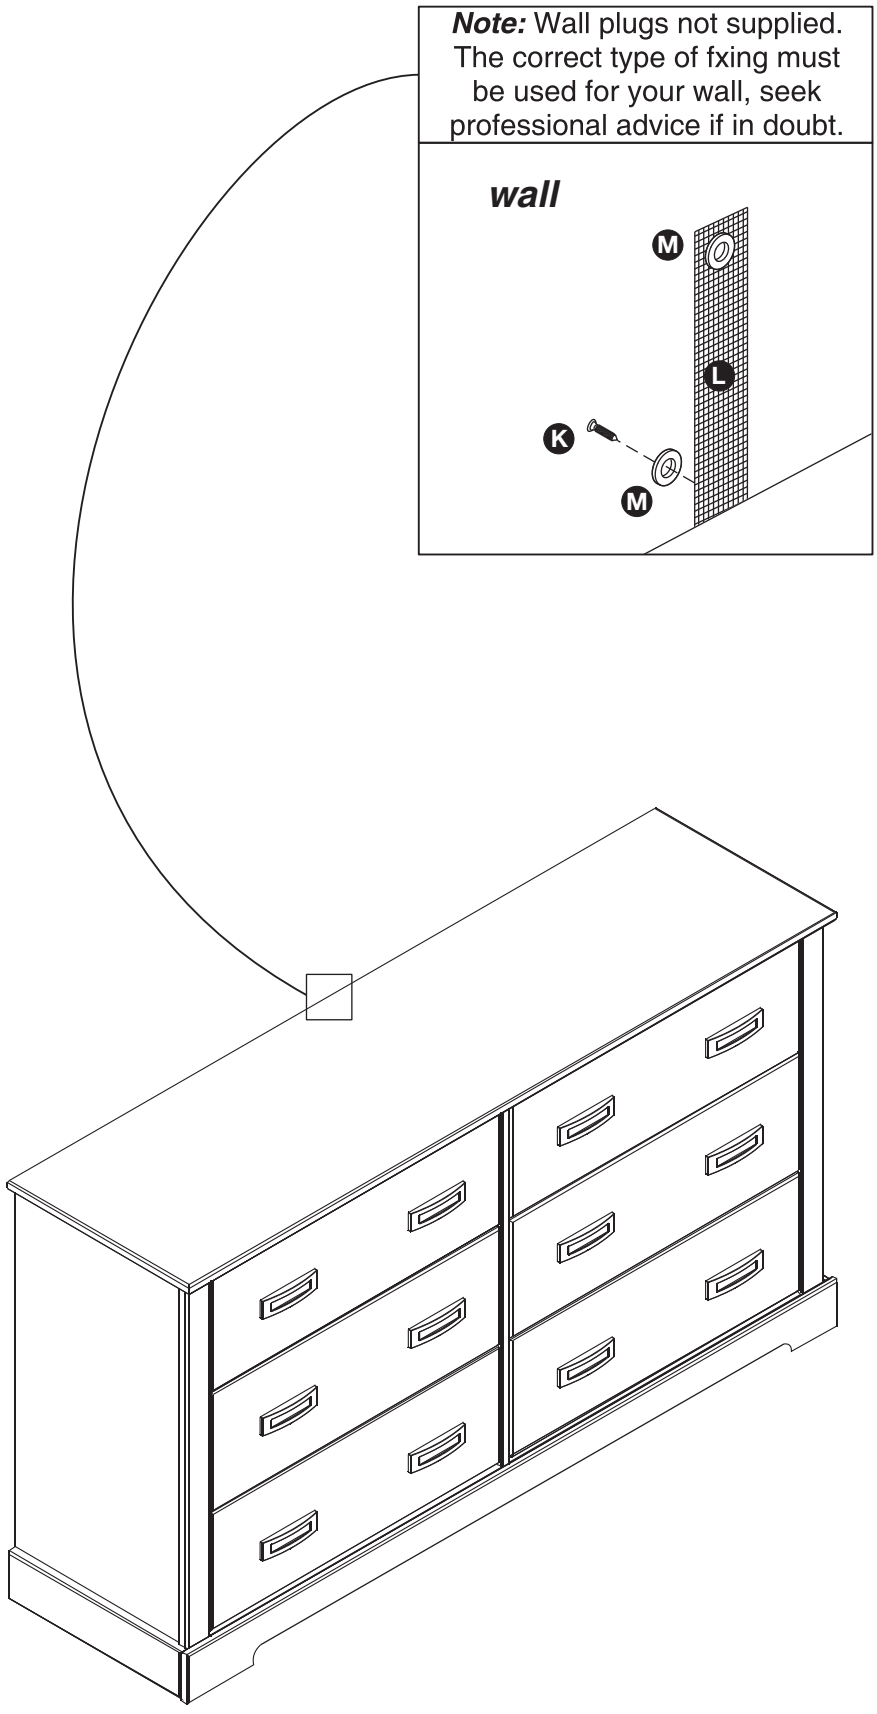


Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

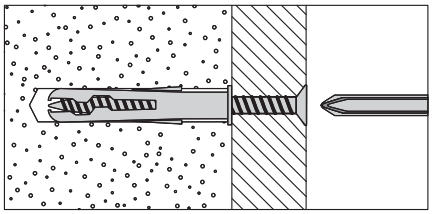


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

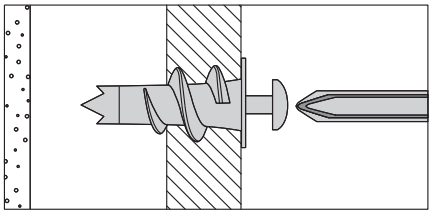


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

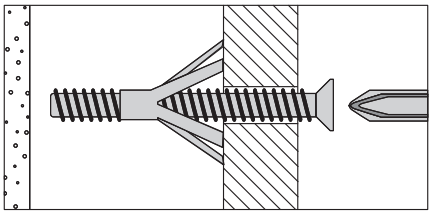


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

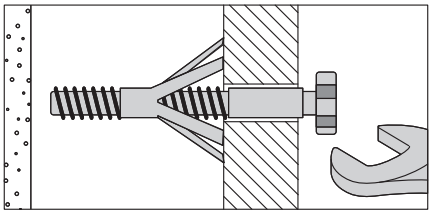


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

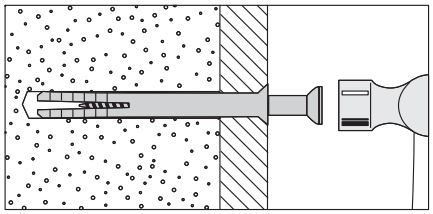

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

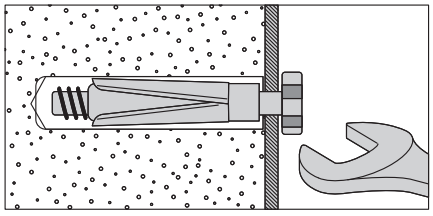

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.