
Babystart Highchair

User Guide

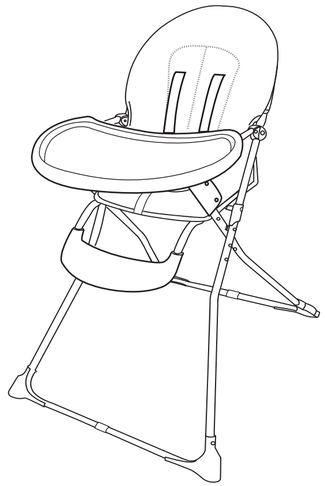

Helpline:03456 400 800

CE

IMPORTANT: KEEP FOR FUTURE REFERENCE

Thank you for choosing a baby-start product. The highchair is suitable for children who are able to sit up unaided (approximately 6 months up to 36months.) Please take a little time to read the important safety notes detailed below. This will ensure many years of happy, safe use.

- **WARNING:** Do not use if any part is broken,torn or missing .
- **WARNING: Do not use the highchair until the child can sit up unaided. (6 months approximately).**
- **WARNING:** Do not use the highchair unless all components are correctly fitted and adjusted.
- **WARNING: Do not leave your child unattended, even for the shortest time.**
- **WARNING: To prevent serious injury or death from falls or sliding out, ensure the harness is correctly fitted and that the child is secure in the restraint.**
- **WARNING:** Avoid placing the chair near naked heat sources such as electric bar fires, gas fires, etc. or where a child could gain access to any other kind of hazard.
- **WARNING:** To avoid injury ensure that your child is kept away when unfolding and folding this product.
- **WARNING:** Do not let your child play with this product.
- Ensure all users are familiar with the products operation. It should always open and fold easy. If it does not, do not force the mechanism - stop and read the instructions.
- Only use on a flat stable surface.
- Ensure your highchair is fully erected before placing your child inside.
- Ensure children are clear of all moving parts before making any adjustments. Do not move the highchair with your child inside.
- Do not allow your child to climb unassisted into, play with or hang onto your highchair. This is not a toy.
- All additional hazards such as electrical flex should be kept out of reach of the child in the highchair.
- Complies with EN 14988 1/2:2006+AI: 2012.

Introduction


This cleverly designed highchair folds flat for ease of storage.It has a large tray with a cup holder, a five point integral harness and its vinyl seat unit is easy clean to help maintain a hygienic environ ment for your child.

List of parts


The following is contained in one carton:

1.1 Seat unit.	X 1
1.2 Front leg	X 2
1.3 Rear leg*	X 2
1.4 Seat back	X 1
1.5 Footrest	X 1

* Please note that the rear leg is narrower at the top.

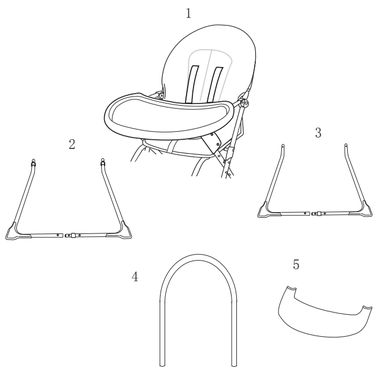

Fitting the seat back

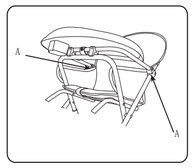


2.1 Unclip the press studs (A) on either side of the highchair as shown.

2.2 Slide the curved part of the seat back bar into the fabric pocket on the seat back whilst the highchair is still folded.


2.3 Slide the two bar ends into the seat frame tubes andpush in the spring pips, continuing to push the bar ends until the pips appear in the holes.

2.4 Secure the seat into position by re-clipping the seat to the tube using the press studs on each side

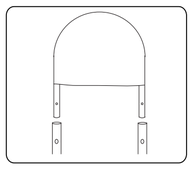


2.5 Ensure this is secure.

Opening your highchair

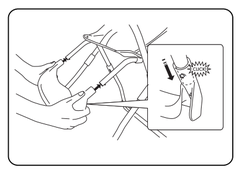

3.1 Please install the footrest on the frame. It is assembled completely when you hear "click"


Opening your highchair

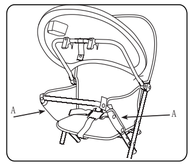



4.1 When you open the front tray, please fix the side seat panel stud by crossing the webbing on the frame.

4.2 Please make sure that the front tray can be locked on the frame by the plastic connecting parts.

4.3 Last step to assemble the front tray : Fix the stud under the tray by crossing the webbling .

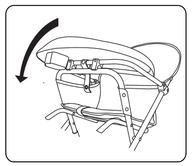

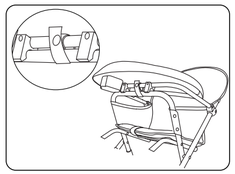


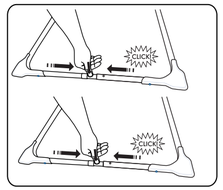

5.1 Insert the front leg with plastic part into another front leg , until it clicks securely into place.

5.2 Insert the rear leg into another rear leg , untilit clicks securely into place.


Fitting the legs

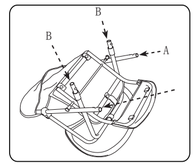

6.1 The front and rear legs are a different width. Please be aware that the rear leg is narrower at the top, than the front leg.


6.2 Identify which leg is the rear and which is the front.

6.3 Remember that the front leg attaches to the back of the highchair (A) whilst the rear leg is attached to the front (B).

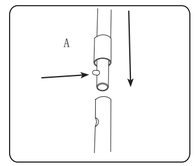

6.4 Push a pair of the legs a little way into the seat frame tubes and push in the spring pips, con tinuing to push the legs until the pips appear in the holes.
6.5 Repeat this process until each leg is fitted securely.
6.6 Should the highchair need to be taken apart, gently push in the sprung pips with a small screwdriver and evenly ease out the leg assem blies.
6.7 The fit of the legs in the frame is very tight for added security. Do not force the legs into posi tion, but apply an even and constant pressure.


To operate harness

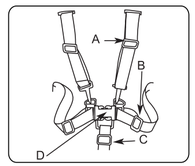

7.1 To fit harness insert both waist clips into clasp (D). Listen for the “click”.
7.2 To release the harness press the top and the bottom of the waist clips and pull apart .The shoulder straps can be unhooked from the waist clips if required .
7.3 Your harness is fully adjusted by moving the slide A,B,C, to make fitting easy .”D” rings are provided for fitting a separate harness if required ,complying with BS 6684.

Folding your highchair

You must undo the Snap fastener before folding the highchair. Unclip the tray and lift upwards. Fold legs together.

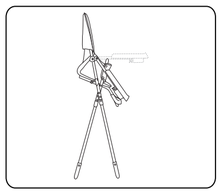

Care and Maintenance

Ensure all locking devices work correctly & regularly check the locks & fittings for security.
Regularly check all parts for wear & tear.
DO NOT use spray lubricants, simply wipe clean after use.

Cleaning

The highchair can be cleaned by sponging with warm soapy water and a mild detergent. A mild disinfectant may be used if desired.
Stubborn marks may be removed with a non abrasive cream cleaner. Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.
The basket (if specified) can be removed for easier cleaning but must not be immersed in water.

Argos Limited
489-499 Avebury Boulevard,Saxon Gate West ,
Central Milton Keynes,MK9 2NW,