
Baby Amelie- 2 Door Robe

Assembly Instructions - Please keep for future reference 247/9873

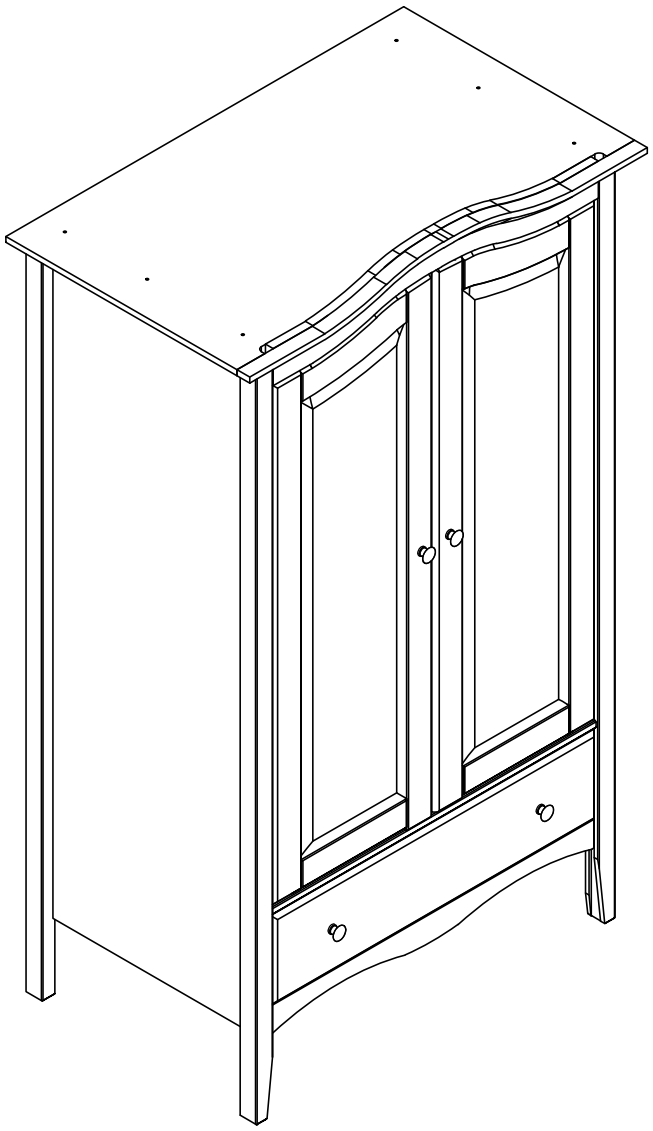

Dimensions

Width - 93 cm
Depth - 57 cm
Height - 160 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 02/05/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

· Check you have all the components and tools listed on pages 2 and 3.

· Remove all fittings from the plastic bags and separate them into their groups.

· Keep children and animals away from the work area, small parts could choke if swallowed.


· Make sure you have enough space to layout the parts before starting.

· Do not stand or put weight on the product, this could cause damage.

· This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

· Assemble the item as close to its final position (in the same room) as possible.

· Assemble on a soft level surface to avoid damaging the unit or your floor.

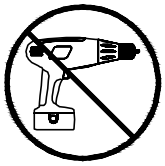

We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

· Parts of the assembly will be easier with 2 people.

· Dispose of all packaging carefully and responsibly.

Care and maintenance

· Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

· Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


· From time to time check that there are no loose screws on this unit.

· This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: **if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.**

Components - Panels

Please check you have all the panels listed below

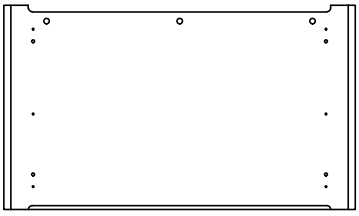


1 Top panel x 1 (93x54 cm)

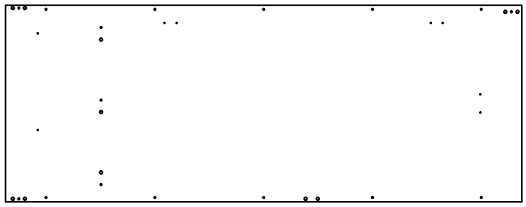

2 Left side panel x 1 (136.6x52 cm)



3 Right side panel x 1 (136.6x52 cm)




4 Left front foot x 1 (152.3x4 cm)




5 Right front foot x 1 (152.3x4 cm)

6 Left back foot x 1 (152.3x3 cm)


7 Right back foot x 1 (152.3x3 cm)




8 Bottom frame x 1 (76x6 cm)




9 Back rail x 1 (76x4.5 cm)




10 Drawer front x 1 (75.6x18.1 cm)



11 Drawer left side x 1 (40x10.5 cm)




12 Drawer right side x 1 (40x10.5 cm)




13 Drawer back x 1 (70.5x10 cm)



14 Drawer bottom x 1 (71.9x40 cm)




15 Drawer support x 1 (38.4x4.5 cm)

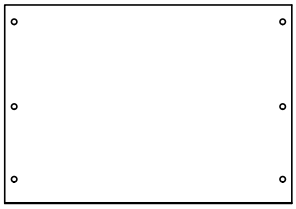

16 Base panel x 1 (76x52.5 cm)


17 Hanging rail x 1 (75.3x3 cm)




18 Front rail (76x5.5 cm)



19 Top frame x 1 (93x12.2 cm)

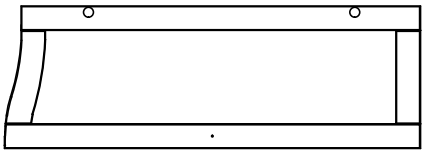

20 Left door x1 (110.1x37.7 cm)

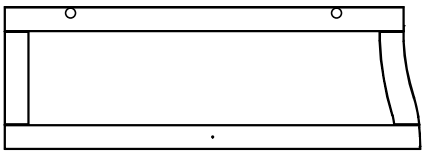

21 Right door x 1 (110.1x37.7 cm)



22 Large back rail x 1 (76x9 cm)



23 Back panel x 2 (133.5x39.4 cm)













24 "H" profile x 1 (130.6x1.7 cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

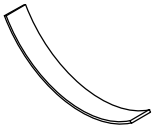A  Wooden dowel x 36	**B**  30 mm Screw x 12	**C**  12 mm Screw x 6
D  12 mm Screw x 4	**E**  Right runner x 2	**F**  Left runner x 2
G  Metal dowel x 15	**H**  Locking nut x 15	**I**  Nail x 30
J  Knob x 4	**K**  20 mm Bolt x 4	**L**  30 mm Screw x 20
M  Wall strap x 1	**N**  Washer x 1	**O**  12 mm Screw x 23
P  60 mm Screw x 6	**Q**  Hinge x 4	**R**  Hinge plate x 4
S  Rail support x 2	**T**  Plastic Wedge x 2	


Tools required




Phillips screwdriver (medium & large)

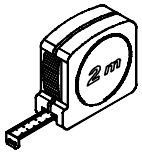

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Fitting Wooden Dowels:
Insert dowels (A) into holes in the indicated parts.


Fitting metal dowel
Screw metal dowel (G) into top frame 19 and side panels 2 and 3.

Note: Insert metal dowels as far as shown.

Do not over tighten.

Fixing hinge plates:
Fix hinge plates (R) in the pre drilled holes on side panels 2 and 3 using screws (O) as shown.

Fixing hanging holder:
Fix rail support (S) in the pre drilled holes on side panels 2 and 3 using screws (O).

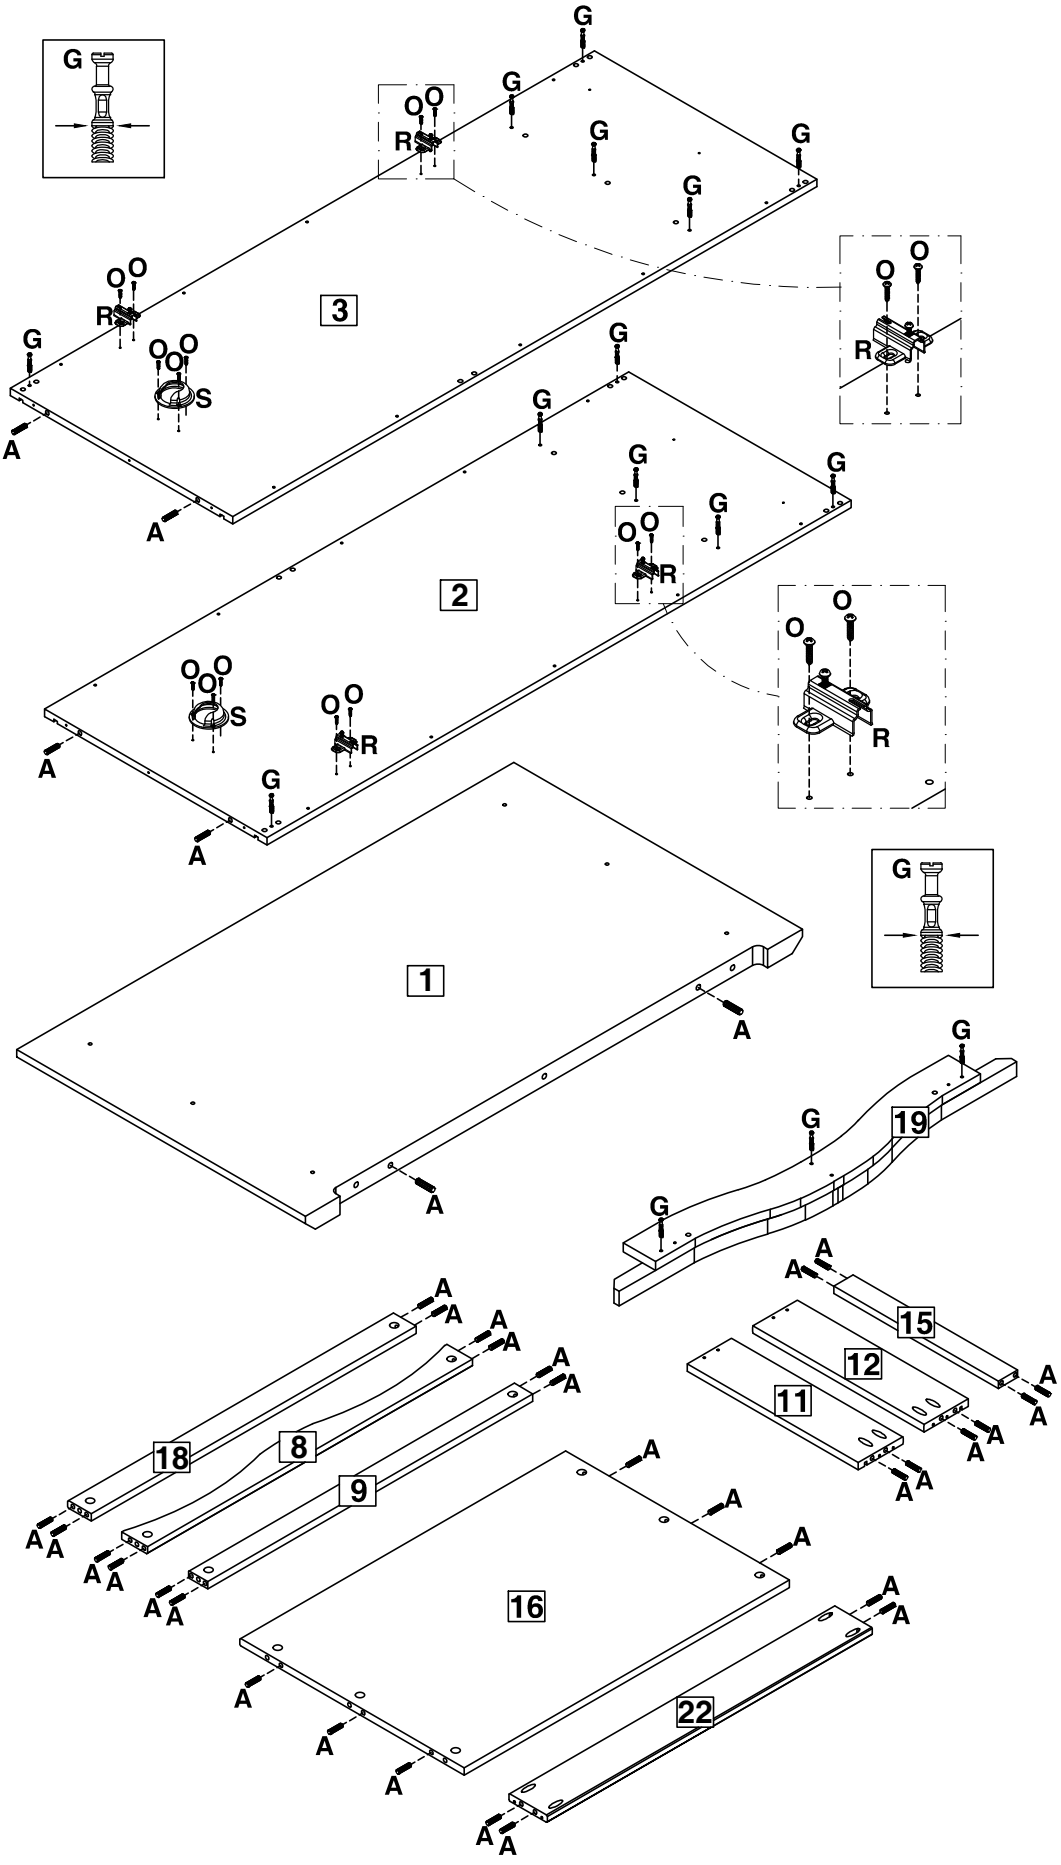


Assembly Instructions

Step 2

Fixing hinge:
Fix hinge Q in the pre drilled holes on doors 20 and 21 using screws O.

Fix knob J using bolts K.

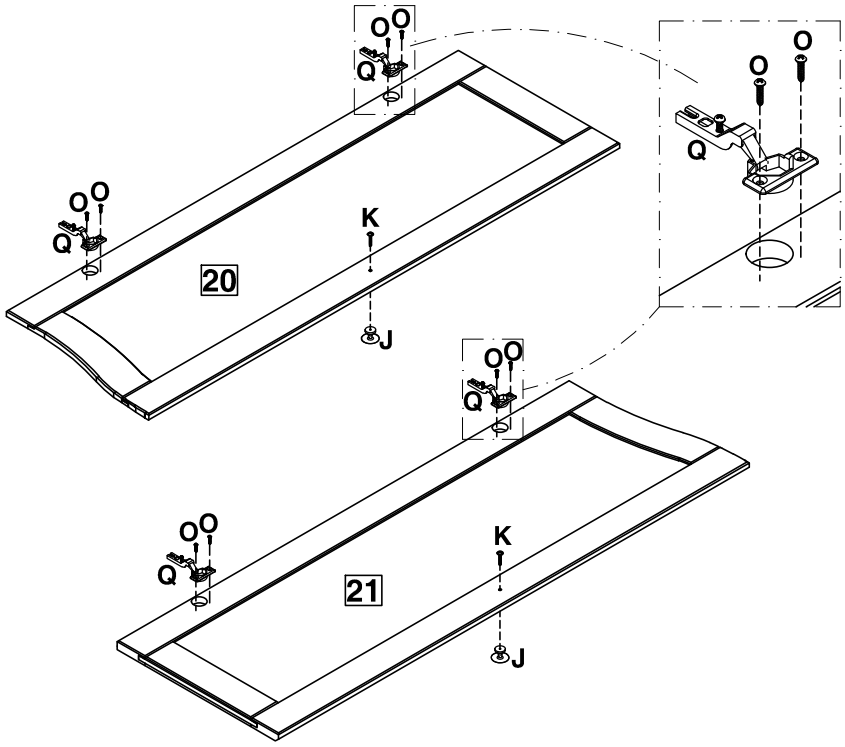


Step 3

Parts 2, 3, 4, 5, 6 and 7 are labelled for easier identification.
Attach left side panel 2 to left front foot 4 and left back foot 6 using screws L.

Attach right side panel 3 to right front foot 5 and right back foot 7 using screws L.

Attention:
Make sure side panels are correctly aligned and in flush to the top of the feet prior to fixing, as shown.

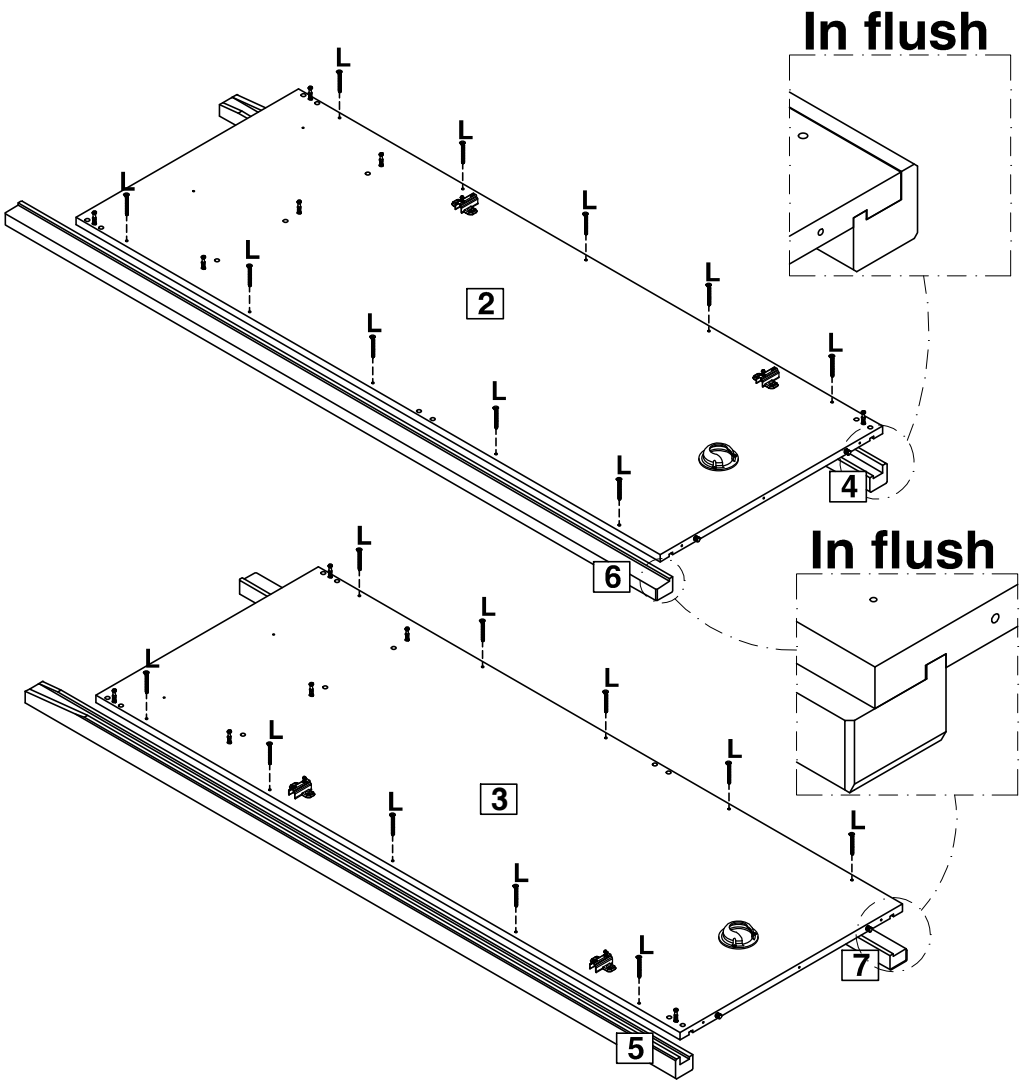


Assembly Instructions

Step 4

Fixing runners:
Fix runners E and F in the pre drilled holes on side panel 2 and 3 using screws C.

Attention:
Make sure runners are positioned as shown.

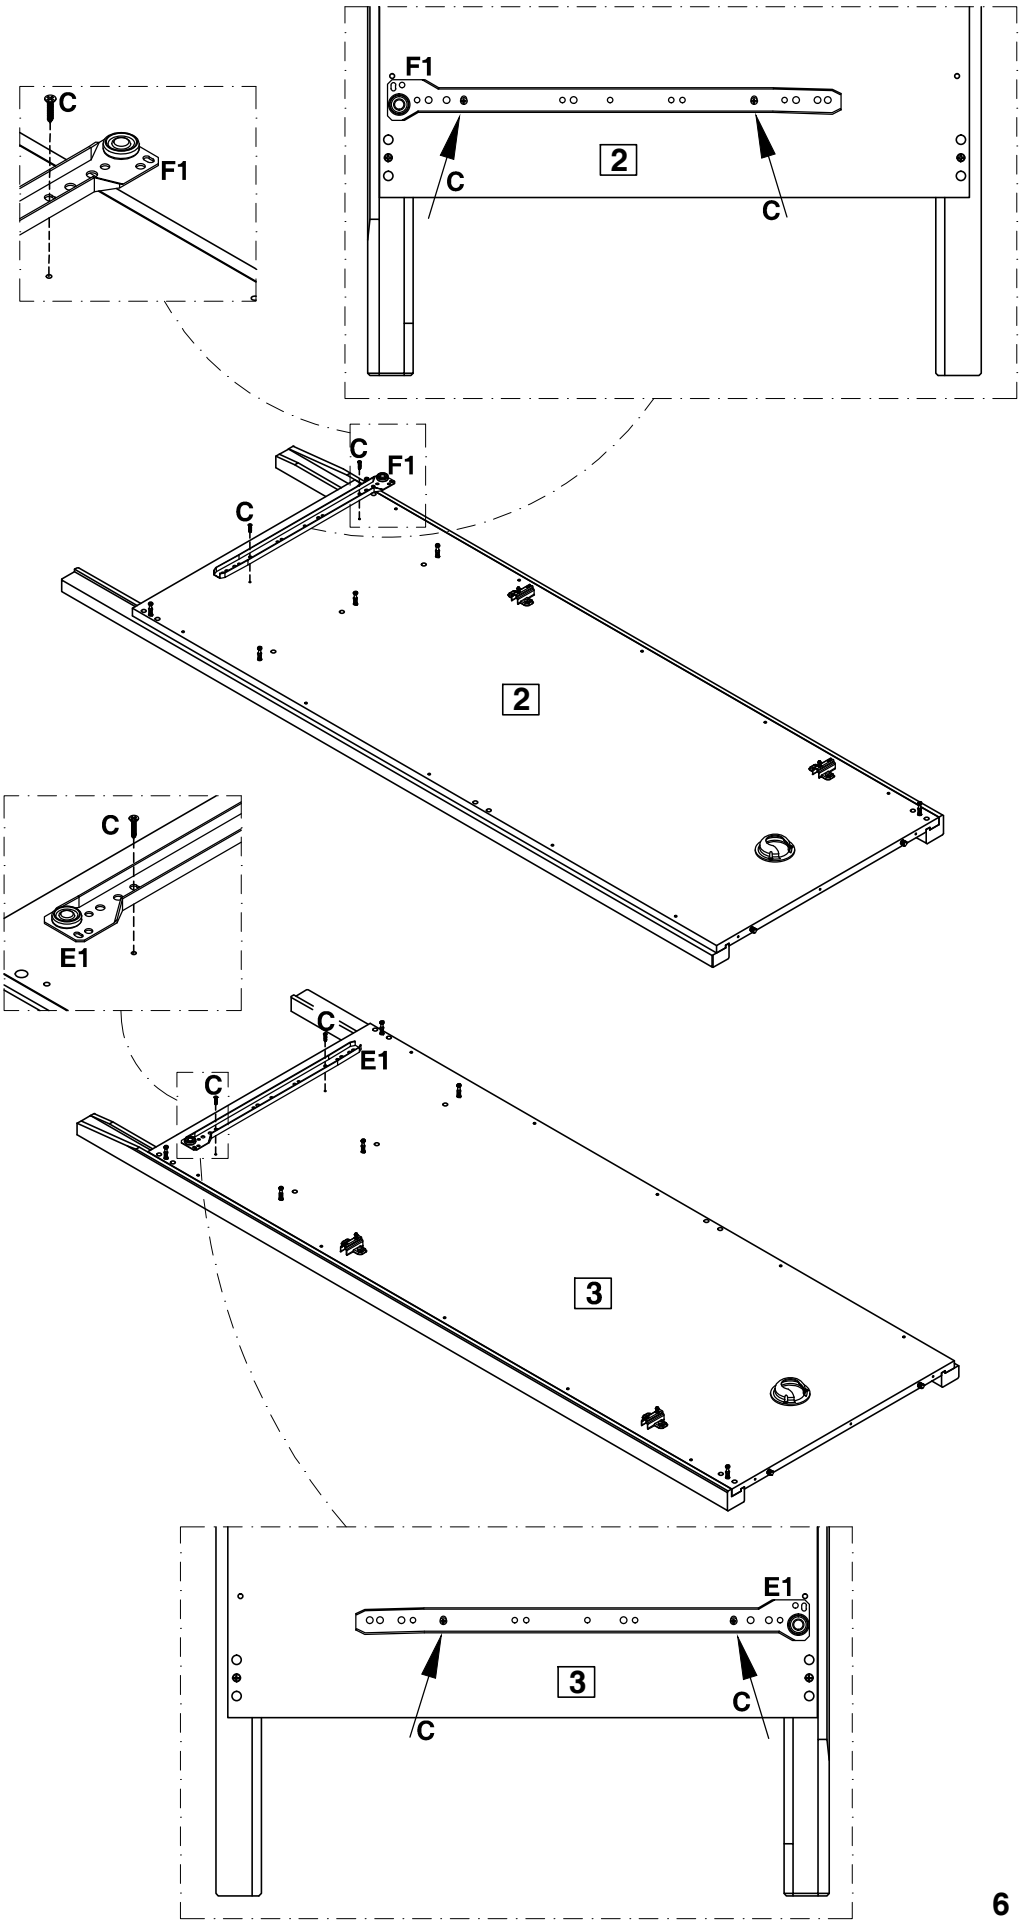

Assembly Instructions


Step 5

Assembly the cabinet
Fit base panel 16 and front rail 18 to the right side panel 3 as shown.

Insert 4 locking nuts Ⓗ into base panel 16 and front rail 18 where shown.

Use a screwdriver to turn locking nuts Ⓗ clockwise to lock.

Do not over tighten.

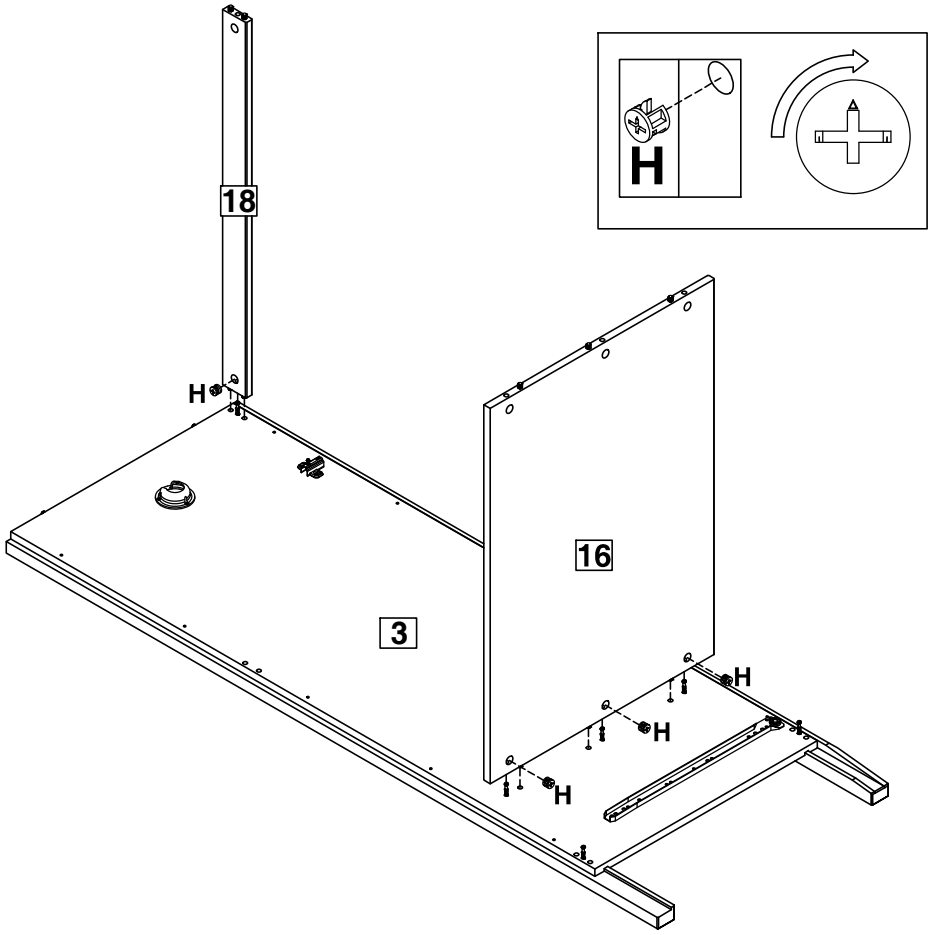

Step 6


a) Fit bottom frame 8 and back rail 9 to the right side panel 3 as shown.

Insert 2 locking nuts Ⓗ into bottom frame 8 and back rail 9 where shown.

Use a screwdriver to turn locking nuts Ⓗ clockwise to lock.

Do not over tighten.

b) Attach large back rail 22 in the right side 3 using screws Ⓑ.

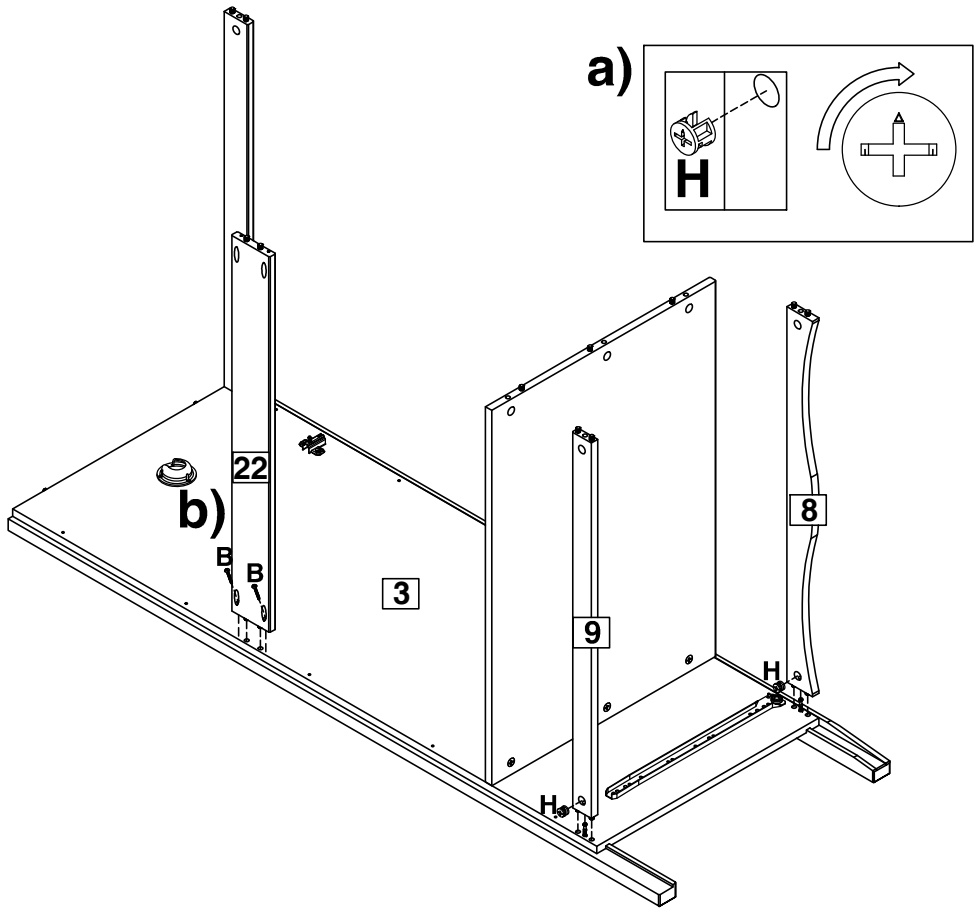

Assembly Instructions

Step 7

a) Fit left side panel 2 to the bottom frame 8, back rail 9, front rail 18, base panel 16 and large back rail 22.


Make sure dowels are fitted into their holes at the same time.

Insert 6 locking nuts (H) into bottom frame 8 and back rail 9, front rail 18 and base panel 16, where shown.

Use a screwdriver to turn locking nuts (H) clockwise to lock.


Do not over tighten.

b) Attach large back rail 22 in the left side 3 using screws (B).

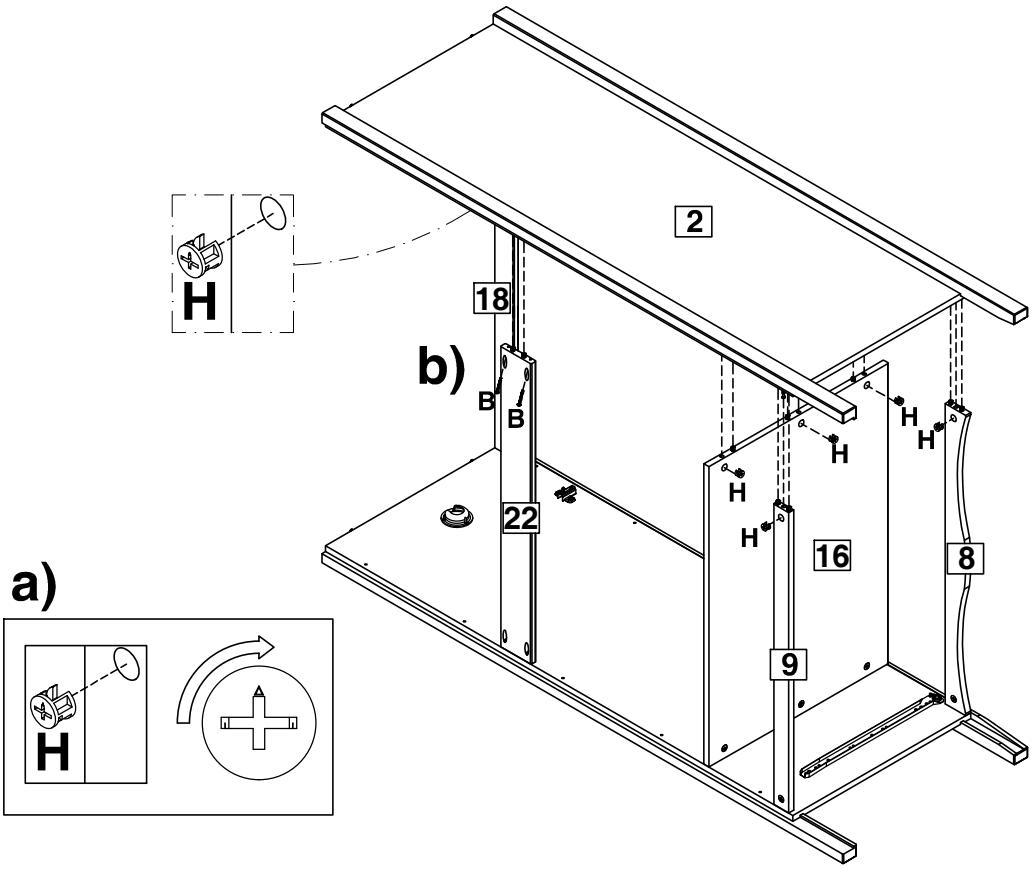

Step 8

Carefully, lay down the cabinet. Attach top panel 1 to side panels 2 and 3 using screws (P).

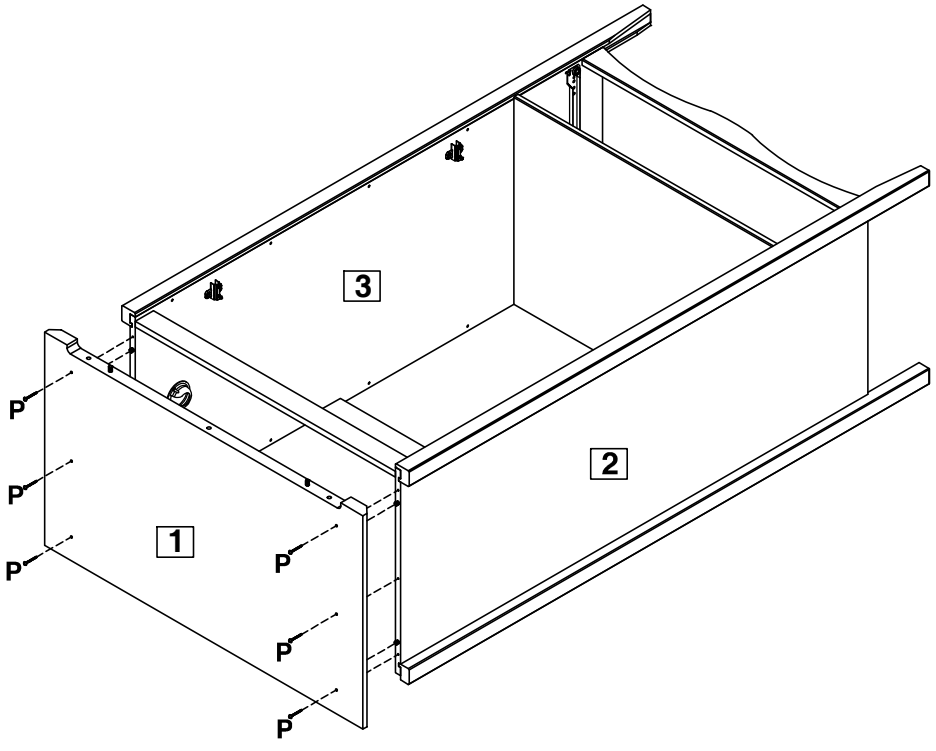

Assembly Instructions


Step 9


Attaching top frame
Fit top frame 19 to the top panel 1.


Insert 3 locking nuts H into top panel 1 where shown.

Use a screwdriver to turn locking nuts H clockwise to lock.

Do not over tighten.

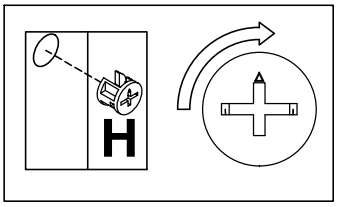

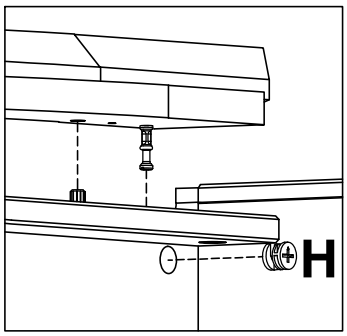

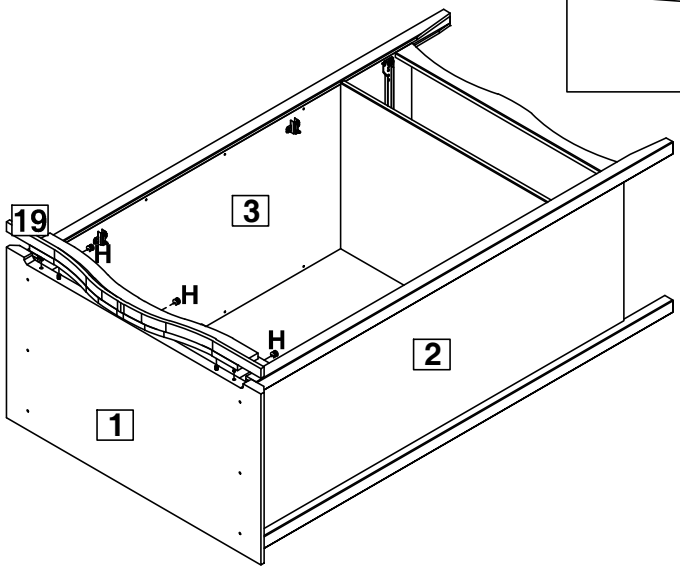



Step 10

Fixing back panel
With help, carefully turn the cabinet upright.
Fix back panels 23 within rebates using nails I.
Ensure H profile 24 is in place before nailing as shown.

Important: Cabinet **MUST** be 'square' when back is attached.

Make sure finished side of back panel is facing inside.

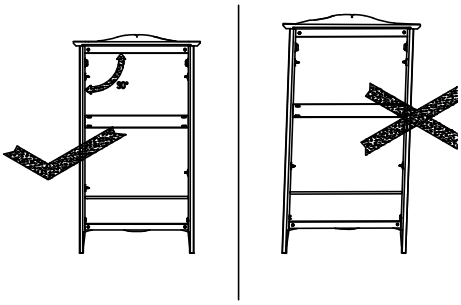

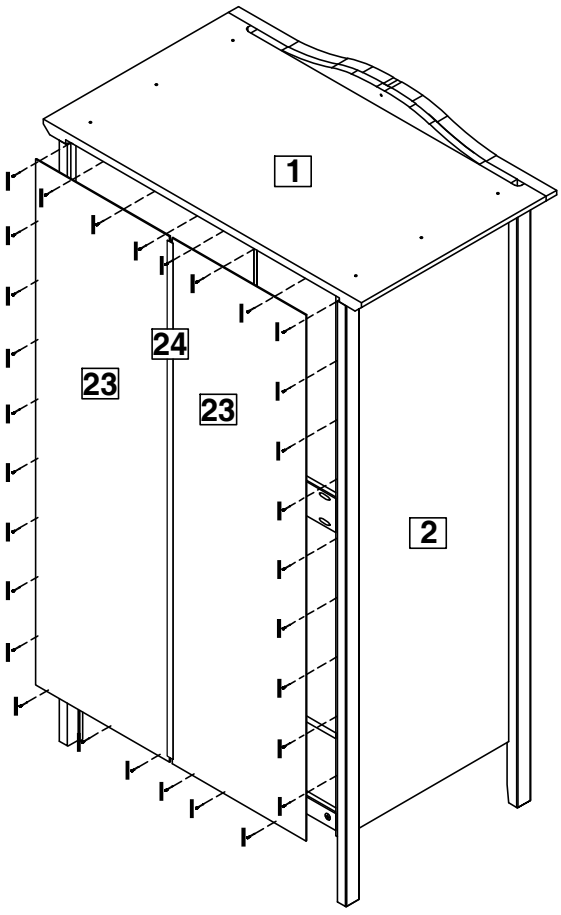

Assembly Instructions

Step 11

Drawer assembly

A) Attach drawer sides 11 and 12 in the drawer front 10 using screws B.

B) Slide drawer bottom 14 in to slots on drawer sides 11 and 12.

Make sure finished side face inside the drawer.


Fit drawer support 15 to drawer front 10, as shown.


C) Attach drawer back 13 to drawer sides 11 and 12 using screws B.


D) Fix knob J using bolts K.


E) Fix runner E and F using screws D.


Make sure runners are positioned as shown.

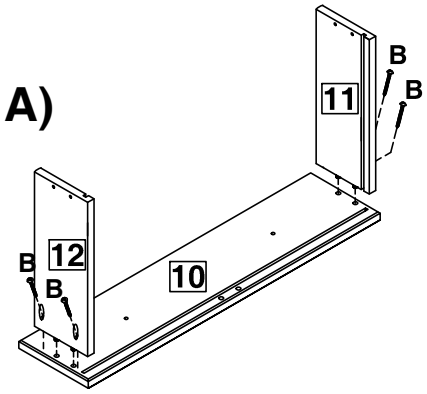

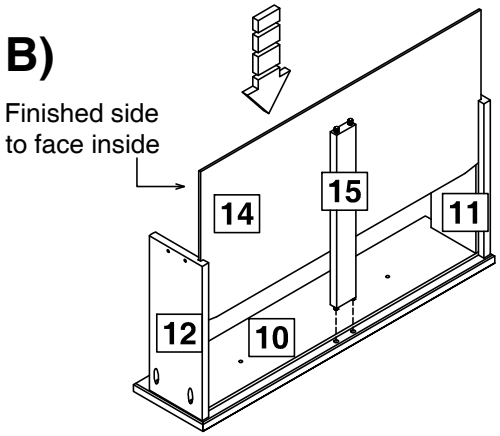

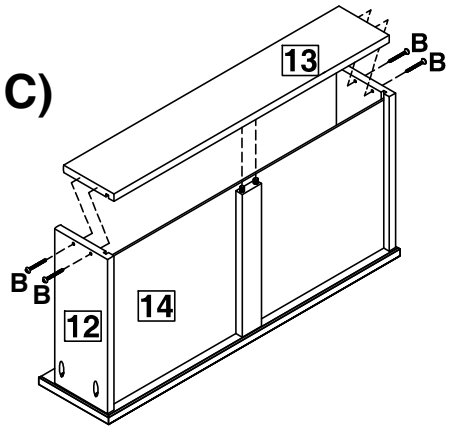

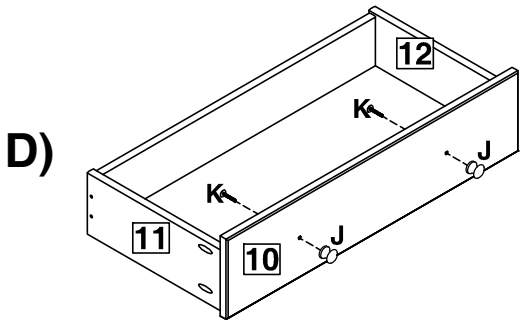


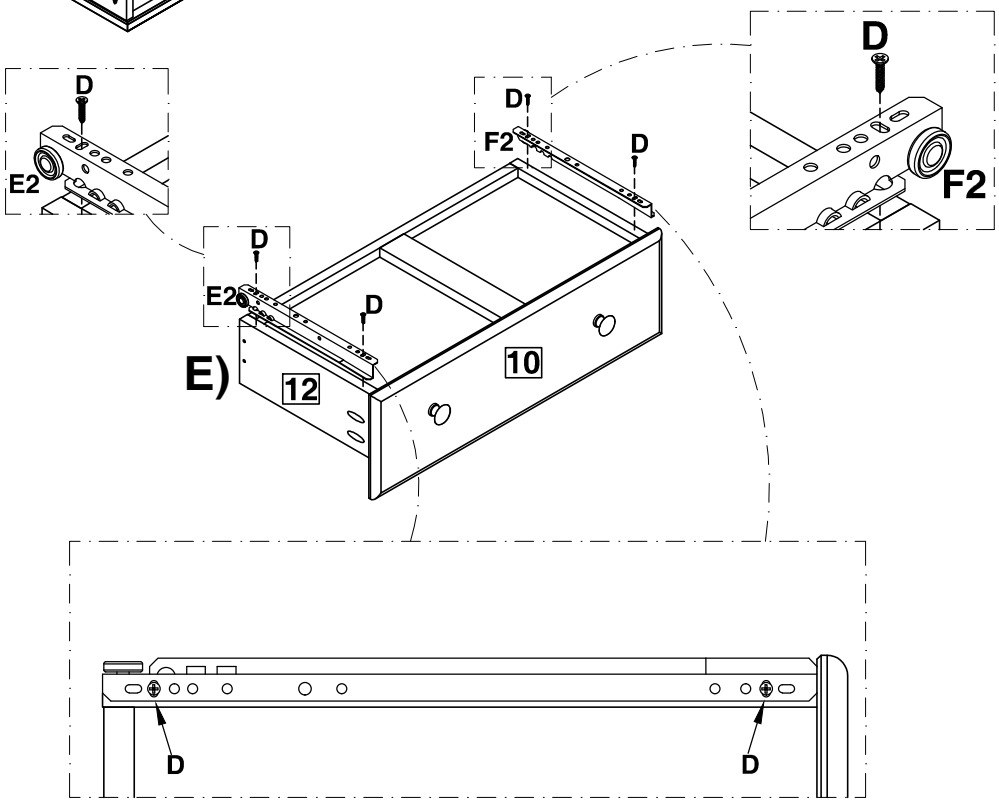

Assembly Instructions

Step 12


Insert hanging rail 17 to the supports as shown.

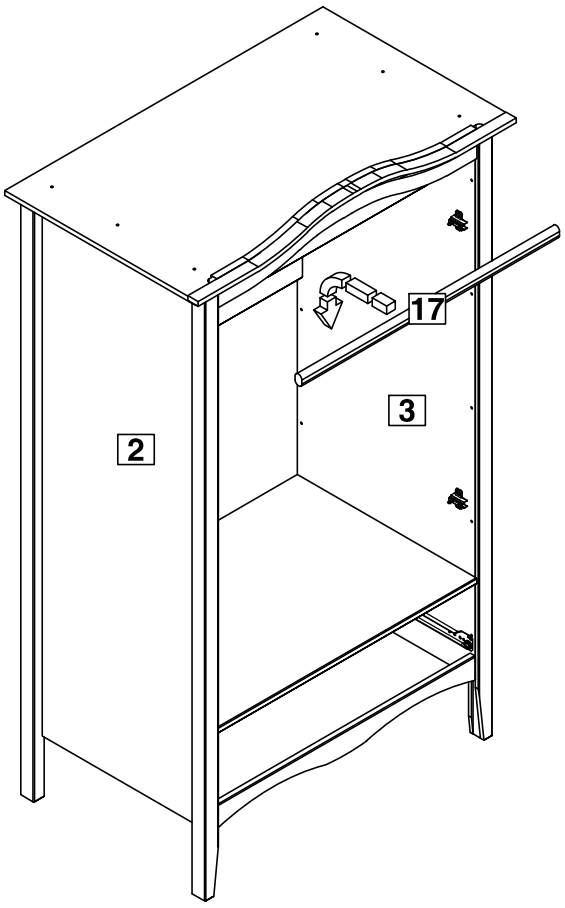


Step 13

Hanging doors:
With help, slot door hinges Q on to plates R and tighten screw.

Hinge plates R must be inserted in the screw at the back of hinge Q.

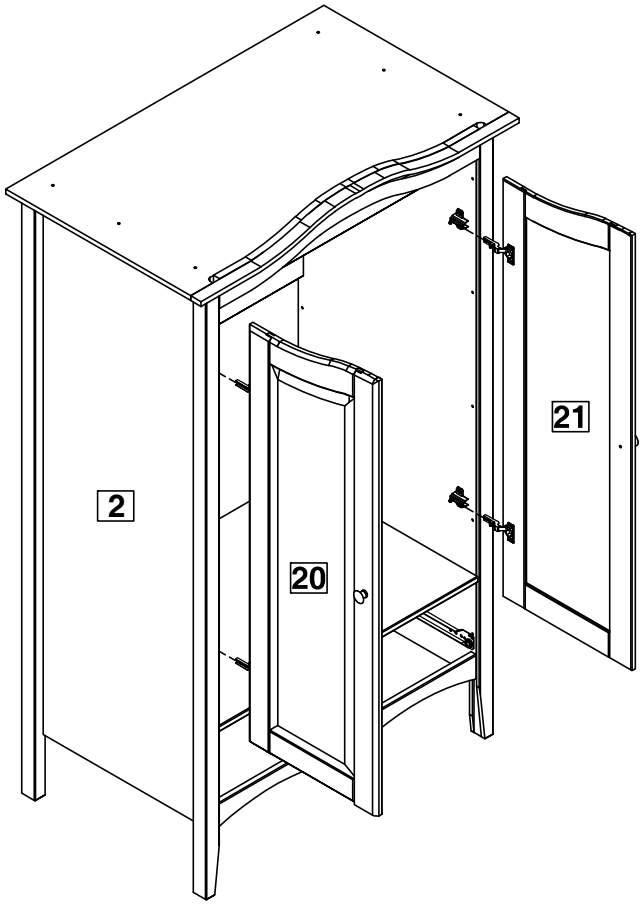

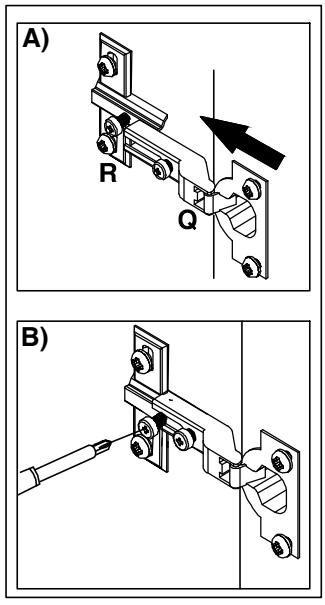

Assembly Instructions


Step 14


In case of uneven floor, use plastic wedge (T) to level the product before adjusting doors.


Door adjustment:
1- To move left or right, loosen screw shown and move doors to suit. Re-tighten screws.

2- To move doors in or out, loosen screw shown and move doors to suit. Re-tighten screws.

3- To move doors up or down, loosen screws show and move doors to suit. Re-tighten screws.

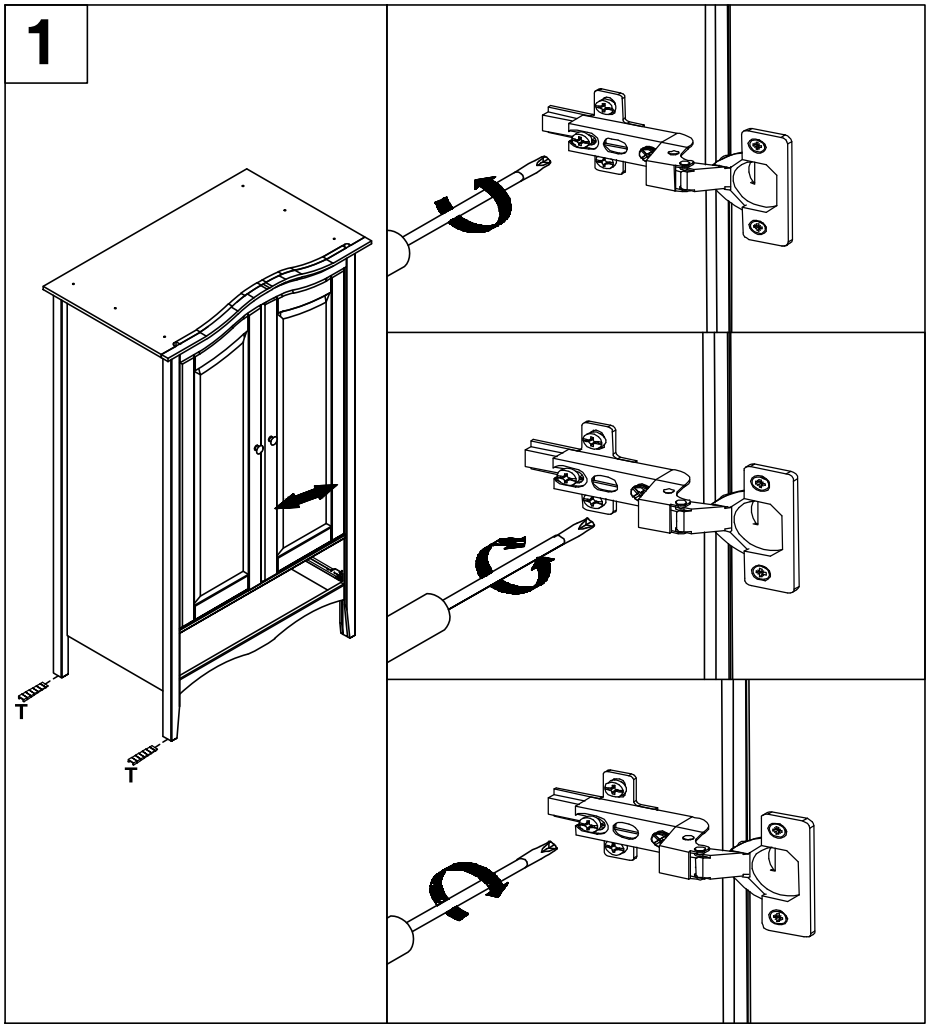

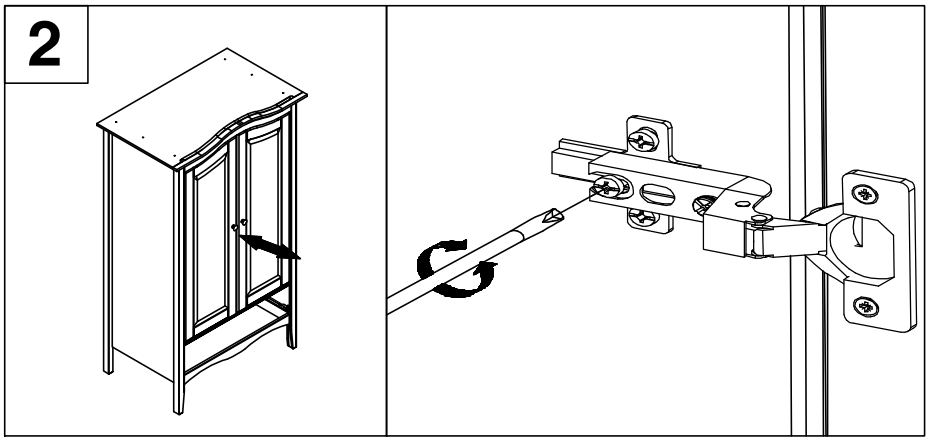


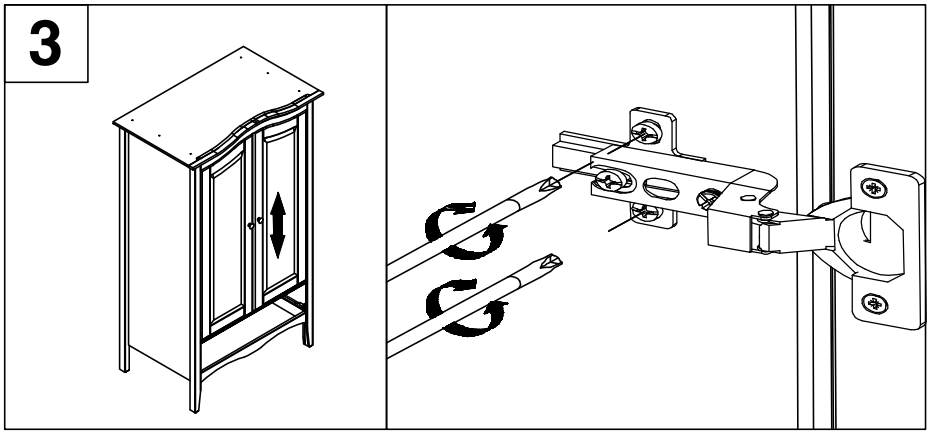

Assembly Instructions

Step 15


Insert drawers
Hook the wheels of the runner on the back of the drawers over the wheels of the runners on the left and right sides, then hold the drawers level and slide backwards into position.

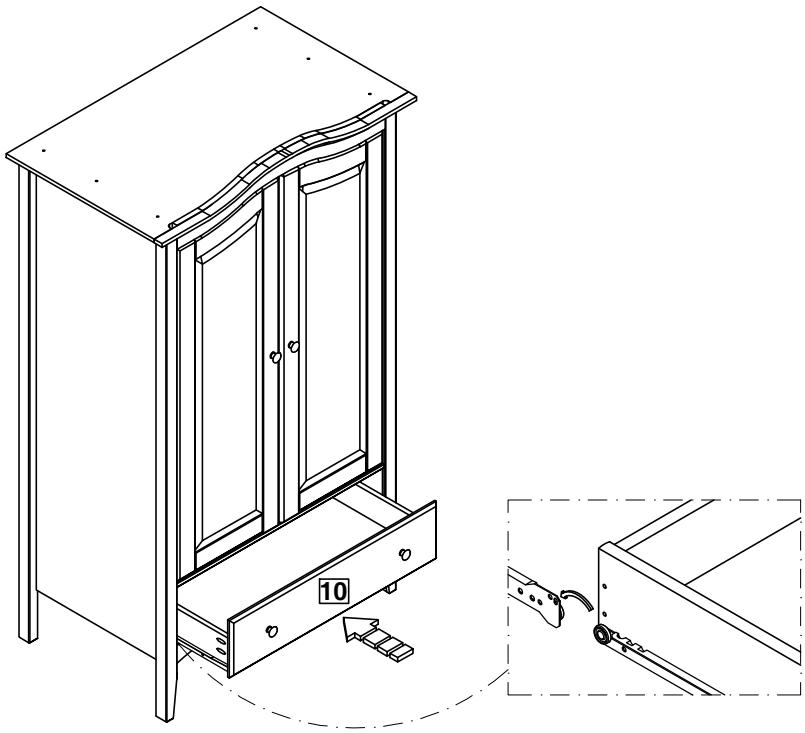

Step 16

Adjusting drawers

Loosen the screws in the runners, adjust the drawers to suit and once drawers are aligned retighten and insert 1 screw C into fifth hole of the runners E and F.

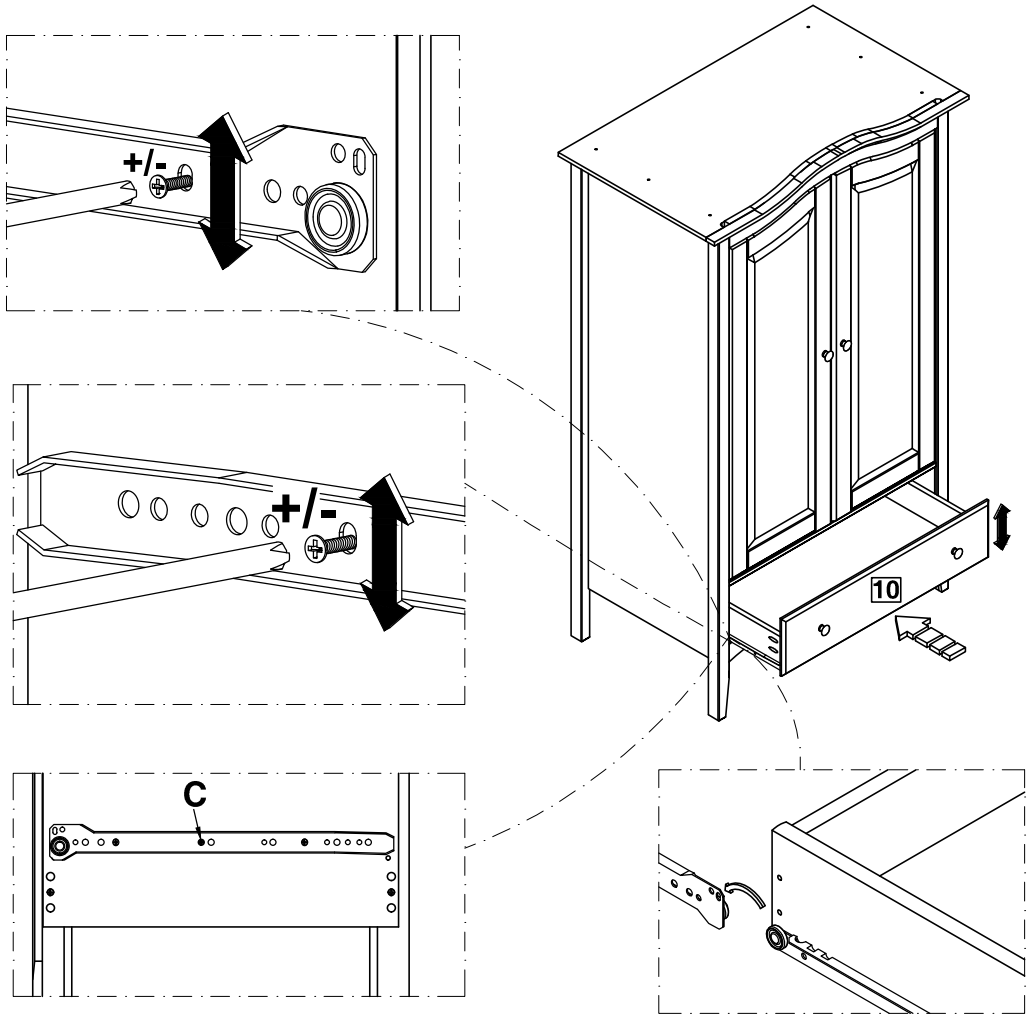


Assembly Instructions

Step 17


Adjusting drawers

To move drawers left or right: loosen the screws in the runners, adjust the drawers to suit and once drawers are aligned retighten.

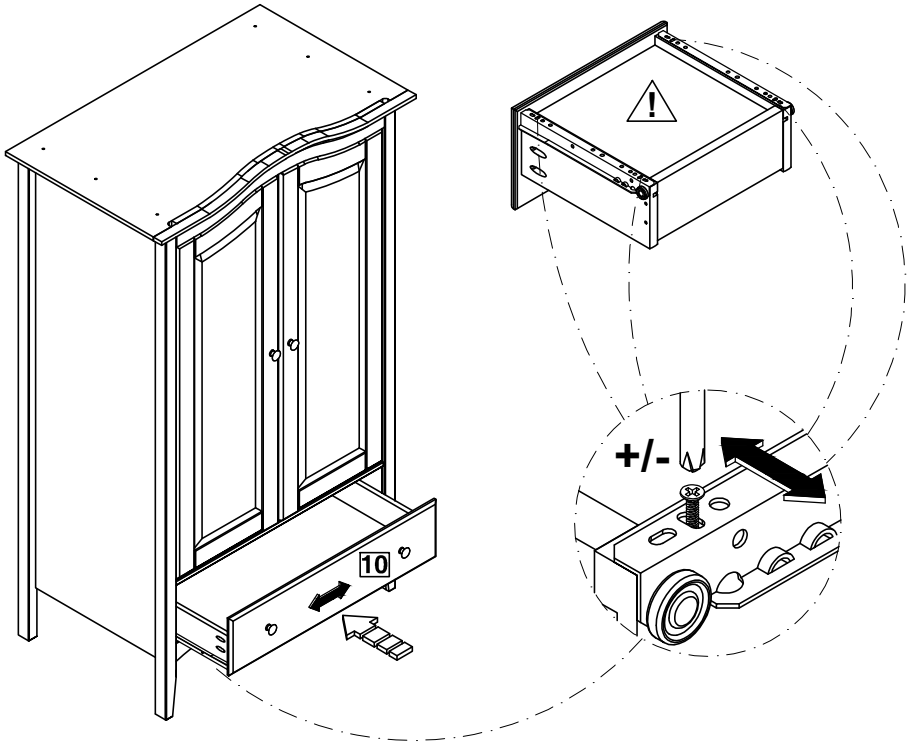

Step 18

Fixing wall strap
Fix strap (M) to top of furniture using washer (N) and screw (O). With help, move furniture into position.

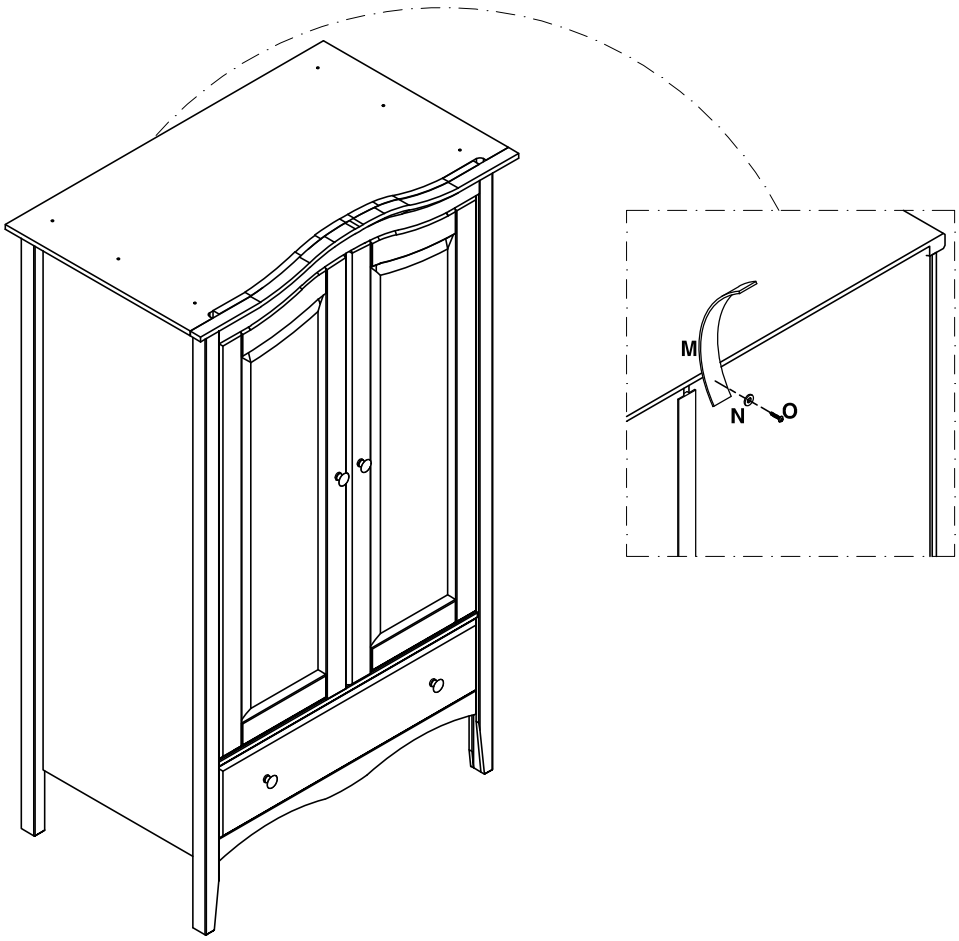

Mark fixing hole on wall and remove furniture. Drill hole and insert wall plug (not supplied).

Warning:
Before drilling check wall hidden pipes and cables.

Note: wall plugs not supplied. The type of fixing must be used for your wall, seek professional advice if in doubt.

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

A Guide to -**Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fxings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.

Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well ftted and are a tight ft in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Pourpose" wall plug**

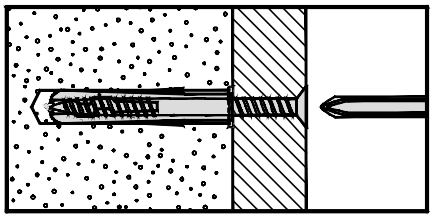


Generally aerated blocks should not be used to support heavy loads, use a specialist ftting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

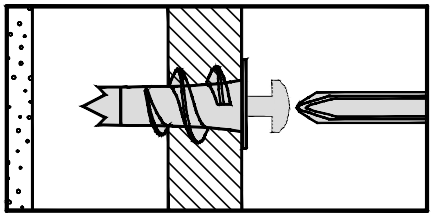


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

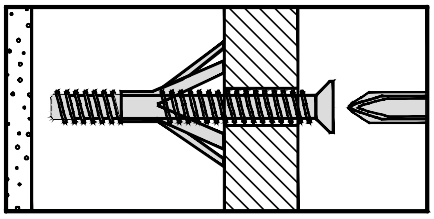


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

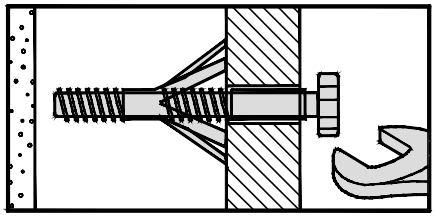


For use when ftting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

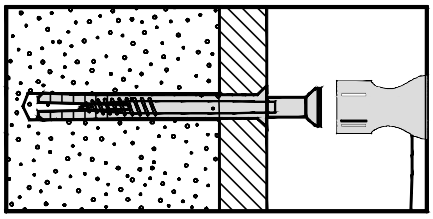

For use with walls stuck with plasterboard. The hammer fxing allows it to be fxed to the wall rather than the plasterboard. Always check the fxing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

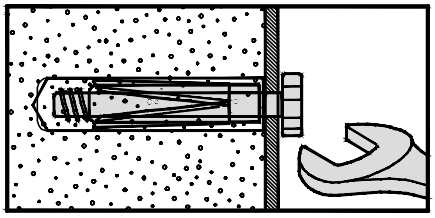

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the ftting and location to ensure your safety in and around the home.

Fitting: From time to time check the ftting to ensure the wall plugs or screws do not become loose.