
Ellie Wardrobe and Storage

Assembly Instructions - Please keep for future reference

257/8028

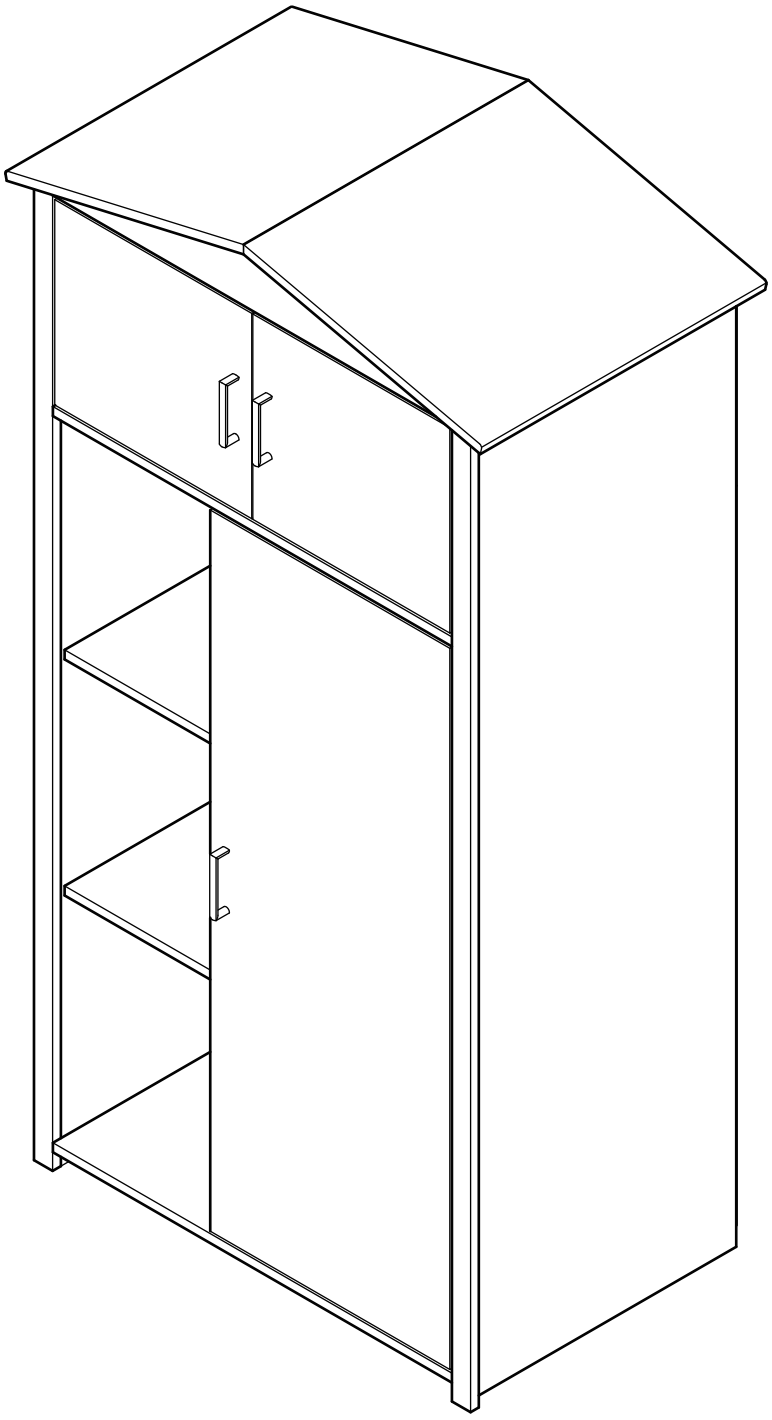

Dimensions

Width - 90cm
Depth - 54cm
Height - 170cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6400800

Version 1 Date: 14/05/14

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not use this item if any components are missing or damaged.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• During assembly children should be kept away from the product due to possible risk of injury.

• Parts of the assembly will be easier with 2-3 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure that all bolts and fittings are tightend properly.

IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

• Argos Ltd. MK9 2 NW.

• This product is intended for children in the age range of 7-12 years.

• Maximum load: 5 kgs for each shelves.


• Assembly of this product must be carried out by a competent adult.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400800**


Please check you have all the panels listed below

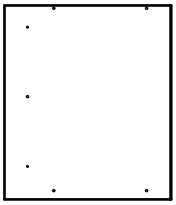


1 Top right panel
(46 x 53.5cm)

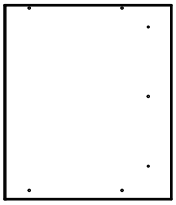


2 Top left panel
(46 x 53.5cm)

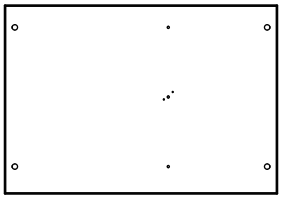


3 Bottom panel
(75 x 51.8cm)

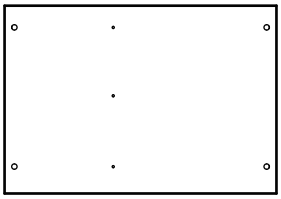

4 Top shelf
(75 x 51.8cm)

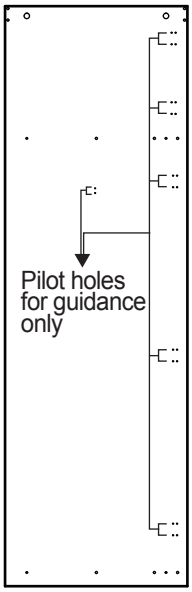

5 Right side panel
(50.3 x 160cm)

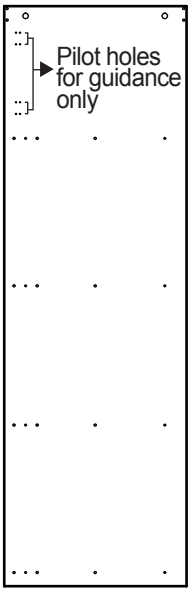

6 Left side panel
(50.3 x 160cm)




7 Right side leg
(3.5 x 160cm)




8 Left side leg
(3.5 x 160cm)



9 Middle panel
(49.7 x 118.2cm)

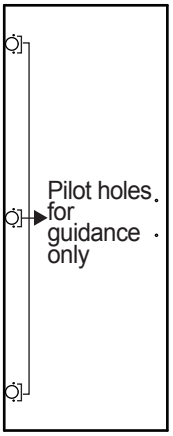

10 Door panel
(45 x 117.3cm)

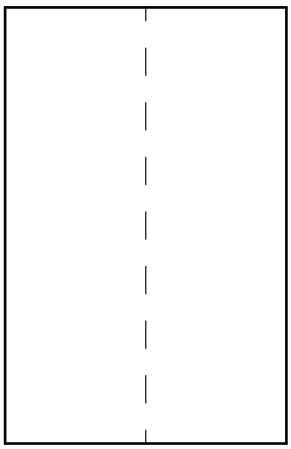


11 Back panel
(77.6 x 120.3cm)




12 Left side shelf x 2
(49.6 x 29.2cm)




13 Top back panel
(77.6 x 34cm)

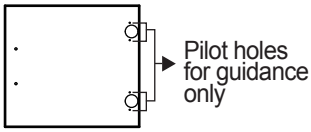

14 Top door panel
x 2 (37 x 33.4cm)



15 Front panel
(75 x 13cm)








16 Back support
(75 x 14.5cm)


Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A  30mm Dowel x 54	**B**  Foot x 1	**C**  14mm Screw x 3
D  Door pad x 2	**E**  Rail Support x 2	**F**  (42 screws are included in the Hinge bag (I)) 15mm Screw x 46
G  50mm Screw x 10	**H**  39mm Locking pin x 16	**I**  Door hinge x 7
J  30mm Screw x 6	**K**  15mm Locking nut x 16	**L**  Handle x 3
M Clothes rail x 1	**N** Nail x 31	**O**  Glue x 1
P  Wall plug x 1	**Q**  Wall strap x 1 (This screw is included in the wall strap bag)  x 1	

Tools required


Phillips screwdriver (medium & large)



Flatblade screwdriver (medium)

7mm Suitable drill bit (for use with wall plug)

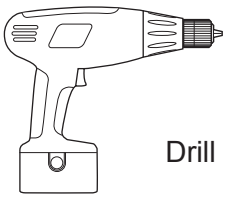

Drill



Small hammer


Ruler/tape measure


Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




The screws length is measured from the head to the point (30mm screw shown).

Assembly Instructions


Step 1


Attaching shelves

a: Place a small amount of Glue Ⓞ into the dowel holes.

Insert Dowels Ⓐ into the Bottom panel 3 and Top shelf 4 .


a:

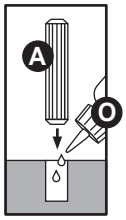


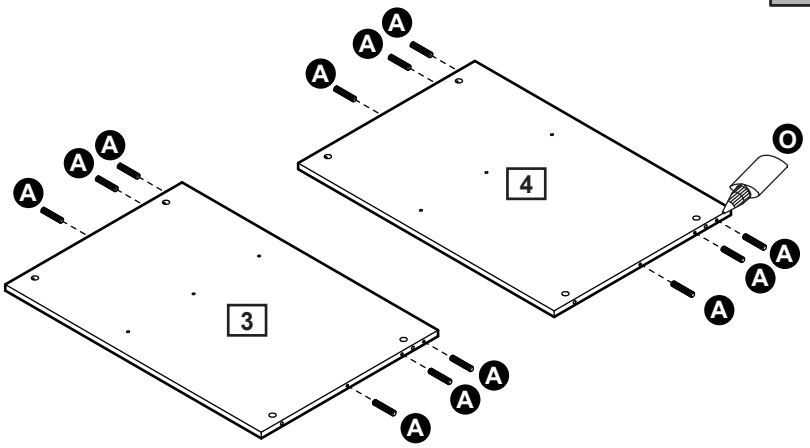

b: Use Screws Ⓕ to fix Rail support Ⓔ onto the Middle panel 9 .

b:

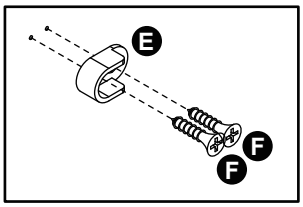

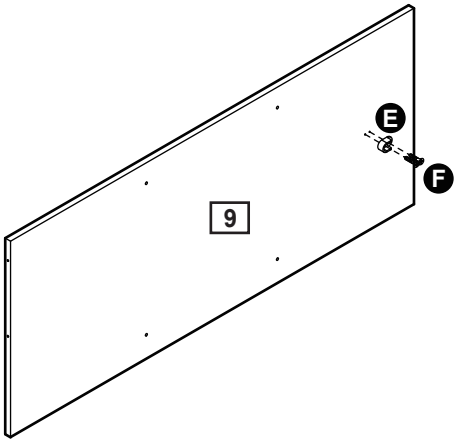


Continued on next page.

Assembly Instructions

Step 1 - continued

c: Use Screws G to fix Bottom panel 3 and Top shelf 4 onto the Middle panel 9 .


c:

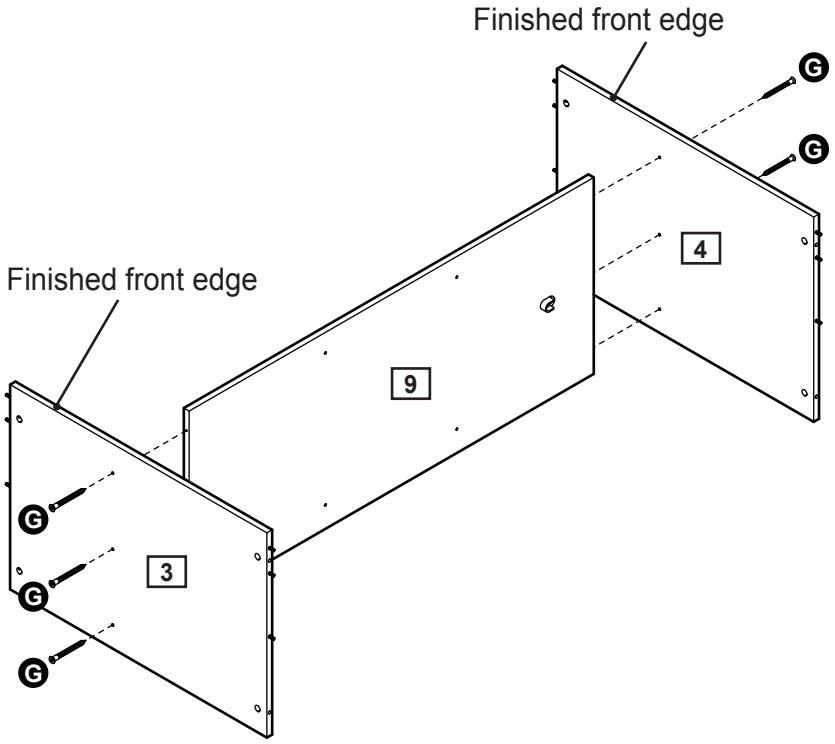

d: Place a small amount of Glue O into the dowel holes.

Insert Dowels A into the Left side shelf 12 .


d:

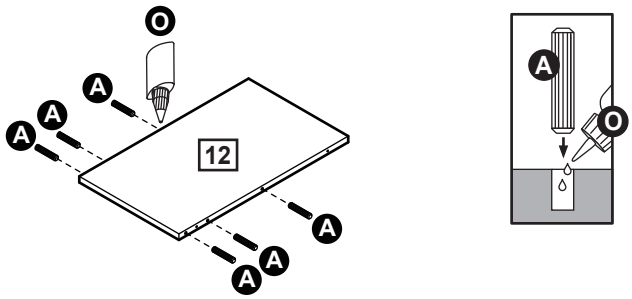

e: Use Screws(4 pcs) G to fix Left side shelf 12 onto the Middle panel 9 .

Use Screws C to fix the Foot B onto the Bottom panel 3 .

e:

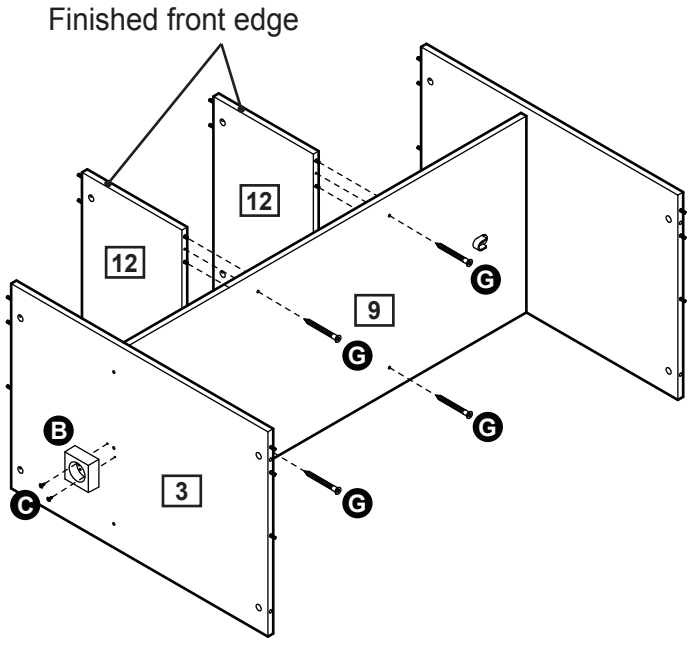

Assembly Instructions

Step 2

Attaching side panel


a: Place a small amount of Glue Ⓞ into the dowel holes.


Insert Dowels Ⓐ into the Left side panel 6 .

Screw 8 Locking pins Ⓗ into the Left side panel 6 .

Note: Insert locking pins as far as shown.
Do not over tighten.

a:

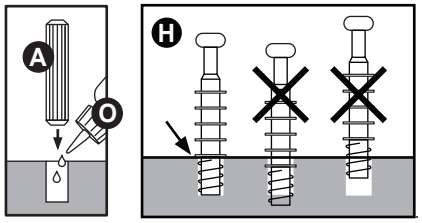

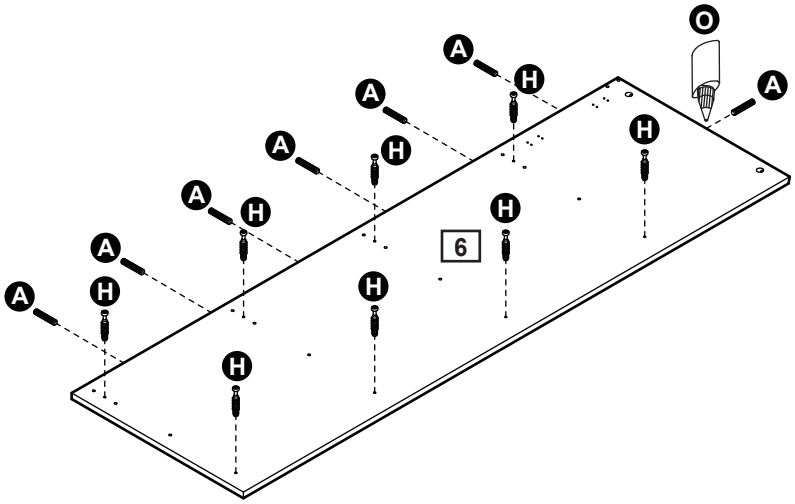

b: Place a small amount of Glue Ⓞ into the dowel holes.


Insert Dowels Ⓐ into the Right side panel 5 .


Use Screws Ⓕ to fix Rail support Ⓔ onto the Right side panel 5 .

Screw 4 Locking pins Ⓗ into the Right side panel 5 .

Note: Insert locking pins as far as shown.
Do not over tighten.

b:

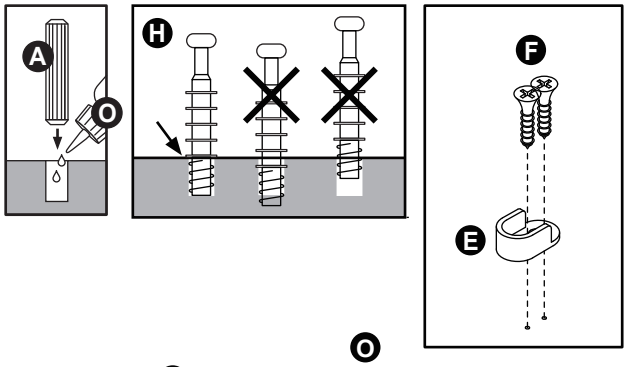

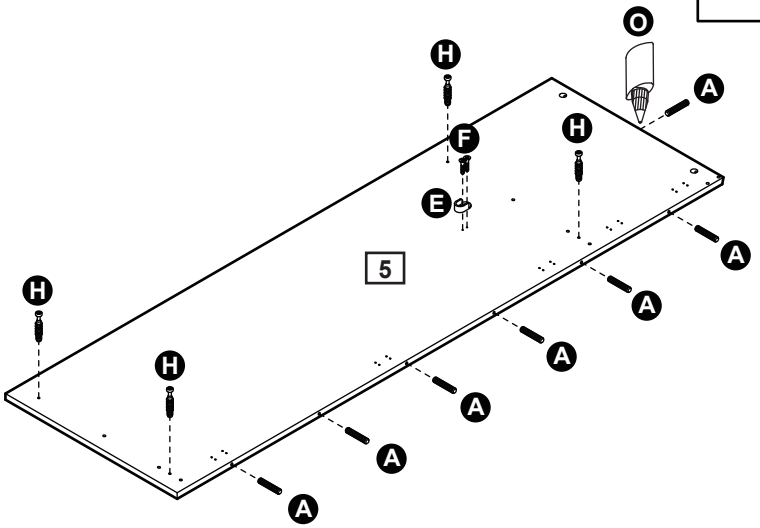


Continued on next page.

Assembly Instructions


Step 2 - continued

c: Fix Door hinges (I) 'back plates' onto Left side panel [6] and Right side panel [5] using Screw (F).

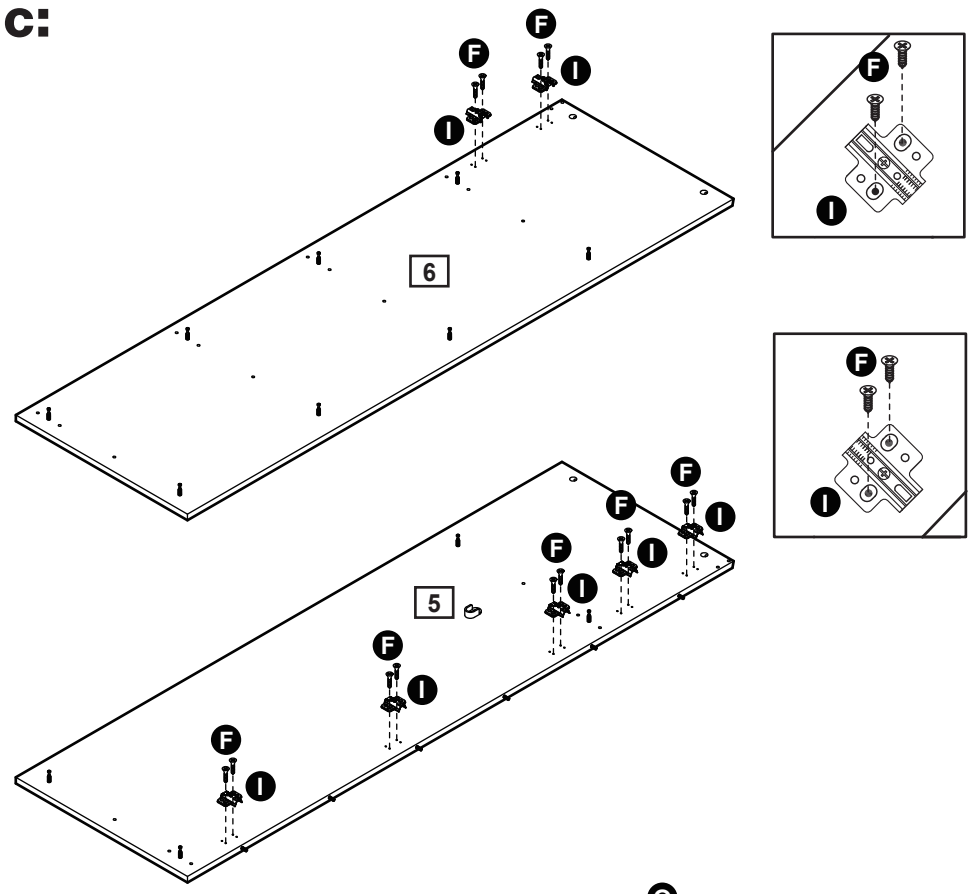

d: Place a small amount of Glue (O) onto the joint's surfaces.

Then carefully locate the Left side leg [8] onto the the Left side panel [6] and Right side leg [7] onto the Right side panel [5] .

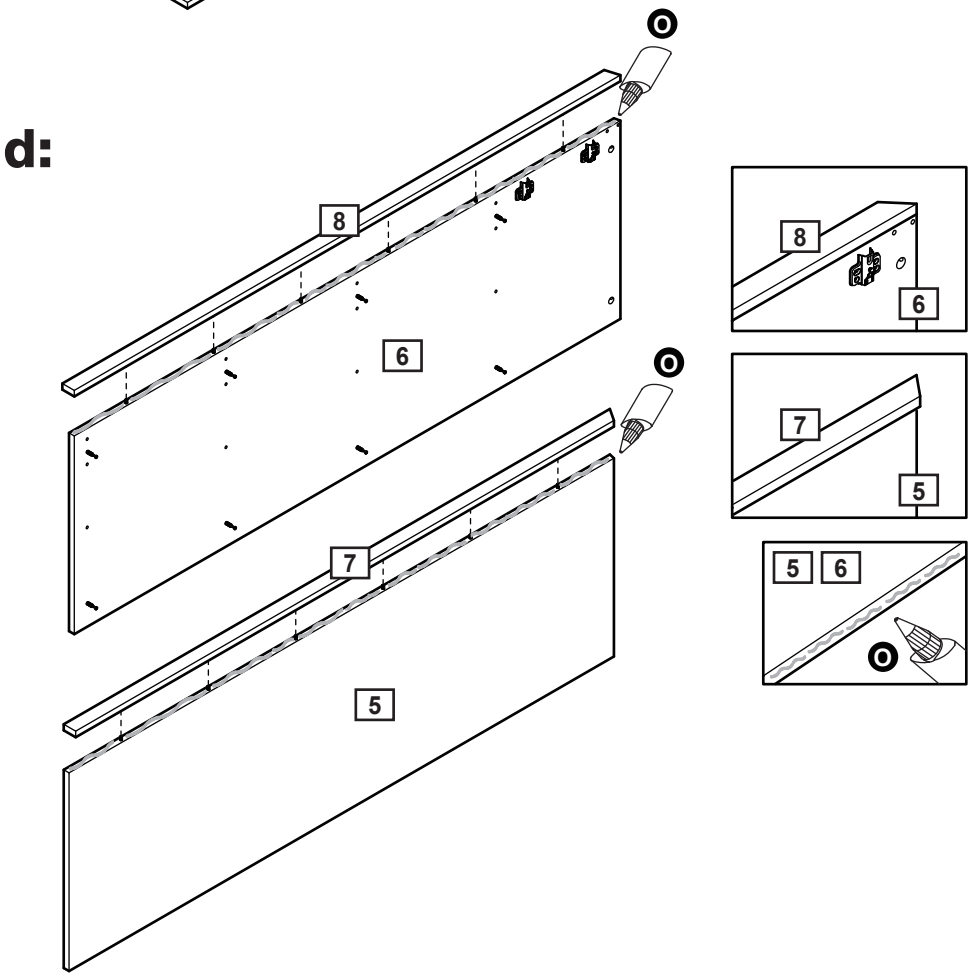


Assembly Instructions

Step 3

Attaching front panel and back support

Place a small amount of Glue **O** into the dowel holes.

Insert Dowels **A** into the Front panel 15 and Back support 16 .

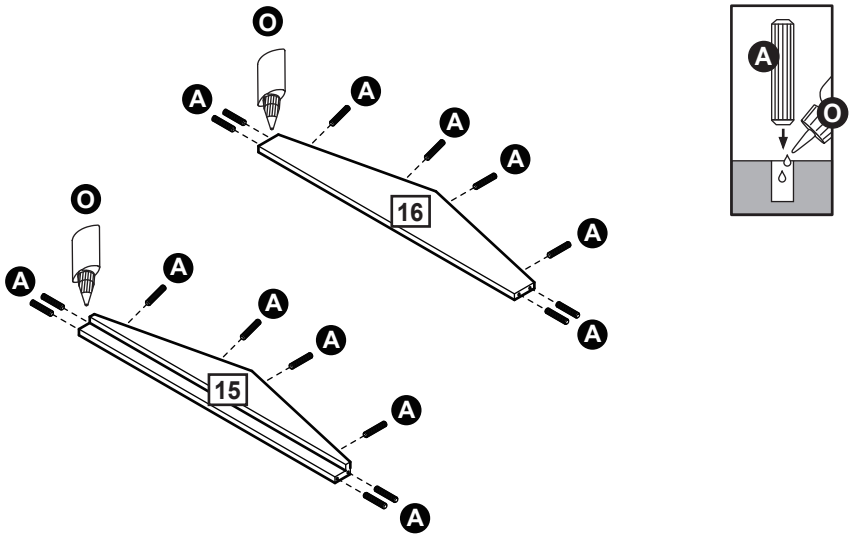


Step 4


Attaching the unit

Position Front panel 15 , Back support 16 , Left side panel 6 and Right side panel 5 onto the unit.

Insert Locking nuts **K** (12 pcs) into the Top shelf 4 Left side shelf 12 and Bottom panel 3 .

Use a screwdriver to turn Locking nuts **K** clockwise to lock.

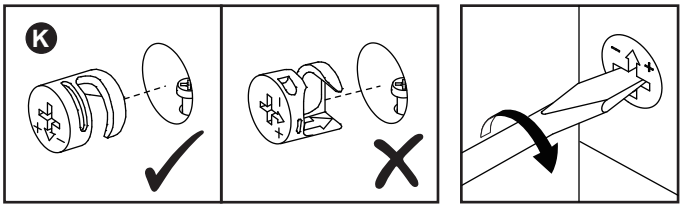

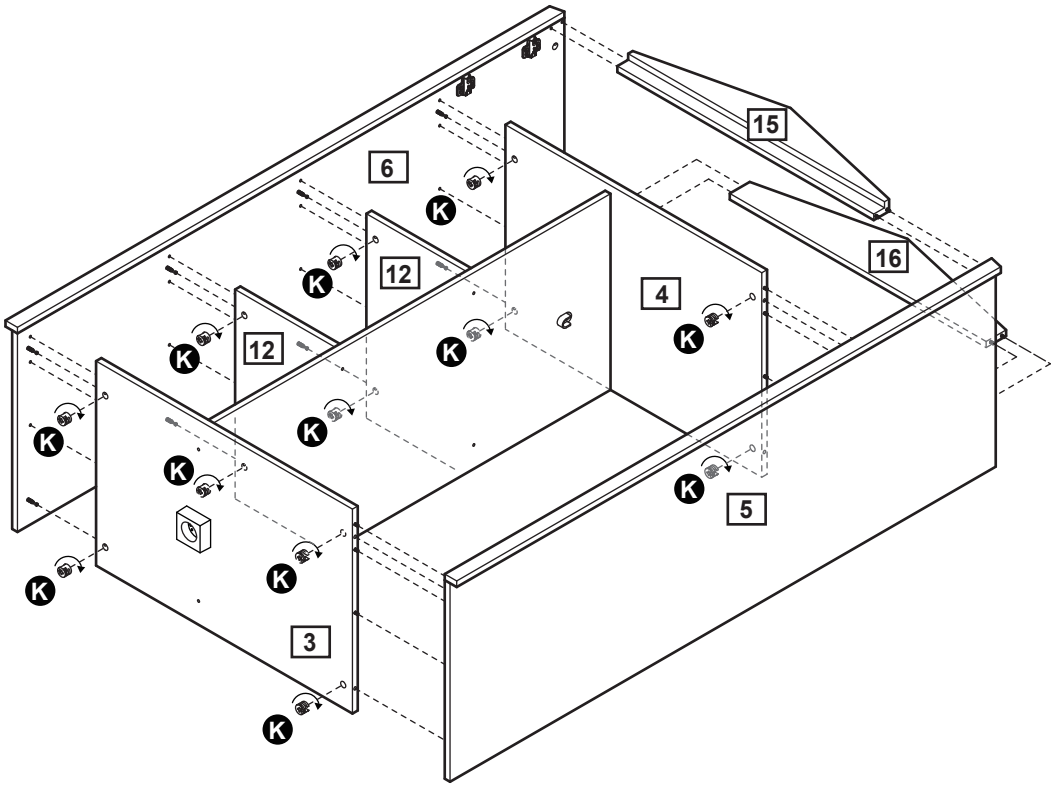


Assembly Instructions

Step 5

Fitting hinges to doors

Fix Door hinges **I** onto Top door panel 14 and Door panel 10 using Screws **F**.

Attach Handle **L** using Screws **J**.

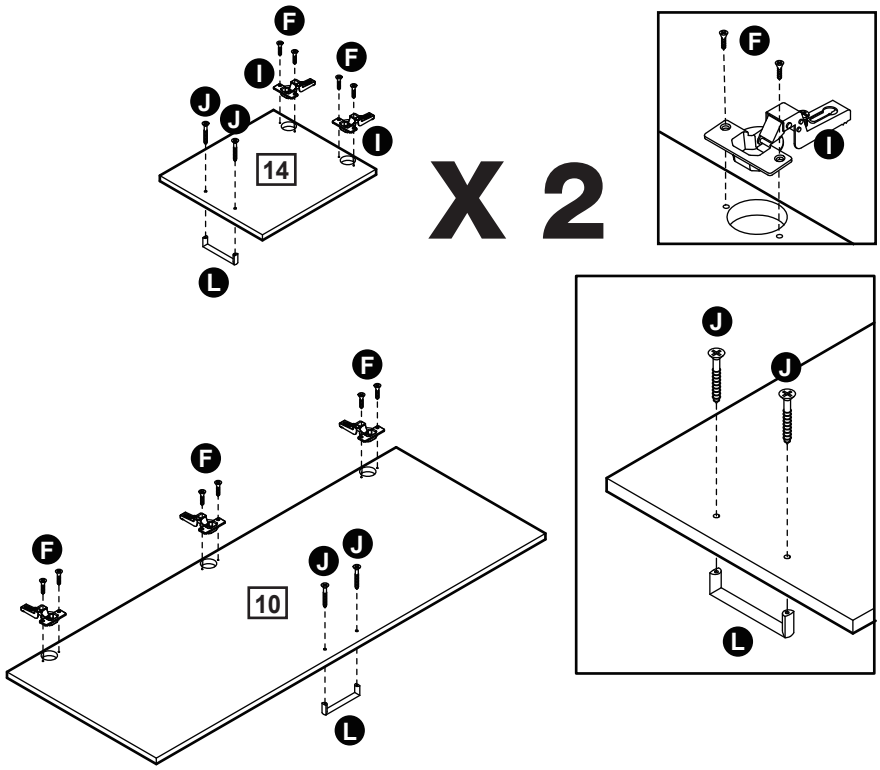


Step 6

Fixing back panel

Attach Top back panel 13 and Back panel 11 using nails **N**.

Important:
The unit **MUST** be 'square' when back is attached.

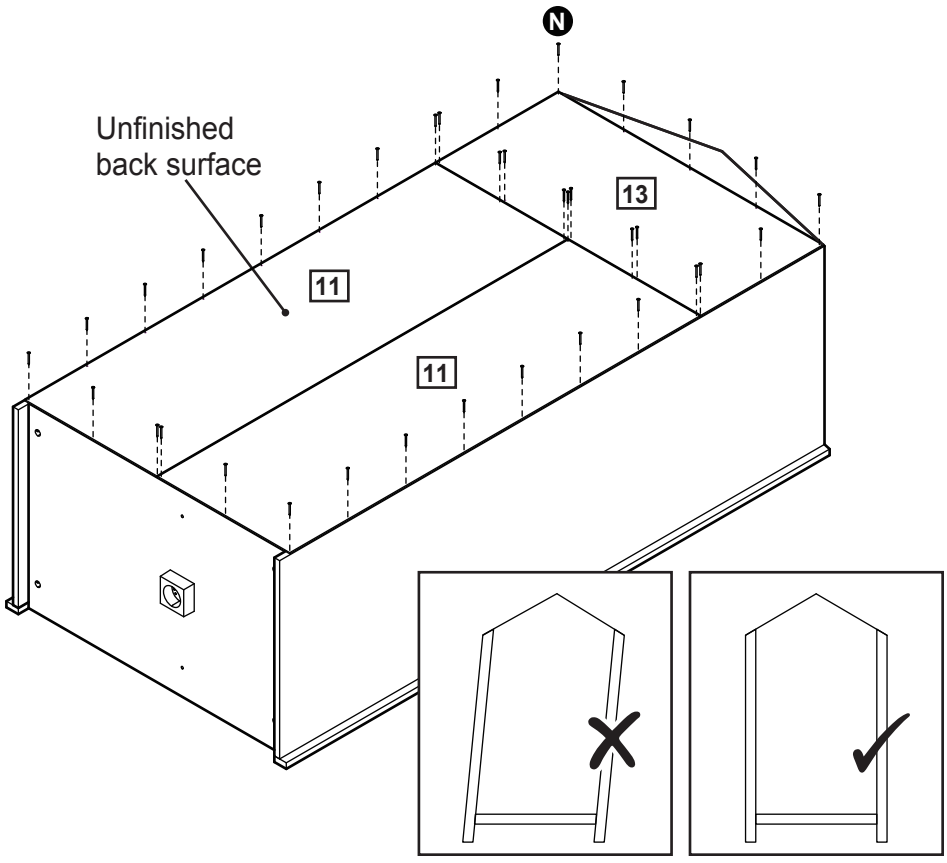

Assembly Instructions


Step 7

Attaching top panel

a: Screw Locking pins Ⓗ into the Top right panel 1 Top left panel 2 .

Note: Insert locking pins as far as shown.
Do not over tighten.

a:

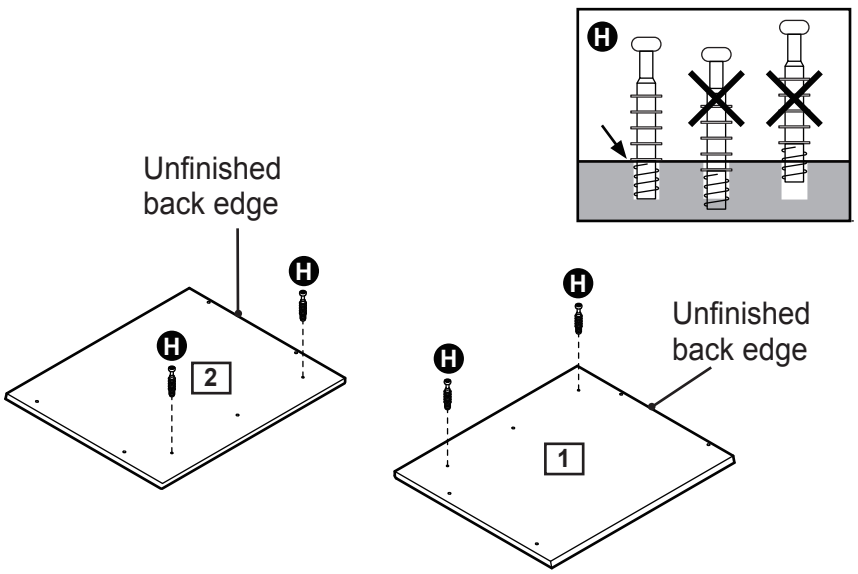

b: Attach Top right panel 1 and Top left panel 2 onto the unit.

Insert Locking nuts Ⓚ (4 pcs) into the Left side panel 6 and Right side panel 5 .


Use a screwdriver to turn Locking nuts Ⓚ clockwise to lock.

Place Clothes rail Ⓜ onto the Rail supports Ⓔ .

Tear off the protective backing from the Door Pads.

Carefully stick the Door pad Ⓓ onto the front edge of Middle panel 9 .

b:

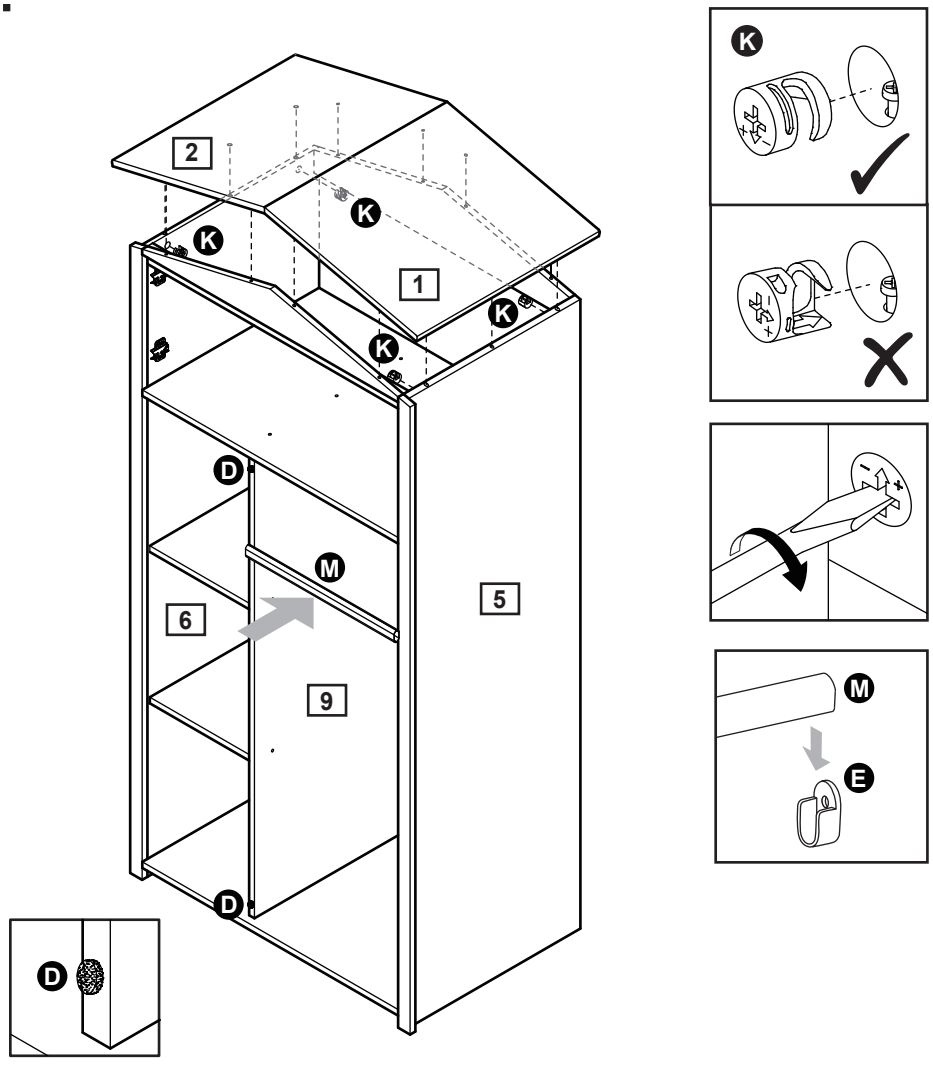

Assembly Instructions

Step 8


Hanging door


a: With help, slot Door hinges ❶ onto 'hinge plates'.


b: Tighten screw shown to lock hinges in position.

Repeat **a** and **b** for opposite door.

See **'Hinge adjustment'** in step 9 if the doors need adjusting.

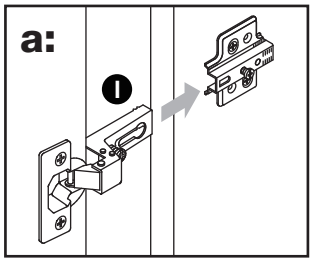

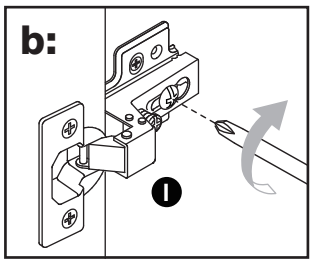


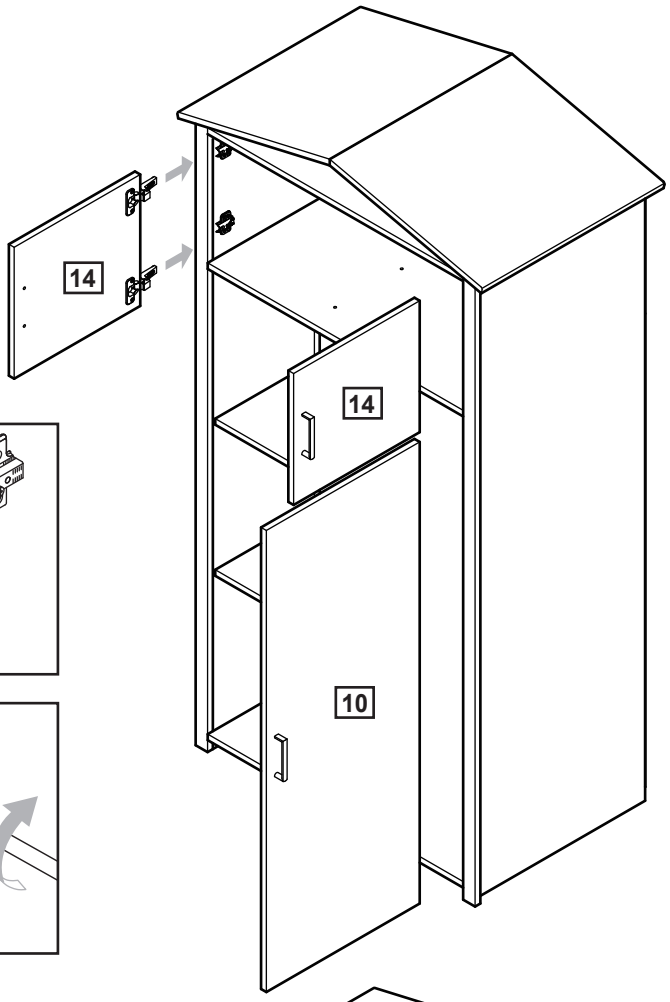


Step 9


Hinge adjustmen

a: To move doors up or down: loosen screws shown and move doors to suit.

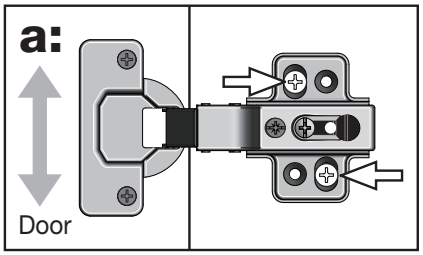

b: Once doors are aligned, re-tighten and insert 2 Screws ❶ into 'hinge plates'.

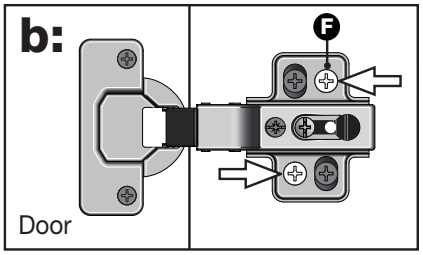

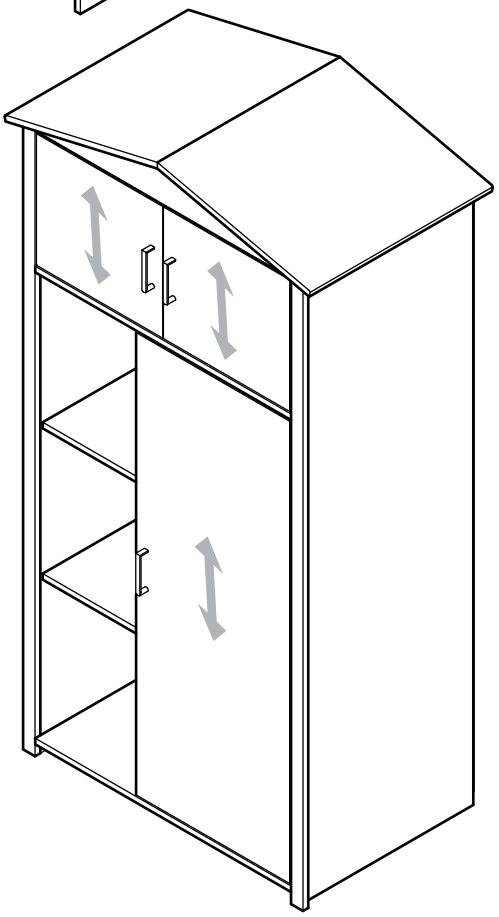


Continued on next page.


Assembly Instructions

Step 9 - continued

c: To move doors in or out: loosen screw shown and move doors to suit.


Re-tighten screws.

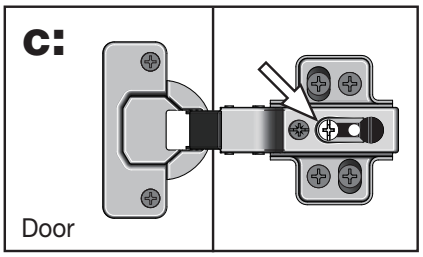


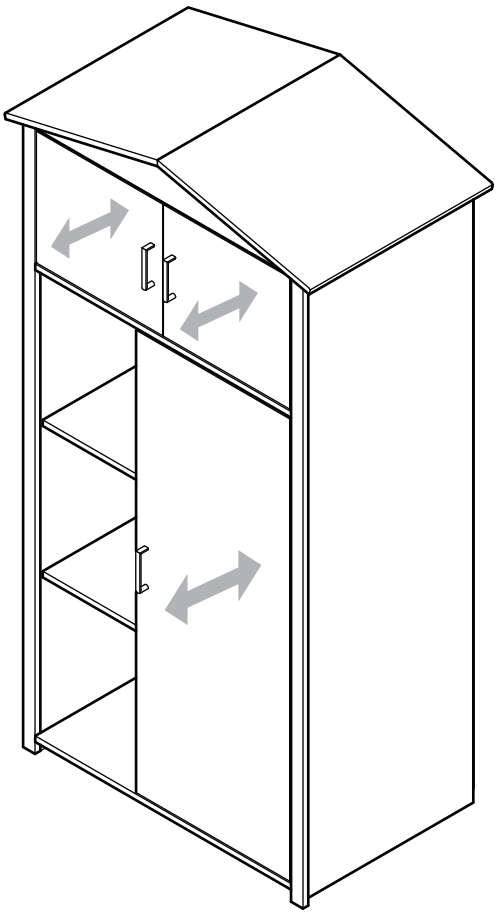

d: To move doors left or right: loosen screw shown and move doors to suit.

Re-tighten screws.

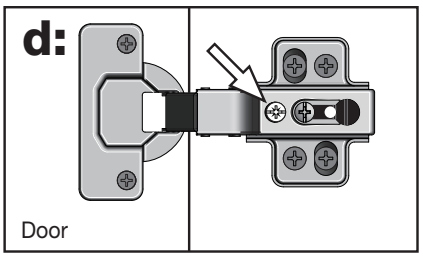

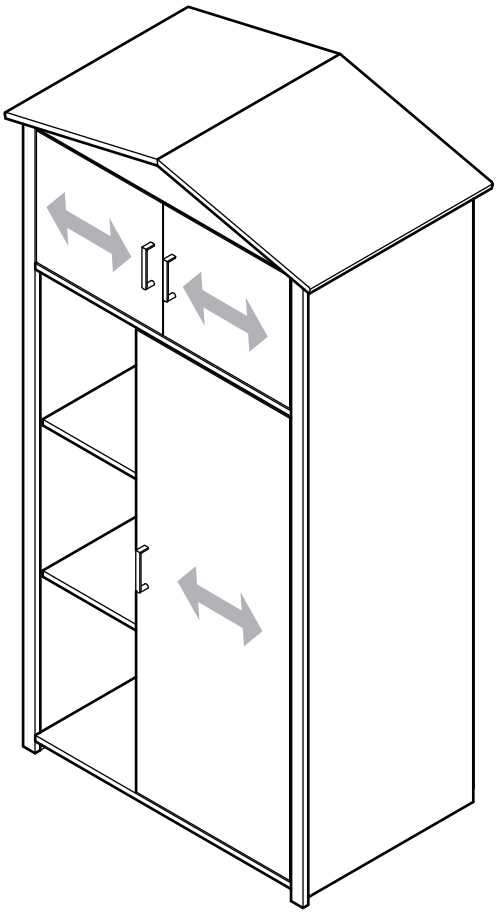

Continued on next page.

Assembly Instructions

Step 10

Fixing to wall

It is recommended that the unit is fixed to a wall.

Fix Wall strap Q to top panel using Screw C.

With help, move the unit into position.

Warning:
The unit is heavy.
Lift with care.

Mark fixing hole on wall and remove unit.


Drill a hole and insert Wall pulg P.

Warning:
Before drilling, check wall for hidden pipes and cables.


Reposition the unit and fix wall strap using Screw Q.


Note: Before use allow the glue to dry for 24 hours and make sure the unit is secure.

Assembly is complete.

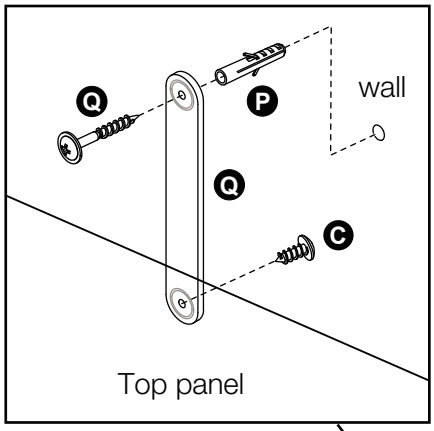

Note: Wall plugs supplied are for solid wall only.
The correct type of fixing must be used for your wall, seek professional advice if in doubt

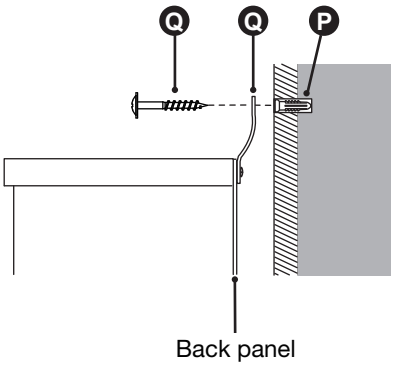

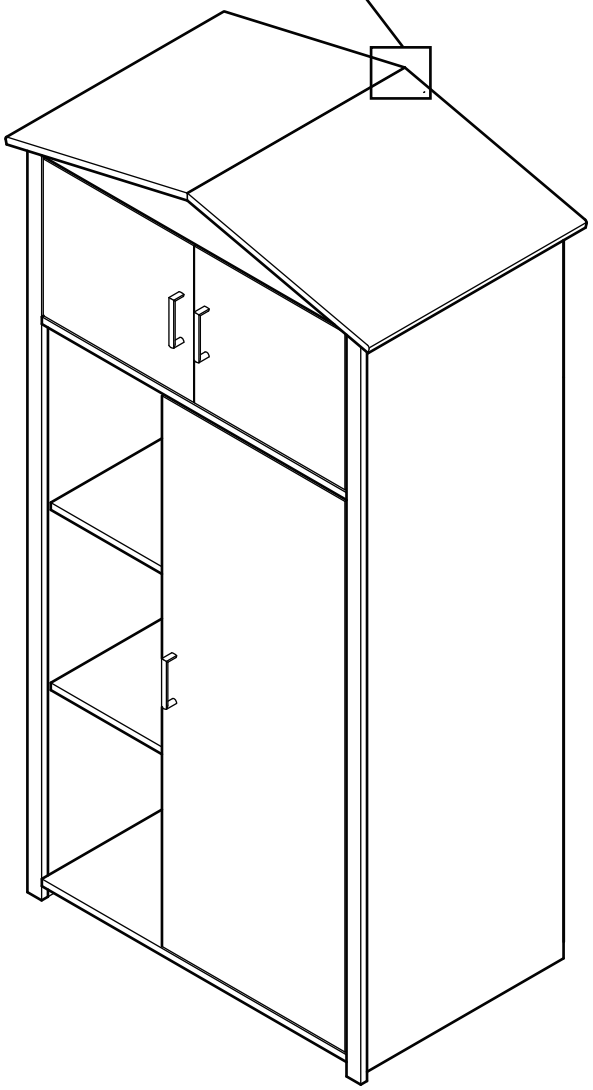

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6400800