
Luxor - 3 Door Centre Mirror Wardrobe

Assembly Instructions - Please keep for future reference

258/0982

227/5338

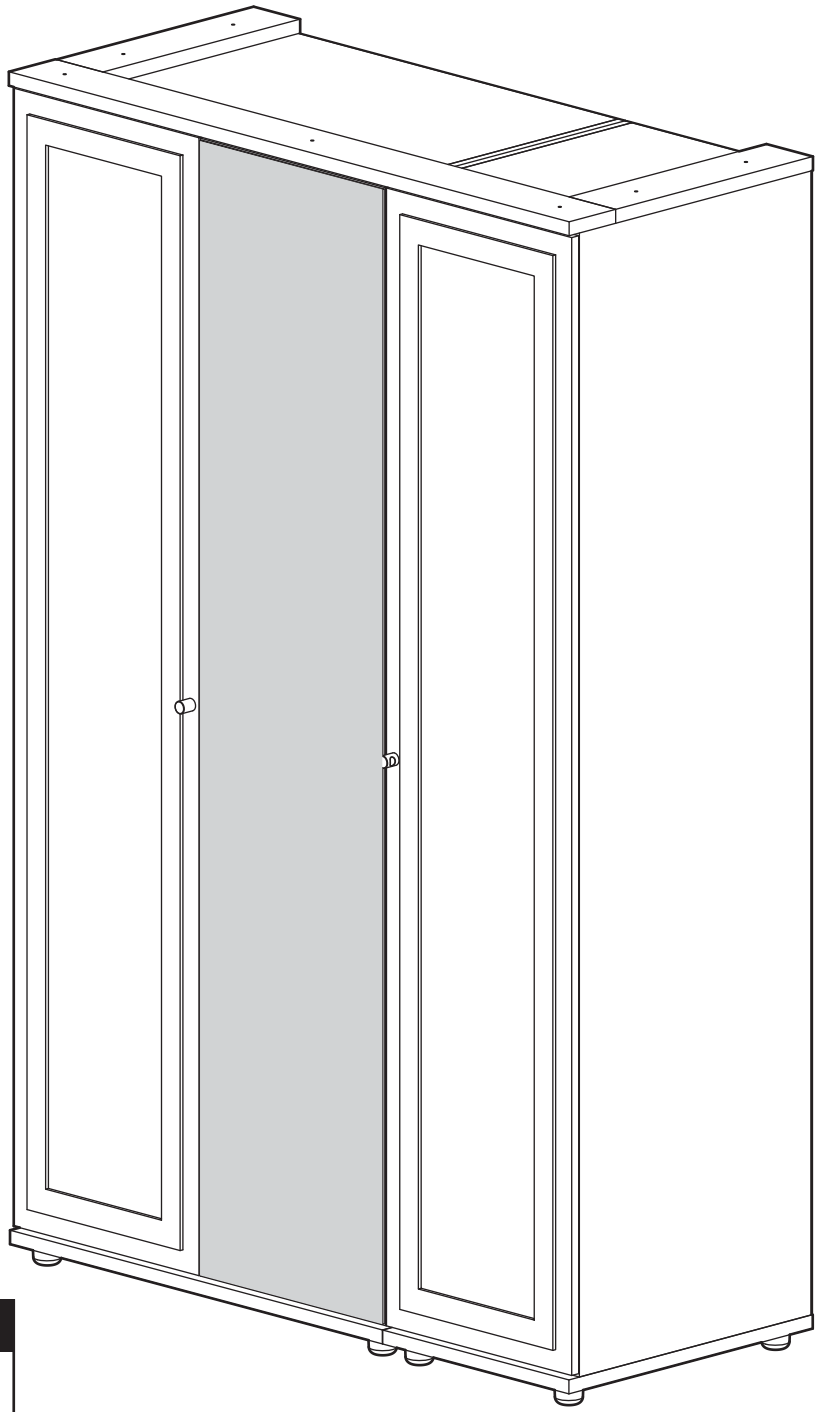

Dimensions

Width - 120.4cm
Depth - 52.5cm
Height - 187.9cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6403030

BK03100 - Issue 1 - 12/06/2014

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• Due to difference in floor levels, doors may not be aligned. Adjustment may be necessary.

• To prevent bowing of shelves do not over load, and always distribute weight evenly.

• If a residual aroma is experienced with your new furniture after the packaging is removed simply ensure the room is well ventilated and this will assist a speedy removal



• We do not recommend the use of power drill/ drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

• It is essential that this unit be fixed to a wall with the fittings provided.

• Please retain the product label on the back of the unit, as this information will help support any queries.

Care and maintenance - Non compliance with this information may affect your guarantee

• Dust with a clean cloth or, if required a slightly damp cool cloth. Do not use household cleaners, abrasives or polishes as permanent damage may occur.

• Do not drag the furniture or lift it by its top.

• Avoid sharp objects, contact with water and direct heat on all surfaces

• Your furniture is finished to the required colour. Avoid exposure to strong sunlight as this can change the colour. Change in appearence may also occur if items are permanently left on a surface.

• Doors should be secured or removed before moving.

• You should get assistance when moving or lifting your furniture. Furniture consisting of more than one unit should be disassembled before attempting to move it.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.


• Regularly check and ensure that all boths and fittings are tightened properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6403030**


Please check you have all the panels listed below

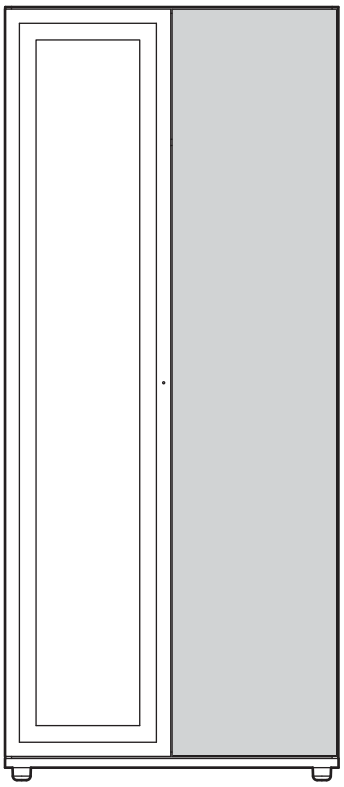


1 Double wardrobe (185.7 x 80.4 x 52.5cm)

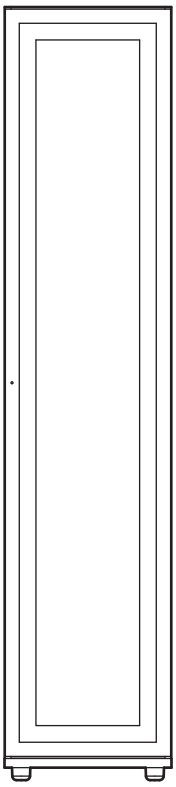

2 Single wardrobe (185.7 x 40.4 x 52.5cm)



3 Cornice front (120.4 x 10 x 2.2cm)







4 x2 Cornice return (42.4 x 10 x 2.2cm)

Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

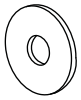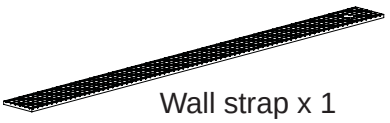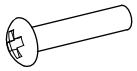A  15mm Screw x 1	**B** 15mm Washer x 2 	**C**  Wall strap x 1
D  20mm Cornice screw x 9	**E**  13mm Cornice screw x 2	**F**  18mm Conecting bolt x 2
G  Threaded sleeve x 2		


The following components are pre-fitted and are illustrated for reference only.

 Barrel handle x 2	 20mm Handle screw x 2

Tools required




Phillips screwdriver
(medium)

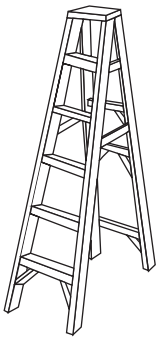

Step ladder
(or equivalent)

Ruler - Use this ruler to help correctly identify the screws

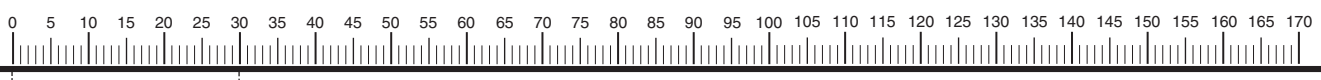



The screws length is measured from the head to the point (30mm screw shown) .

Assembly Instructions

Step 1


Position and connect the units

a: Before connecting the units you will first need to remove the central doors.

Loosen but do not remove bolt B in the centre of the hinge back plates which are attached to the wardrobe side panel.

Slide the door off the back plates allowing bolt B to go through the key hole.

a:

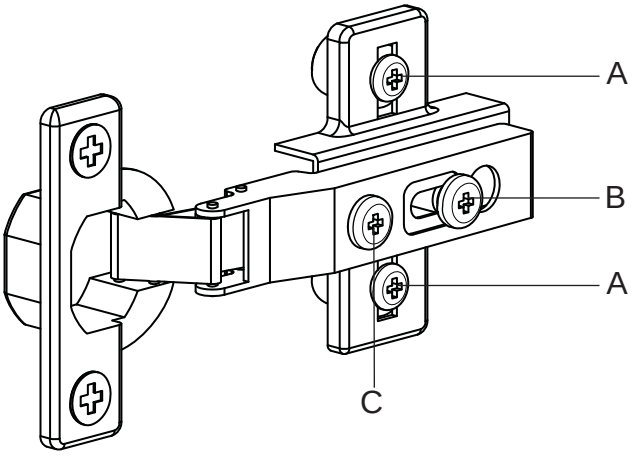

b: Position the double wardrobe [1] in the required position [please note it will be hard to move once connected]. Once in place position the single wardrobe [2] along side so the the front edges are aligned.


To fix the two units together you will need two 18mm connecting bolts Ⓔ and two Threaded sleeves Ⓕ.

Thread 18mm connecting bolt Ⓔ through the top hole inside the double wardrobe then screw threaded sleeve Ⓕ through from inside single wadrobe.

Repeat for bottom hole

b:


WARNING: Help may be required for this step.

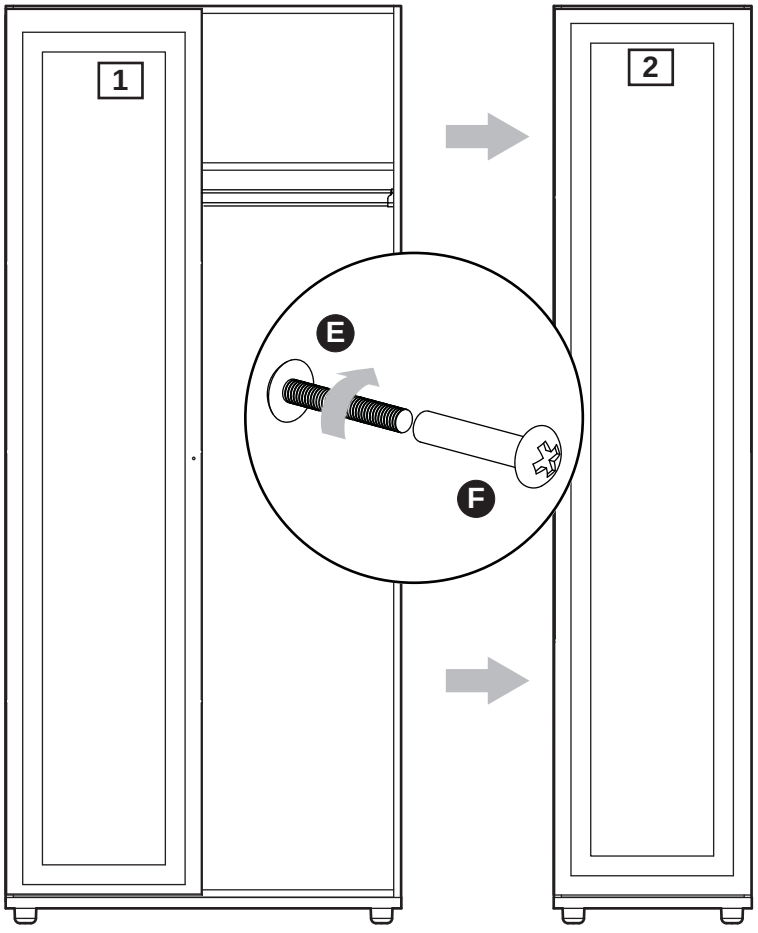

Step 2

Re-fitting the doors
Starting from the top, slide the keyhole shaped groove in the hinge over bolt B on the hinge plate.

Once located tighten bolt B and move on to the next hinge.

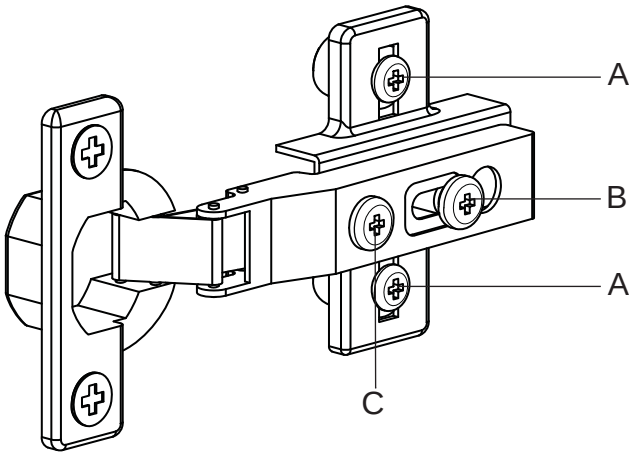


Step 3

Remove and replace handles

a: The barrel handles are fitted to the inside of the unit, using a Philips screwdriver unscrew the 22mm handle screws in each handle and remove both the 22mm handle screw and the barrel handle.

a:

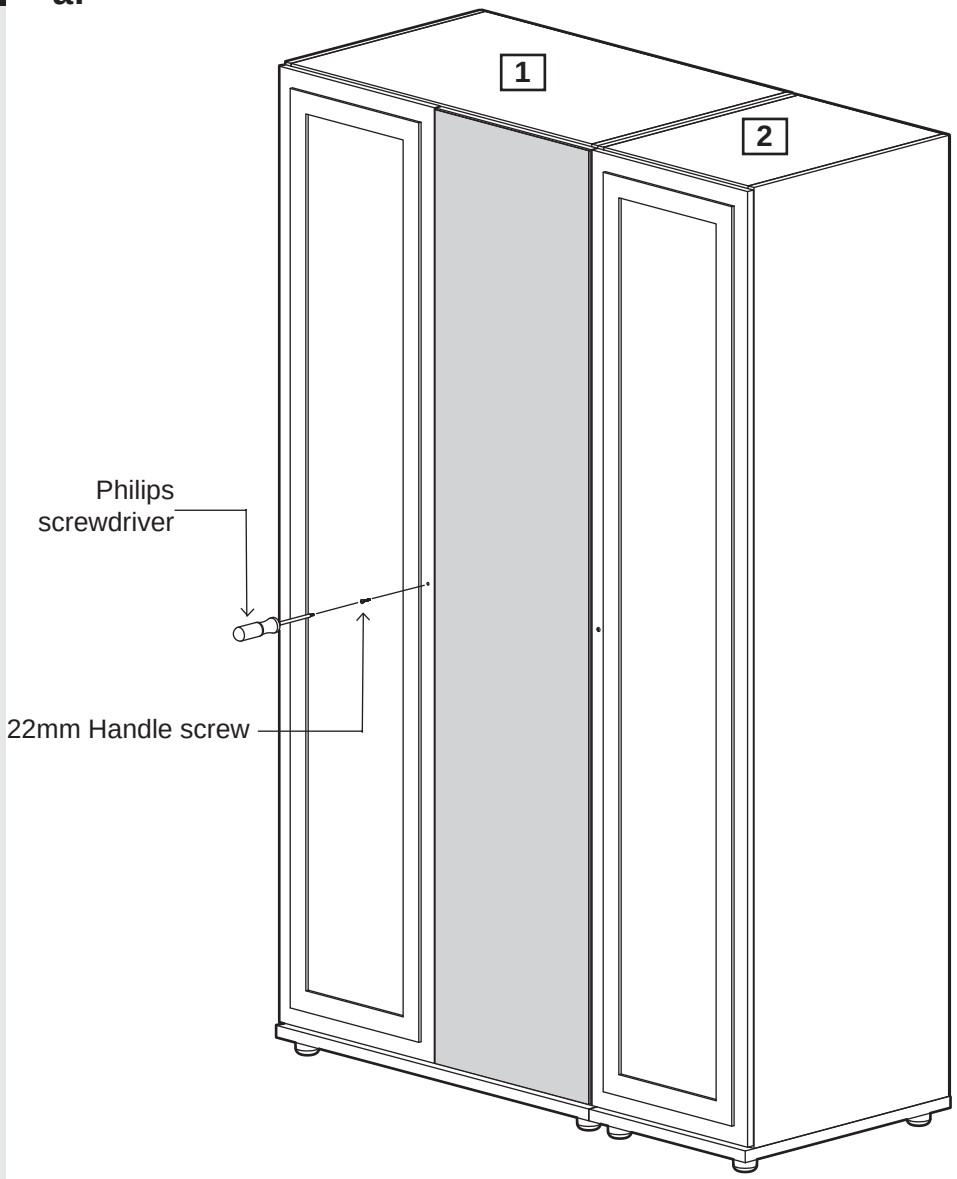


Continued on next page.

Step 3 - continued

b: Replace the barrel handle on the front of the unit. Fix in position by screwing the 22mm handle screw into each barrel handle from inside the unit using a Philips screwdriver.

Note: Only use the handle screw that the handles were pre-fitted with.

b:

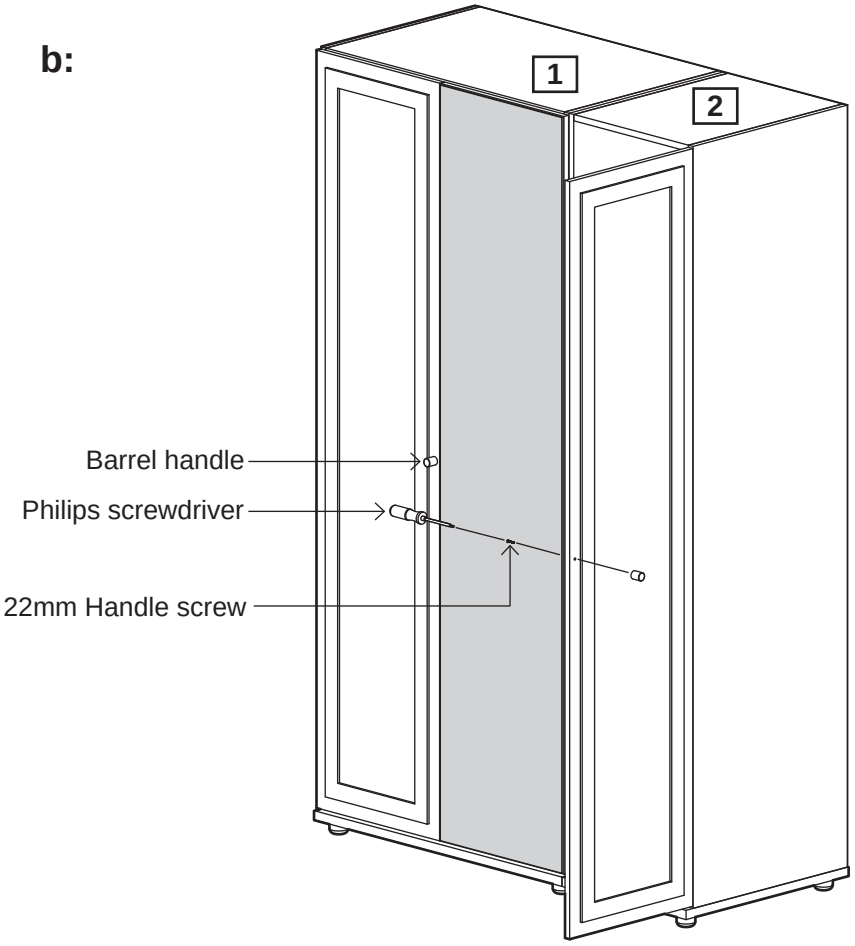

Step 4

Fitting the cornice


a: Place the first cornice return [4] on top of the asembled wardrobe, you may need to use step ladders. Ensure the back of the cornice return [4] lines up with the back of the wardrobe and that the finished edge sits 2mm over the edge of the unit.

When in position screw the 38mm cornice screw Ⓓ through the cornice return into the wardrobe using a phillips screwdriver.

Note: There are not any pre-drilled holes in the top of the robe for this.

Repeat the process with the second return on the other side of the unit.


a:

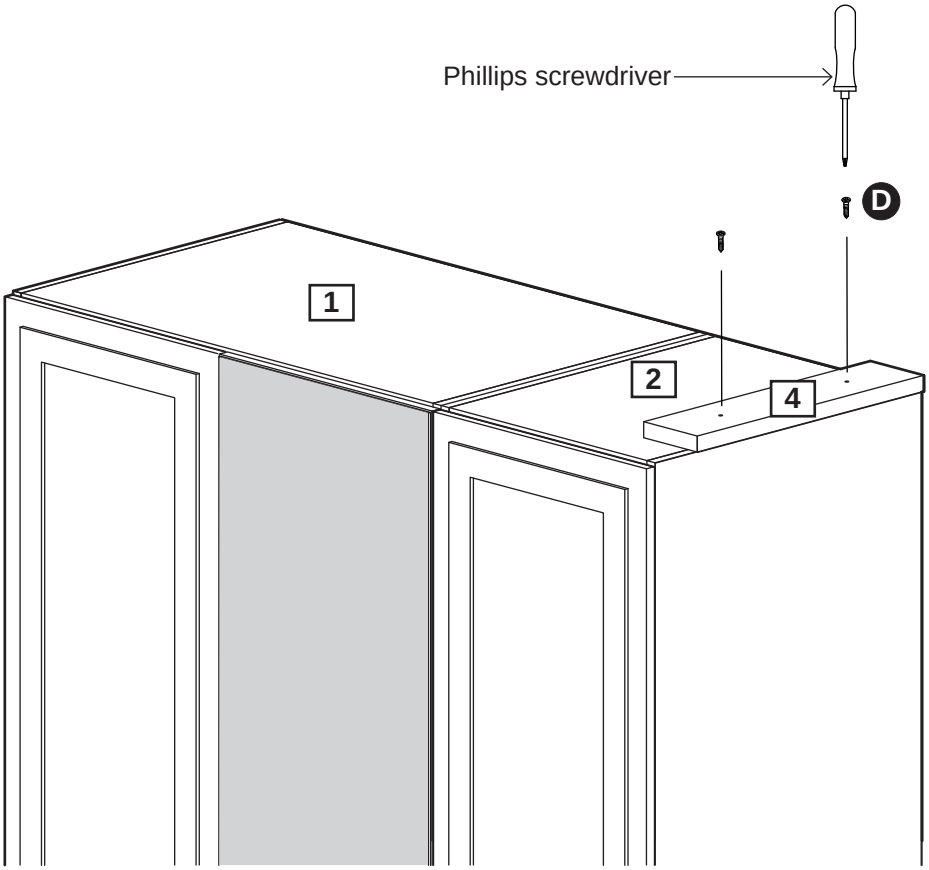

Assembly Instructions

Step 4 - continued

b: Take the cornice front [3] and position it so that the back sits against the front of the cornice returns [4] and the ends sit flush with the finished sides of the cornice returns [4]. When in position screw the 38mm cornice screws **D** through the cornice front [3] into the wardrobe using a phillips screwdriver.

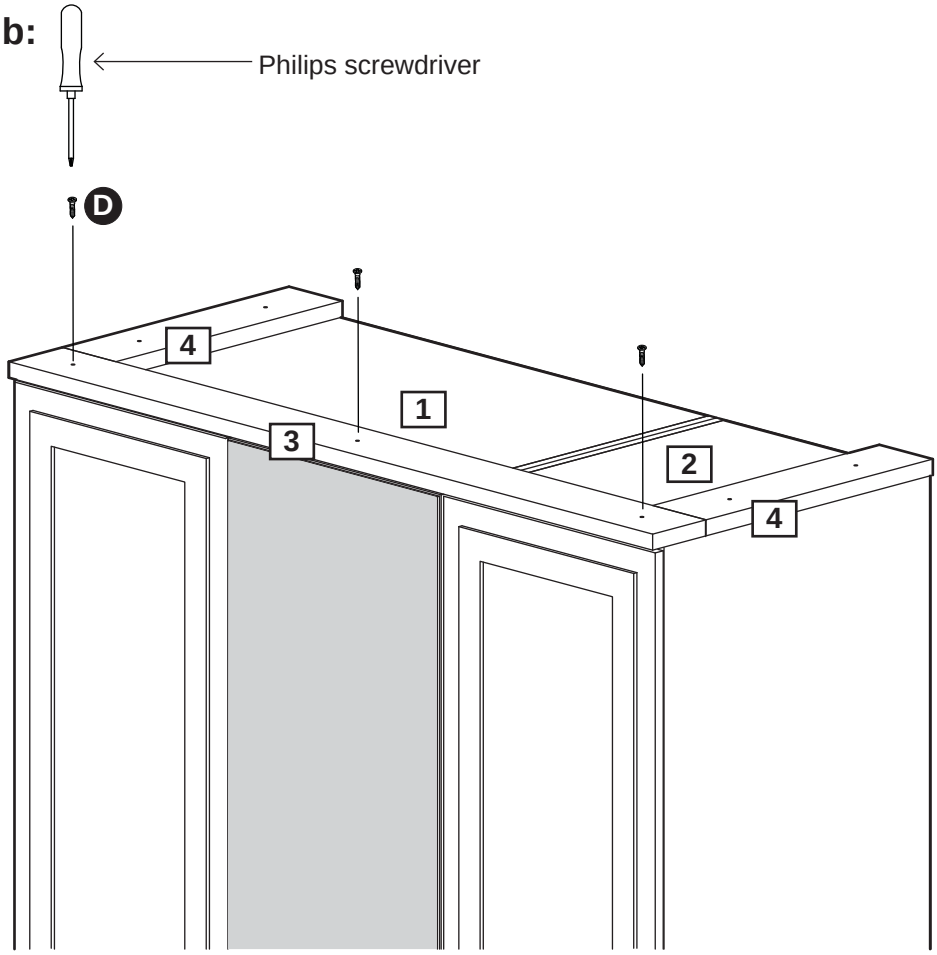


Step 5

Fixing to wall

It is recommended that the wardrobe is fixed to a wall

Fix wall strap **C** to the top of wardrobe using 15mm screw **A** and 15mm washer **B**.

Warning: The 15mm screw **A** is for fixing the wall strap **C** to furniture only. In addition to this you will need to choose a screw or fitting which is suitable for securing the wall strap **C** to the type of walls you have. If you are unsure about what type of screw to use seek professional help.

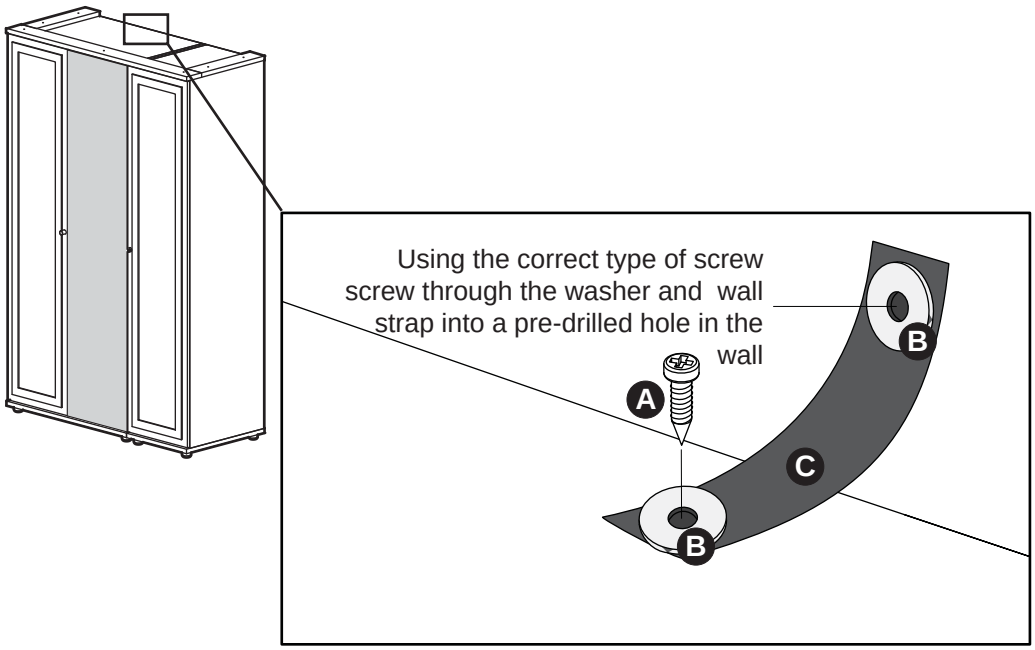

Assembly Instructions

Step 6


Adjusting doors


1. To adjust the height / level of the door loosen all screw ‘A’s on all hinge plates, level the door height and retighten all screw ‘A’s.

2. To adjust the gap between the doors loosen screw ‘B’, then turn screw ‘C’ clockwise to close the gap or anticlockwise to increase the gap. Re-tighten screw ‘B’ to lock position.

3. To adjust the distance away from the unit loosen screw ‘B’, this allows the hinge arm to slide back and forth. Adjust as required then re-tighten screw ‘B’.

Assembly is complete.

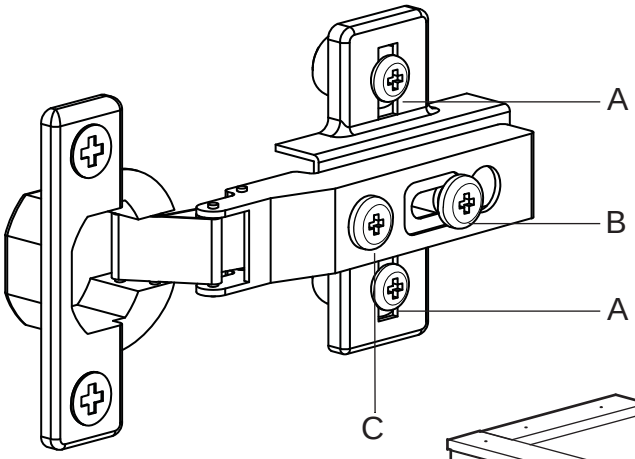

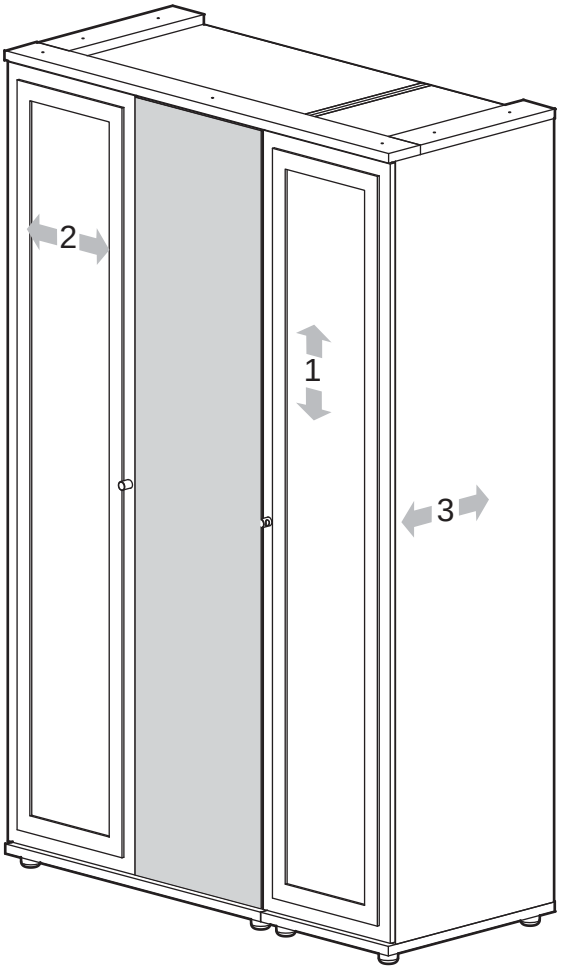

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6403030