
New Penton - 3 Door Wardrobe

Assembly Instructions - Please keep for future reference

262/6956

268/0600

267/9484

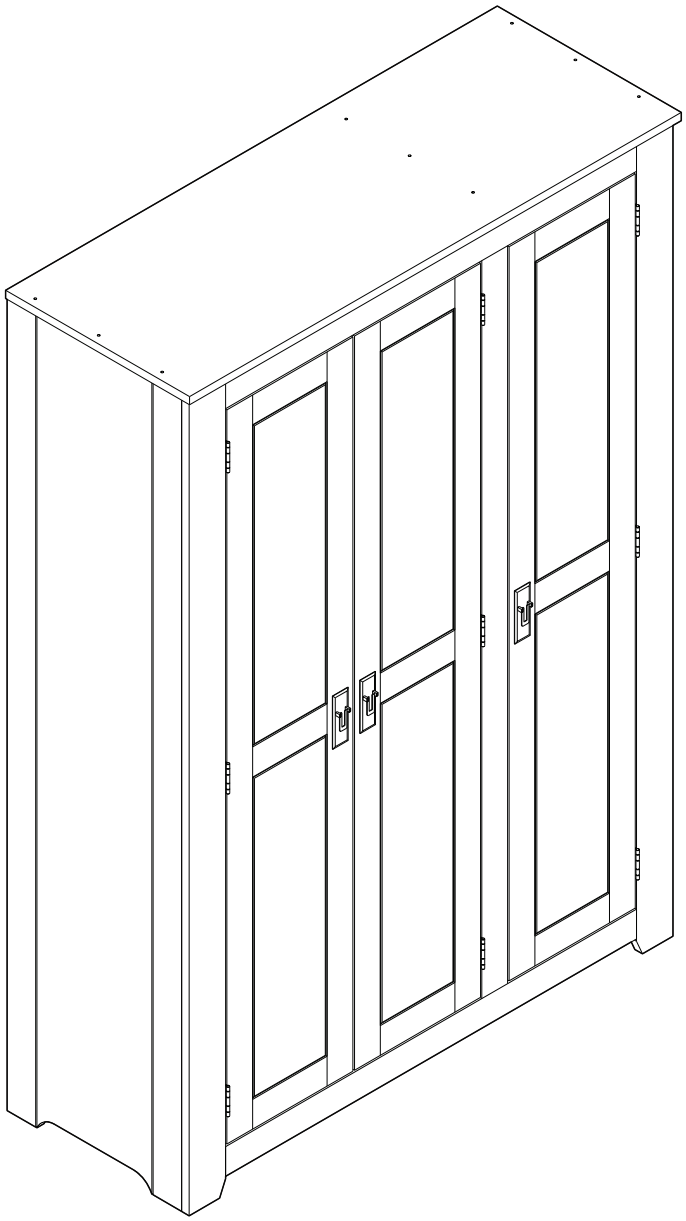

Dimensions

Width - 124cm
Depth - 51cm
Height - 180cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 14/05/14

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

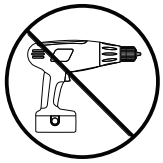

• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

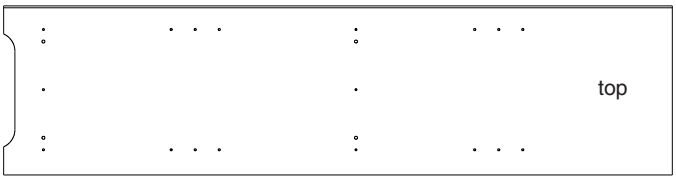


1 Right side panel (178 x 49cm)

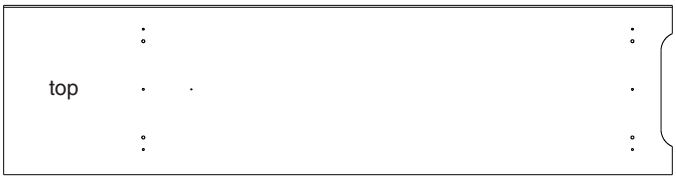

2 Left side panel (178 x 49cm)

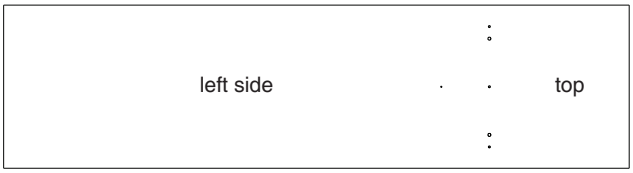


3 Middle wall panel (166.5 x 47.4cm)



4 Left back panel x 2 (170 x 38.8cm)



5 Right back panel (170 x 41.8cm)




6 Right front frame (178 x 9.2cm)




7 Left front frame (178 x 9.2cm)




8 Middle front frame (161 x 6.5cm)

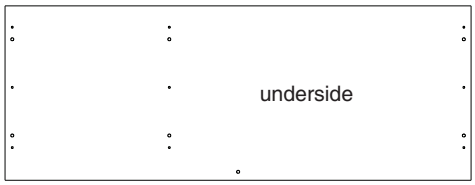


9 Top panel (124 x 50.4cm)

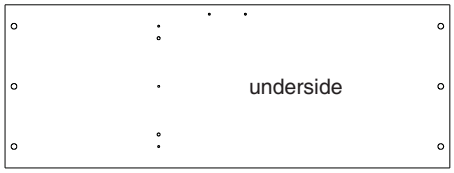


10 Base panel (118.4 x 47.4cm)

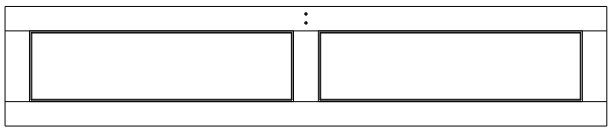


11 Door x 3 (160.2 x 31.8cm)

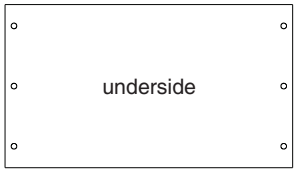

12 Large shelf
(76.6 x 47.4cm)

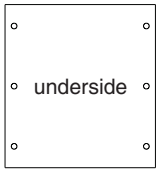


13 Right fixed shelf
(40 x 47.4cm)




14 Right shelf x 2
(40 x 47.4cm)

15 Hanging rail
(76.2 x 2.2cm)



16 Top front frame (107.6 x 6.5cm)



17 Bottom front frame (107.6 x 6.5cm)

18 Larger H profile (128 x 2cm)

19 Cross rail x 6
(28 x 4.5cm)



20 Bottom Support
(20 x 9.6cm)

21 Smaller H profile
(36 x 2cm)












22 Block x 10
(10 x 2cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

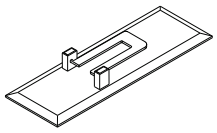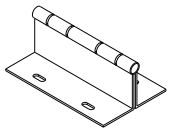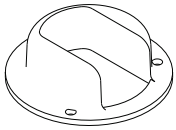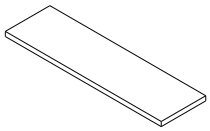A  Wooden dowel x 25	**B**  14mm Screw x 67	**C**  30mm Screw x 24
D  35mm Screw x 40	**E**  40mm Screw x 14	**F**  22mm Bolt x 6
G  Metal dowel x 18	**H** Locking nut x 18 	**I**  Nail x 64
J Door handle x 3 	**K** Door hinge x 9 	**L** Clip x 6 
M Plug x 6 	**N** Hanging rail support x 2 	**O** Shelf support x 8 
P Washer x 2 	**Q**  Wall strap x 1	**R** Door spacer x 1 


Tools required




Phillips screwdriver (small & medium)

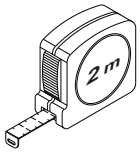

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Fixing right front frame.
(Two people required for an easier assembly).

a: Insert right side panel 1 into right front frame 6 through joints.

Note:
Before fixing the blocks 22 into place it is important to ensure that the slot and groove of parts 1 and 6 are fully pushed together and lined up correctly at the top and bottom.

b: Place blocks 22 between the two marks on the front frame as shown. First fix to the side panel using screws D.

c: Fix front frame through blocks 22 using screws D.

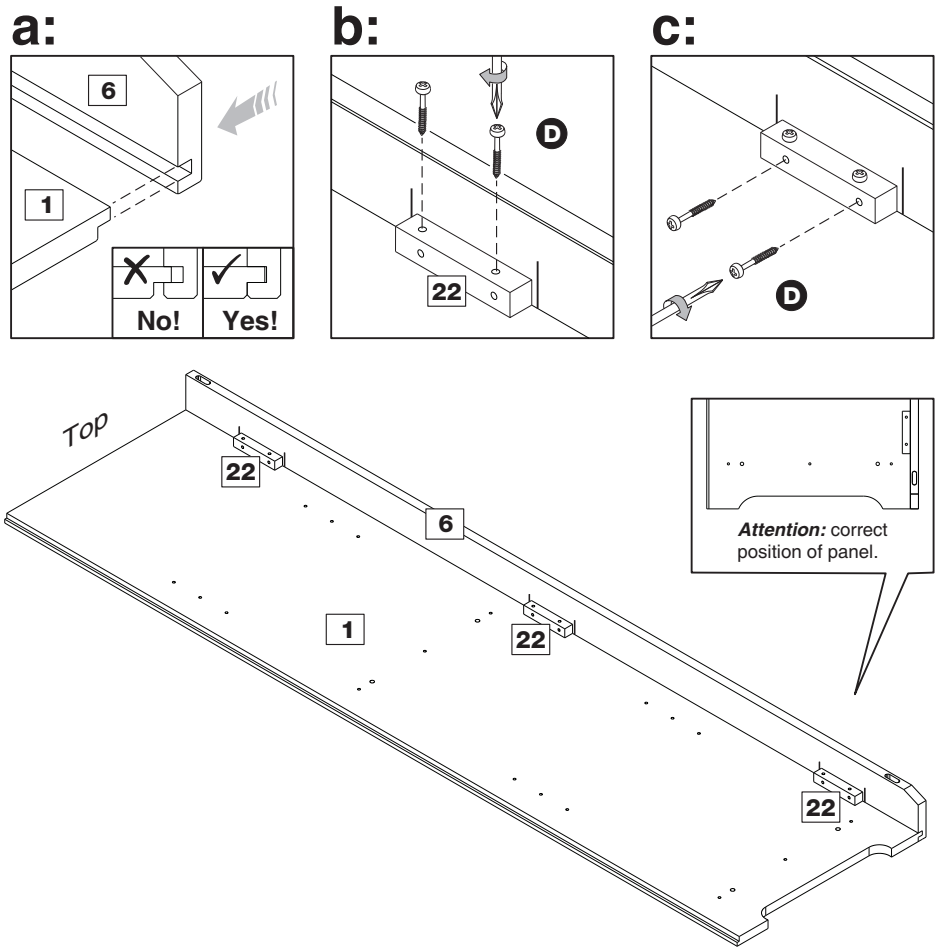

Step 2


Fixing left front frame.
(Two people required for an easier assembly).

a: Insert left side panel 2 into left front frame 7 through joints.

Note:
Before fixing the blocks 22 into place it is important to ensure that the slot and groove of parts 2 and 7 are fully pushed together and lined up correctly at the top and bottom.

b: Place blocks 22 between the two marks on the front frame as shown. First fix to the side panel using screws D.

c: Fix front frame through blocks 22 using screws D.

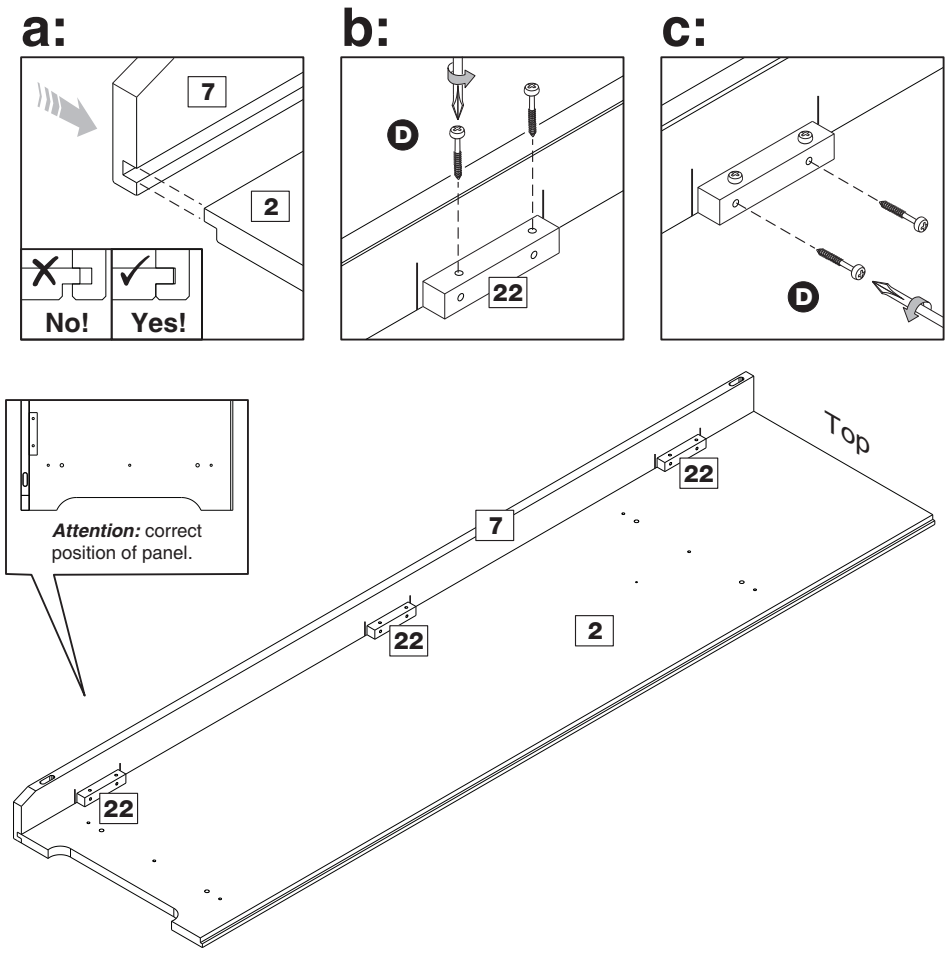

Assembly Instructions

Step 3


Fixing middle front frame.
(Two people required for an easier assembly).


a: Insert 4 dowels Ⓐ into front frame 8 then fit to the middle wall panel 3 .

Note:
Before fixing blocks 22 make sure front frame 8 is fully pushed against the middle wall panel 3 and aligned correctly.

b: Place blocks 22 between the two marks on the front frame as shown. First fix to the middle panel using screws Ⓓ.


c: Fix front frame through blocks 22 using screws Ⓓ.

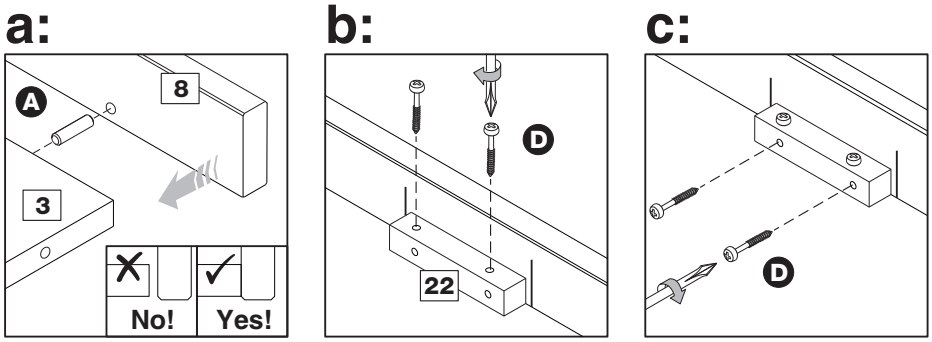

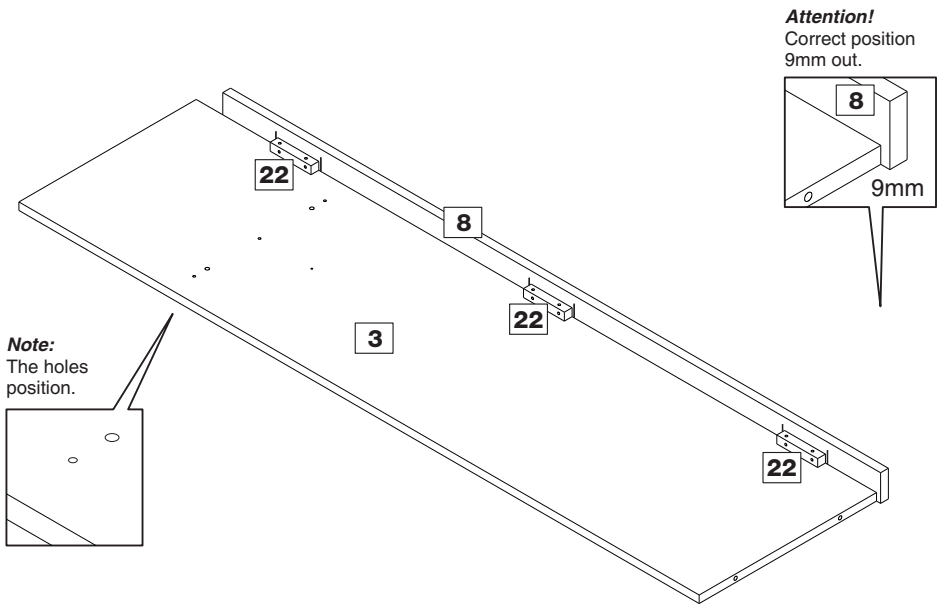

Step 4


Insert shelf supports Ⓞ into the right side panel 1 and middle wall panel 3 .

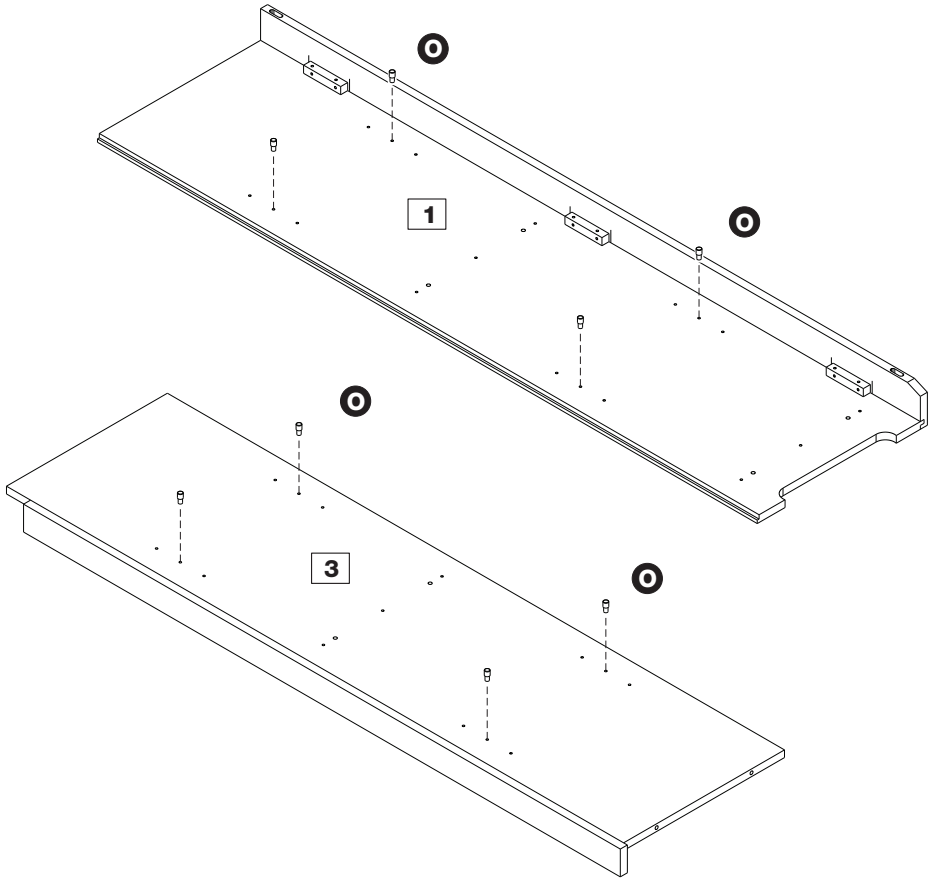

Step **5**

Insert dowels **A** into the indicated parts.

Fix hanging rail supports **N** in the pre marked holes on left side panel **2** and middle wall panel **3** using screws **B**, as shown.

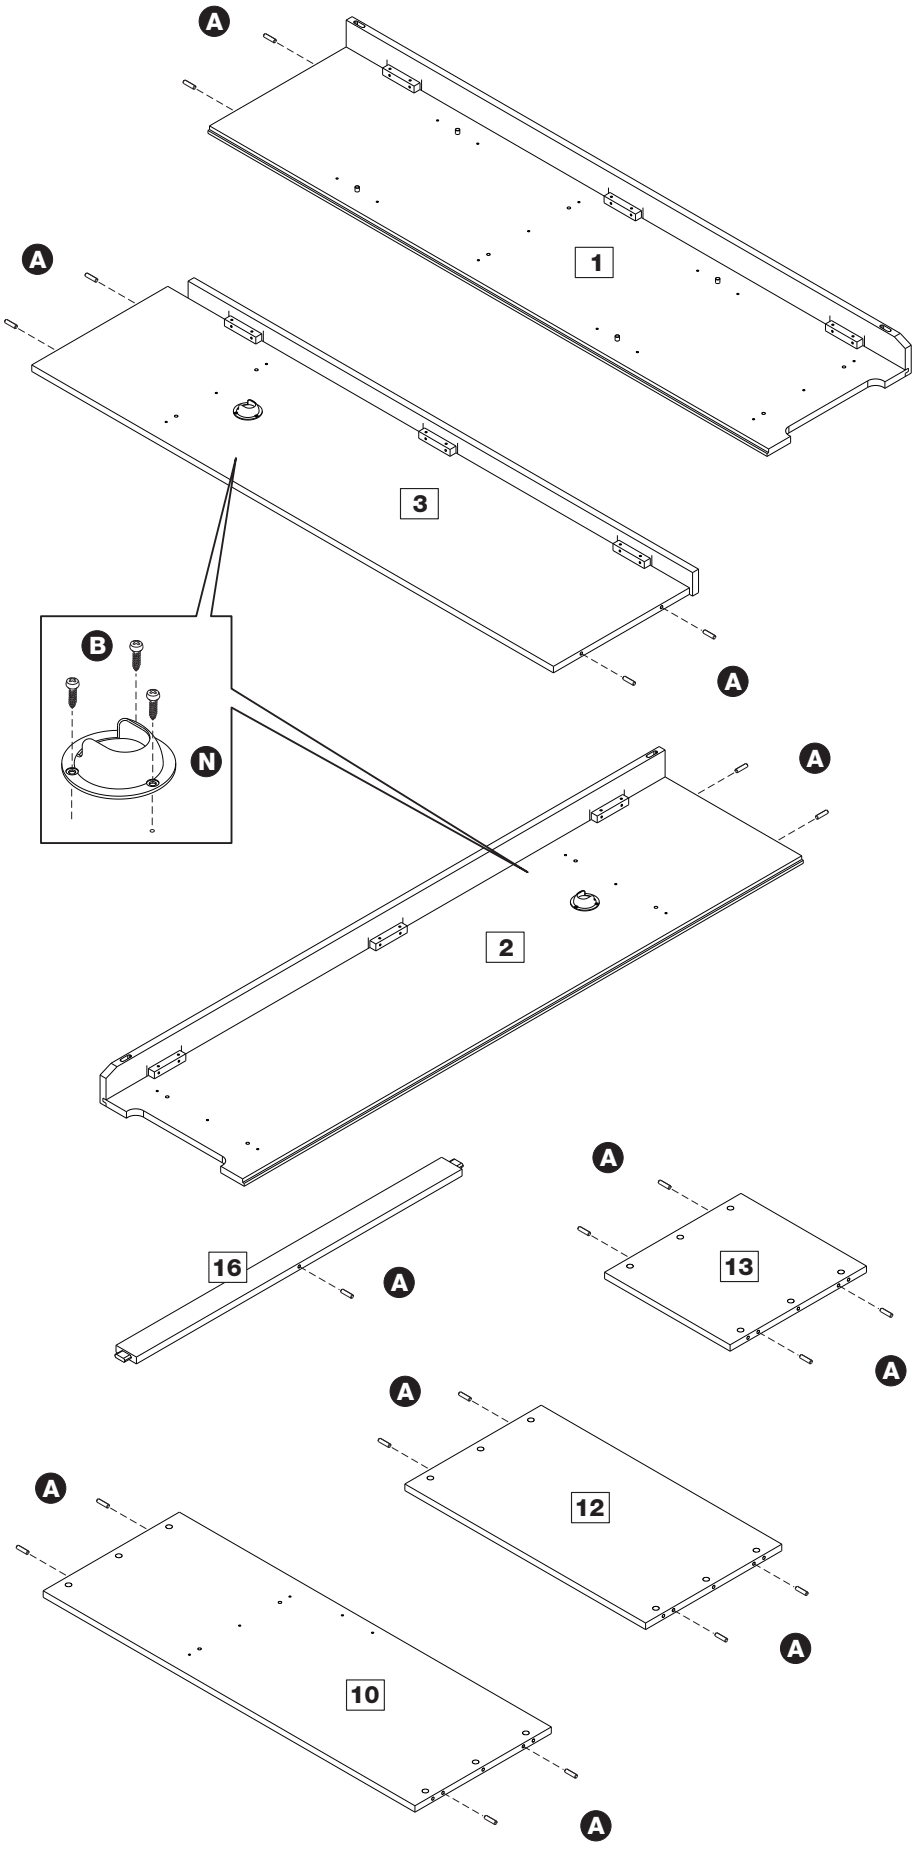


Step 6

Fitting Metal dowels.

Screw metal dowels G into right side panel 1 and left side panel 2.

Note: Insert metal dowels as far as shown.

Do not over tighten.

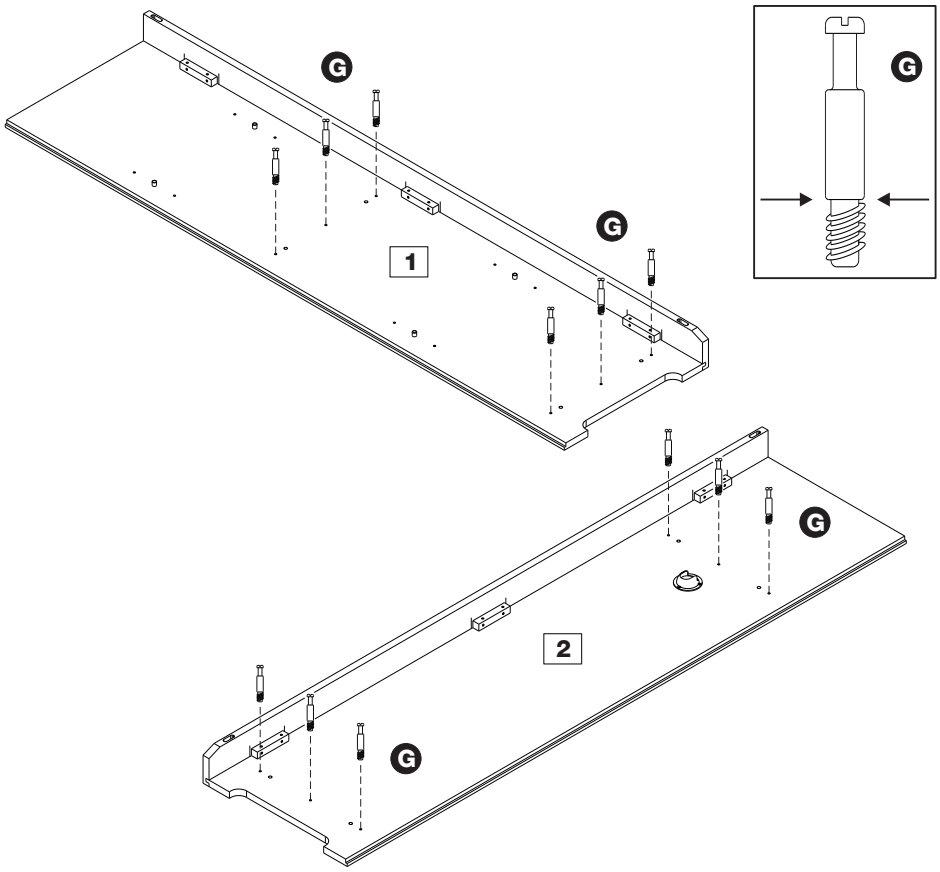


Step 7

Fitting Metal dowels.

Screw metal dowels G into both sides of middle wall panel 3.

Note: Insert metal dowels as far as shown.

Do not over tighten.

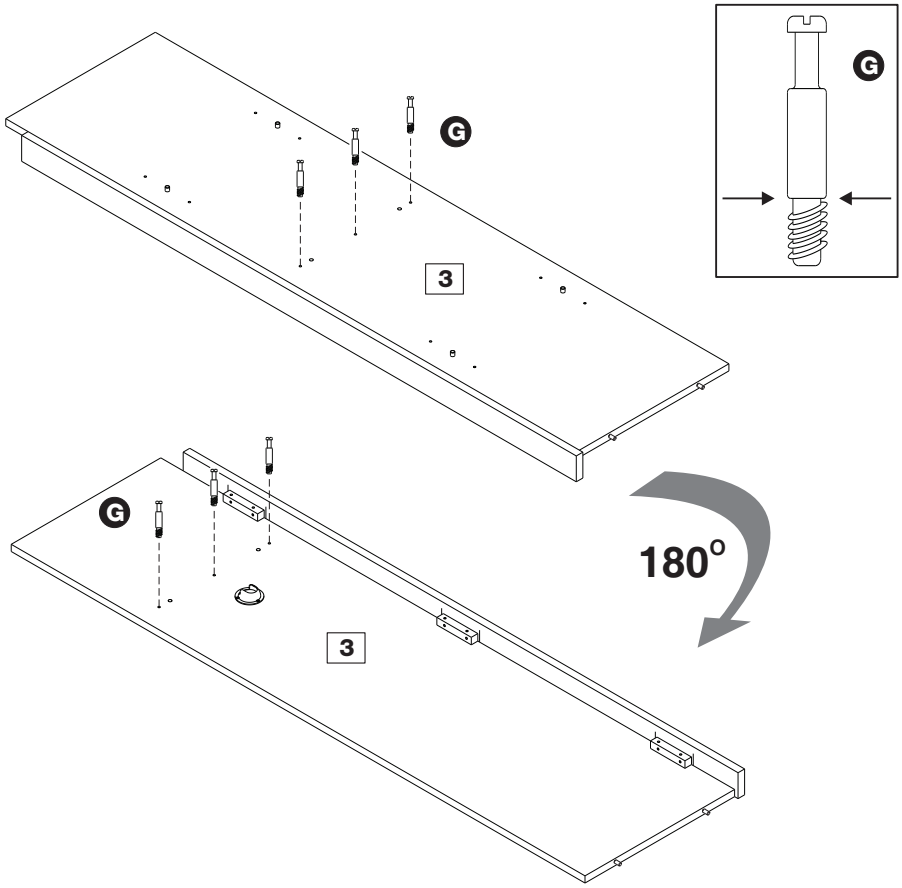


Step 8

Fixing base panel.

Fit base panel 10 to the middle wall panel 3 then fix it using screws E.

Attention!
Round edge on base panel must be facing front.

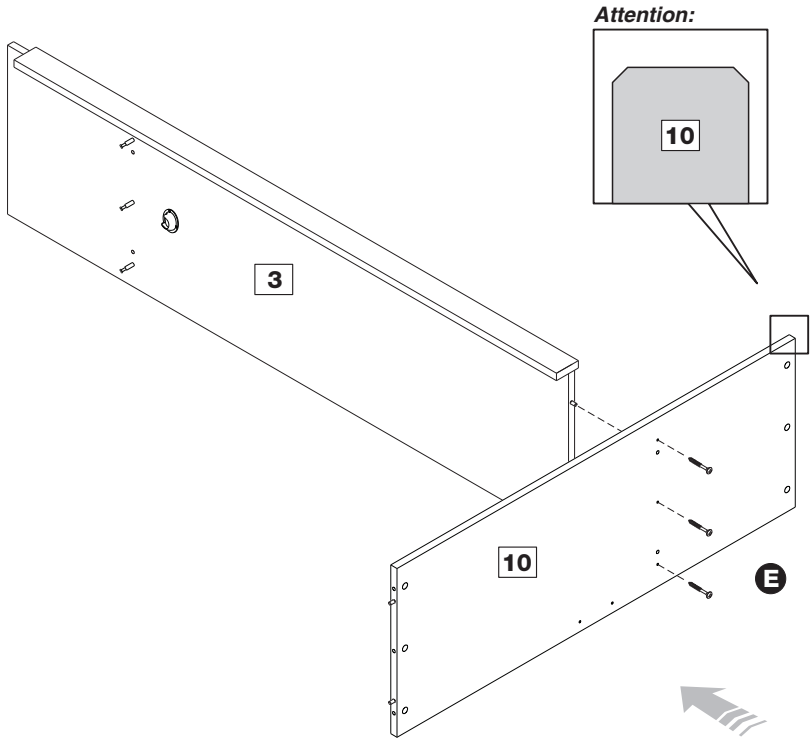

Step 9

Fixing right fixed shelf.


With help, fit fixed shelf 13 to right side panel 1.


Insert 3 locking nuts H into fixed shelf where shown.

Use a screwdriver to turn locking nuts H clockwise to lock.

Do not over tighten.

Attention!
Round edge on fixed shelf must be facing front.

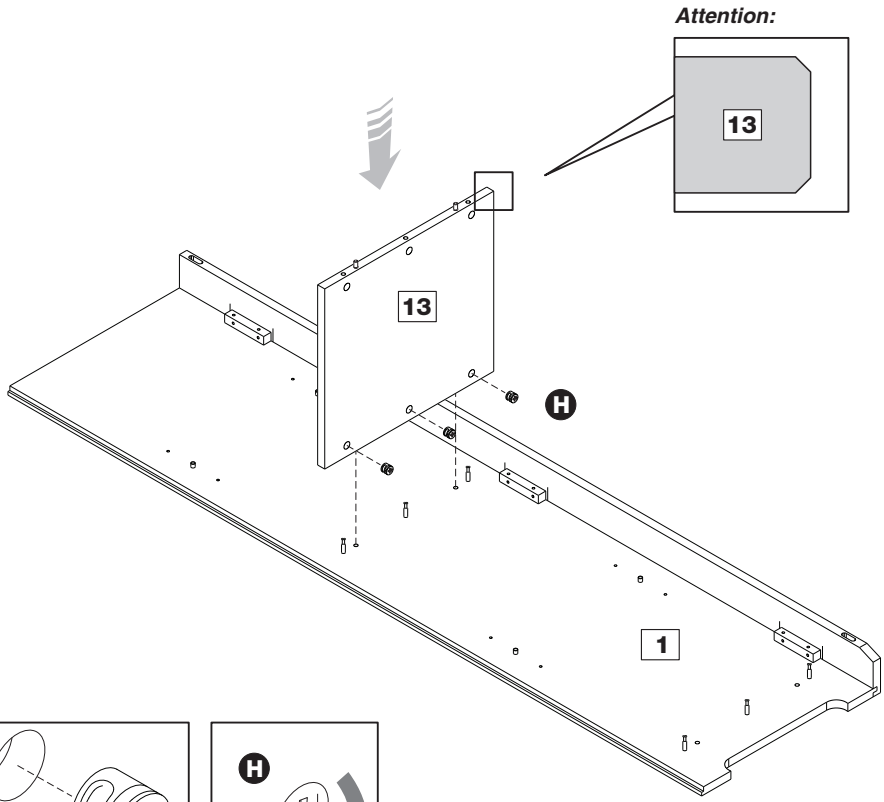

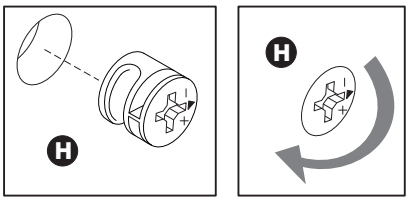

Step **10**


Assembling the cabinet.

With help, fit middle wall panel 3 to fixed shelf 13 and base panel 10 to right side panel 1 .

Insert 6 locking nuts H into fixed shelf and base panel where shown.

Use a screwdriver to turn locking nuts H clockwise to lock.

Do not over tighten.

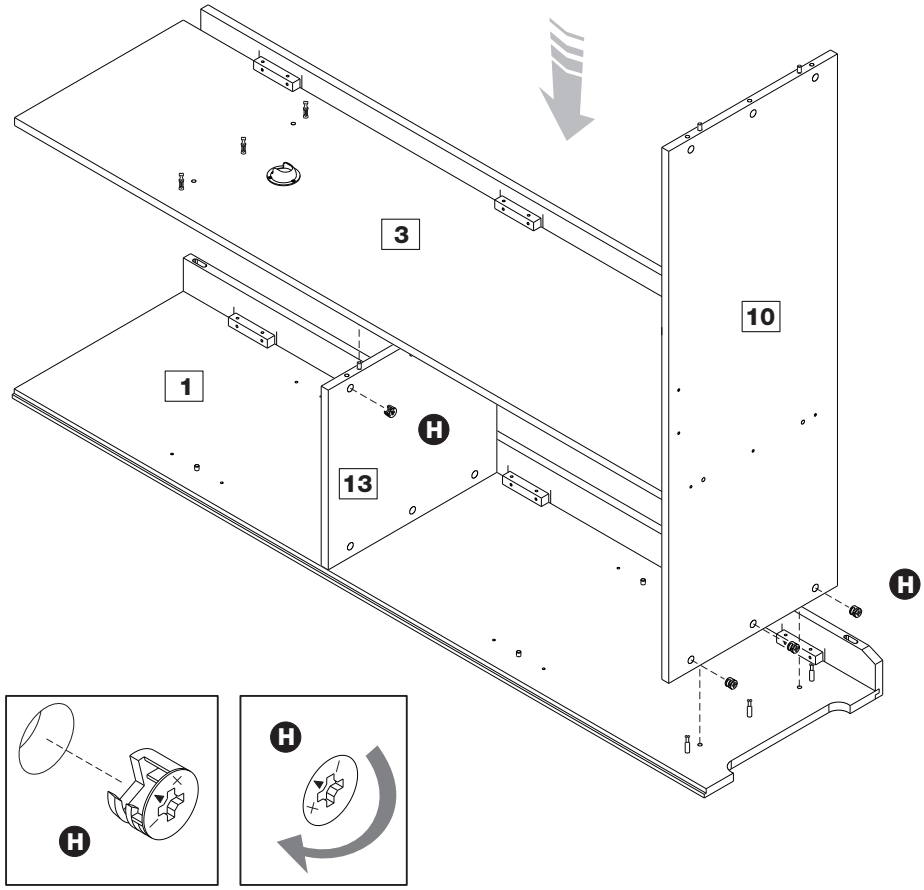

Step **11**

Assembling the cabinet.


With help, fit large shelf 12 to middle wall panel 3 .


Insert 3 locking nuts H into left shelf where shown.

Use a screwdriver to turn locking nuts H clockwise to lock.

Do not over tighten.

Attention!
Round edge on large shelf must be facing front.

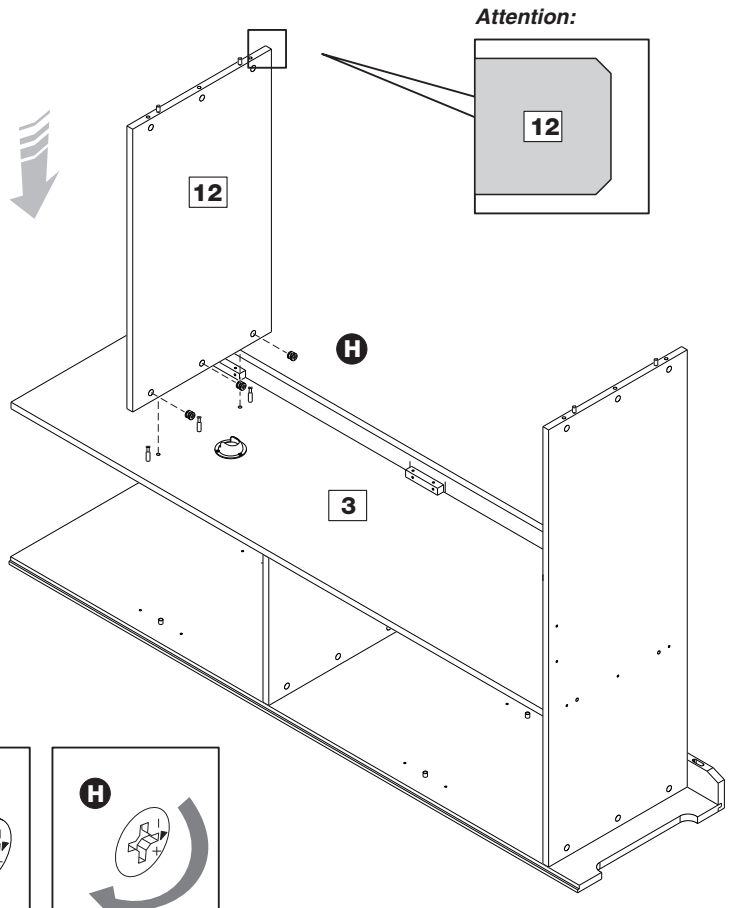

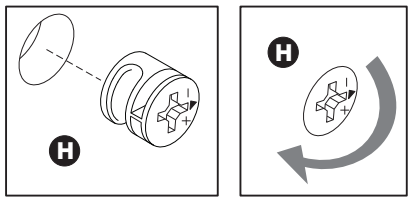


Step **12**

Assembling the cabinet.

Insert top front frame 16 and bottom front frame 17 into holes on right side panel 1, as shown.

Attention!
Dowel to be facing up.

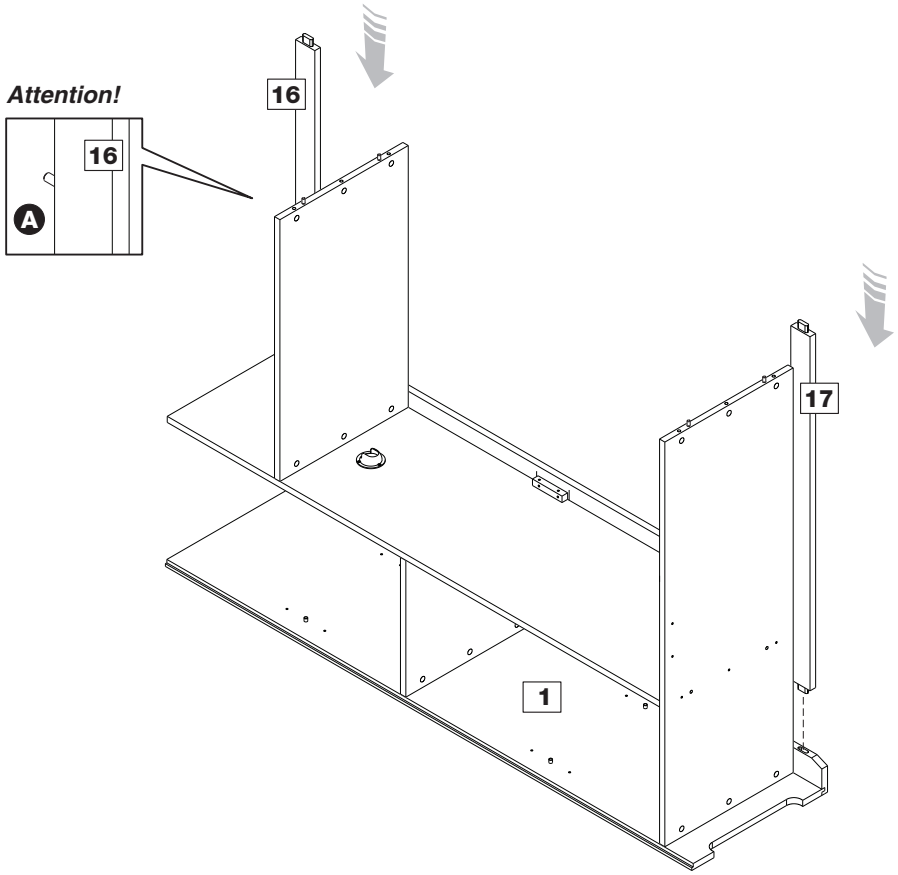

Step **13**


Assembling the cabinet.

With help, place left side panel 2 properly ensuring dowels and front frames 16 are all fit into their holes at the same time.

Insert 6 locking nuts H into base panel and large shelf where shown.

Use a screwdriver to turn locking nuts H clockwise to lock.

Do not over tighten.

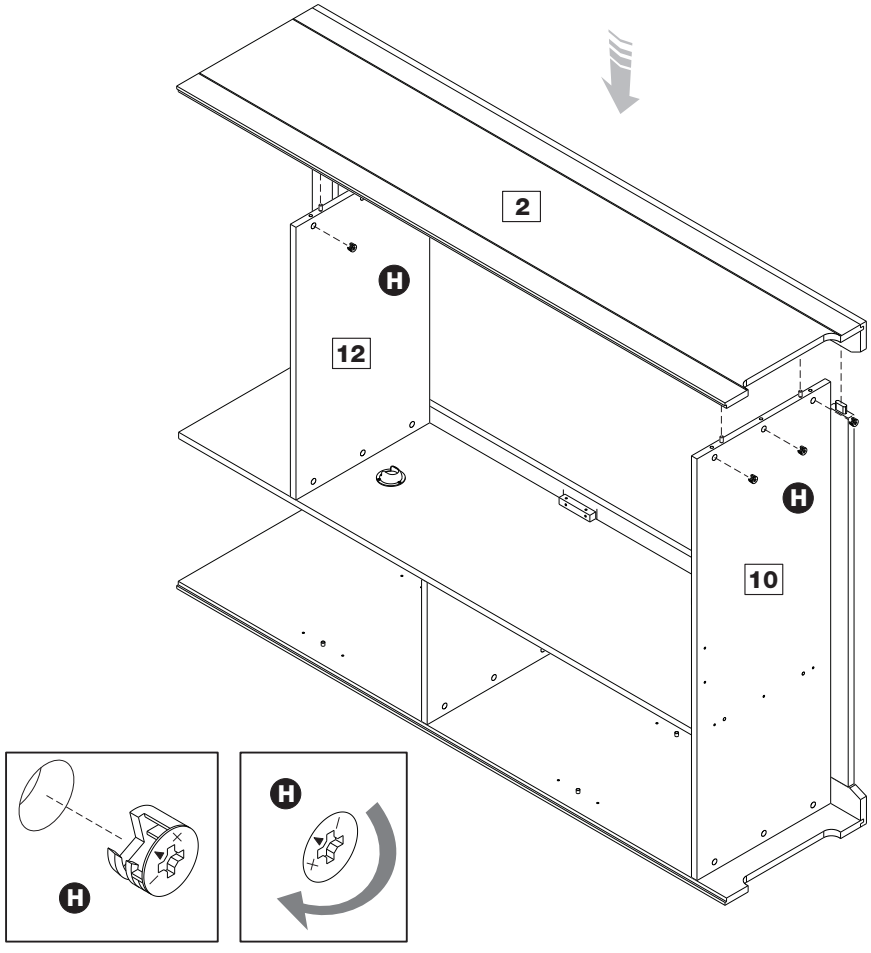


Step 14

Assembling the cabinet.

Attach block 22 to the base panel 10 and front frame 17 using screws D as shown.

Important:
After attaching block, with help, carefully lay down the product.

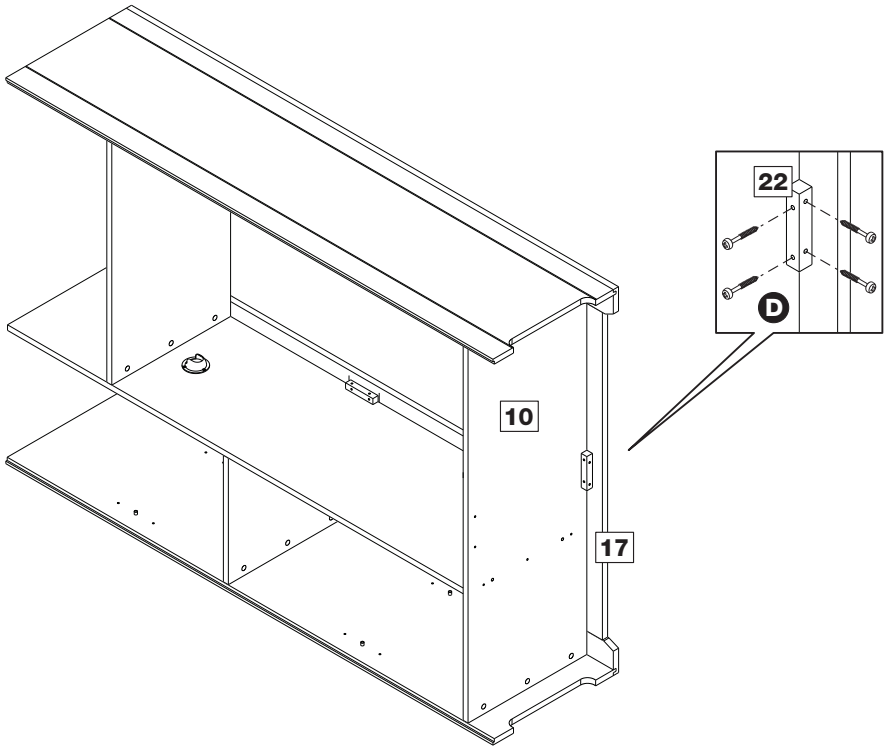


Step 15

Fixing top panel.


With help, fit top panel 9 to the cabinet then fix it using screws E.
Make sure round edge is facing up.

Important:
After fixing the top panel, with help, carefully stand the product upright.

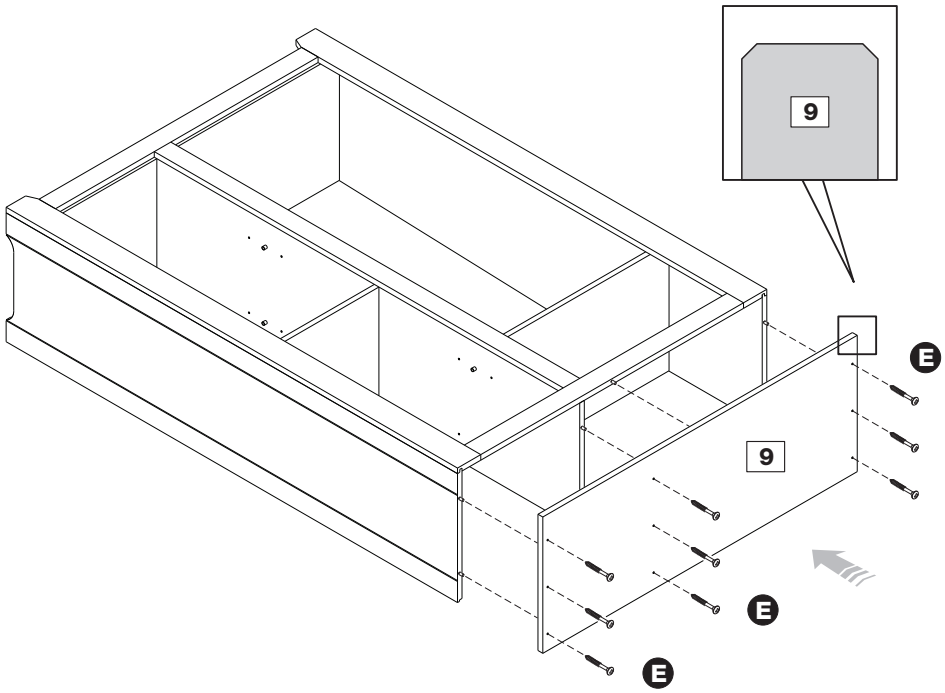


Step **16**

Attach bottom support 20 to the base panel 10 using screws E .

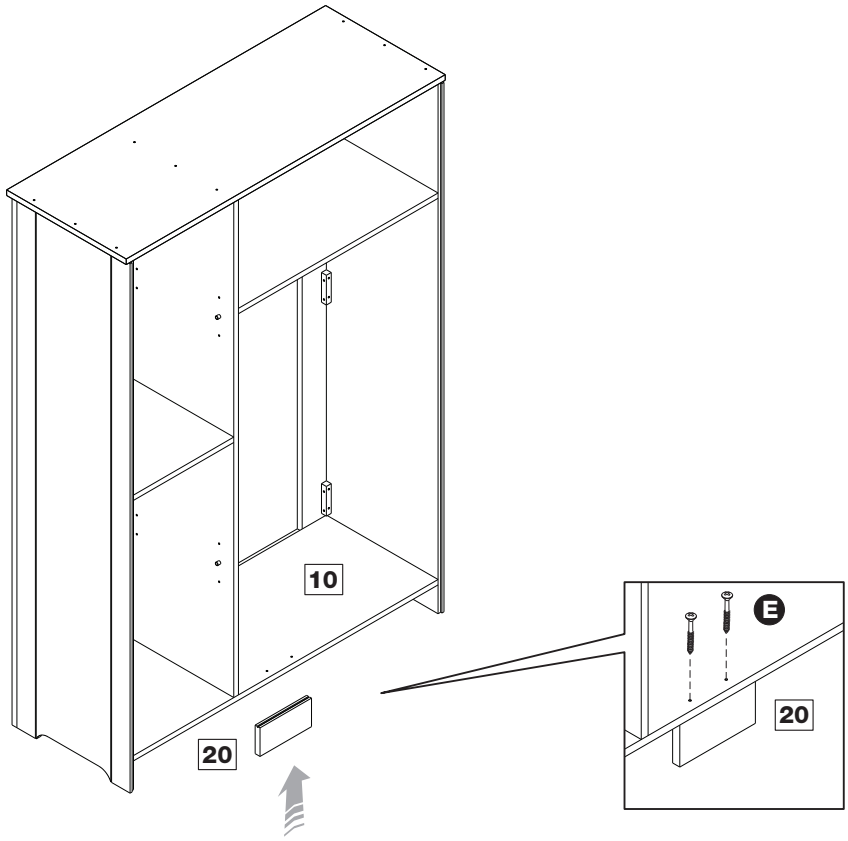

Step **17**

Insert hanging rail 15 into the supports as shown.

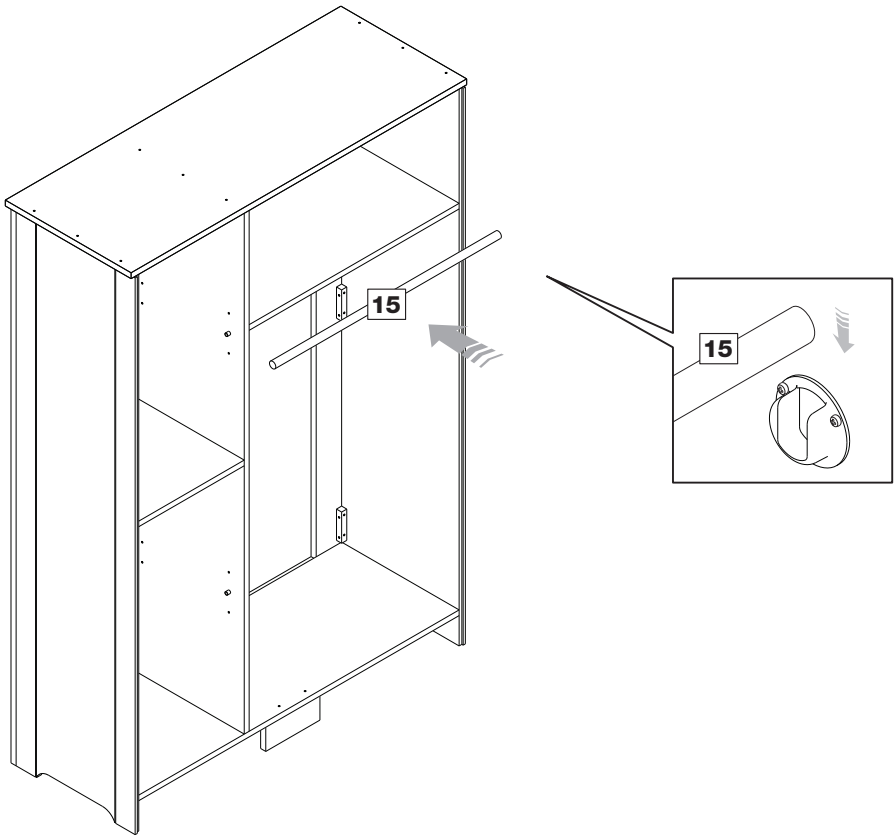


Step 18

Fitting hinges to doors.

Attach hinges K in the pre marked holes on door 11 using screws B as shown.

Fix cross rails 19 in the pre drilled holes on door using screws C.

Repeat step 18 for the other door.

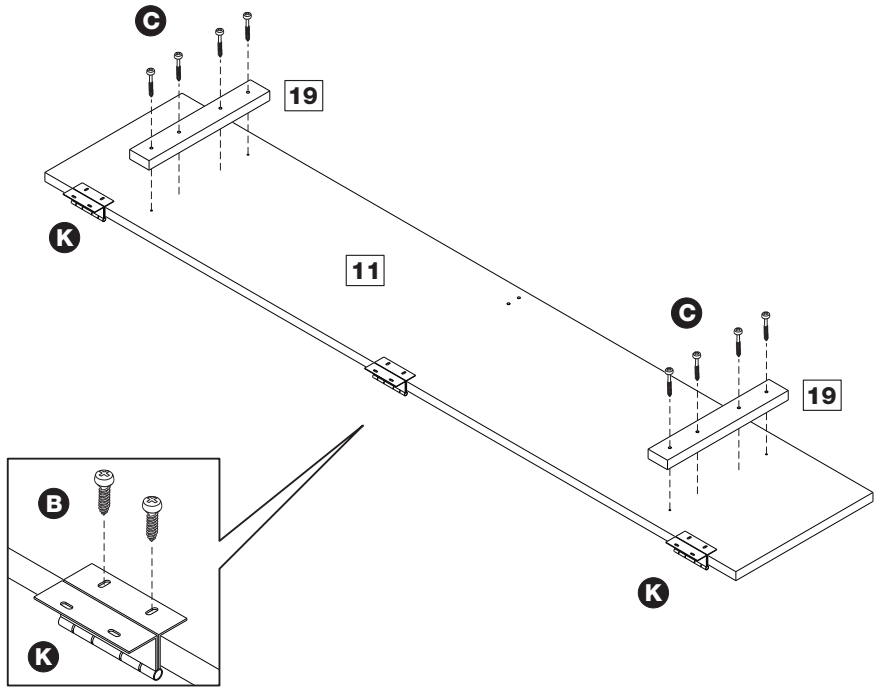

Step 19


Hanging doors.

a: With help, centralise the door in the opening of the cabinet using the door spacer R to ensure correct spacing, as shown.


b: From inside the cabinet fix the hinges using screws B as shown.


Note:
To ensure the alignment of the doors is correct, centralise the doors in the opening before attaching to the cabinet.

a:

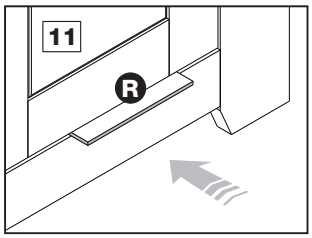

b:

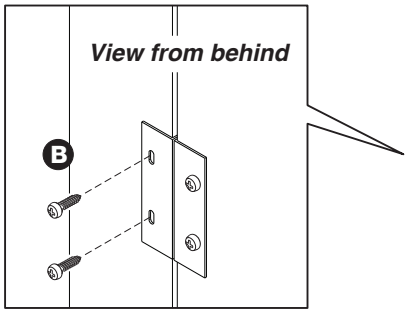

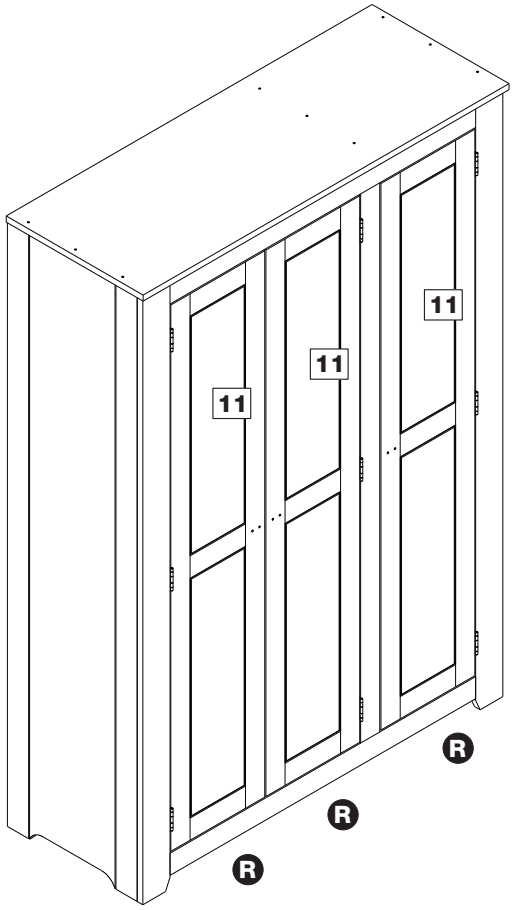

Step **20**


Hinge adjustment.

a: To move doors up or down: loosen screws shown and move doors to suit.

Once doors are aligned, re-tighten screws.

b: To move doors left or right: loosen screws shown and move doors to suit.


Re-tighten screws.

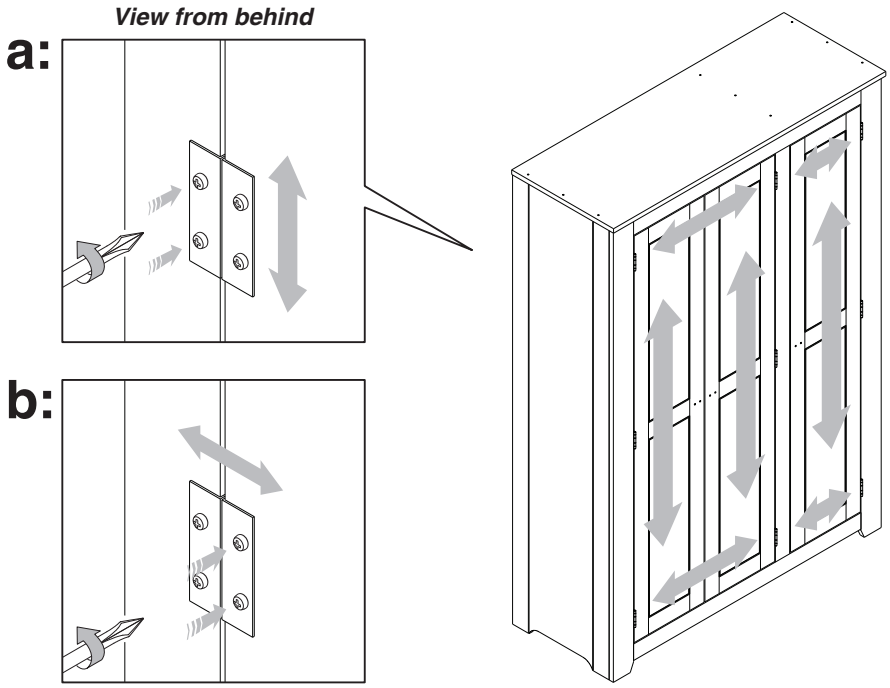


Step **21**

Fitting handles to doors.

Attach handles J to the doors using bolts F as shown.

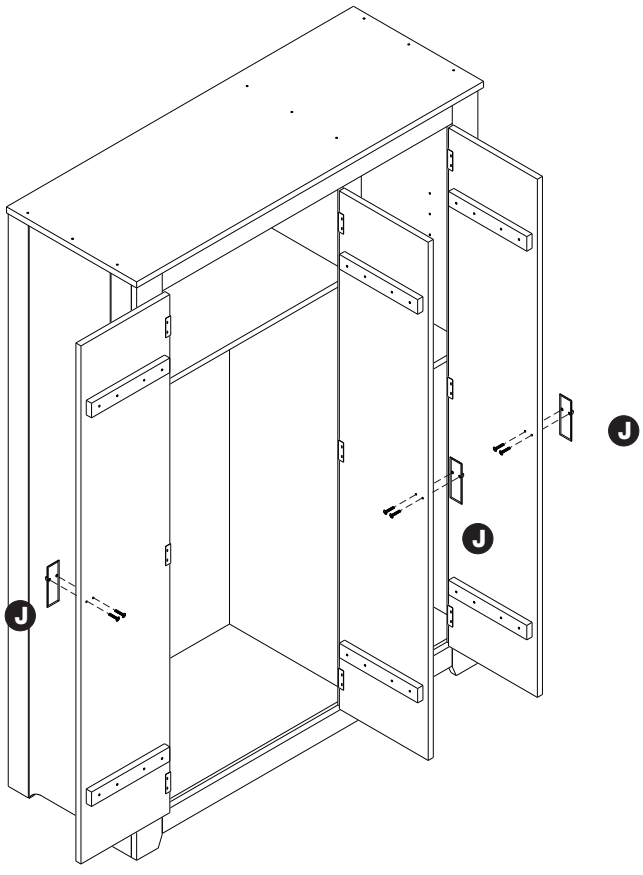

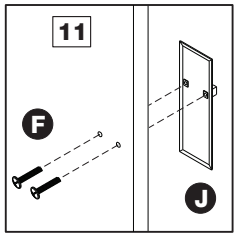

Step **22**


Fitting door locks.


a: Screw clips Ⓛ in place using screws Ⓑ. Ensure that the 2 small wheels are flush with the edge of the base as shown in the diagram.

b: Insert plugs Ⓜ into clips Ⓛ, ensuring they are leveled as shown in the diagram.

c: Push the door against the plug Ⓜ . This will make 2 small marks on the door as shown in the diagram.

d: The doors can then be opened and plugs Ⓜ can be screwed into place using the 2 marks made as a guide. This will ensure that the 2 parts of the door clips are lined up correctly.

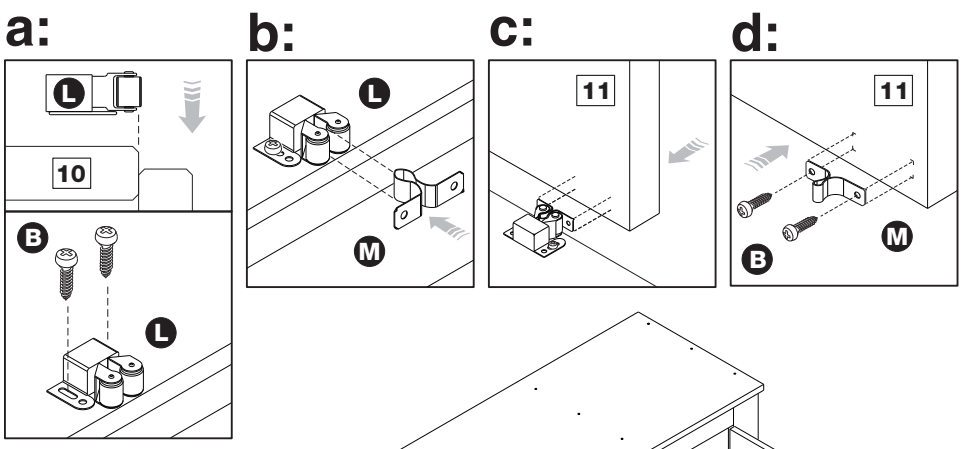


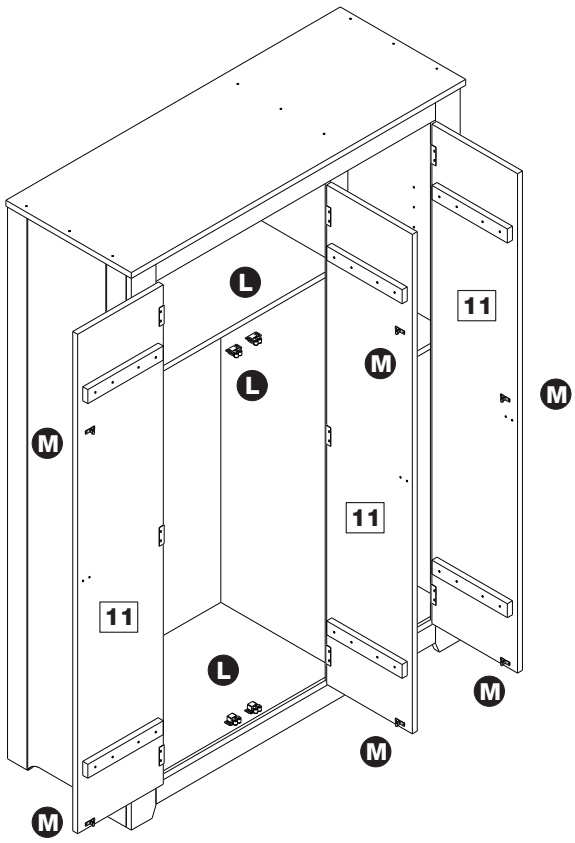

Step **23**

Position shelves 14 into place. Make sure round edge is facing front.

Note:
These shelves are adjustable.

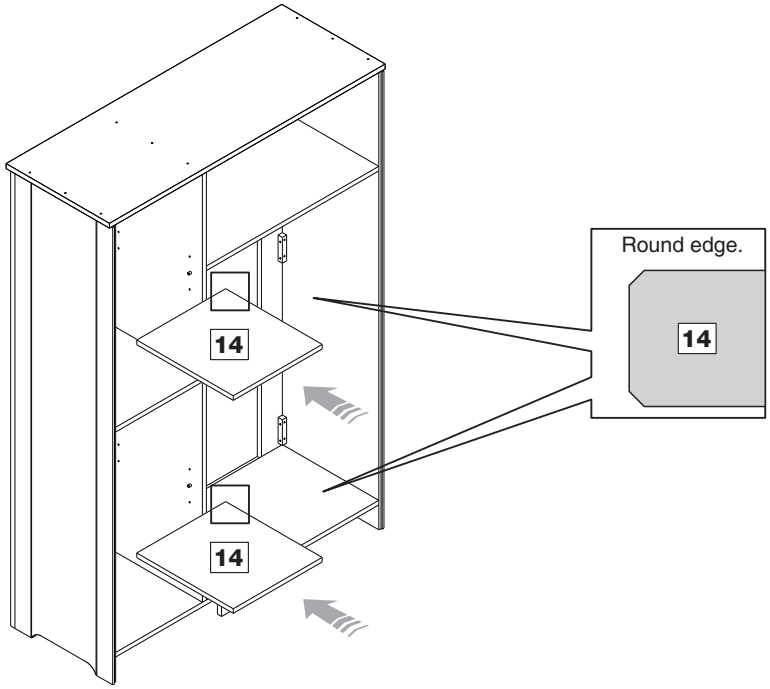

Assembly Instructions

Step **24**

Fixing back panels.


Important: Cabinet **MUST** be 'square' when back panels are attached. Make sure back panels are in flush with the edge of the top panel prior to fixing.


a: Attach the left back panel 4 first using nails I.


b: Position profiles 18 and 21 onto back panel (just attach).


c: Carefully slot the second back panel 4 into the profile and fix it to the cabinet using nails I.

d: Attach right back 5 panel using nails I.

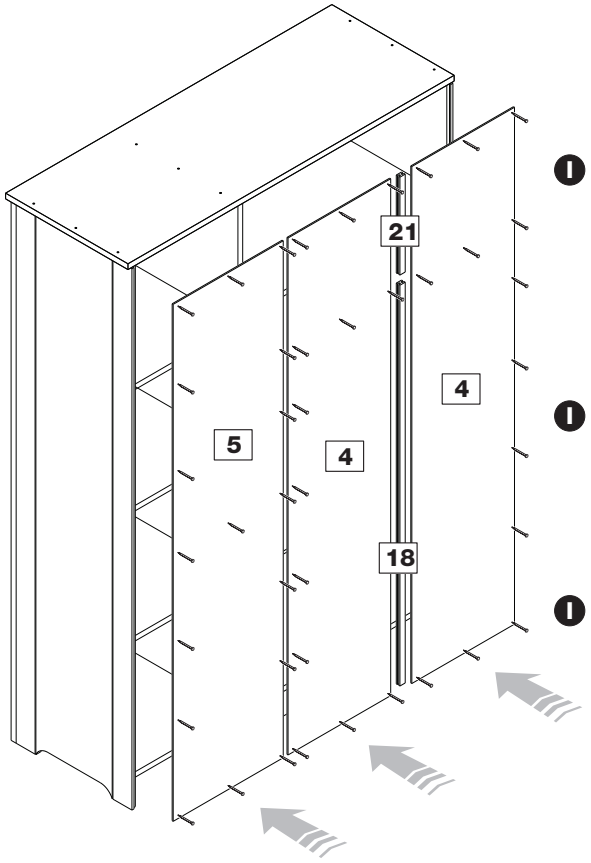

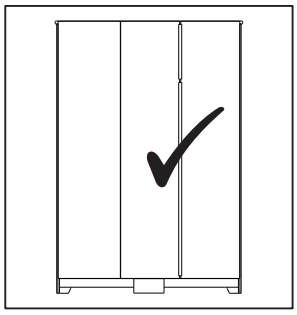

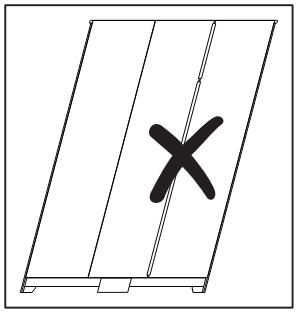

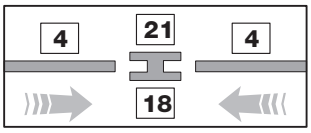


Step **25**


Fixing to wall.

Furniture must be fixed to a wall. Fix wall strap Q to top of furniture using washer P and screw B. With help, move furniture into position.

Assembly is complete.

Note: Wall plugs not supplied. The correct type of fixing must be used for your wall, seek professional advice if in doubt.

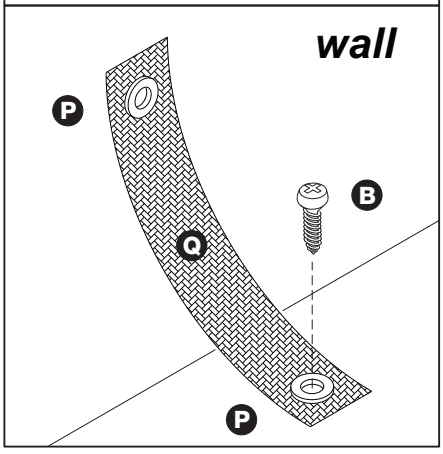

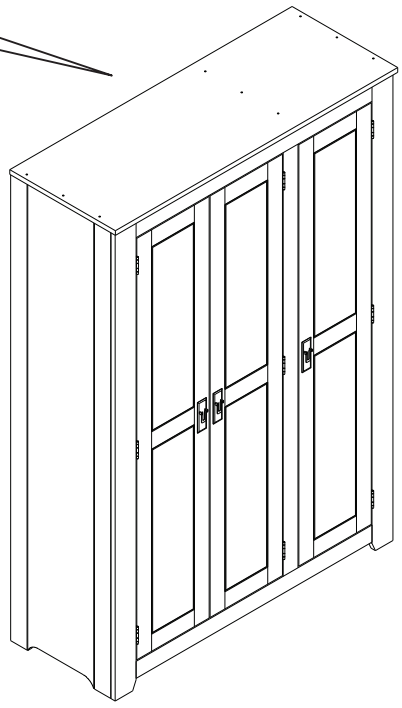


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

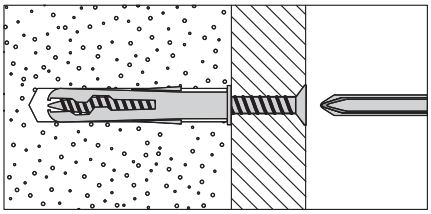


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

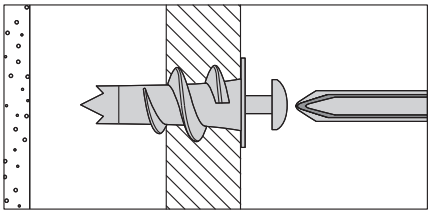


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

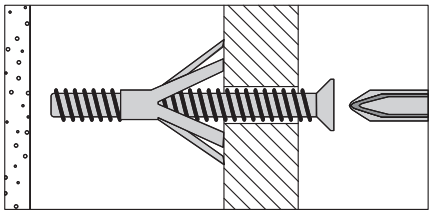


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

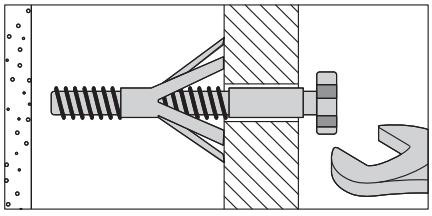


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

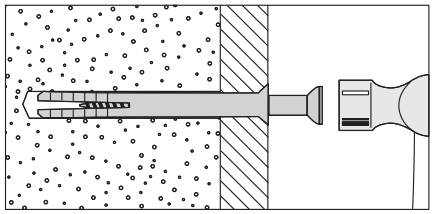

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

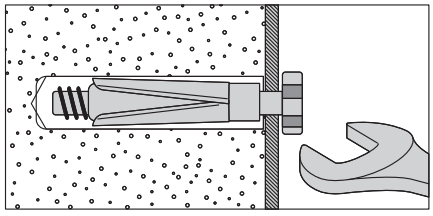

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.