
Campbell Oak Effect Dining Table

Assembly Instructions - Please keep for future reference | 280/7823

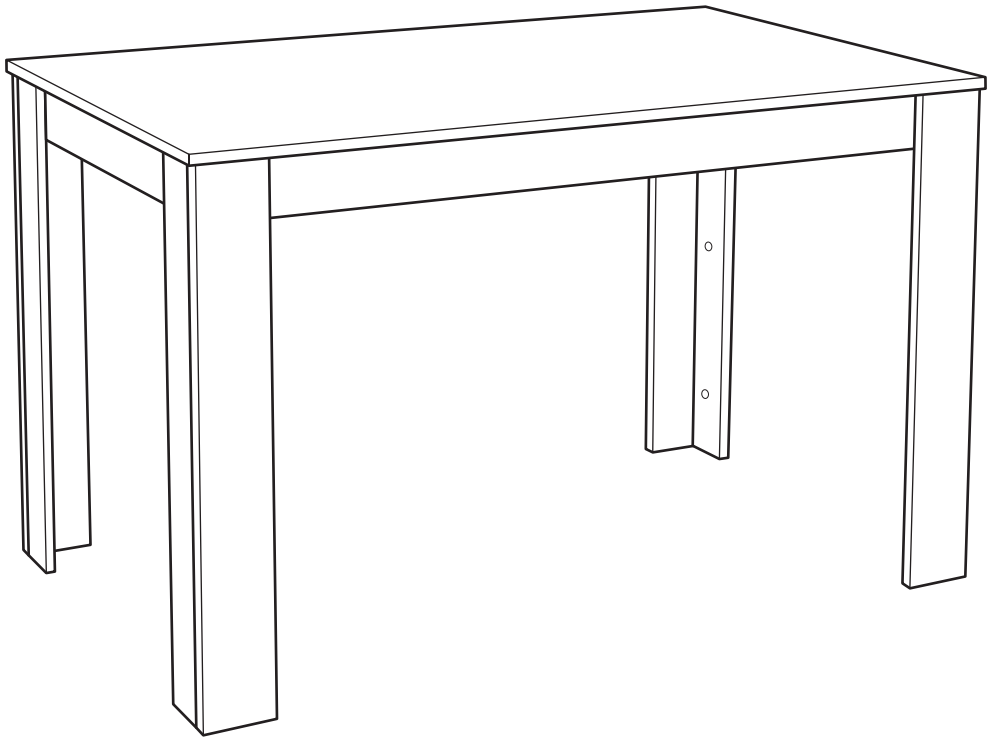

Dimensions

Width - 117cm
Depth - 76.5cm
Height - 74cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800

Issue 1 - 29/07/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

• Unit weight: 22.12 kgs.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

• Regularly check and ensure that all bolts and fittings are tightend properly.

Components - Parts

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 640 0800**


Please check you have all the parts listed below



1 Top panel
(117 x 76.5 x 1.8cm)



2 Long side panel x 2
(112.5 x 8 x 1.8cm)



3 Short side panel x 2
(68 x 8 x 1.8cm)



4L Narrow leg x 2
(72 x 8 x 1.8cm)



4R Narrow leg x 2
(72 x 8 x 1.8cm)



5L Wide leg x 2
(72 x 10 x 1.8cm)









5R Wide leg x 2
(72 x 10 x 1.8cm)


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A  M6 x 25mm Bolt x 16	**B**  30mm Screw x 24	**C**  Dowel x 26
D  Cam bolt x 26	**E**  Cam lock x 26	**F**  Adhesive pad x 12
G  Bracket x 8	**H**  15mm Screw x 16	

Tools required



Crosshead screwdriver

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Place the panels on a flat protected surface.

a: Attaching dowels

Insert dowels Ⓒ into holes on top panel 1 and legs 4L, 4R, 5L & 5R as shown.

b: Attaching cam bolts

Insert cam bolts Ⓓ into holes on top panel 1 & wide legs 5L & 5R as shown and fix using a crosshead screwdriver.

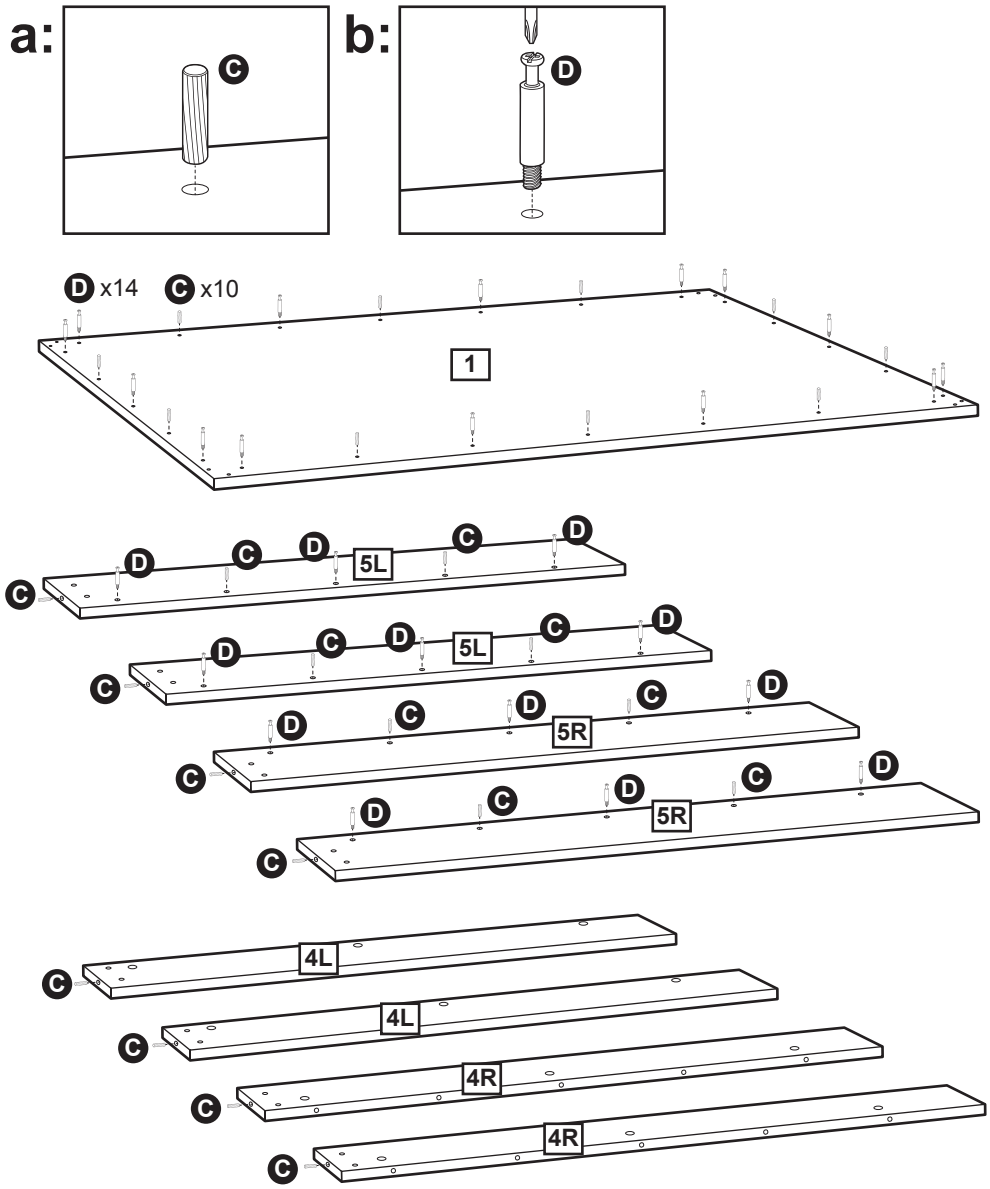


Step 2

Attaching side panels to top panel

a: Align and insert the dowels Ⓒ and cam bolt Ⓓ on top panel 1 into holes on the side panels 2 & 3 as shown.

b: Put the cam locks Ⓔ into the holes on the table side panels 2 and 3 as shown.

c: Turn and fix the cam locks Ⓔ using a crosshead screwdriver to lock.

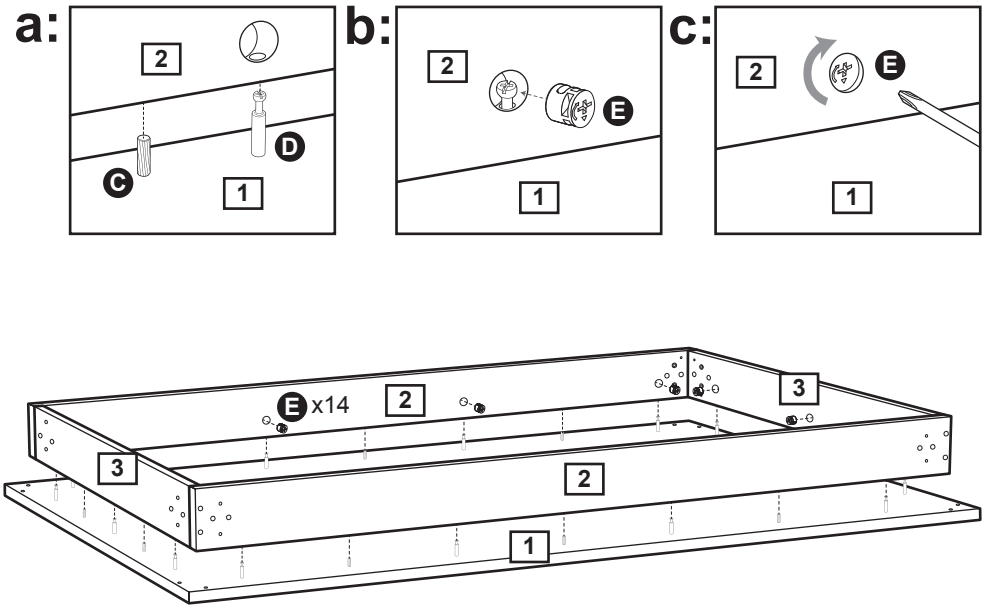



Assembly Instructions

Step 2

Securing side panels

Fix the side panels 2 & 3 using screws B and tighten using a crosshead screwdriver.

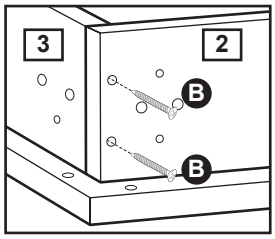

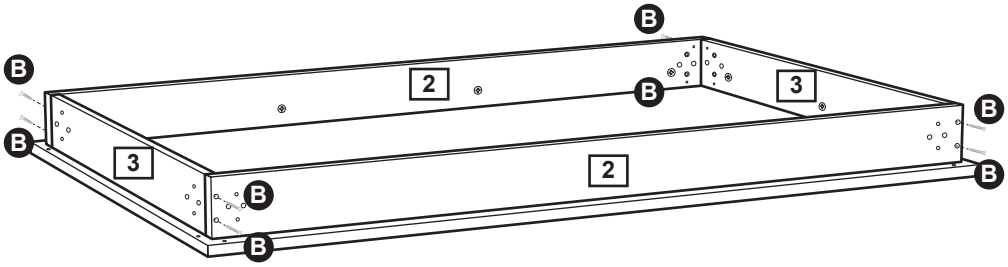


Step 3


Assembling legs

a: Align and insert the dowels C and cam bolt D on wide legs 5L & 5R into holes on the narrow legs 4L & 4R as shown.

b: Put the cam locks E on narrow legs 4L & 4R as shown.

c: Turn and fix the cam locks E using a crosshead screwdriver to lock.

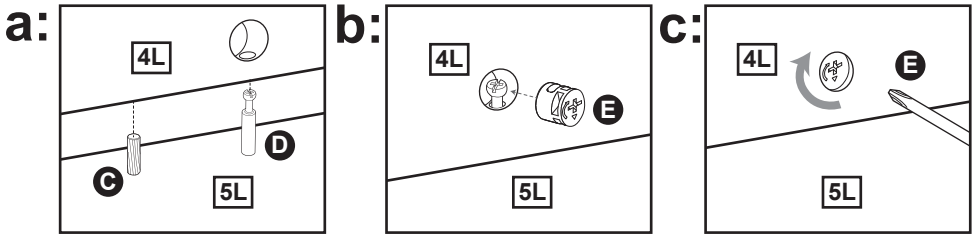

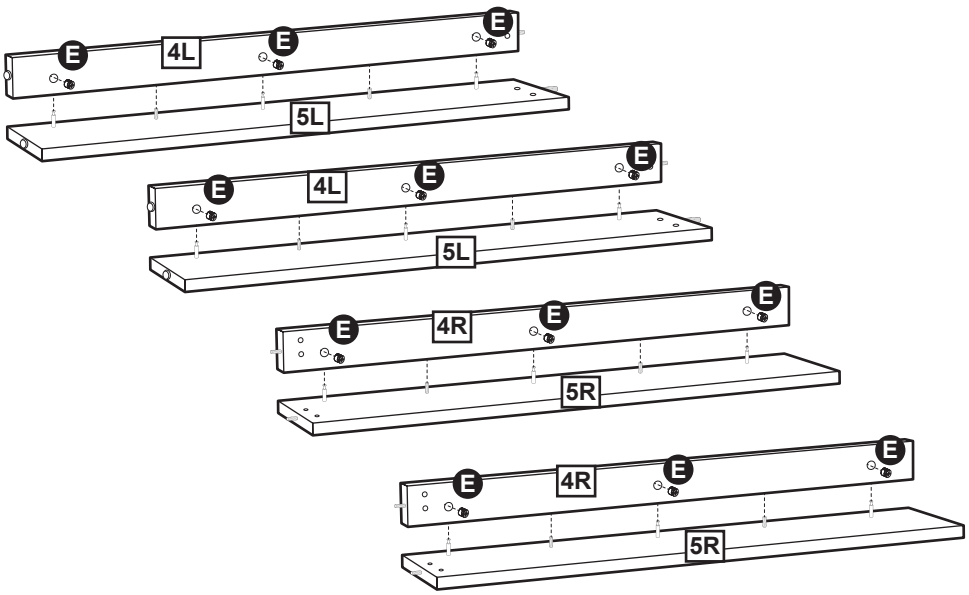



Assembly Instructions

Step 4

Attaching legs to top panel

Position the assembled legs 4L ,4R, 5L & 5R as shown and align / insert the dowels C into holes on the top panel 1.

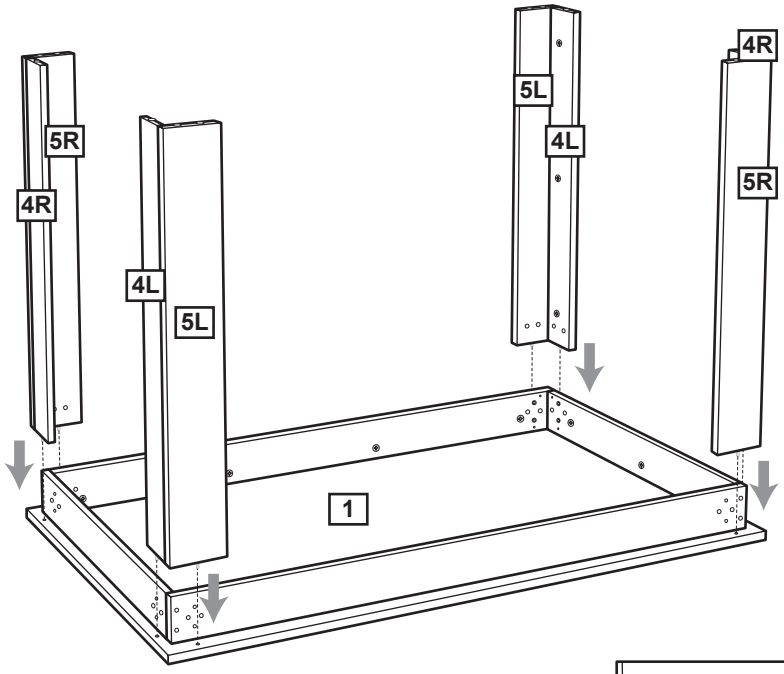


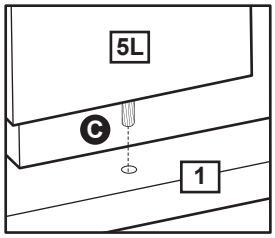


Step 5

Securing legs

Fix the legs to side panels 2 & 3 as shown using bolts A and tighten using a crosshead screwdriver.

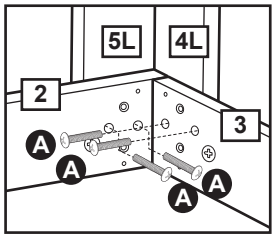

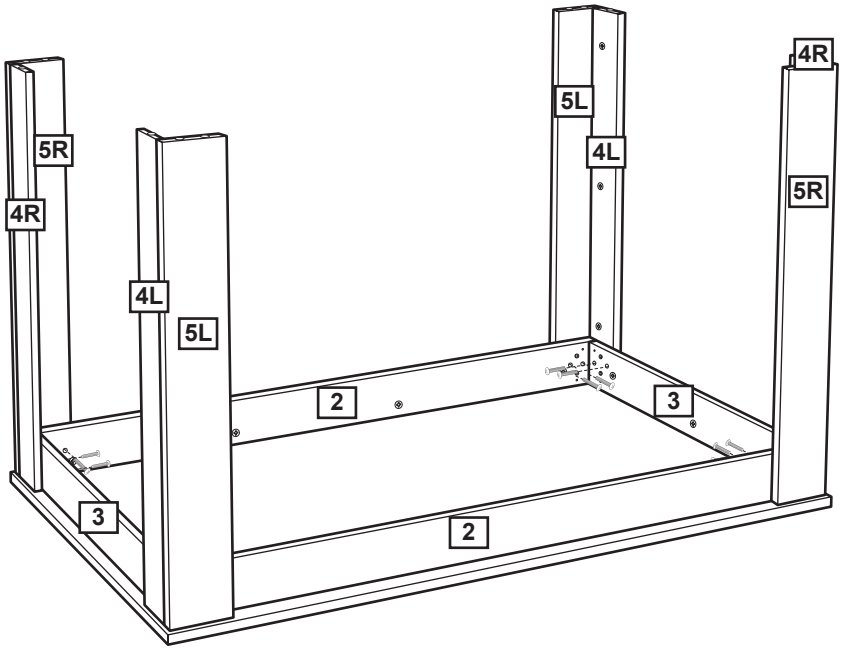


Assembly Instructions

Step 6

Securing legs with screws


Fix the legs to side panels 2 & 3 as shown using screws B and tighten using a crosshead screwdriver.

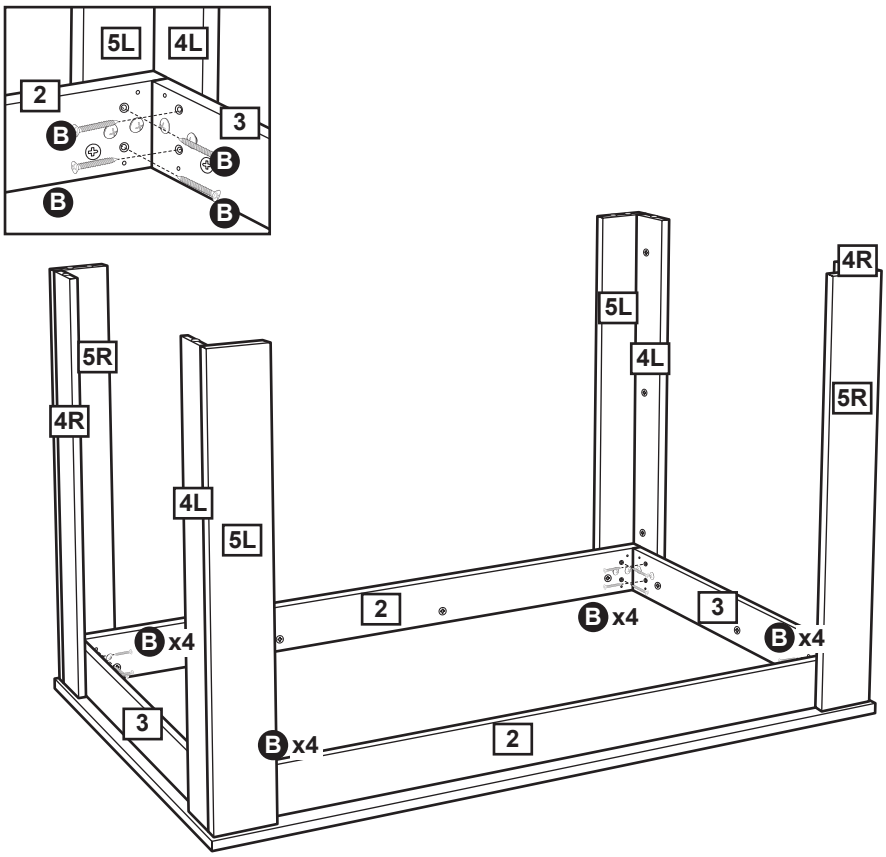

Step 7

Securing side panels

Position brackets G to side panels 2 & 3 as shown and fix with screws H. Then tighten screws using a crosshead screwdriver.

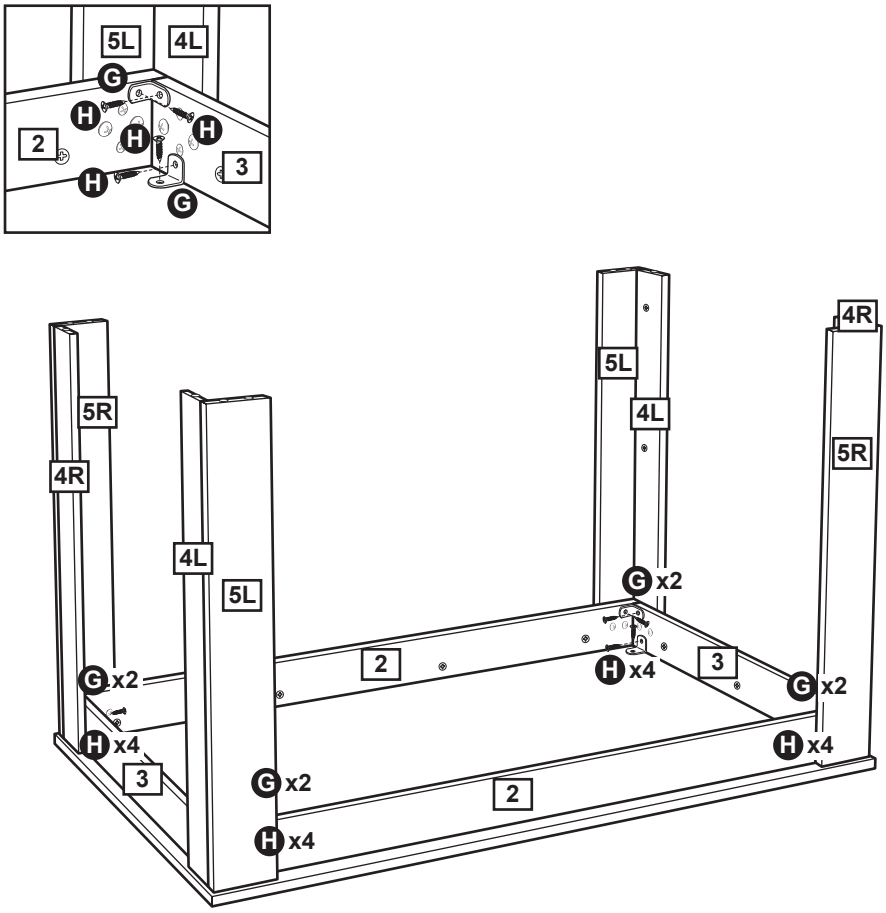



Assembly Instructions

Step 8

Attaching adhesive pads


Remove backing from adhesive pads F then paste it on the legs 4L & 4R to cover the cam locks E.

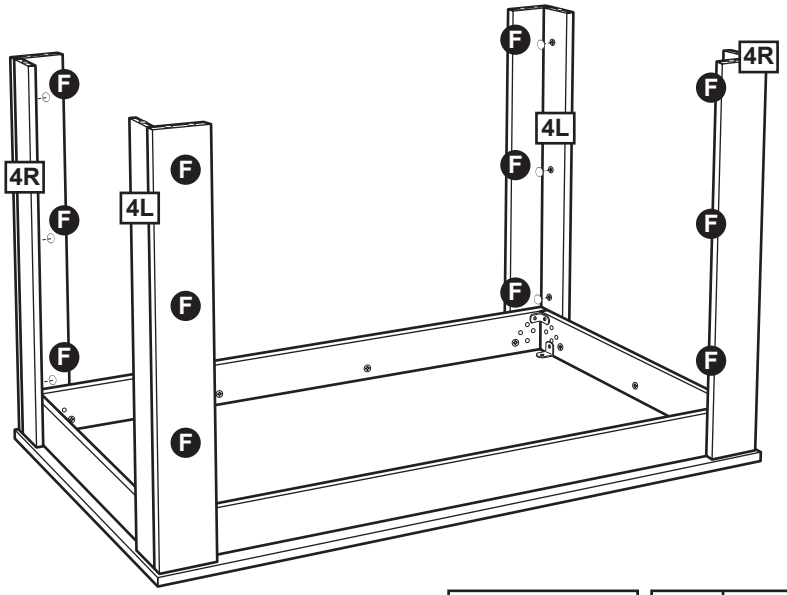

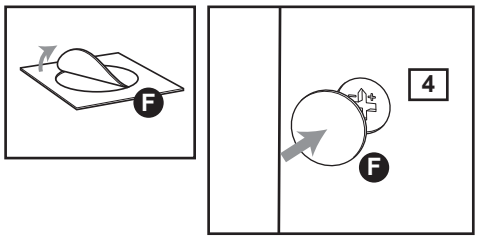

Carefully turn over the unit.

Note: At least two persons are required to lift the unit.

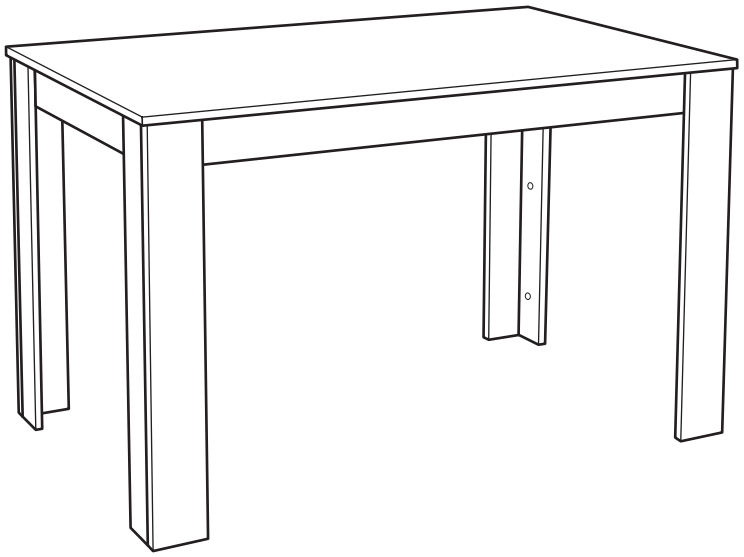


Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800

Dining Chair

Assembly Instructions - Please keep for future reference

603/5213
603/5189
603/5196
603/5237
603/5172
603/5206
603/5220
603/3796
603/3806

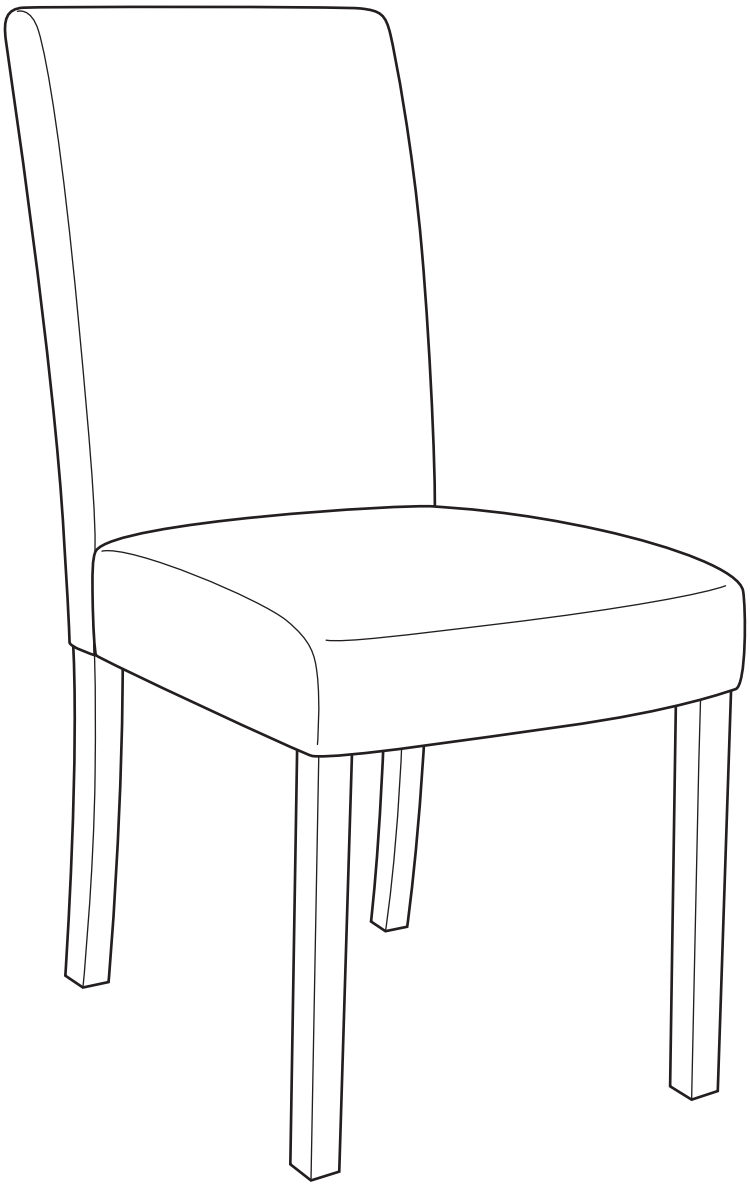

Dimensions

Width - 43.5cm
Depth - 54cm
Height - 86.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 21/08/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Assemble this product on a flat surface.

• Assemble all parts loosely before tightening any bolts.

• Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

• Discard all extra fittings and keep fittings out of reach of children.

• Unit weight: 4.58kgs.

• Maximum safe weight of user: 110kgs.

• Retain Assembly Instructions for future reference.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Warnings

• This product should only be used on firm, level ground.

• Make sure the legs remain in contact with the ground.

• Do not stand on the product.

Care and maintenance

• Please clean the product using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.


• Do not use any abrasive materials when cleaning.

• From time to time check that there are no loose bolts on this unit.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the parts listed below

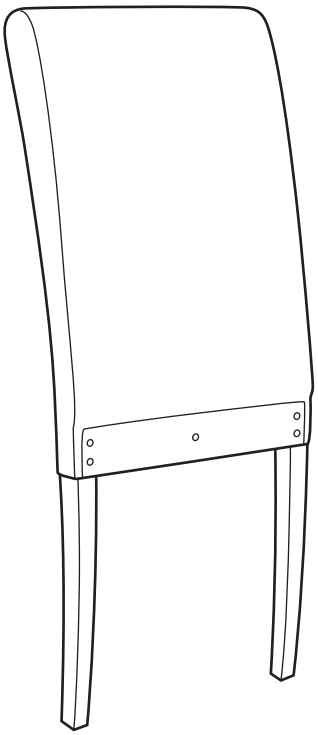

1 Backrest
(36 x 9 x 86.5cm)

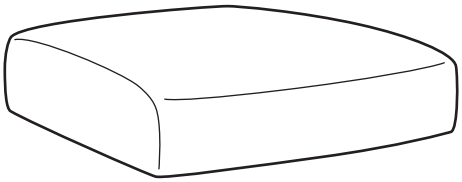

2 Seat
(43.5 x 41.5 x 10cm)






3 Leg x 2
(3 x 3 x 43cm)


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 	**B** 	**C** 
M6 x 50mm Bolt x 9	Spring washer x 9	Flat washer x 9
D 		
Allen key x 1		

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Attaching legs

Place the seat 2 upside down on a flat protected surface.

Insert the legs 3 into the holes of the seat as shown and fix using bolts A, spring washers B and washers C.

Important:
Fasten bolts using allen key D but do not fully tighten at this stage.

Note:
Use oval head of allen key D on tight angles.

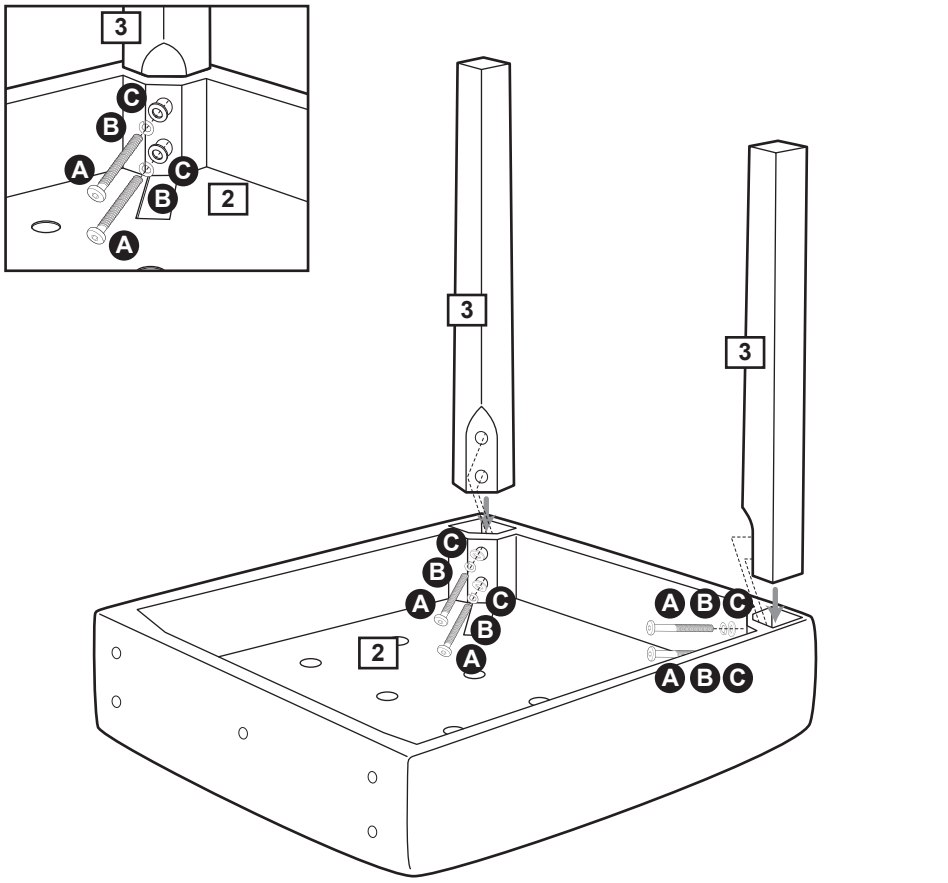

Step 2


Attaching backrest

Place the backrest on a flat protected surface.

Position the seat 2 on the backrest 1 as shown and fix using bolts A, spring washers B and washers C.

Important:
Fasten bolts using allen key D but do not fully tighten at this stage.

Note:
Use oval head of allen key D on tight angles.

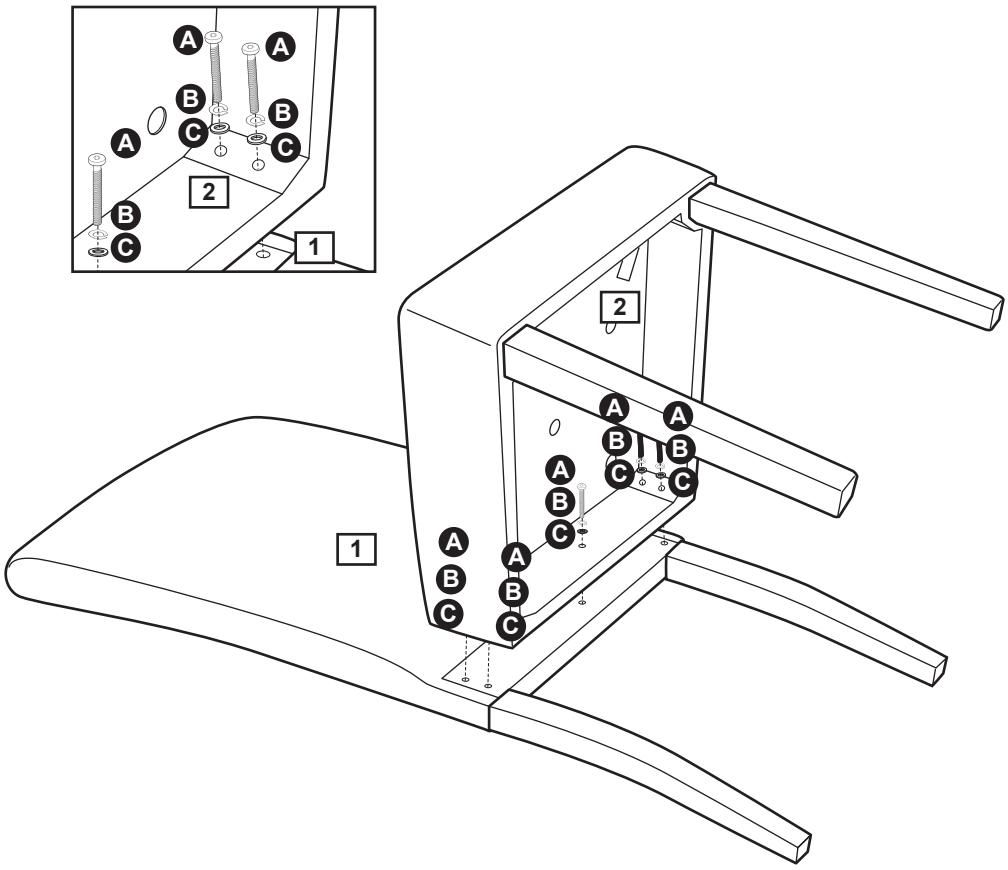

Assembly Instructions

Step 3

Aligning & securing the legs

Carefully turn the chair upright and place on a flat surface.

a: Tighten all bolts using allen key Ⓓ.

Note:
Use oval head of allen key Ⓓ on tight angles.

Note: This step is essential to prevent the chair from wobbling due to uneven legs.

b: Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.


c: After the sitting test, re-tighten bolts again if any adjustment is needed.

Note: It is highly recommended to re-tighten all bolts after using the chair for 7 days.


Note: Keep allen key to re-tighten bolts when required.

Assembly is complete.


a:

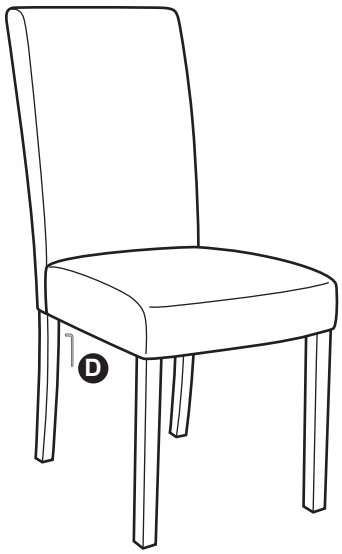

b:

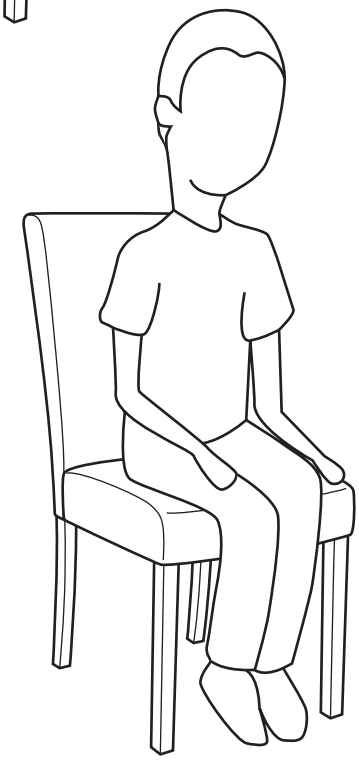

c:

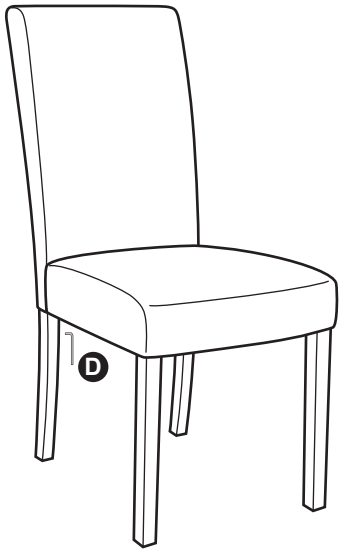

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**