
# Campbell Oak Effect Dining Table

Assembly Instructions - Please keep for future reference | 280/7823

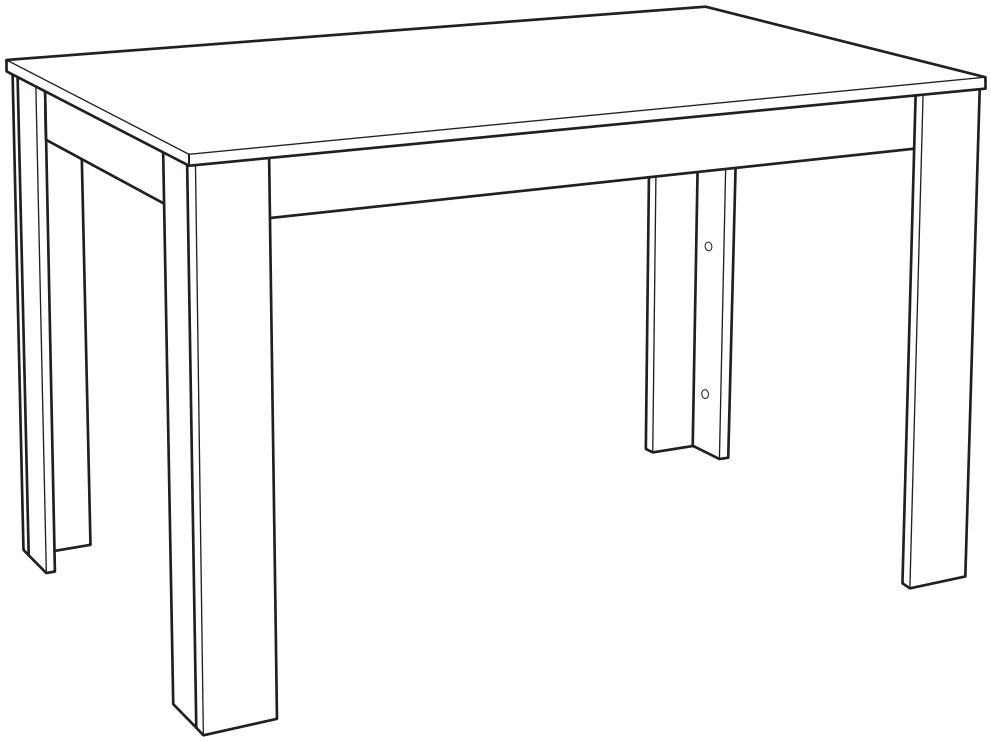

## Dimensions

Width - 117cm
Depth - 76.5cm
Height - 74cm

## Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
**Argos = 0345 640 0800**

Issue 1 - 29/07/14

# Safety and Care Advice

## **Important** - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

• Unit weight: 22.12 kgs.

## Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

• Regularly check and ensure that all bolts and fittings are tightend properly.

# Components - Parts

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 640 0800**


## Please check you have all the parts listed below



**1** Top panel
(117 x 76.5 x 1.8cm)



**2** Long side panel x 2
(112.5 x 8 x 1.8cm)



**3** Short side panel x 2
(68 x 8 x 1.8cm)



**4L** Narrow leg x 2
(72 x 8 x 1.8cm)



**4R** Narrow leg x 2
(72 x 8 x 1.8cm)



**5L** Wide leg x 2
(72 x 10 x 1.8cm)









**5R** Wide leg x 2
(72 x 10 x 1.8cm)


# Components - Fittings

## Please check you have all the fittings listed below

***Note:*** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


| | | |
|---|---|---|
| **A**  M6 x 25mm Bolt x 16 | **B**  30mm Screw x 24 | **C**  Dowel x 26 |
| **D**  Cam bolt x 26 | **E**  Cam lock x 26 | **F**  Adhesive pad x 12 |
| **G**  Bracket x 8 | **H**  15mm Screw x 16 | |

## Tools required



Crosshead screwdriver

## **Ruler** - Use this ruler to help correctly identify the screws



# Assembly Instructions

## Step 1


Place the panels on a flat protected surface.

**a: Attaching dowels**

Insert dowels Ⓒ into holes on top panel 1 and legs 4L, 4R, 5L & 5R as shown.

**b: Attaching cam bolts**

Insert cam bolts Ⓓ into holes on top panel 1 & wide legs 5L & 5R as shown and fix using a crosshead screwdriver.

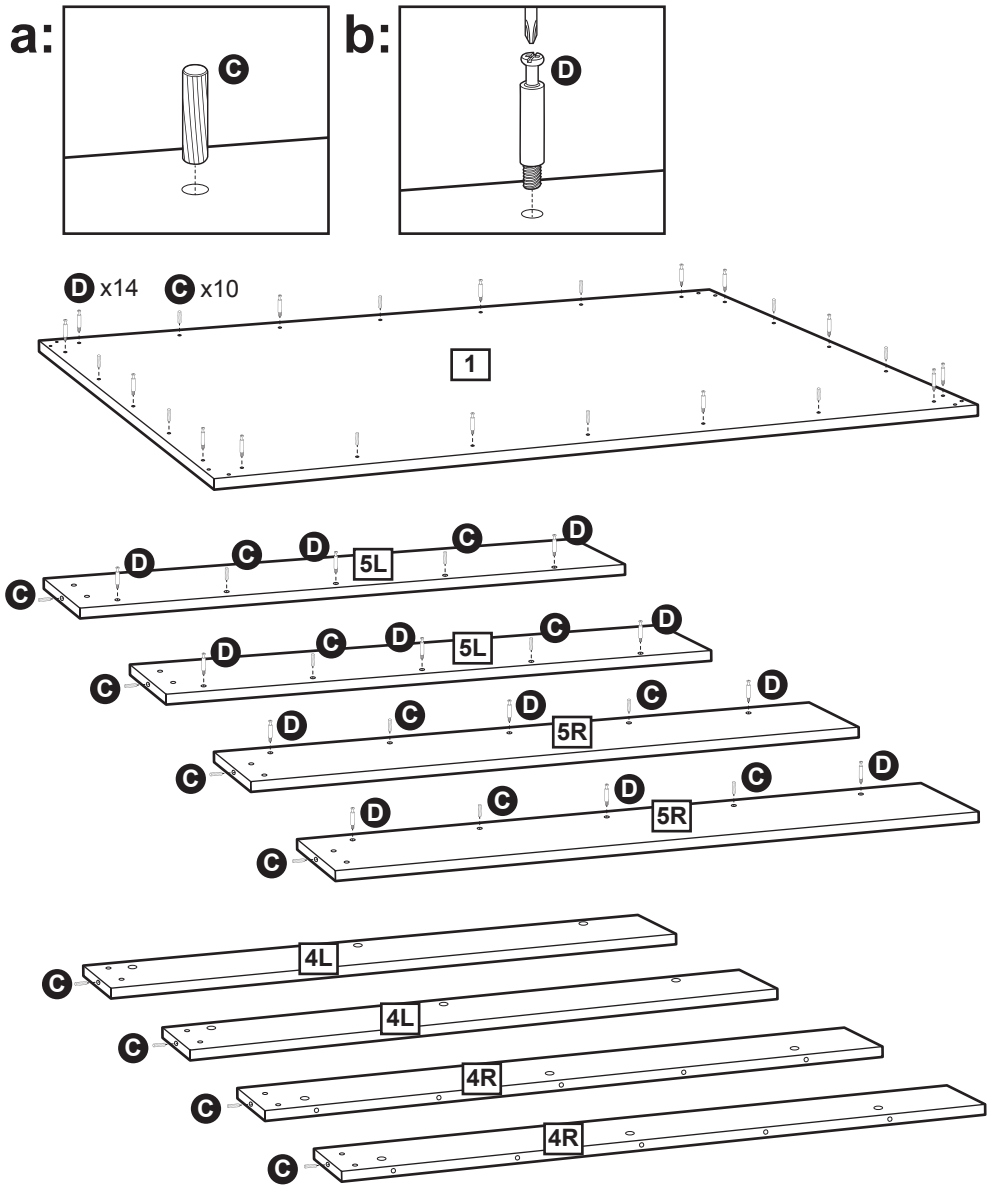



## Step 2

**Attaching side panels to top panel**

**a:** Align and insert the dowels Ⓒ and cam bolt Ⓓ on top panel 1 into holes on the side panels 2 & 3 as shown.

**b:** Put the cam locks Ⓔ into the holes on the table side panels 2 and 3 as shown.

**c:** Turn and fix the cam locks Ⓔ using a crosshead screwdriver to lock.

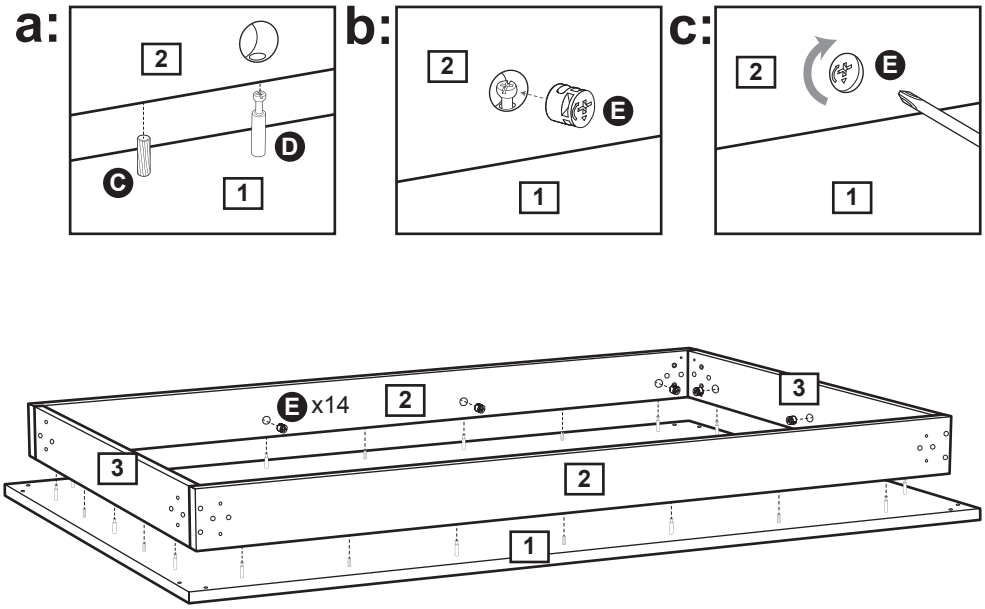



# Assembly Instructions

## Step 2

**Securing side panels**

Fix the side panels 2 & 3 using screws B and tighten using a crosshead screwdriver.

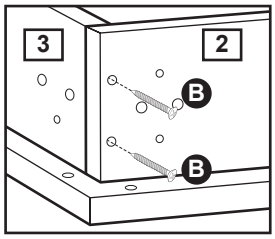

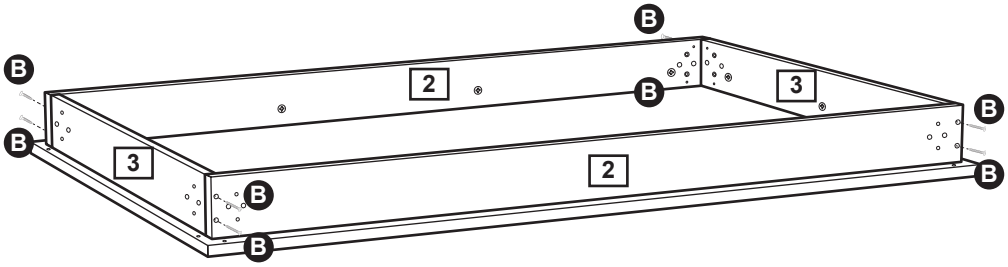

## Step 3


**Assembling legs**

**a:** Align and insert the dowels C and cam bolt D on wide legs 5L & 5R into holes on the narrow legs 4L & 4R as shown.

**b:** Put the cam locks E on narrow legs 4L & 4R as shown.

**c:** Turn and fix the cam locks E using a crosshead screwdriver to lock.

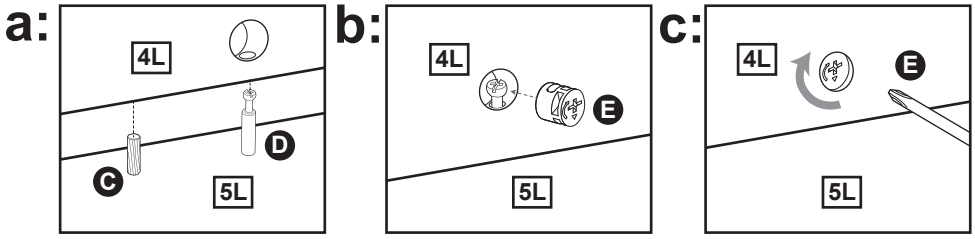

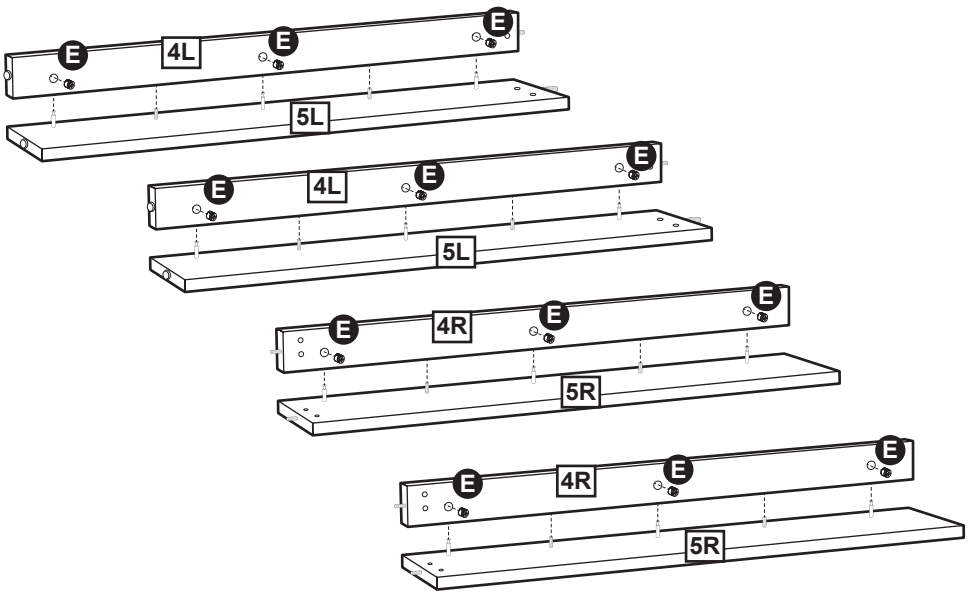



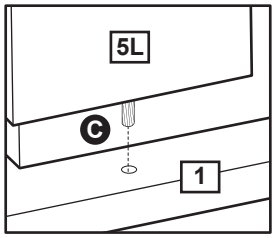
# Assembly Instructions

## Step 4

**Attaching legs to top panel**

Position the assembled legs 4L ,4R, 5L & 5R as shown and align / insert the dowels C into holes on the top panel 1.

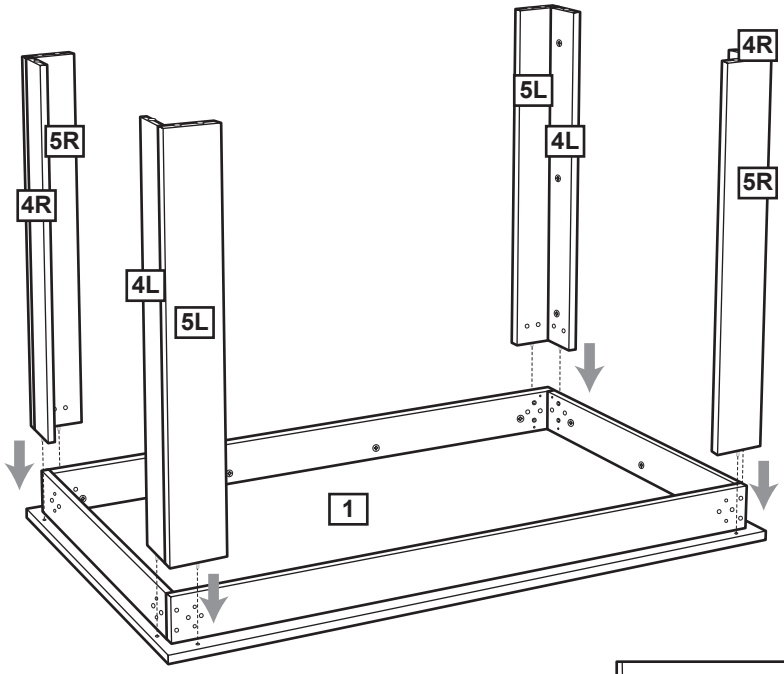







## Step 5

**Securing legs**

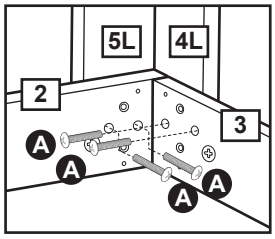Fix the legs to side panels 2 & 3 as shown using bolts A and tighten using a crosshead screwdriver.

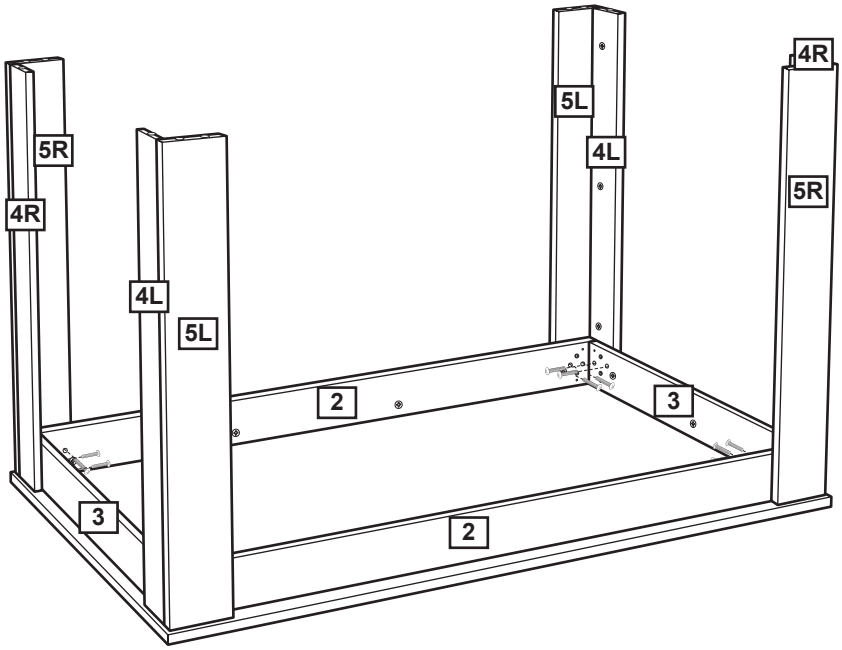





# Assembly Instructions

## Step 6

**Securing legs with screws**


Fix the legs to side panels 2 & 3 as shown using screws B and tighten using a crosshead screwdriver.

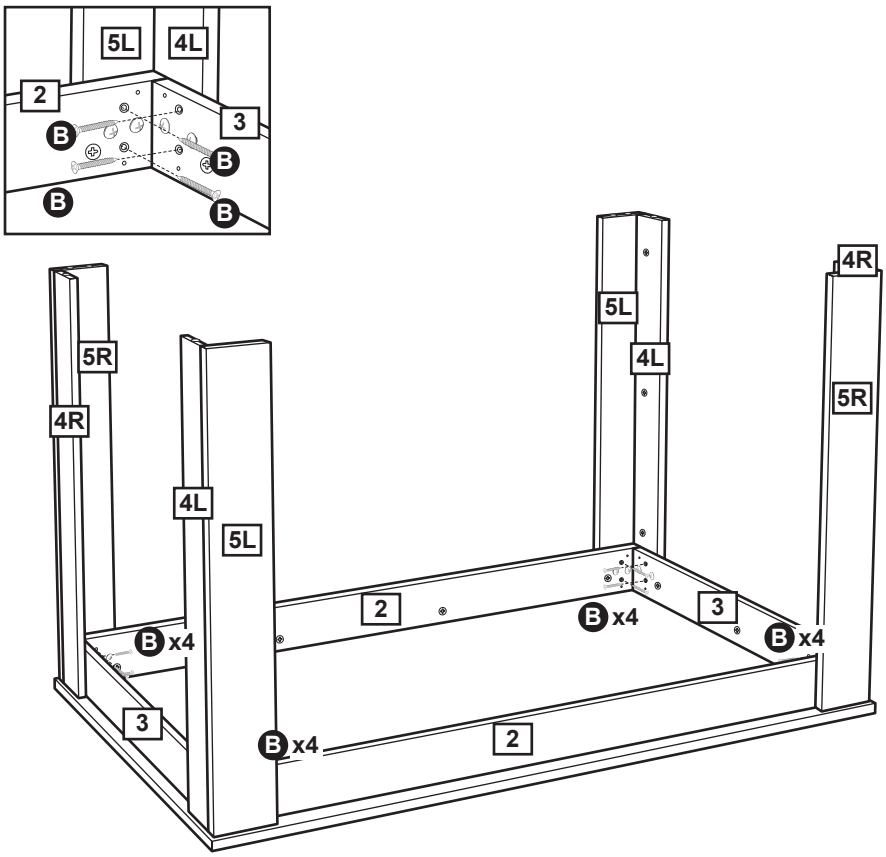


## Step 7

**Securing side panels**

Position brackets G to side panels 2 & 3 as shown and fix with screws H. Then tighten screws using a crosshead screwdriver.

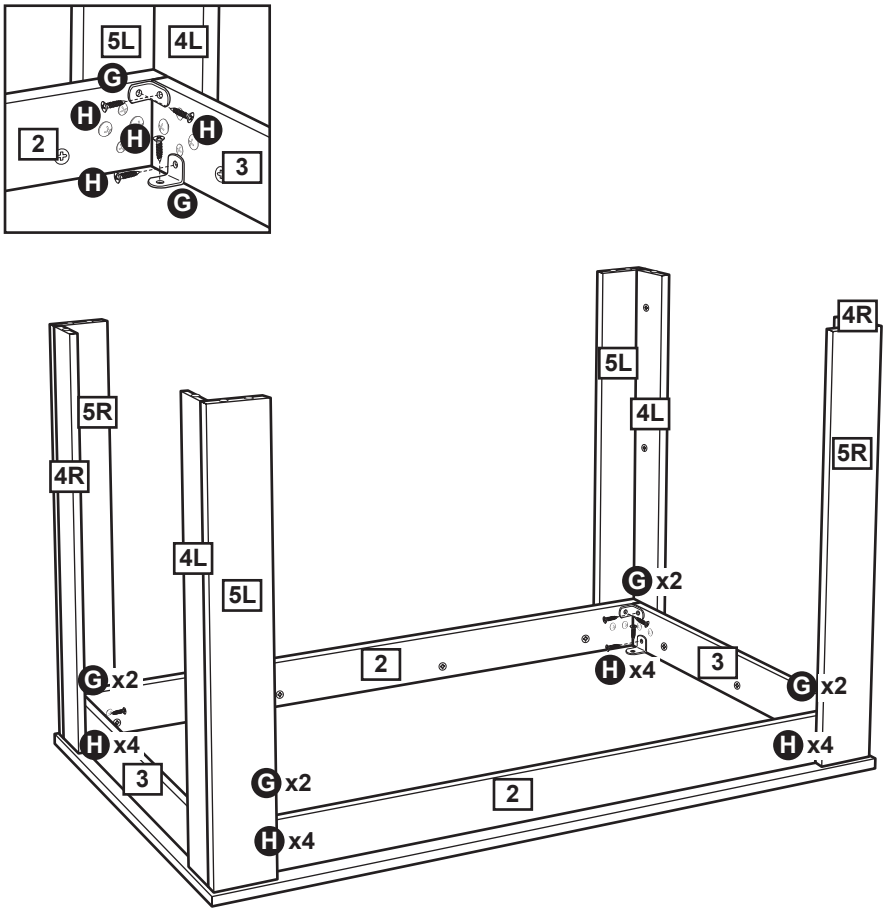



# Assembly Instructions

## Step 8

**Attaching adhesive pads**


Remove backing from adhesive pads F then paste it on the legs 4L & 4R to cover the cam locks E.

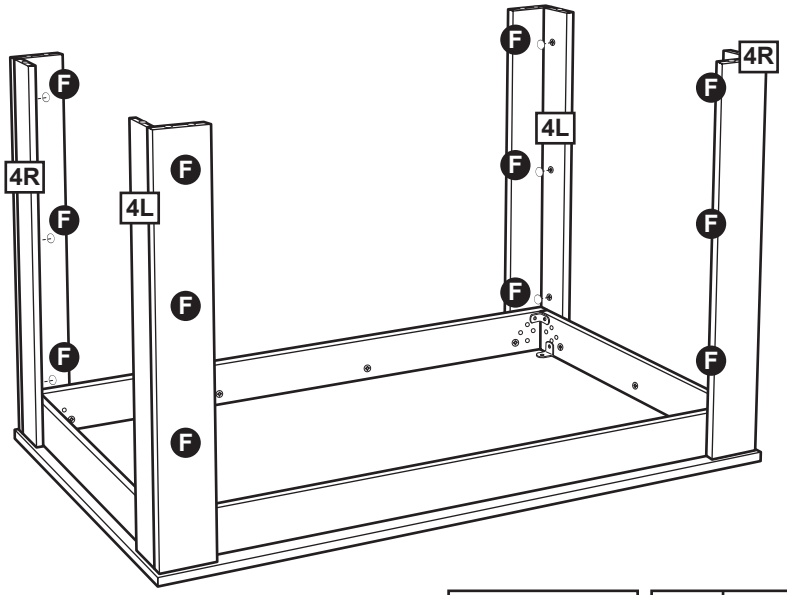

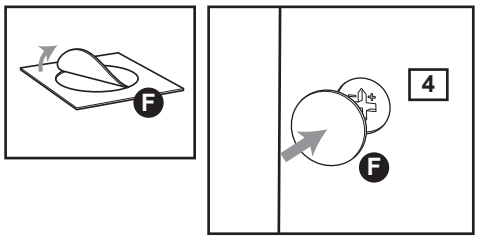
Carefully turn over the unit.

***Note:*** At least two persons are required to lift the unit.

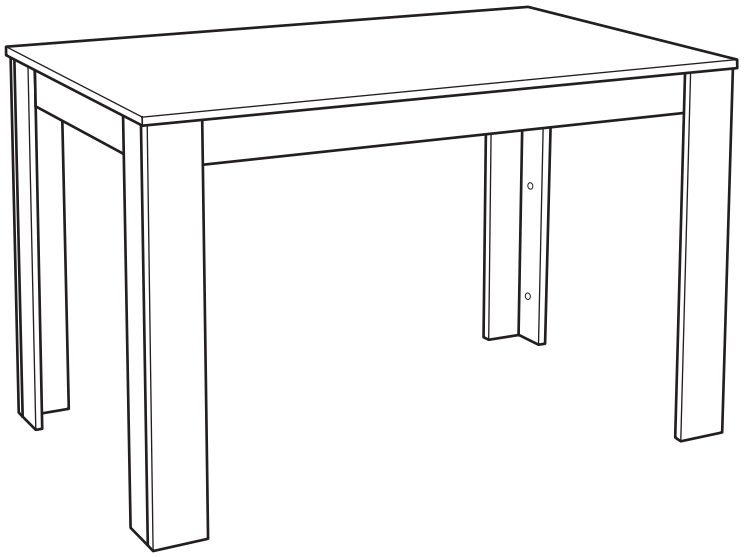


**Assembly is complete.**

If you need help or have damaged or missing parts, call the **Customer Helpline:**
**Argos = 0345 640 0800**

# Dining Chair

## Assembly Instructions - Please keep for future reference

603/5213
603/5189
603/5196
603/5237
603/5172
603/5206
603/5220
603/3796
603/3806

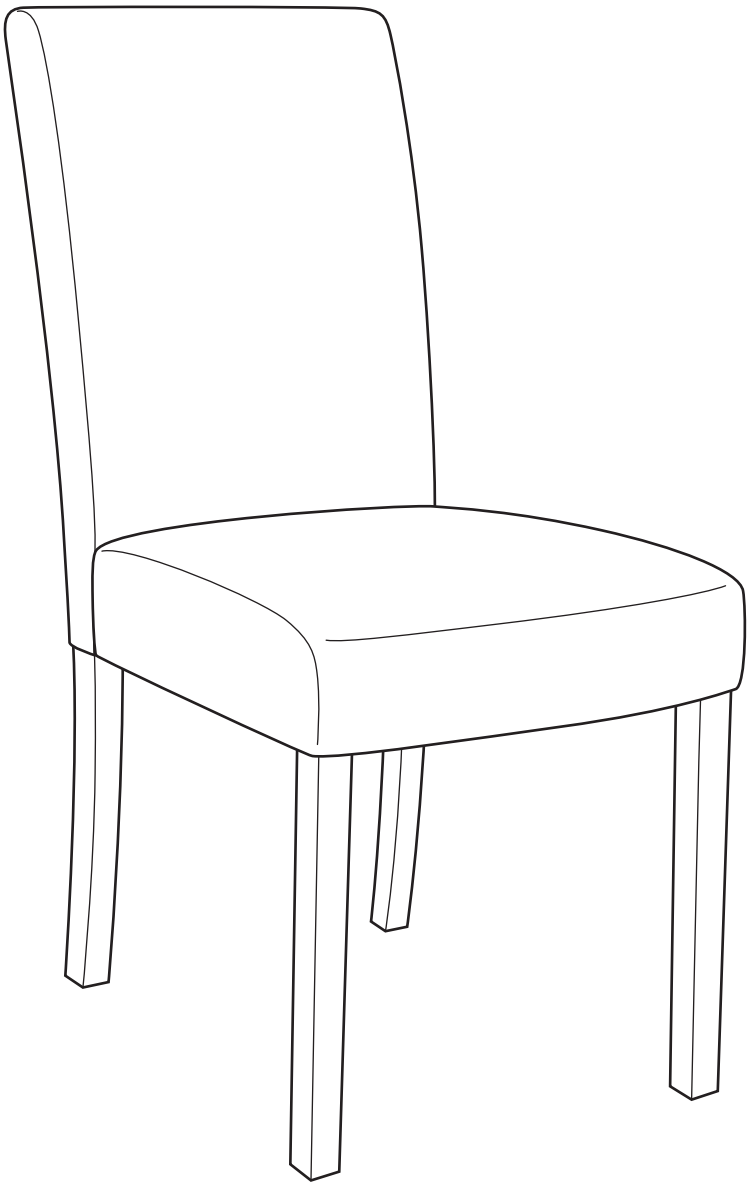

### Dimensions

Width - 43.5cm
Depth - 54cm
Height - 86.5cm

## Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 21/08/13

# Safety and Care Advice

## **Important** - Please read these instructions fully before starting assembly

• Assemble this product on a flat surface.

• Assemble all parts loosely before tightening any bolts.

• Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

• Discard all extra fittings and keep fittings out of reach of children.

• Unit weight: 4.58kgs.

• Maximum safe weight of user: 110kgs.

• Retain Assembly Instructions for future reference.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

## Warnings

• This product should only be used on firm, level ground.

• Make sure the legs remain in contact with the ground.

• Do not stand on the product.

## Care and maintenance

• Please clean the product using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish.


• Do not use any abrasive materials when cleaning.

• From time to time check that there are no loose bolts on this unit.


# Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

## Please check you have all the parts listed below

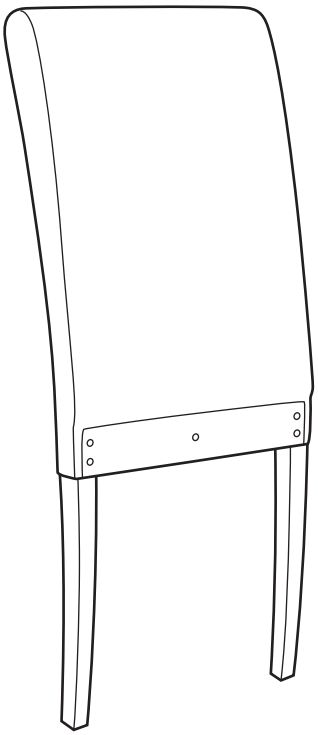

**1** Backrest
(36 x 9 x 86.5cm)

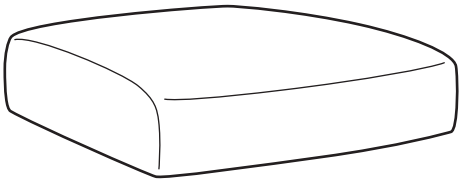

**2** Seat
(43.5 x 41.5 x 10cm)






**3** Leg x 2
(3 x 3 x 43cm)


# Components - Fittings

## Please check you have all the fittings listed below

***Note:*** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

| | | |
|---|---|---|
| **A**  | **B**  | **C**  |
| M6 x 50mm Bolt x 9 | Spring washer x 9 | Flat washer x 9 |
| **D**  | | |
| Allen key x 1 | | |

## **Ruler** - Use this ruler to help correctly identify the screws



# Assembly Instructions

## Step 1


**Attaching legs**

Place the seat 2 upside down on a flat protected surface.

Insert the legs 3 into the holes of the seat as shown and fix using bolts A, spring washers B and washers C.

***Important:***
Fasten bolts using allen key D but do not fully tighten at this stage.

***Note:***
Use oval head of allen key D on tight angles.

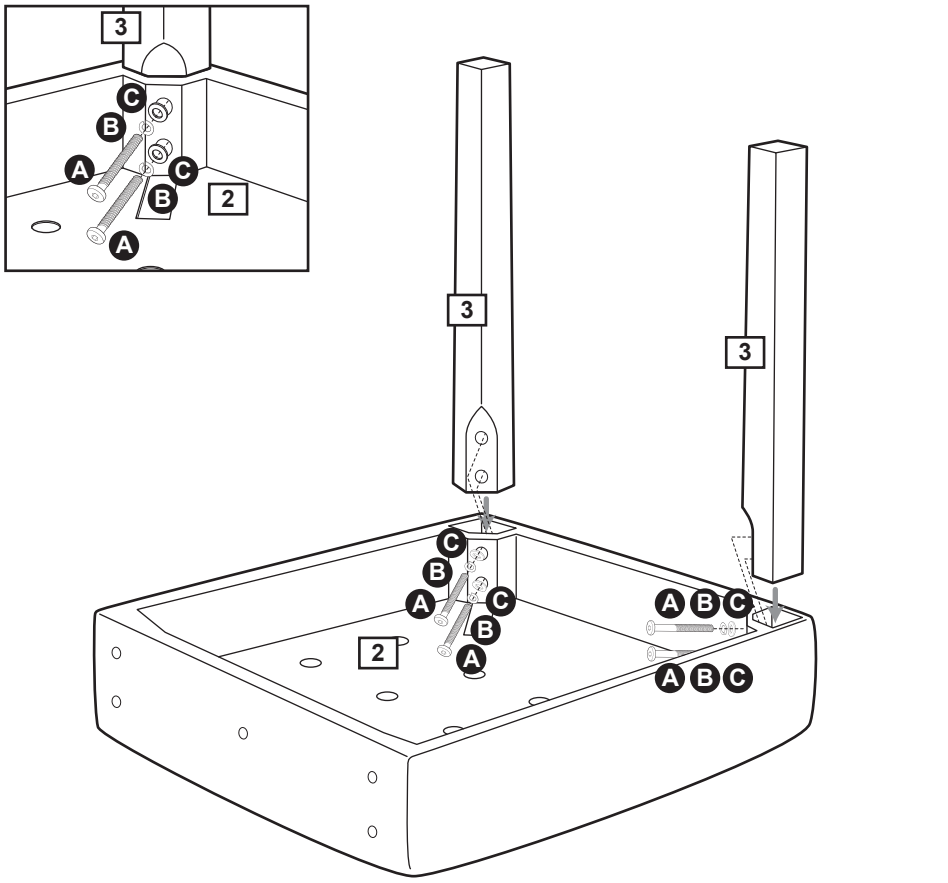


## Step 2


**Attaching backrest**

Place the backrest on a flat protected surface.

Position the seat 2 on the backrest 1 as shown and fix using bolts A, spring washers B and washers C.

***Important:***
Fasten bolts using allen key D but do not fully tighten at this stage.

***Note:***
Use oval head of allen key D on tight angles.

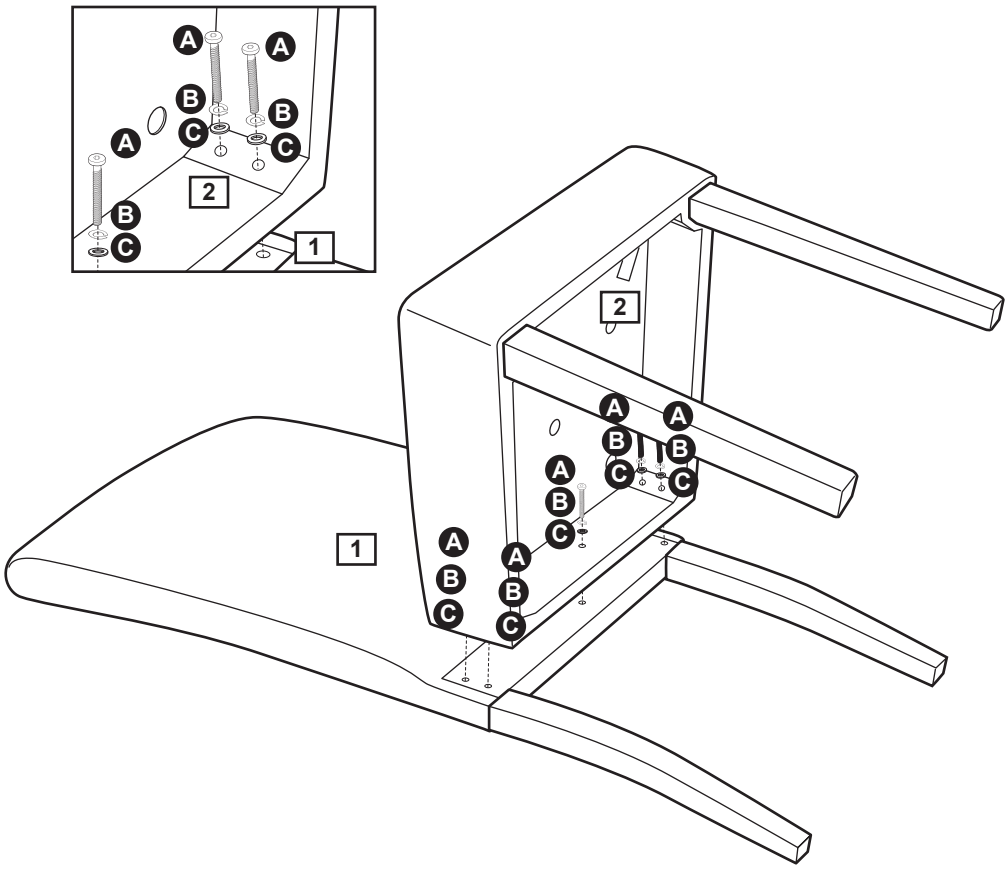

# Assembly Instructions

## Step 3

**Aligning & securing the legs**

Carefully turn the chair upright and place on a flat surface.

**a:** Tighten all bolts using allen key Ⓓ.

***Note:***
Use oval head of allen key Ⓓ on tight angles.

***Note:*** This step is essential to prevent the chair from wobbling due to uneven legs.

**b:** Carefully sit on the chair and make adjustments to ensure the legs are flat even on the floor.


**c:** After the sitting test, re-tighten bolts again if any adjustment is needed.

***Note:*** It is highly recommended to re-tighten all bolts after using the chair for 7 days.


***Note:*** Keep allen key to re-tighten bolts when required.

**Assembly is complete.**


**a:**

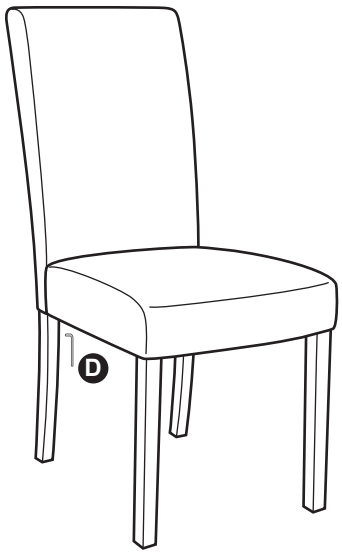


**b:**

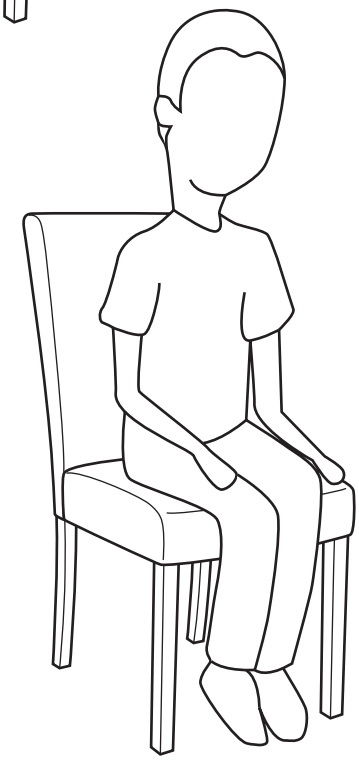

**c:**

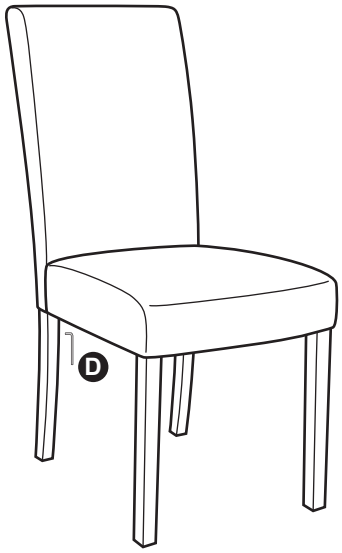


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**