
Decorative Clothes Rail

Assembly Instructions - Please keep for future reference

331/4229

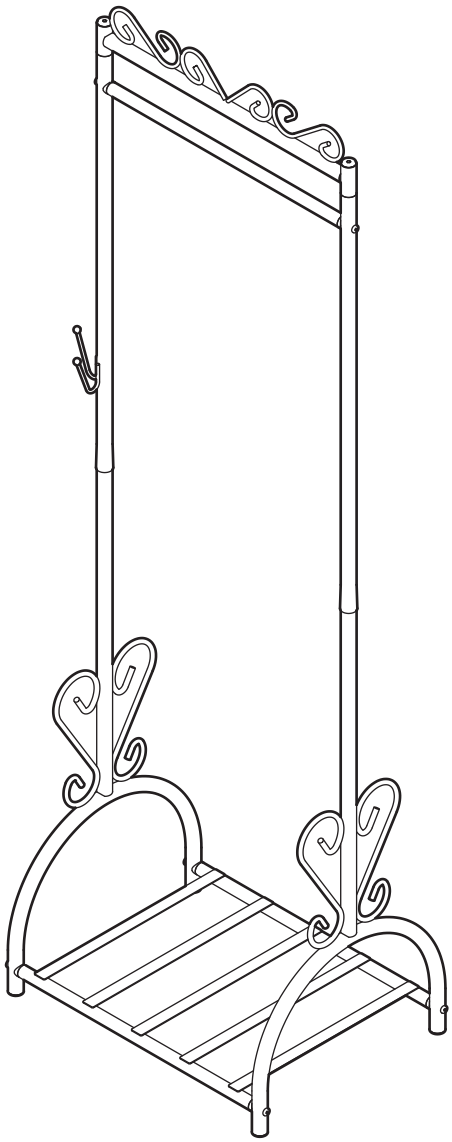

Dimensions

Width - 55cm

Depth - 37cm

Height - 160cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800

Issue 1 - 9/10/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


• Regularly check and ensure that all bolts and fittings are tightend properly.

Components - Parts

If you have damaged or missing components,call the **Customer Helpline: Argos = 0345 640 0800**

Please check you have all the panels listed below


1 Upper side support x 1 (74.5cm)



2 Upper side support with hook x 1 (74.5cm)




3 Decorative leg section x 2 (84cm)

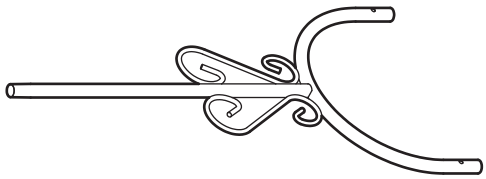


4 Decorative crown x 1 (50cm)



5 Hanging rail x 1 (45.2cm)



6 Base x 1 (45.2cm)

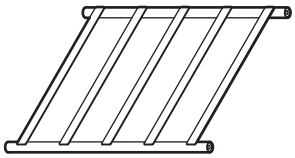


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A End cap x 4 	**B** Spacer x 6 	**C** Flat head screw 30mm x 2 
D Screw 38mm x 6 	**E** Allen key x 1 	

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Fitting the leg section & base.


a: Insert End cap (A) into Decorative leg section [3]

a:

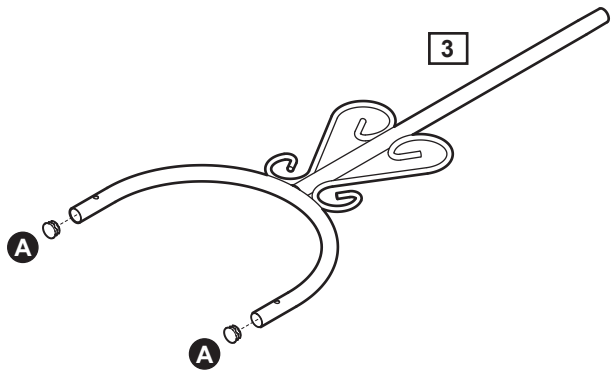

b: Use Screw (D) to connect Decorative leg section [3], Spacer (B) & Base [6]; then tighten by Allen key (E)

b:

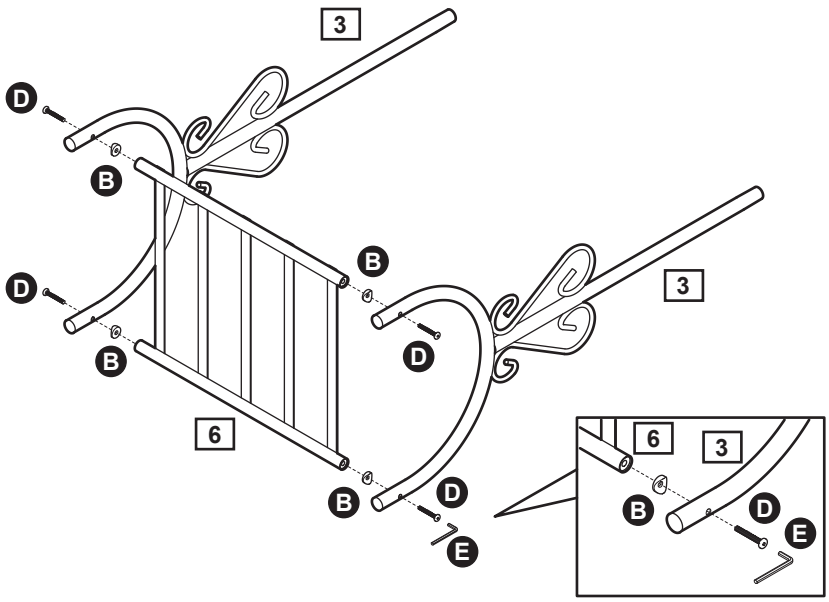

Assembly Instructions


Step 2

Fitting the upper part

a: Use Screw Ⓓ to connect Upper side support with hook [2], Spacer Ⓑ & Rail [5]; then tighten by Allen key Ⓔ

Repeat Step **a:** to assemble Upper side support [1]


a:

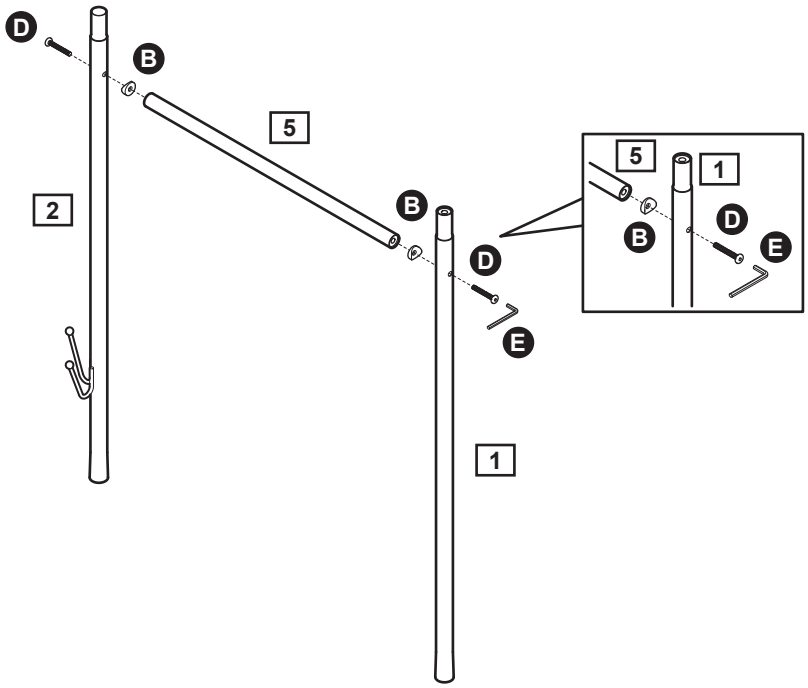

b: Use Flat head screw Ⓒ to connect Decorative crown [4] with Upper side support with hook [2], then tighten by Allyen key Ⓔ

Repeat step **b**: to assemble Upper side support [1]

b:

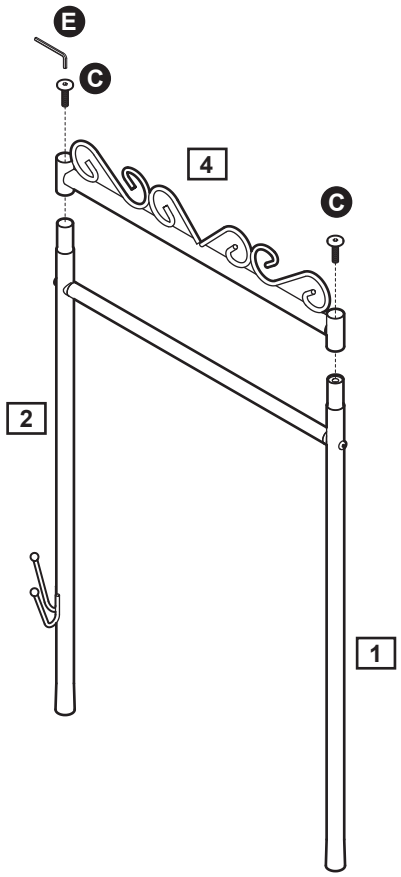



Assembly Instructions

Step 3

Finishing the product

a: Install Upper side support with hook 2 & Upper side support 1 onto Decorative leg section 3

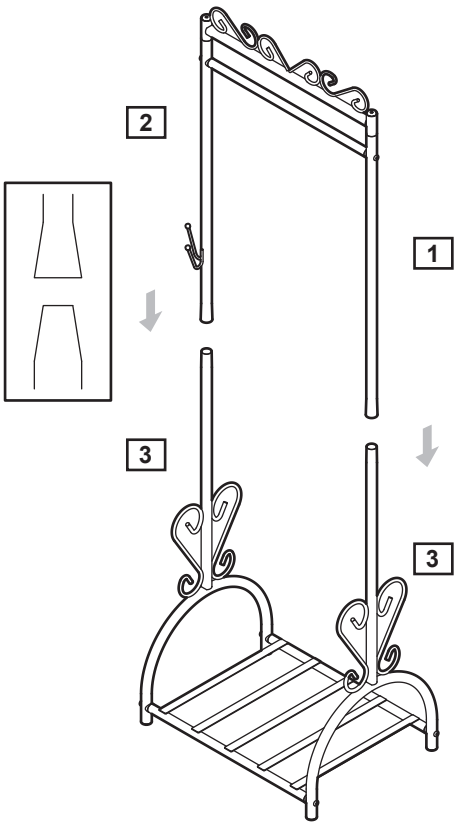

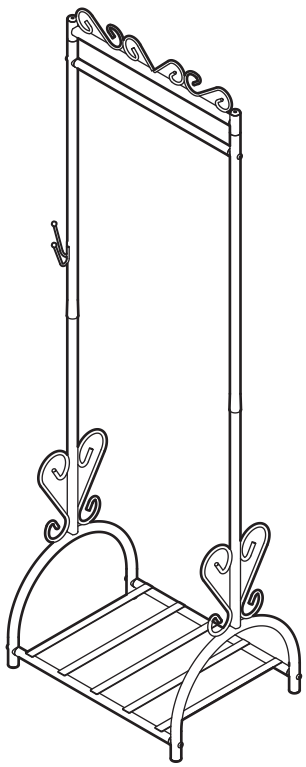

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800